BST by INOVANCE

Advancing industrial technology,
for a better world



GLORY Series J2240 Car Door

Installation Quick Start Guide


Industrial Automation | Intelligent Elevator | New Energy Vehicle | Industrial Robot | Rail Transit

Data code 19012696A01


Installing the Door Operator

Unit：mm


❶

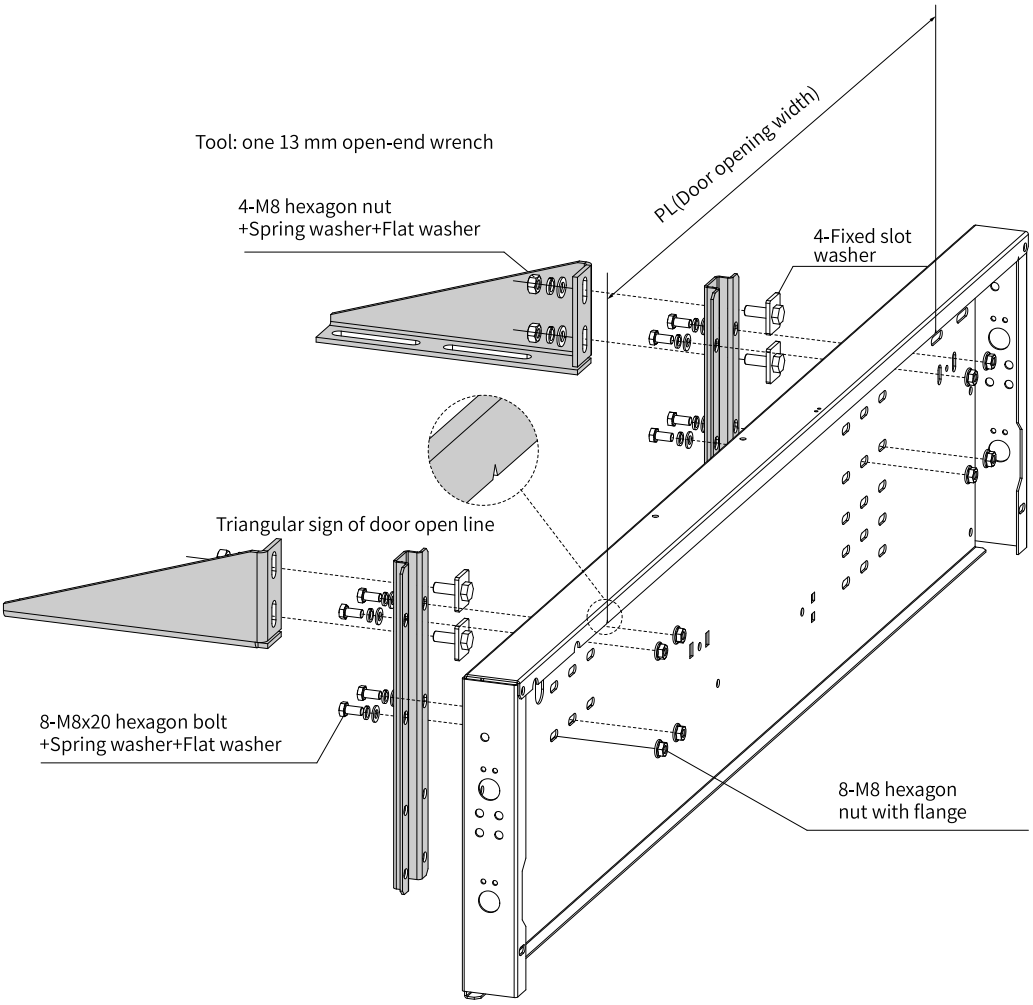

❷

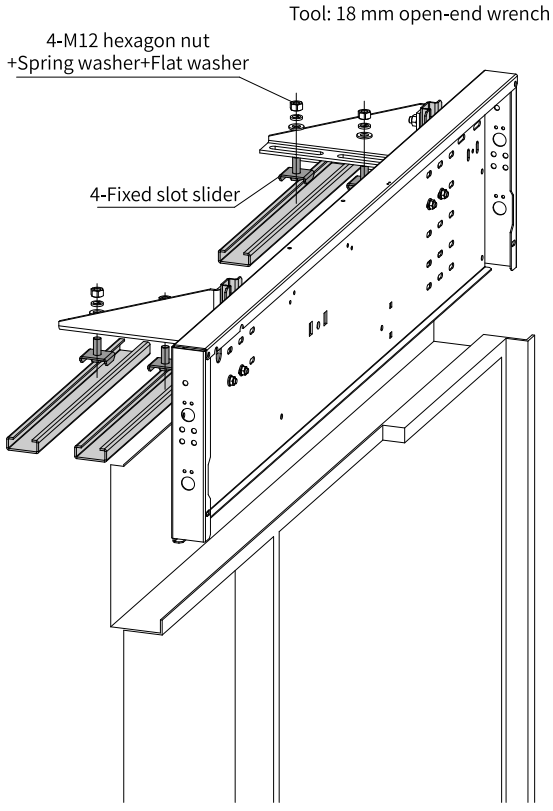


❸

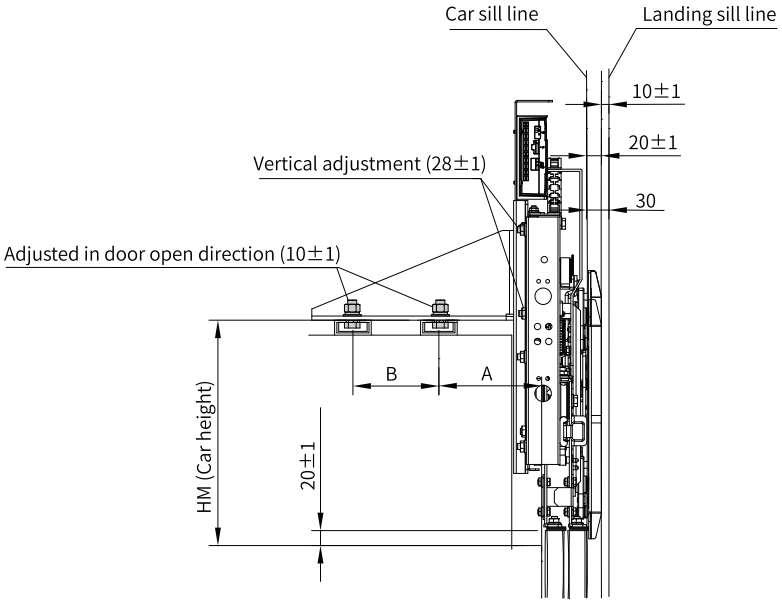


Installing the Controller

Unit：mm


Front Installation

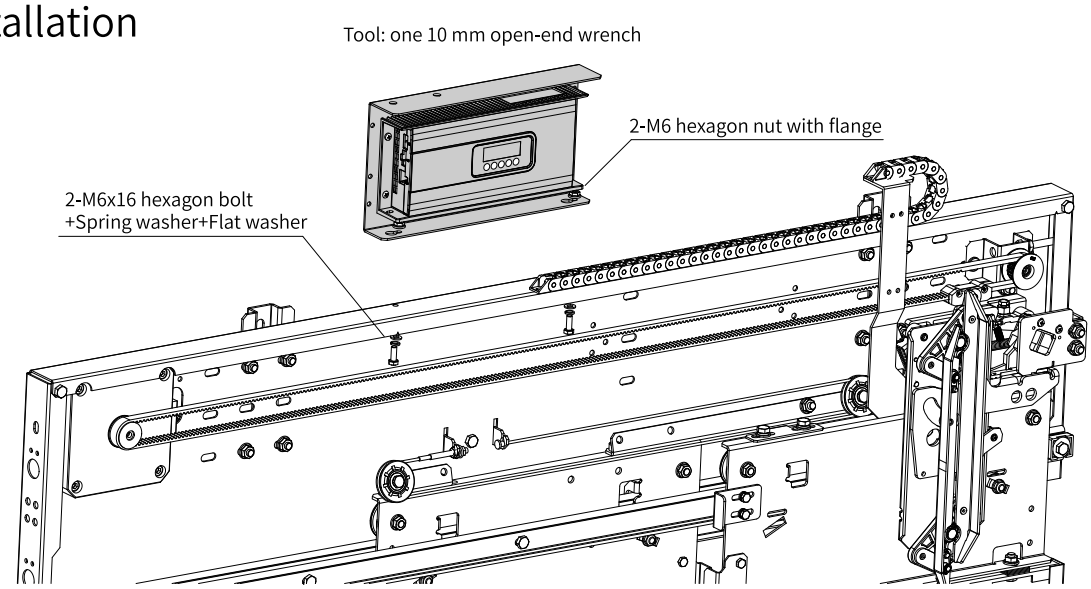

Back Installation

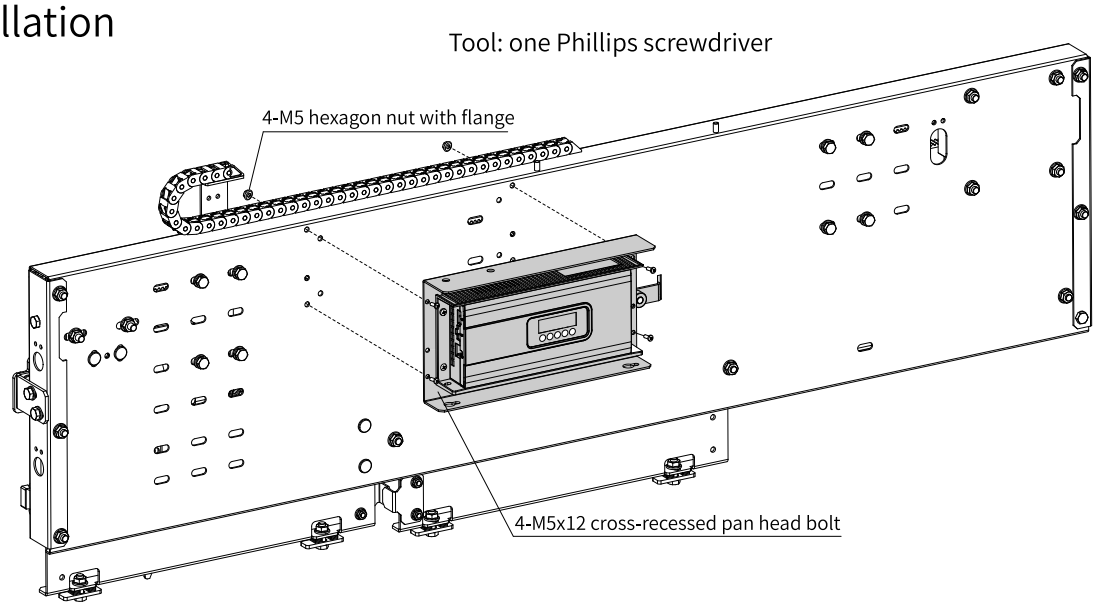


Adjusting the Door Open Limit

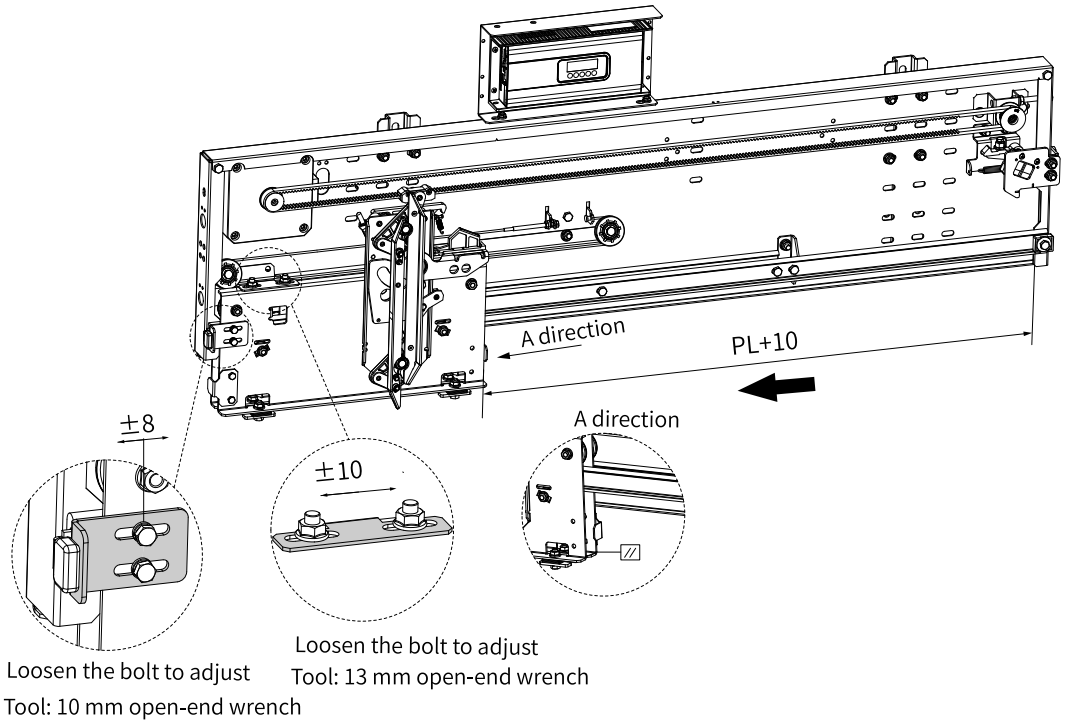


Installing and Adjusting the Door Plate

Unit:mm


❶

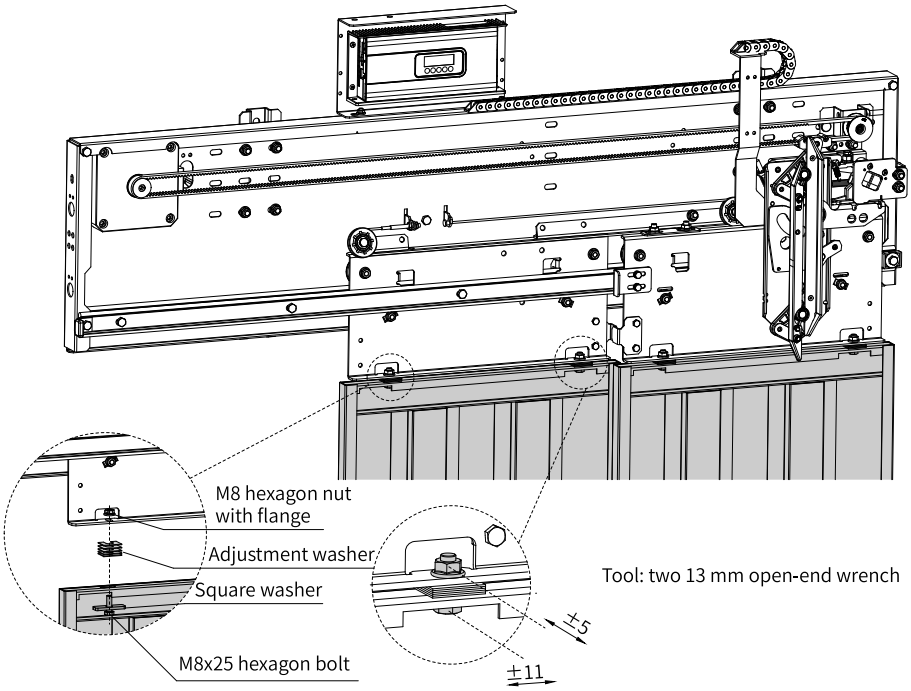

❷

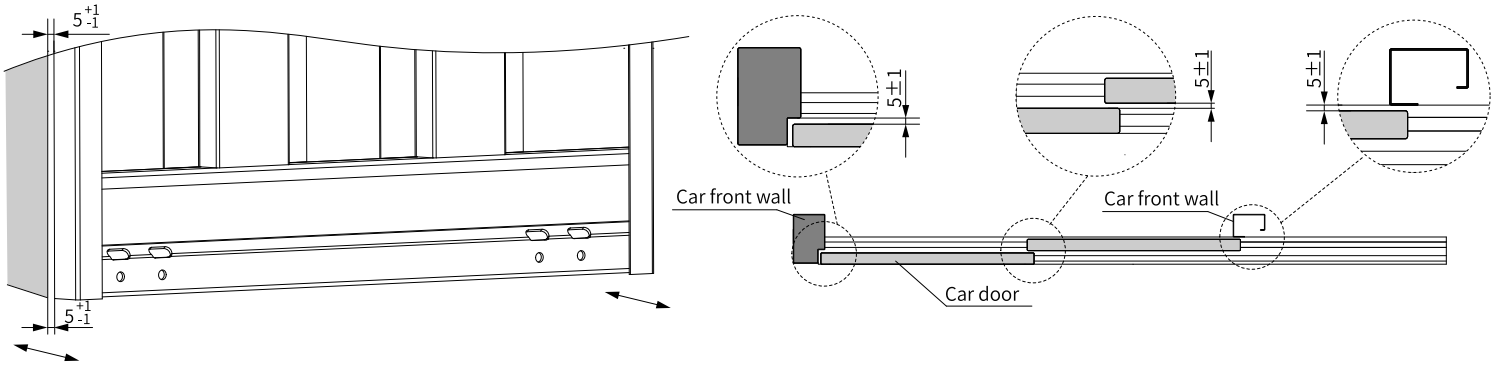



❸

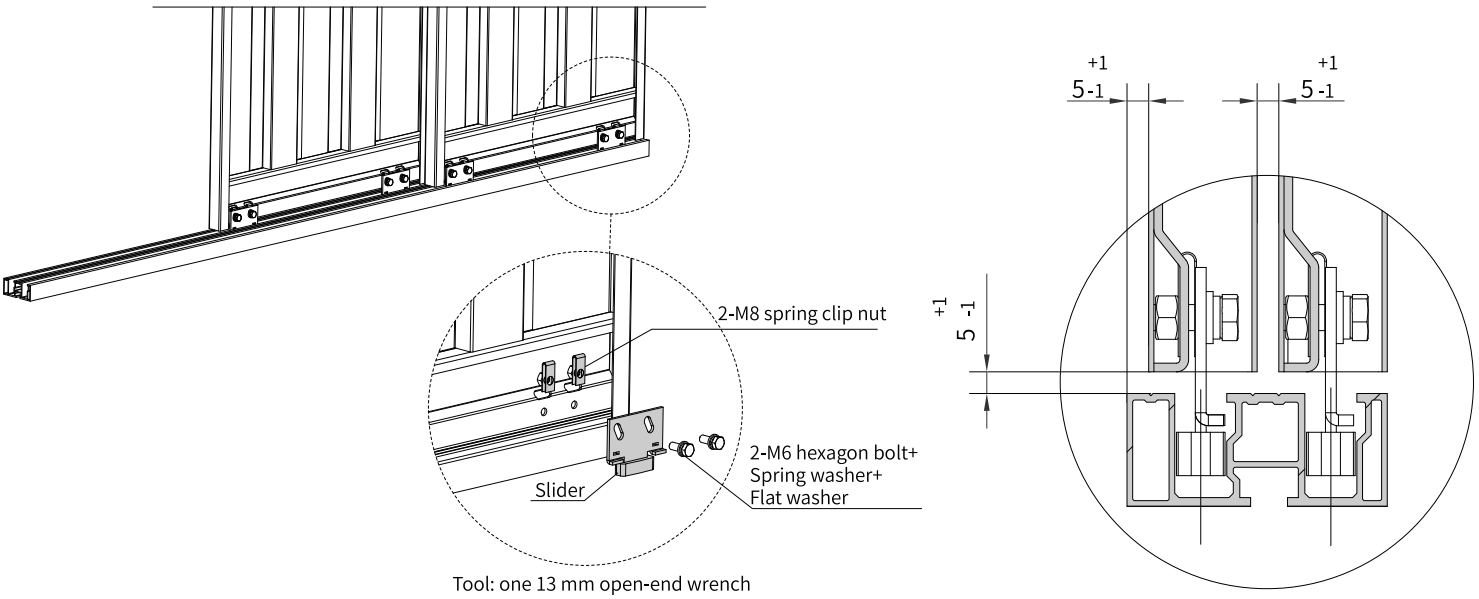


Adjusting Door Hanger Plate Verticality

Unit:mm

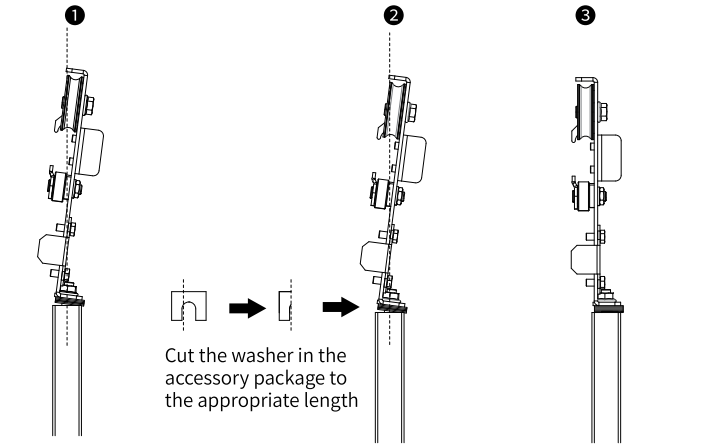


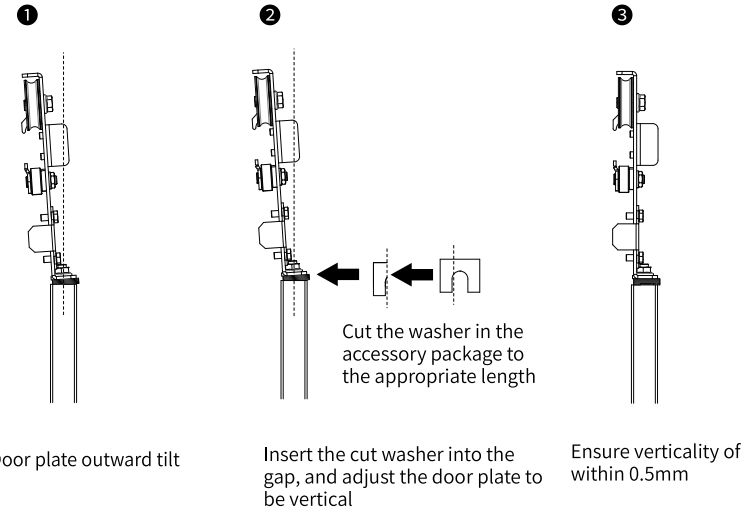

Adjusting the Door Plate Gap (Optional)

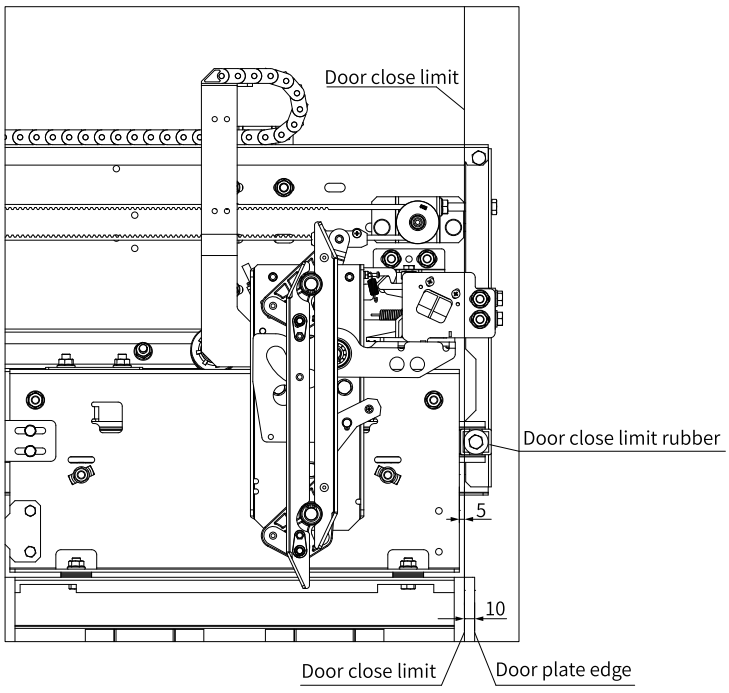


Adjusting the Eccentric Wheel Distance

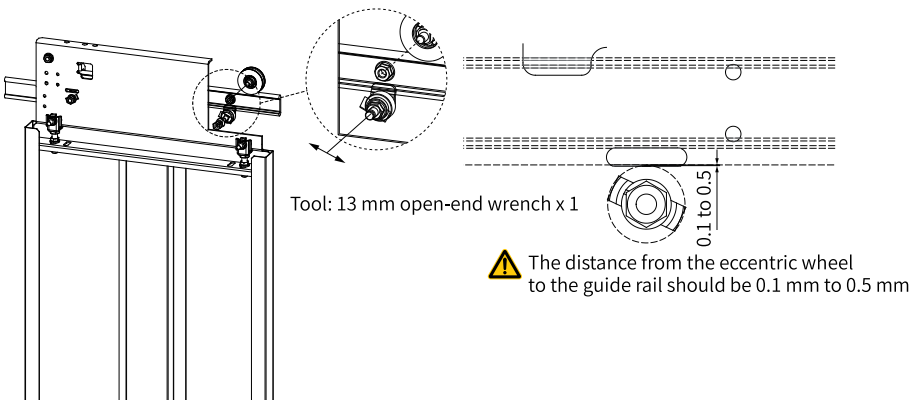


Adjusting the Door Vane and Door Lock

Unit：mm


❶

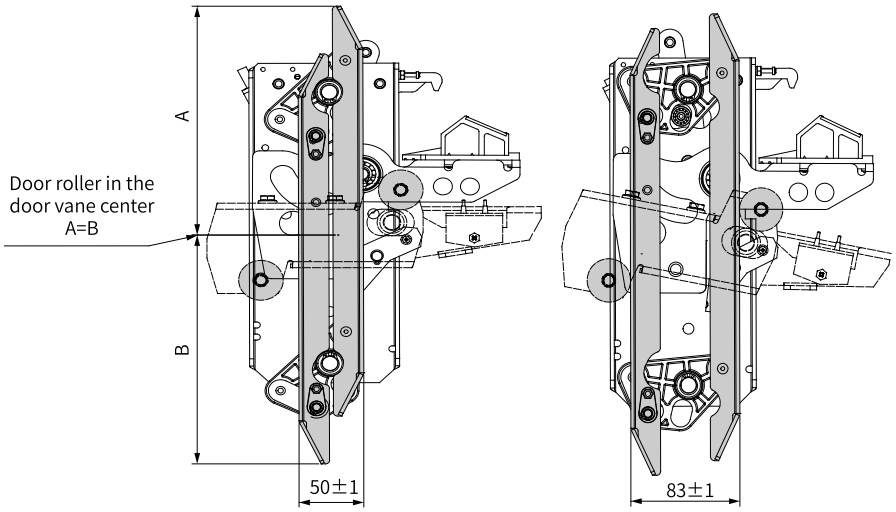


❷

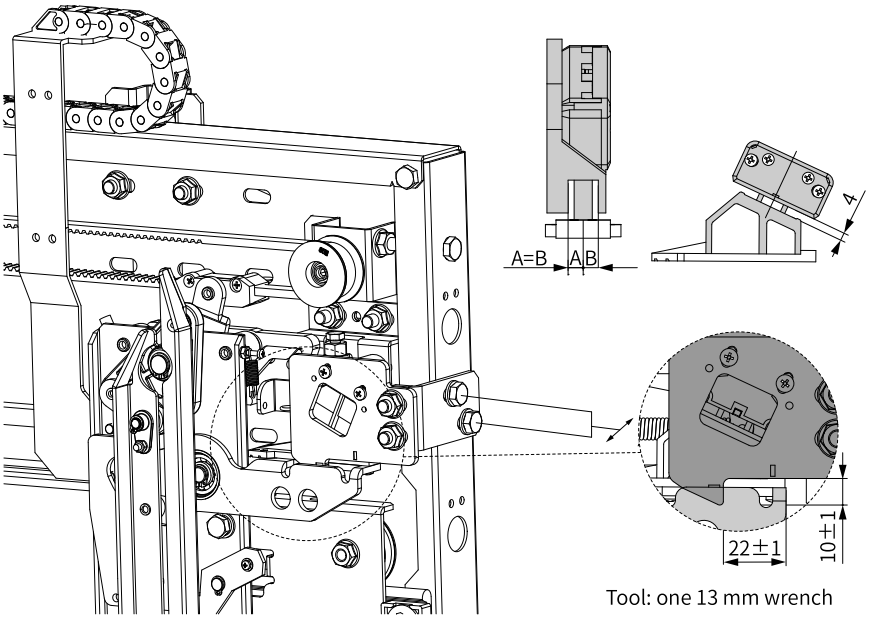


❸

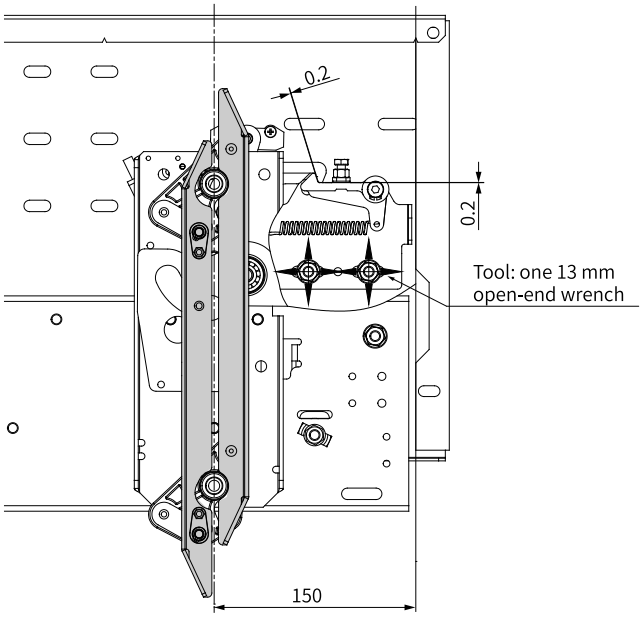


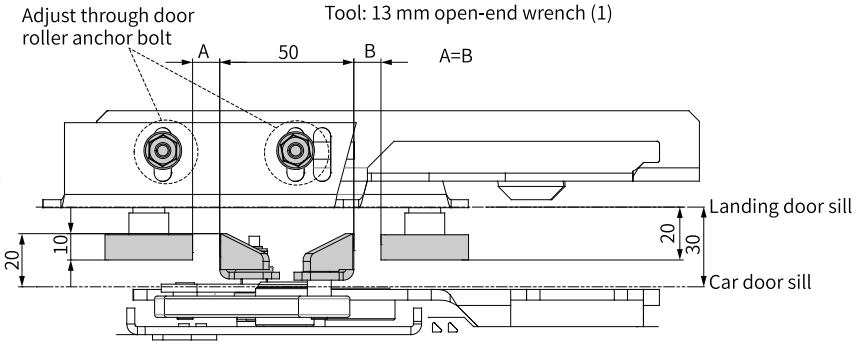

Installing the Traveling Cable

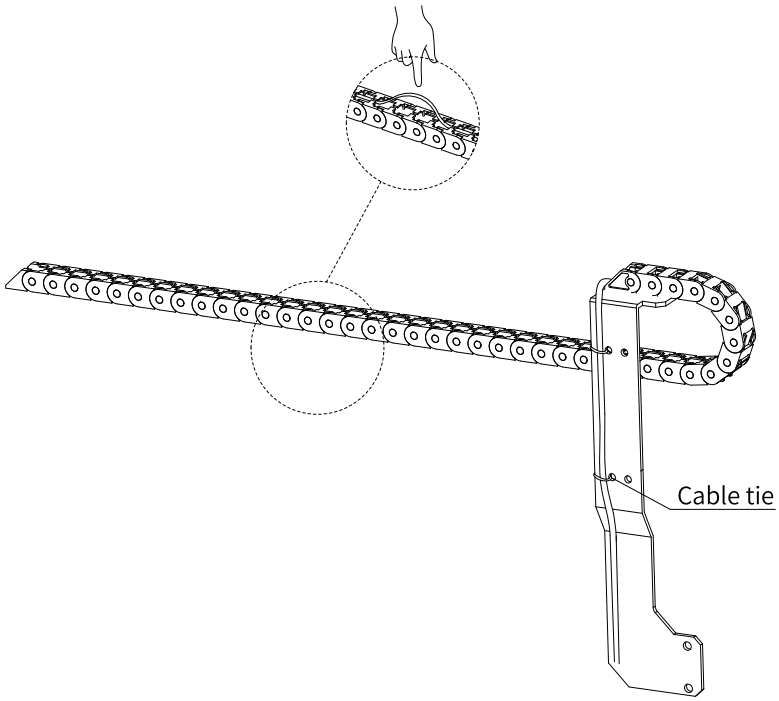

Installing the Door Vane Unlocking Rope

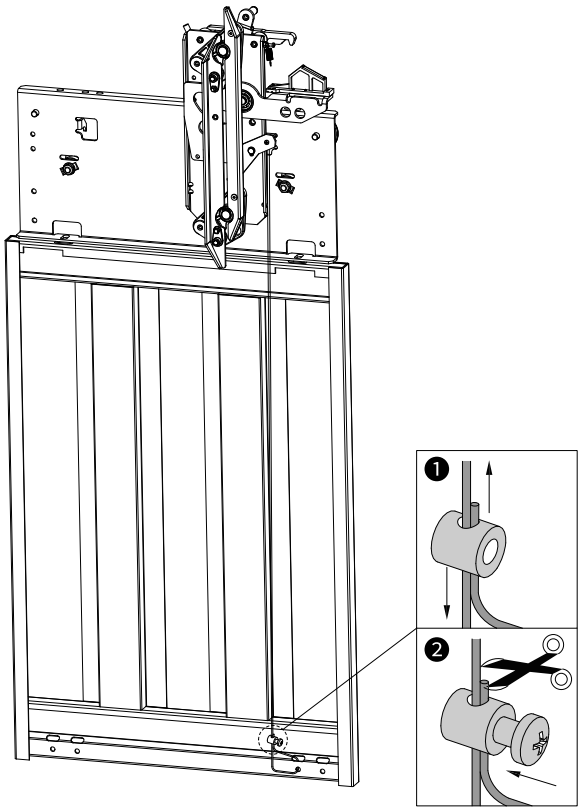


The unlocking rope passes through the hole of the bottom header plate and is fed back to the rope clamp.

Adjust it to the proper tension, secure the bolt, and then cut the excess.


Installing the Car Sill, Bracket, and Toe Guard (Optional)

Installing the Sill and Bracket

❶

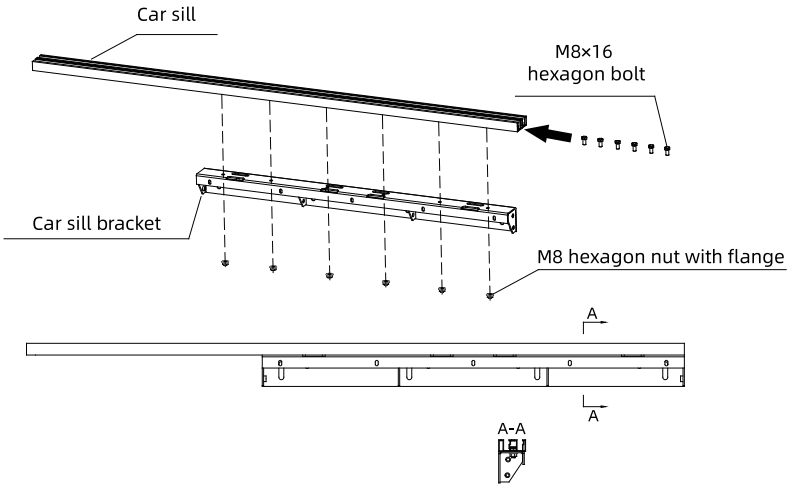


❷

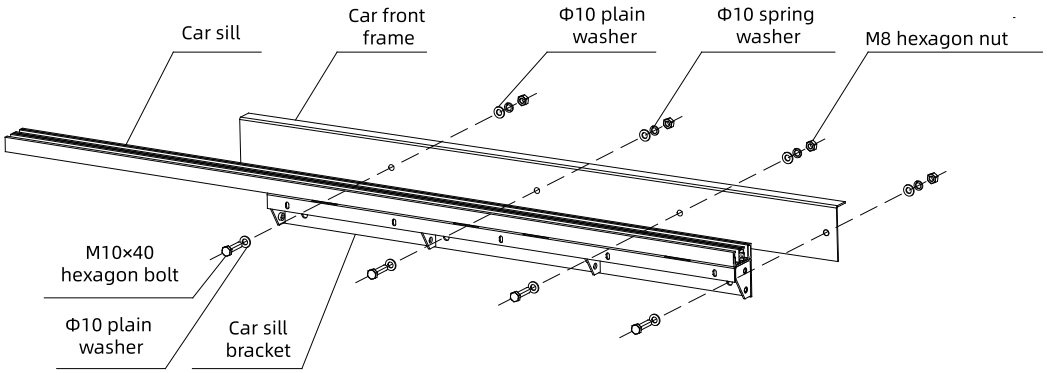


Adjusting the Car Sill

❶

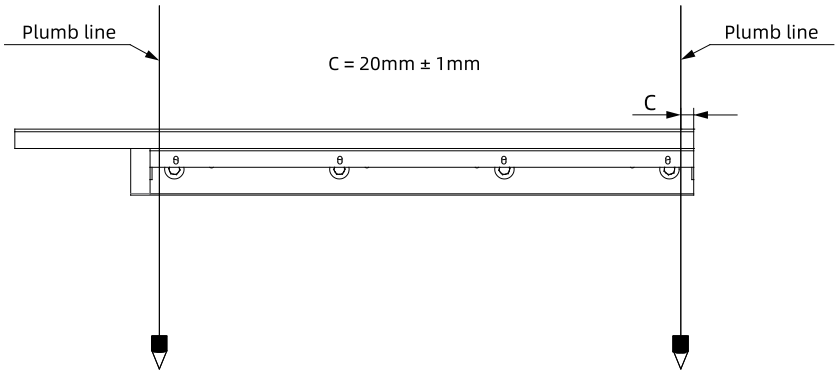


❷

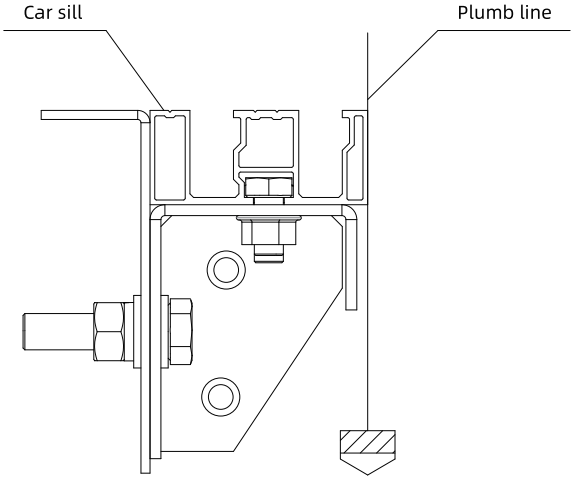


Installing the Toe Guard


1

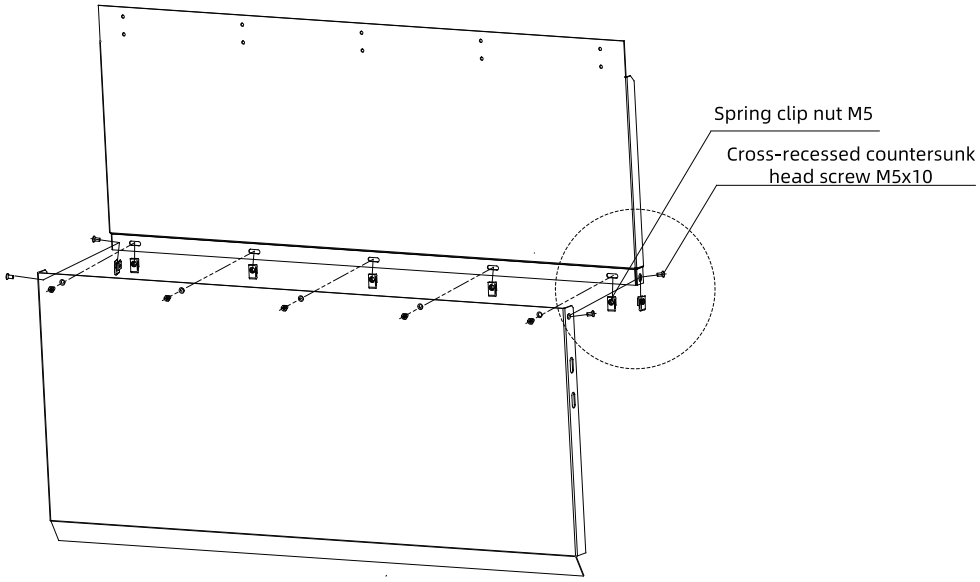


2

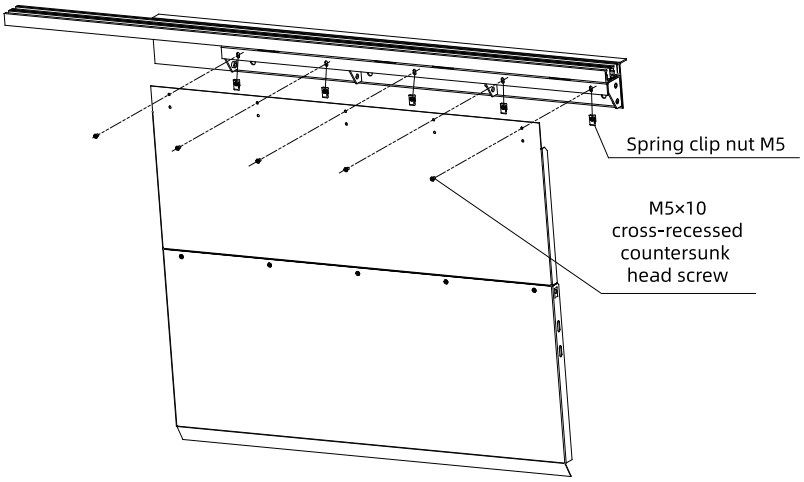

3

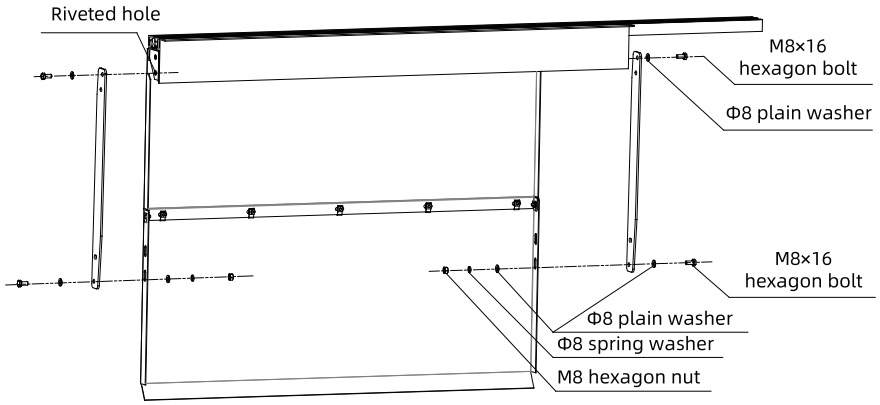

4

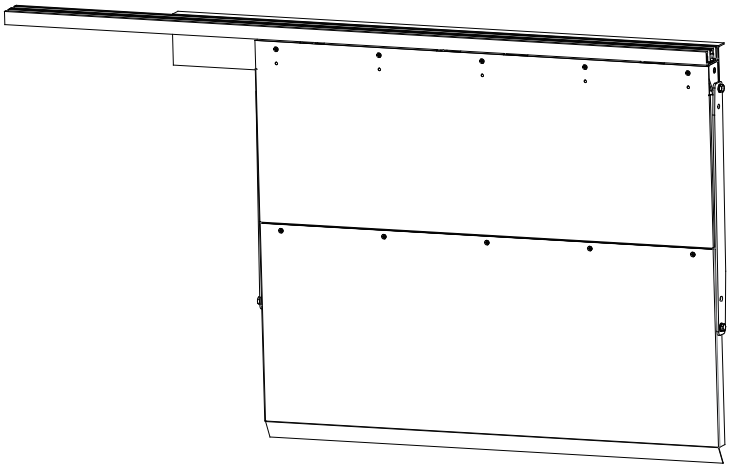

19012696A01

Copyright © Shenzhen Inovance Technology Co., Ltd.

Shenzhen Inovance Technology Co., Ltd.

www.inovance.com

Add.: Inovance Headquarters Tower, High-tech Industrial Park,
Guanlan Street, Longhua New District,
Shenzhen 518000, P.R. China

Tel: (0755) 2979 9595 Fax: (0755) 2961 9897

Suzhou Inovance Technology Co., Ltd.

www.inovance.com

Add.: No. 52, Tian E Dang Road, Wuzhong District, 215104,
Suzhou City, Jiangsu Province, P.R. China

Tel: (0512) 6637 6666 Fax: (0512) 6285 6720