BST
by INOVANCE

Advancing industrial technology,
for a better world



BVT29001/S
Multimedia Display

User Guide

Industrial Automation | New Energy Vehicle | Intelligent Elevator | Intelligent Robot | Digital Energy | Rail Transit

Data code PS00018235A01

Legal Information

Copyright

Copyright ©2025 Shenzhen Inovance Technology Co., Ltd. All rights reserved.

This documentation is the exclusive property of Shenzhen Inovance Technology Co., Ltd. No individual or entity may excerpt, reproduce, modify, translate, or distribute any content herein without written consent from Inovance.

Legal action will be taken against infringement.

Trademarks

INOVANCE is a registered trademark of Shenzhen Inovance Technology Co., Ltd. and its affiliates. All other trademarks or registered trademarks mentioned in this documentation are the property of their respective owners. Unauthorized use of these trademarks by third parties for any purpose without written authorization could violate the rights of their owners.

Disclaimer of Liability

Due to continuous updates and improvements of products and technologies, the content of this documentation may not fully match the actual products. In the event of any discrepancies, the actual products shall prevail.

The contents are subject to change without notice due to product upgrade.

Waste Disposal

The storage, use, and disposal of this product (including optional accessories) must comply with local laws and regulations.

Qualified Personnel

The product/system described in this documentation may be operated only by personnel qualified for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel can identify the risks of the product/system and prevent possible dangers.

Proper Use of the Product

Proper transportation, storage, assembly, installation, commissioning, operation, and maintenance are required to ensure the safe operation of the product without any problems. The required ambient conditions must be met. All operations must follow the guidelines provided in this documentation.

Preface

Introduction

The product is a multimedia display (hereinafter referred to as "device") used inside the elevator car, with primary functions designed for passenger convenience. Passengers can operate the elevator through this interface, such as selecting their destination floor, and can also control the door open/close. Additionally, it displays information related to the elevator operation status, including but not limited to the current floor number and the direction of travel. This guide describes the basic information, installation, commissioning, and troubleshooting of the product.

Revision History

Date of revision	Version	Description
January 2026	A01	Added *"2.3 Product Interface Introduction" on page 10*.
January 2025	A00	First issue.

Access to the Guide

This guide is not in the scope of delivery. If necessary, you can obtain the PDF file in the following ways:

- Visit *https://www.inovance.com/global*, choose Service&Support > Support > Documentation Download.
- Scan the **QR code** on the product with your smartphone.
- Scan the QR code below to install the application **My Inovance**, where you can search for and download the guide.

Warranty Instructions

If your product becomes defective under normal use conditions, we will offer guaranteed repair services within the warranty period. Charges will be paid beyond the warranty listed in the purchase order.

The warranty does not cover any defect caused by:

- failure to operate the product in accordance with the user guide
- events beyond control, such as fire, flood and abnormal voltage
- function misuse
- out-of-range application

- other events of force majeure, including but not limited to lightning, earthquake and other extreme weather events

The maintenance fee is charged according to the latest Price List of Inovance. If otherwise agreed upon, the agreed terms and conditions shall prevail.

For details, see Product Warranty Card.

Table of Contents

Legal Information 1
Preface 2
1 General Safety Rules 5
1.1 Safety Instructions 5
1.2 Industrial Information Security 7
2 Product Information 8
2.1 Technical Specifications 8
2.2 Product Dimensions 9
2.3 Product Interface Introduction 10
2.4 System Connection 12
3 Preparations Before Installation 13
3.1 Installation Personnel Requirements 13
3.2 Installation Environment Requirements 13
3.3 Installation Tools Requirements 13
4 Unpacking and Handling 15
5 Installation Guidelines 16
5.1 Port Layout and Description 16
5.2 Installation Procedure 17
5.2.1 Embedded Mounting 17
5.2.2 Surface Mounting 20
6 Commissioning and Operation 24
6.1 Inspection Before Commissioning 24
6.2 Function Commissioning 24
6.3 Floor Mapping 30
7 Image or Video Change 32
8 Interface Upgrade 33
9 Maintenance 34
9.1 Daily Maintenance Items 34
9.2 Daily Inspection and Cleaning Items 34
10 Common Fault Troubleshooting 35
11 Service and Support 39

1 General Safety Rules

1.1 Safety Instructions

Safety Disclaimer

- To ensure the safety of humans and equipment, follow the signs on the product and all the safety instructions in this guide.
- To ensure the safety of humans and equipment, follow the signs on the product and all the safety instructions in this guide.
- The "CAUTION", "WARNING", and "DANGER" are only supplements to the safety instructions.
- Use this product according to the designated environmental requirements. Functional abnormalities or component damages caused by improper usage are not covered by warranty.
- Inovance shall take no responsibility for any personal injuries or property damage caused by improper usage.

Safety Levels and Definitions



Indicates that failure to comply with the notice will result in severe personal injuries or even death.



Indicates that failure to comply with the notice may result in severe personal injuries or even death.



Indicates that failure to comply with the notice may result in minor or moderate personal injuries or damage. Keep the guide properly for future reference and deliver it to the end user.

Wiring

DANGER

- Ensure that all power sources are disconnected before performing installation and wiring operations; avoid working on live circuits or plugging/unplugging cables to prevent electric shock or circuit damage.
- Connect the wiring for the DC power supply to the dedicated terminals as described in the guide.
- When drilling screw holes and wiring, ensure no metal shavings or wire clippings fall into the product to avoid malfunction, electronic component damage, or fire.
- After completing the wiring, carefully check to ensure the operating voltage and terminal positions are correct to avoid fire or accidents.

CAUTION

- To avoid electric shock, disconnect the power source before connecting the power to this product.
- The rated input power supply for this product is 24 VDC (allowable fluctuation range: 18 VDC to 36 VDC). If the input voltage is outside this range, severe damage to this product may occur. Therefore, please regularly check whether the DC power provided by the switched-mode power supply is stable.

Operation and Maintenance

CAUTION

- During use, take care to protect the panel; perform touch operations with your hand instead of tools to avoid damage. Users are responsible for any damage caused by excessive force exerted.
- Lithium batteries, device screens, capacitors, and other components may contain substances harmful to health and the environment. Treat the product as industrial waste.

Battery Use

WARNING

- Avoid replacing the battery with an incorrect type.
- Do not dispose of the battery in fire or heat sources, do not mechanically crush or cut batteries.
- Do not expose the battery to extreme temperatures.
- Do not swallow the battery as it poses a chemical burn hazard.
- This product contains a button battery. If swallowed accidentally, it can cause severe internal burns within 2 hours and may lead to death.

CAUTION

- Keep new and used batteries away from children.
- If the battery compartment is not securely closed, stop using the product and keep it away from children.
- Seek immediate medical attention if you suspect battery ingestion occurs.

Disposal
CAUTION • Dispose of the product according to industrial waste regulations; when disposing of batteries, follow local ordinances separately.

1.2 Industrial Information Security

The product provides an interface to connect to the network and transmit data through the network interface. To protect factories, systems, machines, and networks from cyber attacks, a proper industrial information security protection mechanism must be implemented to ensure safe operation of factories, systems, machines, and networks.

The customer is responsible for providing and continuously ensuring a secure connection between the product and the customer network or any other network to prevent unauthorized access to its factories, systems, machines, and networks. The system and device can be connected to the corporate network or Internet only when they are connected securely with appropriate security measures taken (for example, anti-virus software and firewall installation).

Inovance is committed to continuous development and improvement of the products and solutions to improve the level of safety. It is strongly recommended to update the product promptly and always use the latest version.

CAUTION

Tampering with software (such as viruses, Trojans, and Worms) can lead to unsafe drivestate, which can put the device in an unsafe operation state. This may result in death,serious injury, and property damage. Observe the following strictly.

- Always use the latest software version. If the product version is no longersupported or the latest version of the program is not applied, customers are atincreased risk of cyber-attacks.
- Take proper protection measures (including but not limited to deploying antivirussoftware, firewall, WAF, IPS/IDS, situational awareness system, IDverification, and data encryption) to prevent files in the mobile storage devicefrom being damaged by malware and protect products, networks, systems, andinterfaces from unauthorized access, disturbance, intrusion, data disclosure, orinformation theft.
- Check all safety-related interfaces and settings after commissioning.

2 Product Information

2.1 Technical Specifications

Param.	Description
Screen size	29 inches
Resolution	1920 px x 540 px
Product view directions	θL-θR-θT-θB
	89-89-89-89
LCD brightness	630 cd/m^2
Display area	698.8 mm (W) x 199.4 mm (H)
LCD type	LVDS
Power supply voltage	18 VDC to 36 VDC
Rated/Maximum power consumption	48 W/55 W
Rated/Maximum current (24 V)	2 A/2.3 A
Nominal capacity	• RAM: 2 GB • Available storage space: 3 GB
Operating environment	• Temperature: -20°C to +70°C • Humidity: 10% RH to 90% RH
Storage environment	• Temperature: -30°C to +80°C • Humidity: 10% RH to 90% RH

2.2 Product Dimensions

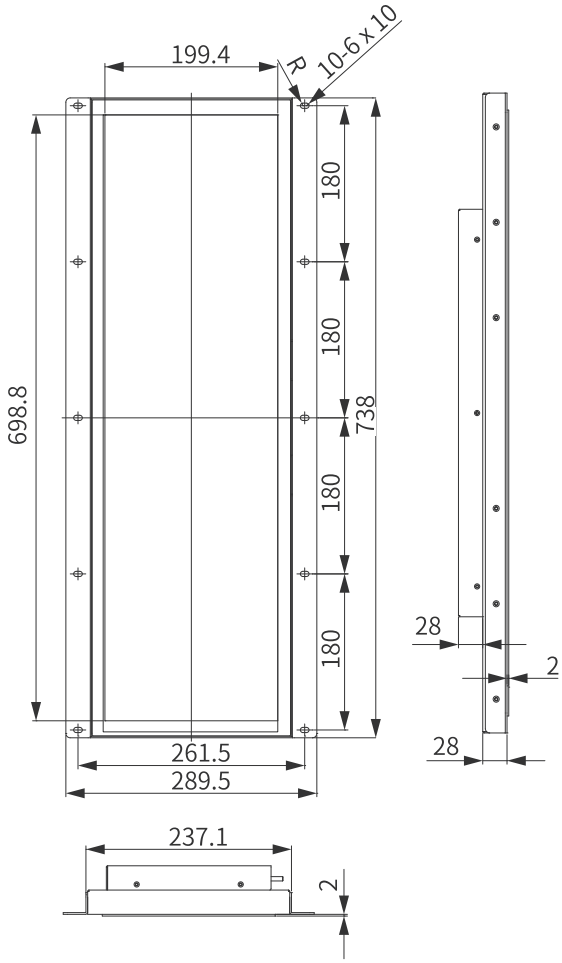


Figure 2-1 Embedded mounting type (unit: mm)

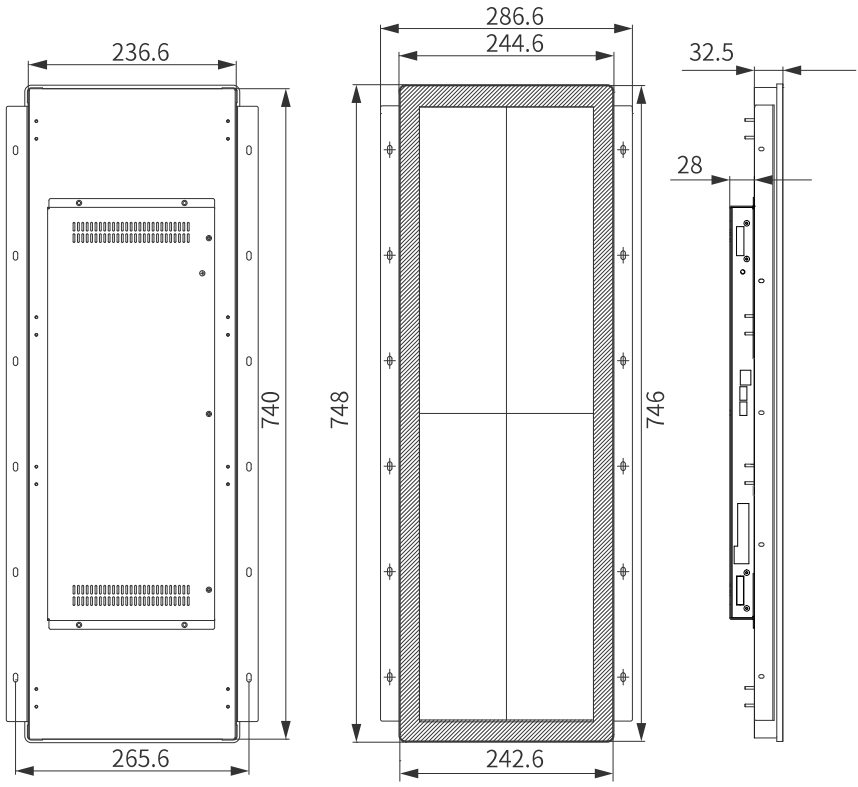


Figure 2-2 Surface mounting type (unit: mm)

2.3 Product Interface Introduction

Note

The following product interface image is for reference only. Please see the actual product.

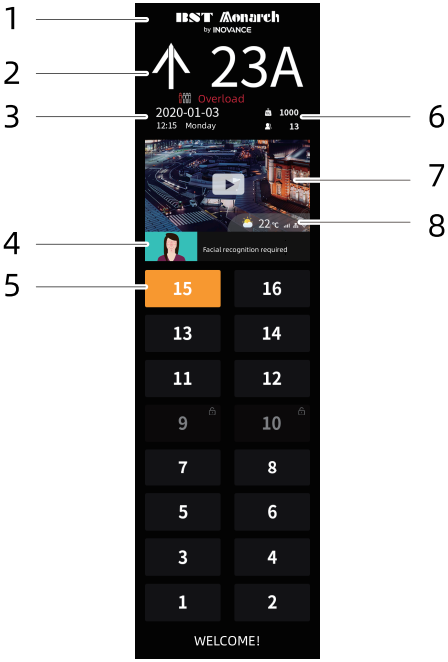


Figure 2-3 Product interface introduction

No.	Description
1	Logo
2	Current floor
3	Date
4	Face recognition (Optional) Elevator calling through face recognition operates in two main scenarios: • If the user has only one authorized floor: The system automatically calls the elevator upon successful recognition. • If the user has multiple authorized floors: The screen displays the authorized floor buttons upon successful recognition, and the user must select a destination floor to call the elevator. ***Note*** For details, see the TFT Network Solution User Guide, available from your device supplier.
5	Floor button
6	Max. load and passenger capacity
7	Video play

No.	Description
8	Weather display (Optional) ***Note*** Make sure the device is connected to the internet.
	Network status display (Optional) Through network functionality, the **"TFT LAN software"**can be used to update the interface, videos, images, software, and parameters. ***Note*** For details, see the TFT Network Solution User Guide, available from your device supplier.

2.4 System Connection

Note

The figure is only for illustration. See the actual product for specifics.

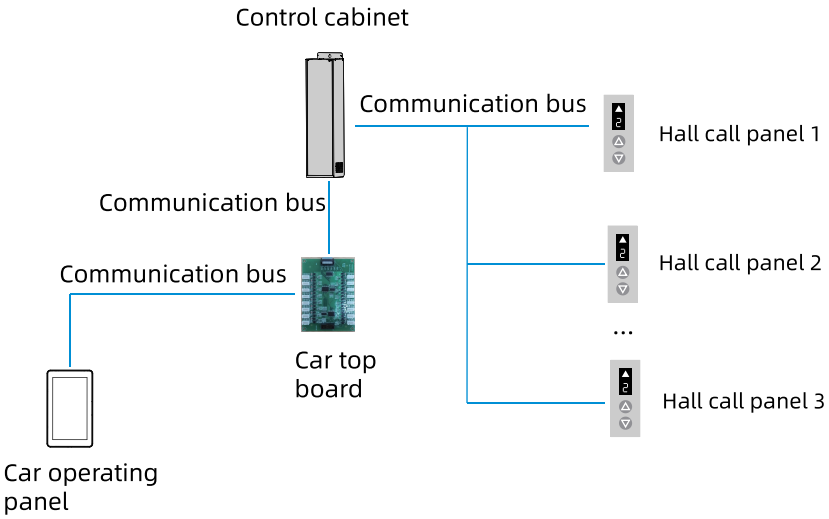


Figure 2-4 System Connection

3 Preparations Before Installation

3.1 Installation Personnel Requirements

- Installation must be performed by only experienced personnel who have been trained with necessary electrical information.
- Read and comply with the safety information provided this manual.

CAUTION

Inovance is not responsible for equipment damage and casualties due to failure to comply with the safety instructions or operation by unqualified personnel.

3.2 Installation Environment Requirements

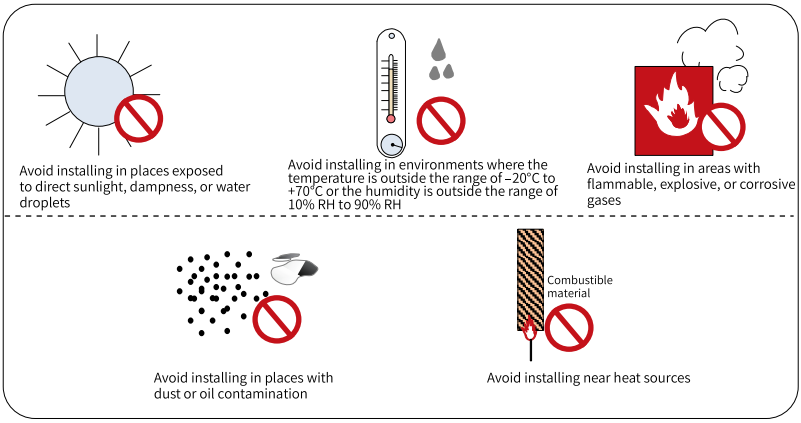


Figure 3-1 Installation environment requirements

3.3 Installation Tools Requirements

Please check the installation tools listed in the following table before installation. Tools not included with the scope of delivery must be provided by the customer.

Table 3–1 Installation tools

Installation method	Tool	Description
Embedded mounting	Glove	Prevents static electricity during mechanical installation.
	M4 x 12 weld screw (10 PCS)	Fix the product to the mounting surface.
	M4 flange nuts (10 PCS)	
	M4 Phillips screwdriver	Tightens the screws.
	7 mm open-end wrench or sleeve	
Surface mounting	Glove	Prevents static electricity during mechanical installation.
	M4 pan-head screws (12 PCS)	Fix the product to the mounting surface.
	M4 x 12 weld screw (12 PCS)	
	M4 flange nuts (12 PCS)	
	M4 Phillips screwdriver	Tightens the screws.
	7 mm open-end wrench or sleeve	

4 Unpacking and Handling

Upon unpacking, check:

No.	Item	Description	Tick
1	Whether the product model is consistent with your order.	Check the model and specifications of the device for consistency with the order.	□
2	Whether the product is damaged.	Check whether the product enclosure is damaged during transportation. If there is any part missing or damaged, contact Inovance or your supplier immediately.	□

5 Installation Guidelines

5.1 Port Layout and Description

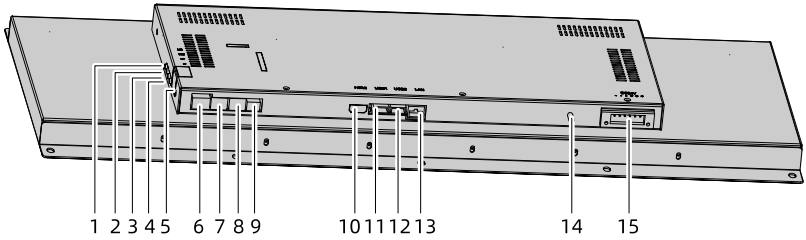


Figure 5-1 Port layout

Table 5–1 Description

No.	Port	Description
1	Modbus	• Enters the setup menu interface • Enters the next-level menu • Enters the menu editing mode
2	INC	• Exits the setup menu interface • Returns to the previous-level menu • Exits the menu editing mode
3	+	• Moves up through menu items • Increases the value of a menu item (holding down increases speed)
4	-	• Moves down through menu items • Decreases the value of a menu item (holding down increases speed)
5	DIP switch	Reserved
6	Power supply	24V, GND, EARTH
7	RS485 communication	24V, 485A, 485B, and GND
8	CAN communication	24V, CANH, CANL, GND
9	RS232 communication	VCC, LED, SW, GND
10	HDMI	HDMI interface
11	USB2	For device commissioning
12	USB1	For theme update and interface upgrade
13	NET	Network port, supporting 10 Mbps or 100 Mbps Ethernet connection

No.	Port	Description
14	Ground	Grounding cable
15	Power supply	24 VDC

5.2 Installation Procedure

5.2.1 Embedded Mounting

Note

The images in this chapter are for installation reference only. Please refer to the actual product for appearance.

---

1. Cut out a square area on the car wall panel and install weld screws according to the hole positions.

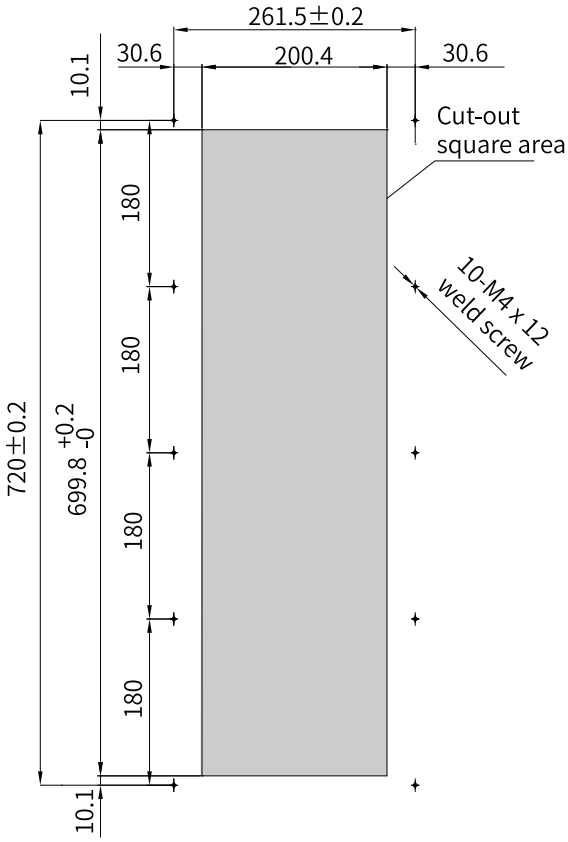


Figure 5-2 Hole dimensions (unit: mm)

2. Secure the mounting bracket to the car wall panel with M4 flange nuts and fix the display to the wall panel.

Note

- Install at least two brackets.
- Pay attention to the thickness of the car wall panel and the protrusion thickness. For the through-hole mounted non-touchscreen display, the protrusion thickness is 3.5 mm; for the through-hole mounted touchscreen display, the protrusion thickness is 3 mm.

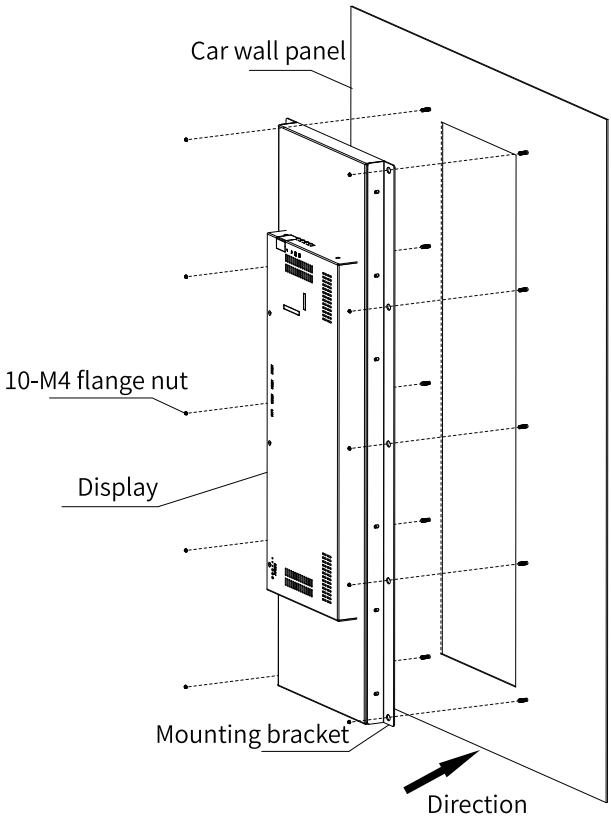


Figure 5-3 Mounting bracket

3. Check the installation effect.

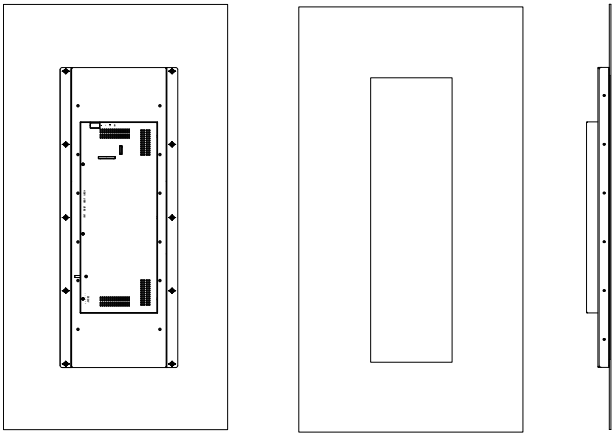


Figure 5-4 Checking the installation effect

CAUTION

The display has a grounding sign and must be grounded properly.

5.2.2 Surface Mounting

Note

The images in this chapter are for installation reference only. Please refer to the actual product for appearance.

1. Cut out a square area on the car wall panel and install weld screws according to the hole positions.

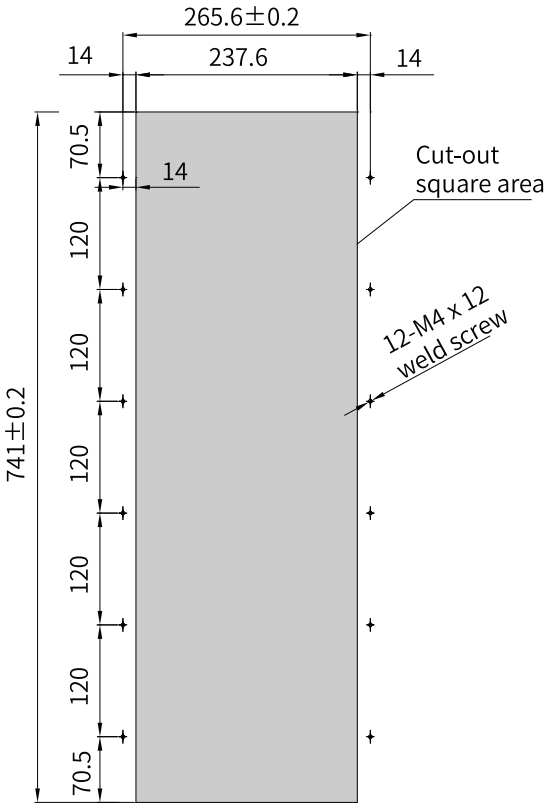


Figure 5-5 Hole dimensions (unit: mm)

2. Secure the mounting bracket to the wall panel with M4 flange nuts, but do not tighten it yet.

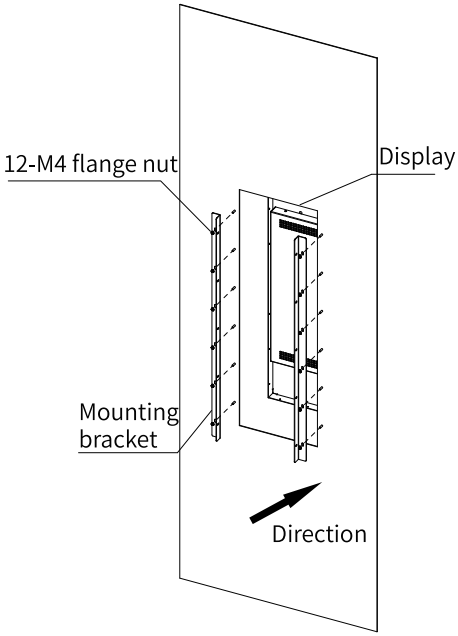


Figure 5-6 Mounting bracket

3. Use the M4 pan-head screws to secure the mounting bracket and the display. Then tighten the M4 flange nuts.

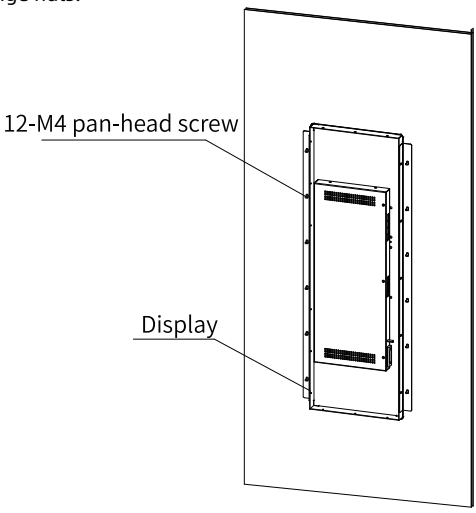


Figure 5-7 Securing the display

4. Check the installation effect.

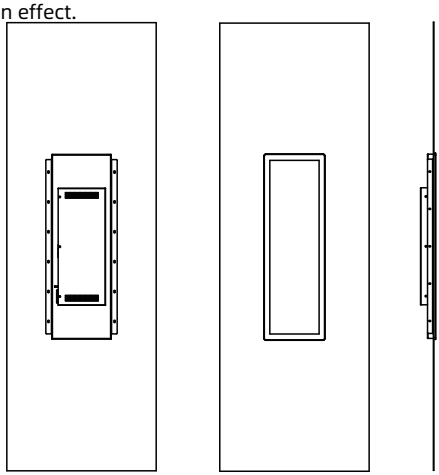


Figure 5-8 Checking the installation effect

CAUTION

The display has a grounding sign and must be grounded properly.

6 Commissioning and Operation

This chapter introduces basic commissioning procedure for the device. By following the instructions, you can perform basic commissioning to ensure that its basic functions can be used normally.

6.1 Inspection Before Commissioning

The operator is responsible for performing checks including but not limited to those listed in the following table in accordance with the recognized technical rules in the country of installation and with applicable regional guidelines. Tick after each check of the item.

No.	Item	Tick
1	Ensure that the power input terminals are securely connected with no loose or poor connections.	□
2	Before powering on the device, ensure that the power port wiring sequence is correct and that the voltage meets the standard 24 VDC (allowable range: 18 VDC to 36 VDC). If the measured value exceeds this range, disconnect the power supply immediately	□

6.2 Function Commissioning

The device is available in the touchscreen and non-touchscreen types. The touchscreen type allows for menu settings through the touchscreen, whereas the non-touchscreen type requires menu settings to be made using the physical keys on the back of the device.

Table 6–1 Keys description (non-touchscreen display)

Key	Description
Modbus	• Enters the setup menu interface • Enters the next-level menu • Enters the menu editing mode
INC	• Exits the setup menu interface • Returns to the previous-level menu • Exits the menu editing mode
+	• Moves up through menu items • Increases the value of a menu item (holding down increases speed)
-	• Moves down through menu items • Decreases the value of a menu item (holding down increases speed)

Table 6–2 Keys description (touchscreen display)

Key	Description
Enters the setup menu interface	On the standby screen, long press of the logo in the top-left corner causes the icon  to appear. After the icon changes to , double-click the icon to enter the menu interface.
Previous/Next	Scroll up or down to flip through pages.
	Returns to the previous-level menu.
	Enters the next-level menu.

Table 6–3 Function Commissioning

<table>
<tr><th colspan="2">Function</th><th rowspan="2">Description</th></tr>
<tr><th>Level I menu</th><th>Level II menu</th></tr>
<tr><td rowspan="3">Floor setup</td><td>Bottom floor</td><td>Sets the lowest floor in auto demo mode, ranging from 1 (default value) to 56.</td></tr>
<tr><td>Top floor</td><td>Sets the highest floor in auto demo mode, ranging from 1 to 56 (default value).</td></tr>
<tr><td>Floor address</td><td>
<table>
<tr><th>Type</th><th>Param. setting</th><th>Device address</th><th>Description</th></tr>
<tr><td rowspan="2">Car display</td><td>0 or 60</td><td>D0</td><td>In the same elevator, only one display should be set to D0.</td></tr>
<tr><td>61, 62, 63</td><td>D2, D3, D4</td><td>61 corresponds to D2, 62 to D3, and 63 to D4.</td></tr>
<tr><td>Touch screen hall call</td><td>65 to 120</td><td>65 to 120</td><td>Corresponds to physical floors 1 to 56. For example, 65 corresponds to physical floor 1 and 120 corresponds to physical floor 56.</td></tr>
<tr><td rowspan="2">Car touch screen</td><td>124</td><td>D0</td><td>In the same elevator, only one display should be set to D0.</td></tr>
<tr><td>125, 126, 127</td><td>D1, D2, D3</td><td>125 corresponds to D1, 126 to D2, and 127 to D3.</td></tr>
</table>
</td></tr>
</table>

Function		Description
Level I menu	Level II menu	
Display setup	Display brightness	Sets the normal operating brightness of the screen, ranging from 10 to 100.
	Standby brightness	Sets the sleep brightness of the screen, ranging from 0 (default value of 10) to 100. When the device does not receive the elevator operation signal within the sleep time, it automatically enters the sleep mode. The brightness will drop to this value. If the elevator control cabinet supports energy-saving mode, after the elevator enters this mode, the device will also automatically enter the sleep state.
	Sleep time	Sets the time (in minutes) after which the device will automatically enter the sleep mode, ranging from 0 to 120 minutes, with a default value of 1 minute. If set to 0, it indicates that the sleep mode will never be applied.
	Welcome message	Switch for displaying the welcome message, which is enabled by default.
	Logo	Switch for displaying the logo, which is enabled by default.
Multimedia setup	Play video/music	Switch for setting background music, which is enabled by default.
	Arrival gong switch	Switch for setting voice announcement, which is enabled by default.
	Multimedia volume	Sets the volume level, ranging from 0 to 100.
	Voice announcement volume	Switch for setting voice announcement volume, with a default value of 80.
	Video rotation	The played video can be rotated by 0°, 90°, 180°, or 270°.

Function		Description
Level I menu	Level II menu	
Time setup	Date (Year)	Sets the year, ranging from 0 to 37.
	Date (Month)	Sets the month, ranging from 1 to 12.
	Date (Day)	Sets the day, ranging from 1 to 31.
	Time (Hour)	Sets the hour, ranging from 0 to 23.
	Time (Minute)	Sets the minute, ranging from 0 to 59.
	Week	Enables/Disables the display of the day of the week.
	Time	Enables/Disables the display of the time.
	Date	Enables/Disables the display of the day of the date.
	Display mode	• YYYY/MM/DD: Displays the date in the Year/Month/Day format. • MM/DD/YYYY: Displays the date in the Month/Day/Year format. • DD/MM/YYYY: Displays the date in the Day/Month/Year format.
System Settings	Language	Sets the language , supporting switching between Chinese and English, with Chinese as the default.
	Display direction	Sets the display orientation, supporting switching between landscape and portrait modes.
	Theme	Sets the display theme, supporting switching among three themes, with Theme 1 as the default.
	Background image	Switches the background image; by default, there are 5 built-in background images.
	Operation mode	Sets the operating mode, supporting auto demo mode and normal mode, with normal mode as the default.
	Arrow scrolling speed	Sets the arrow scrolling frame animation speed, supporting five options: stationary, slow, medium, fast, and fastest, with medium speed as the default.
	Load	Sets the elevator load limit, ranging from 0 kg to 9999 kg, with a default value of 900, meaning 900 kg. When the load is set to 0, both the load and passengers are not displayed.
	Passengers	Sets the elevator person limit, ranging from 0 to 99. When the limit is set to 0, both the load and passengers are not displayed.
	Front/rear door	Select the front door or rear door based on the device installation position.
	Screen inversion	Rotate the screen by 180°.
	Reboot	Restart the device.

<table>
<tr><th colspan="2">Function</th><th rowspan="2">Description</th></tr>
<tr><th>Level I menu</th><th>Level II menu</th></tr>
<tr><td rowspan="6">Network parameter setting</td><td>Main or secondary screens</td><td>• Device ID: Sets the device ID, ranging from 0 to 255. The device ID for the main and secondary screens must be consistent.
• Main or secondary: Sets this display to be main or secondary. Network cable connection is needed for the two displays (configuration not required if there is only one screen in the car).</td></tr>
<tr><td>LAN server IP</td><td>Configure the LAN server IP based on the actual on-site network environment. Example: 192.168.168.166.</td></tr>
<tr><td>Static IP</td><td>When enabled, manually configure the local IP address, subnet mask, and gateway IP.</td></tr>
<tr><td>Local IP</td><td rowspan="3">Sets the device's IP address, subnet mask, and gateway.
The main and secondary screen IPs must be in the same network segment as the server IP and cannot be identical. Example:
<table><tr><th>Main screen</th><th>Secondary screen</th></tr><tr><td>IP1: 192
IP2: 168
IP3: 168
IP4: 214</td><td>IP1: 192
IP2: 168
IP3: 168
IP4: XXX</td></tr></table></td></tr>
<tr><td>Netmask</td></tr>
<tr><td>Gateway IP</td></tr>
<tr><td rowspan="10">Status code</td><td>101</td><td>Current communication baud rate for the time period, ranging from 1 bps to 38400 bps and 0 bps to 9600 bps.</td></tr>
<tr><td>102</td><td>Longest interval time for current data frames, in ms.</td></tr>
<tr><td>103</td><td>Current packet loss rate between the device and the control cabinet.</td></tr>
<tr><td>104</td><td>Current number of baud rate switching instances between the device and the control cabinet.</td></tr>
<tr><td>201</td><td>Current running duration of MCU for the time period.</td></tr>
<tr><td>202</td><td>MCU watchdog reset times (retentive at power failure).</td></tr>
<tr><td>301</td><td>Current running duration of MPU for the time period.</td></tr>
<tr><td>302</td><td>MPU reset times (retentive at power failure).</td></tr>
<tr><td>303</td><td>Timeout time of the last MPU reset, in ms.</td></tr>
<tr><td>304</td><td>Current packet loss rate between the device and the MPU.</td></tr>
</table>

Function		Description
Level I menu	Level II menu	
Customer number	No	Displays the customer or manufacturer protocol number. This parameter is read-only.
Security protocol	No	Option for encrypted or non-encrypted models, with encryption enabled by default. • If an encryption chip is installed on the device, setting it to OFF will disable the security protocol; otherwise, it will be enabled. • If no encryption chip is installed, this parameter is invalid.

6.3 Floor Mapping

The recommended size of the USB drive is smaller than 32 GB and the format is FAT32.

Note

Some low-cost USB drives use processing chips of unknown brands, which may lead to upgrade failures. It is recommended to use USB drives from well-known brands, such as Kingstone and SanDisk.

---

1. Prepare the USB drive in advance and insert the USB drive into the computer.
2. Create **"bstupdate"→"MCU"** on the USB drive.
3. Create a new TXT file in the **"MCU"** folder and rename it to **"100_set.bin"**.
4. Remove the USB drive from the computer and insert it into the device's USB port. The floor mapping file will be automatically copied to the USB drive.

Note

Do not cut off the power during the copying process.

---

5. After the copy is complete, remove the USB drive.
6. Insert the USB drive back into the computer, open the mapping file **"Setfile.txt"**, and configure the floor mapping rules as required.

Note

- The format of floor mapping entry is **"FLOORMAP: Physical floor": "Floor mapping name, voice announcement file number, 0"**,. All characters must be in English. Note that there is an English comma **","** at the end.

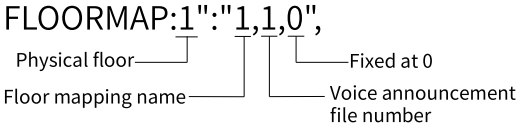


Figure 6-1 Floor mapping format (example)

- The range of physical floors is 1 to 56. The floor mapping name consists of numbers (0 to 9) or letters (A to Z), up to 3 characters long. The voice announcement file number ranges from 1 to 128.

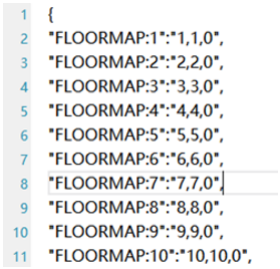


Figure 6-2 Floor mapping file

7. Place the modified mapping file into the **"bstupdate"→"MCU"** folder in the USB drive's root directory. Then, remove the USB drive from the computer and insert it into the device's USB port.
8. When the device displays **"Update MCU successfully"**, the update is complete, and you may remove the USB drive.
9. Manually restart the device and check the floor mapping results.

7 Image or Video Change

The recommended size of the USB drive is smaller than 32 GB and the format is FAT32.

Note

Some low-cost USB drives use processing chips of unknown brands, which may lead to upgrade failures. It is recommended to use USB drives from well-known brands, such as Kingstone and SanDisk.

1. Prepare the USB drive in advance and insert the USB drive into the computer.
2. Create **"bstupdate>video"** on the USB drive.
3. Prepare new image or video according to the requirements.

Note

- The video format can be mp4 or avi, and the image format can be png.
- The video or image file names must consist of English characters or Arabic numerals, with the name length of less than 16 characters.
- The video display resolution is under 1080p, with a maximum frame rate of 30 fps, video coding formats are MPEG-4 or H.264, and it is recommended that the video size be under 500 MB. Image resolution should be less than 1024x768.

4. Open the **"video"** folder and place the new image or video inside the folder.
5. In the **"video"** folder, create a new TXT file and rename and change its format to **"86_set.bin"**.
6. Eject the USB drive from the computer and insert it into the device's USB port. Wait for the update process to complete, then remove the USB drive
7. Manually restart the device and check the display effect.

Note

- If the image is displayed in the wrong orientation, check whether the image needs to be rotated.
- If the image fails to be displayed, check whether the image filename and format are correct.
- If the video cannot be played, check for correct file name and format.

8 Interface Upgrade

The recommended size of the USB drive is smaller than 32 GB and the format is FAT32.

Note

Some low-cost USB drives use processing chips of unknown brands, which may lead to upgrade failures. It is recommended to use USB drives from well-known brands, such as Kingstone and SanDisk.

1. Prepare the USB drive in advance and insert the USB drive into the computer.
2. Create a folder named **"bstupdate"** on a USB flash drive. Copy the new **"TGUS_TF"** interface resource files into **"bstupdate"**.
3. Remove the USB drive from the computer, then insert it into the device's USB port. The device will display the upgrade process. After the device upgrade is complete, you can remove the USB drive.

Note

If **"errfile= *** FAIL"** is displayed (where * represents a specific file), the upgrade has failed. Please power cycle the device and try upgrading again.

4. Manually restart the device and check the display effect.

Note

If a display error occurs, check whether the name and path of the new interface file is correct, and ensure it is consistent with the old interface file being replaced.

9 Maintenance

9.1 Daily Maintenance Items

- Do not expose this product to rain or place it near water. If water stains appear on the surface, which can cause touch distortion, wipe it dry with a dry cloth or paper towel before resuming normal use.
- Do not install the product in unstable positions, such as on wobbling mounting brackets or on inclined surfaces.
- Do not drop the product or subject it to shocks.
- The touch surface of this product requires regular cleaning to ensure it remains clean and tidy.
- Do not hit the surface with force.
- Do not pry or force the edges of the frame open.

9.2 Daily Inspection and Cleaning Items

The operator is responsible for performing checks including but not limited to those listed in the following table in accordance with the recognized technical rules in the country of installation and with applicable regional guidelines. Tick after each check of the item.

Table 9–1 Daily inspection items

No.	Item	Tick
1	Ensure that the installation environment does not change.	☐
2	The device has normal operation and display.	☐
3	The wiring does not come loose.	☐
4	The screws on the external frame are secure.	☐

Table 9–2 Daily Cleaning Items

No.	Item	Tick
1	Clean dust and moist off the device surface periodically.	☐

10 Common Fault Troubleshooting

Table 10–1 Common fault troubleshooting

Name	Cause	Diagnosis	Troubleshooting
During installation and commissioning, floors and arrows are not displayed.	The wiring is incorrect or the cable is connected improperly.	Check whether all connection lines match the defined pinout of the device; inspect COB board and CTB wiring for any abnormalities.	Check whether the communication lines are incorrectly wired (reversed or incorrect sequence). • If so, reconnect the lines correctly. • If problems persist, connect the device to another normally operating elevator control cabinet and check whether the fault is displayed. If the display is normal, check the original control cabinet to ensure that it can operate properly.
	The device and control cabinet customer protocol codes do not match.	Go to the settings menu and check the **"Customer number"** in the menu.	Perform on-site modification using the Monarch App or provide the work orders on the back of the product to the device supplier. Scan and download the Monarch App.
	The on-site control cabinet is an encrypted system, but the device encryption authentication is disabled.	Go to the display settings menu and check whether the **"Security protocol"** is enabled.	Modify the parameters in the settings menu to enable the **"Security protocol"**.

Name	Cause	Diagnosis	Troubleshooting
During installation and commissioning, floors and arrows are not displayed.	The on-site control cabinet is an encrypted system, but the device encryption self-authentication fails.	Go to the display settings menu and check whether the **"Security protocol"** is enabled.	Provide the work orders on the back of the product to the device supplier.
	Address settings conflict for multiple displays installed within the elevator car.	If there is one display in the car, ensure that the display address is set to 0. If there are multiple displays in the car: ● For non-touchscreen displays, one of them must be set to address 0. Any additional non-touchscreen displays should have their addresses set to 61, 62, or 63. ● For touchscreen displays, one of them must be set to address 124. Any additional touchscreen displays should have their addresses set to 125, 126, or 127.	Go to the display settings menu and check the parameters in **"Floor setting>Floor address"** in the menu. If the parameters are incorrect, set them again.

Name	Cause	Diagnosis	Troubleshooting
When the control cabinet is encrypted during running, the floor arrow area displays the up arrow and "000", "-" or "==". It can be temporarily fixed through restarting the system but reoccurs after 7 days.	The floor address setting is incorrect.	Go to the display settings menu and check whether the **"Security protocol"** is enabled. Also, check whether the display address is set correctly. ● For non-touchscreen displays, one of them must be set to address 0. Any additional non-touchscreen displays should have their addresses set to 61, 62, or 63. ● For touchscreen displays, one of them must be set to address 124. Any additional touchscreen displays should have their addresses set to 125, 126, or 127.	Go to the display settings menu and check the parameters in **"Floor setting>Floor address"** in the menu. If the parameters are incorrect, set them again. Modify the parameters in the settings menu to enable the **"Security protocol"**.
	Device encryption authentication is not enabled.	Go to the display settings menu and check whether the **"Security protocol"** is enabled.	Go to the display settings menu and enable **"Security protocol"**.
	The on-site control cabinet is an encrypted system, but the device encryption self-authentication fails.	Go to the display settings menu and check whether the **"Security protocol"** is disabled in the menu and cannot be manually enabled.	Provide the work orders on the back of the product to the device supplier.
	The on-site control cabinet is an encrypted system, with more than two peripheral devices that require encryption authentication mounted or connected on the car display bus, such as display and A0S board.	For the Monarch encryption system, it must be ensured that only one peripheral device gets involved in the encryption authentication on the car display bus.	Provide the work orders on the back of the product to the device supplier.
	The device and control cabinet customer protocol codes do not match.	Go to the settings menu and check the **"Customer number"** in the menu.	Perform on-site modification using the Monarch App or provide the work orders on the back of the product to the device supplier.

Name	Cause	Diagnosis	Troubleshooting
Time display is inaccurate.	Time has not been calibrated.	Go to the display setting menu and check the **"Time setting"** in the menu, where you can set the year, month, day, hour, minute, and display mode separately.	
	The battery level is low.	Check whether the time differs greatly from the previous setting. If yes, recalibrate the time. If the issue persists after three power cycles, it indicates that the battery level is low and replacement is required.	Contact the device supplier to purchase the CR1220 button battery for replacement.
The display freezes after the multimedia video is updated.	The newly imported multimedia video format or specification do not meet the requirements.	Check the video against the specified requirements.	Modify the video format or specification, delete incorrect video, and re-import.
The displayed orientation is incorrect after the multimedia video is updated.	The newly imported video orientation is incorrect.	After importing a video, the displayed orientation of the video may be rotated by 90°, 180°, or other angles.	Go to the settings menu and choose from 0°, 90°, 180°, or 270° for **"Media setting-Video rotation"** until it displays correctly.
Interface flipped 180°.	The default settings of the display are incorrect.	When the device is installed on an operating panel for commissioning, the interface is flipped 180°.	Go to the settings menu, select the option of **"Screen inversion"**, and confirm. The display will restart automatically to apply the interface adjustment.

11 Service and Support

Should you encounter a safety accident during the use or operation of the product, or face challenges in operating and maintaining the equipment, which remain unresolved after the relevant documentation is consulted, we provide multiple channels to ensure prompt resolution:

- Channel #1: Contact service@inovance.com.
- Channel #2: Visit https://www.inovance.com/global to access document downloads, after-sales support, spare parts ordering, repair applications, and authenticity verification services.
- Channel #3: Download My Inovance app (https://zshc-eu.inovance.com/download-pc/) where you can access products info and documentation, and query product parameters.

We are committed to providing you with quick and professional technical support, and we look forward to your satisfaction and trust.

Copyright © Shenzhen Inovance Technology Co., Ltd.

PS00018235A01

Shenzhen Inovance Technology Co., Ltd.

www.inovance.com

Add.: Inovance Headquarters Tower, High-tech Industrial Park,
Guanlan Street, Longhua New District,
Shenzhen 518000, P.R. China
Tel: (0755) 2979 9595 Fax: (0755) 2961 9897

Suzhou Inovance Technology Co., Ltd.

www.inovance.com

Add.: No. 52, Tian E Dang Road, Wuzhong District, 215104,
Suzhou City, Jiangsu Province, P.R. China
Tel: (0512) 6637 6666 Fax: (0512) 6285 6720