INOVANCE

Advancing industrial technology,
for a better world



SV670P-INT Series Servo Drive

Function Guide

Industrial Automation | New Energy Vehicle | Intelligent Elevator | Intelligent Robot | Digital Energy | Rail Transit

Data code PS00021341B00

Legal Information

Copyright

Copyright © Shenzhen Inovance Technology Co., Ltd. 2024. All rights reserved.

This documentation is the exclusive property of Shenzhen Inovance Technology Co., Ltd. No individual or entity may excerpt, reproduce, modify, translate, or distribute any content herein without written consent from Inovance.

Legal action will be taken against infringement.

Trademarks

INOVANCE is a registered trademark of Shenzhen Inovance Technology Co., Ltd. and its affiliated companies. All other trademarks or registered trademarks mentioned in this documentation are the property of their respective owners. Unauthorized use of these trademarks by third parties for any purpose without written authorization could violate the rights of their owners.

Disclaimer of Liability

Due to continuous updates and improvements of products and technologies, the content of this documentation may not fully match the actual products. In the event of any discrepancies, the actual products shall prevail.

The contents are subject to change without notice due to product upgrade.

Waste Disposal

Storage, use, and disposal of this product (including optional accessories) must comply with local laws and regulations.

Qualified Personnel

The product/system described in this documentation may be operated only by personnel qualified for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel can identify the risks of the product/system and prevent possible dangers.

Proper Use of the Product

Proper transportation, storage, assembly, installation, commissioning, operation, and maintenance are required to ensure the safe operation of the product without any problems. The required ambient conditions must be met. All operations must follow the guidelines provided in this documentation.

Preface

Introduction

Thank you for purchasing the SV670P-INT series servo drive developed by Inovance.

The SV670P-INT series servo drive is a premium servo drive featuring high speed, high precision, high performance, and commissioning-free functions. It is compliant with CE, UL, KC, EAC, and UKCA certifications. It is specially suitable for scenarios that require premium functions.

The series offers a power range of 0.05 kW to 7.5 kW and support for Modbus RTU, CANopen, and CANlink communication protocols. The servo drive comes with adaptive stiffness level settings, inertia auto-tuning, and vibration suppression functions for easy use. The servo drive, together with an MS1 series high-response servo motor (with ultra-low, low or medium inertia) equipped with a 23-bit single-turn/multi-turn absolute encoder or a third-party servo motor, serves to deliver a quiet and stable operation and accurate process control through the fully closed-loop function and internal process segment function.

In addition, the drive supports STO function as an optional function. It is equipped with dynamic braking function as standard. This servo drive serves to achieve quick and accurate position control, speed control, and torque control through high-performance solutions for automation equipment in industries such as electronic manufacturing, lithium batteries, manipulators, packaging, and machine tools.


This guide presents product functions and parameters, including function overview, basic servo functions, adjustment and parameter list.

Note

The speed unit of a servo motor and a DDR motor in RPM, and that of a DDL motor is mm/s. RPM is used throughout this guide. Unless otherwise specified, an RPM value is equivalent to the mm/s one.

More data

The following figure and table describe related documents of the drive.

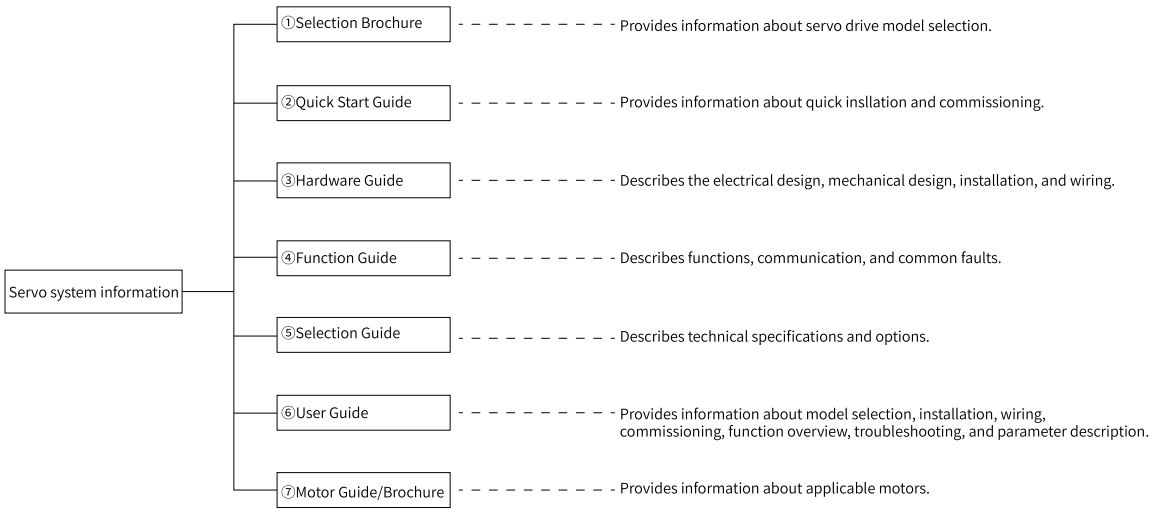

No.	Name	Code	Description
①	SV670-INT Series Flagship Servo Drive	19120413	Provides information about product selection, including the list of supporting components, technical data on the drive and motor, and cable selection guide.
②	SV670P-INT Series Servo Quick Start Guide	PS00021339	Introduces product models, installation, and quick commissioning.
③	SV670P-INT Series Servo Drive Hardware Guide	PS00021340	Describes the installation and wiring of the drive, including pre-installation preparation, unpacking and handling, mechanical installation, and electrical installation.
④	SV670P-INT Series Servo Drive Function Guide (current guide)	PS00021341	Describes the functions and parameters of the product, including function overview, basic servo functions, tuning instructions, and parameter descriptions.
⑤	SV670P-INT series servo drive selection guide	PS00021342	Provides information about product selection, including the list of supporting components, technical data on the drive and motor, and cable selection guide.
⑥	SV670P-INT Series Servo Drive User Guide	PS00021338	Provides information about model selection, installation, commissioning, function, troubleshooting and parameters of the equipment.
⑦	MS1-R Series Servo Motor Selection Guide	PS00004605	Describes product information, general specifications, motor selection, cable selection, certification categories and standards of the motor.
	MS1-R Series Servo Motor Installation Guide	PS00005407	Describes the installation of the motor, including motor installation flowcharts, wiring, unpacking and handling, mechanical installation, and electrical installation.

Revision history

Date	Version	Revision
July 2026	B00	**Added:** • Content to section "ETune". • Section "Voltage Injection Auto-tuning". **Updated:** • Made structural optimization. • Updated section "Magnetic Pole Auto-tuning". • Updated section "Auto-tuning Process". • Updated section "STune". • Updated section "Fully-closed Loop": Added safety precautions for the fully closed-loop function. • Updated section "Speed Reference Input": Added content about speed analog in dead zone with linearization mode. • Updated section "Torque Reference Input": Added content about torque analog in dead zone with linearization mode. • Updated section "Certifications, Directives, and Standards": Updated the functional safety certifications. • Updated the description of parameter H32.73. • Updated section "Safety Parameters": Retained content only about the STO function. **Deleted:** • Content about N-type models. • Information about the built-in brake function. • Information about the built-in brake in some descriptions. • Information about H02.16.
December 2024	A02	**Added:** Section "Conformance Certification". **Updated:** • Made minor corrections. • Updated the manual name. • Updated section "Preface". • Updated section "Periodic Maintenance Checklist"
August 2024	A01	Made minor corrections. Updated the parameters.
May 2024	A00	Initial release.

Access to the guide

This guide is not delivered with the product. You can download the PDF version in the following ways:

- Visit *https://www.inovance.com/global*, and choose **Service&Support > Support > Documentation Download**.
- Scan the **QR code** on the product with your smart phone.
- Scan the QR code below to install the **My Inovance** app, where you can search for and download the guide.



Scope of standard functions

This guide describes the function application. The scope of functions described in this guide may differ from those of the system delivered. The actual functionality of the delivered system shall prevail.

Systems ordered may include functions not described in the guide and functions of the system delivered may differ from those described in the guide. Contact the post-sales support if necessary.

This guide does not cover complete technical specifications for all product types, nor does it cover solutions to every potential scenario that may occur during installation, operation, and maintenance. For any functions added or modified on the device by the device manufacturer, the device manufacturer shall provide the relevant information.

Warranty disclaimer

Inovance provides warranty service within the warranty period (as specified in your order) for any fault or damage that is caused by proper operation of the user. Maintenance fees will be charged after the warranty period expires.

Even within the warranty period, maintenance will be charged for the following product damage:

- Damage caused by operations not following the instructions in the guide
- Damage caused by fire, flood, or abnormal voltage
- Damage caused by using the product for unintended functions
- Damage caused by using the product outside the specified scope
- Secondary damage caused by force majeure (natural disaster, earthquake, lightning strike)

When applicable, relevant maintenance fee will be charged according to the latest Price List of Inovance. If otherwise agreed upon, the agreed terms and conditions shall prevail.

For details, see the Warranty Card.

1 Fundamental Safety Instructions

1.1 General Safety Instructions

Safety disclaimer

- This chapter provides essential safety instructions for proper use of the product. Before using this product, read through the guide and comprehend all the safety instructions. Failure to comply with the safety instructions may result in death, severe injury, or equipment damage.
- "DANGER", "WARNING", and "CAUTION" signs in this guide are only supplements to the safety instructions, and do not reflect all safety instructions to be followed.
- Use this product according to the designated environment requirements. Damage caused by improper use is not covered by warranty.
- Inovance shall take no responsibility for any personal injury or property damage caused by improper use.

Safety levels and definitions

	Indicates that failure to comply with the notice can result in death or severe personal injury.
	Indicates that failure to comply with the notice may result in severe personal injury or death.
	Indicates that failure to comply with the notice may result in minor or moderate injury or equipment damage.

Safety Instructions

- Drawings in the guide are sometimes shown without covers or protective guards. Install the covers or protective guards as specified first, and then perform operations in accordance with the instructions.
- The drawings in the guide are shown for illustration only and may be different from the product you purchased.
- Operators must take mechanical protection measures to protect their safety. For example, they must wear safety shoes, safety clothing, safety glasses, protective gloves and sleeves, or other protective equipment.

Unpacking



- Do not install the product in the case of any damage, rust, or signs of use on the product or accessories upon unpacking.
- Do not install the product in the case of water seepage into the product or missing or damaged components upon unpacking.
- Do not install the product in the case of any discrepancy between the product you received and the product name on the packing list.



- Check whether the packing is intact and whether there is damage, water seepage, dampness, and deformation before unpacking.
- Unpack the package by following the unpacking sequence. Do not strike the package violently.
- Check for damage, rust, or dents on the surfaces of the product and accessories upon unpacking.
- After unpacking, check the contents against the packing list to ensure that the equipment and accessories are in the correct quantities, and that all documentation is complete.

Storage and transportation



- Large or heavy equipment must be handled by qualified professionals using specialized hoisting equipment. Failure to comply could result in personal injury or equipment damage.
- Before hoisting the equipment, ensure that components such as the front cover and terminal blocks are secured firmly with screws. Loosely connected components may fall off and result in personal injury or equipment damage.
- Do not stand or stay below the product which is being hoisted.
- When hoisting the equipment with a steel rope, ensure the equipment is hoisted at a constant speed without suffering from vibration or shock. Do not turn the equipment over or let the equipment stay hanging in the air. Failure to comply could result in personal injury or equipment damage.



- Handle the equipment with care and mind your step during transportation to prevent personal injury or equipment damage.
- When carrying the equipment with bare hands, hold the equipment casing firmly with care to prevent parts from falling. Failure to comply could result in personal injury.
- Store and transport the equipment based on the storage and transportation requirements. Failure to comply could result in equipment damage.
- Do not store or transport the equipment in locations where the equipment may be exposed to splashing water or rain, direct sunlight, strong electric field, strong magnetic field, or strong vibration.
- Store the equipment for up to three months. Take stricter protective measures and carry out the necessary inspections for a longer storage time.
- Pack the equipment securely and properly before transportation. Use a fully enclosed container for long-distance transportation.
- Do not transport the equipment with other devices or items that may impact or cause harm to the equipment.

Installation
 • Ensure peripheral power distribution requirements are met, and select air switches, fuses, cables, and cable terminals correctly. • Use standard torque for screw fastening, and use appropriate terminal crimping tools for crimping terminals. • Ensure heat dissipation requirements are met and design inlet and outlet airflow duct properly. • Avoid environments with dripping water, conductive foreign objects (such as carbon fiber filaments, conductive metal dust, metal chips), and salt spray. **Failure to follow the above instructions will pose a fire risk.** • This equipment must be operated only by trained and qualified electrical personnel. Non-professionals must not operate this equipment.
 • Read through the guide and safety instructions before installation. • Do not install this equipment in places with strong electric or magnetic field. • Before installation, check that the mechanical strength of the installation site can bear the weight of the equipment. Failure to comply may result in mechanical hazards. • Do not wear loose clothes or accessories during installation. Failure to comply may result in an electric shock. • When installing the equipment in an enclosed environment (such as a cabinet or case), use cooling devices (such as fans or air conditioners) to cool the space and meet the installation environment requirements. Failure to do so can result in equipment overtemperature or fire accidents. • Do not retrofit the equipment. • Do not fiddle with the bolts used to fix equipment components or the bolts marked in red. • When the equipment is installed in a cabinet or terminal device, appropriate guard devices (guards for fire, electrical, and mechanical protection) meeting applicable IEC standards and local laws and regulations must be provided. • Before installing devices with strong electromagnetic interference, such as a transformer, install a shielding device for the equipment to prevent malfunction. • Install the equipment onto an incombustible object such as a metal. Keep the equipment away from combustible objects. Failure to comply may result in a fire. **The edges of the equipment metal enclosure are sharp. Note the following precautions during installation to avoid personal injury or cable damage:** • When performing installation, handling, or maintenance operations, always wear cut-resistant gloves. • Avoid direct skin contact with enclosure edges and cut surfaces during operation.
 • Cover the top of the product with a piece of cloth or paper during installation. This is to prevent unwanted objects such as metal chippings, oil, and water from falling into the product and causing faults. After installation, remove the cloth or paper on top of the product to prevent over-temperature caused by poor ventilation due to blocked ventilation holes. • Resonance may occur when the equipment operating at a constant speed executes variable speed operations. In this case, install the vibration-proof rubber under the motor frame or use the vibration suppression function to reduce resonance.

Wiring

DANGER

- Equipment installation, wiring, maintenance, inspection, or parts replacement must be performed only by professionals.
- Before wiring, switch off all power supplies of the device. Wait for at least the time designated on the warning label before further operations because residual voltage still exists after power-off. After waiting for the designated time, measure the DC voltage in the main circuit to ensure the DC voltage is within the safe voltage range. Failure to comply can result in electric shock.
- Do not perform wiring, remove the equipment cover, or touch the circuit board and other exposed live parts with power on. Failure to comply can result in electric shock.
- Make sure that the equipment and product are grounded properly. Failure to comply can result in the risk of electric shock.

WARNING

- Do not connect the power cable to output terminals of the equipment or product. Failure to comply may cause equipment damage or even a fire.
- When connecting a drive with the motor, make sure that the phase sequences of the drive and motor terminals are consistent to prevent reverse motor rotation.
- Cables used must comply with corresponding cross-sectional area and shielding requirements. The shield of the shielded cable must be grounded at one end properly.
- Tighten the terminal screws with the torque specified in the user guide. Insufficient or excessive torque may cause overheating and damage to the joint, which could result in fire.
- After wiring is done, ensure that all cables are connected properly and no screws, washers or exposed cables are left inside the equipment. Failure to comply could result in electric shock or equipment damage.
- Avoid direct skin contact with enclosure edges and cut surfaces during operation.
- Route cables carefully during wiring. Avoid pressing them against sharp edges, which may cause squeezing or cutting. It is recommended to use protective sleeves or route cables away from such edges.
- If the enclosure has a protective film, remove it only after installation is completed and all work involving sharp edges has been finished.

Caution

- During wiring, follow the proper electrostatic discharge (ESD) procedure and wear an anti-static wrist strap. Failure to comply may result in damage to the equipment or its internal circuits.
- Use the shielded twisted pair cable to wire the control circuit, and connect the shield to the grounding terminal of the equipment. Failure to comply may result in equipment malfunction.

Power-on

DANGER

- Before power-on, check that the equipment is installed properly with reliable wiring and the motor can be restarted.
- Before power-on, make sure that the power supply meets equipment requirements to prevent equipment damage or even a fire.
- After power-on, do not open the cabinet door or protective cover of the equipment. Do not touch any terminals, or remove any part of the equipment at power-on. Failure to comply will result in an electric shock.

WARNING

- Perform a trial run after wiring and parameter setting to ensure that the equipment operates safely. Failure to comply may result in personal injuries or equipment damage.
- Before power-on, check that the rated voltage of the equipment is consistent with that of the power supply. Failure to comply may result in a fire. Using an incorrect supply voltage may cause a fire.
- Before power-on, check that no one is near the equipment, motor, or other mechanical parts. Failure to comply may result in personal injuries or even death.

Operation
DANGER • The equipment must be operated only by professionals. Failure to comply can result in injury or death. • Do not touch any connecting terminals or disassemble any unit or component of the equipment during operation. Failure to comply could result in electric shock.
WARNING • Do not touch the enclosure, fan, or resistor with bare hands. Failure to comply may result in burns. • Prevent metal or other objects from falling into the equipment during operation. Failure to comply may result in a fire or equipment damage. • If the branch circuit protective device applies, it indicates that the fault current may have been cut off. To reduce the risk of fire or electric shock, inspect the current-carrying components and other components of the drive. Replace any damaged components immediately. If the current component of the overload relay is burned out, replace the entire overload relay.

Maintenance
DANGER • Equipment installation, wiring, maintenance, inspection, or parts replacement must be performed only by professionals. • Do not maintain the equipment with power-on. Failure to comply may result in an electric shock. • Before maintenance, disconnect all the power supplies of the equipment and wait for at least the time specified on the warning label. • When using a permanent magnet (PM) motor, do not touch the motor terminals while the motor is rotating, because induced voltage may be present at the terminals even after the product is powered off. Failure to comply may result in electric shock.
WARNING • Perform routine and periodic inspection and maintenance on the equipment according to maintenance requirements and keep a maintenance record.

Repair
DANGER • Equipment installation, wiring, maintenance, inspection, or parts replacement must be performed only by professionals. • Do not repair the equipment with power-on. Failure to comply may result in electric shock. • Before inspection or repair, disconnect all the power supplies of the equipment and wait for at least the time specified on the warning label.
WARNING • Submit a request for repair based on the warranty agreement. • When the fuse is blown or the circuit breaker or earth leakage circuit breaker (ELCB) trips, wait for at least the time designated on the equipment warning label before power-on or further operations. Failure to comply could result in equipment damage, personal injury, or death. • Troubleshooting and repair of a faulty or damaged equipment must be performed by professionals based on the repair instructions, with the repair records kept properly. • Replace quick-wear parts of the equipment according to the replacement instructions. • Do not use damaged equipment. Failure to comply could result in death, personal injury, or severe equipment damage. • Recheck the wiring and reset the parameters after equipment replacement.

Disposal
WARNING • Dispose of the retired equipment in accordance with applicable national regulations and standards. Failure to comply could result in property damage, personal injury, or death. • Recycle retired equipment in accordance with industry waste disposal standards to avoid environmental pollution.

Additional precautions

Cautions for the dynamic brake

- Dynamic braking can only be used for emergency shutdown in case of equipment faults and sudden power failure. Do not trigger faults or power failure frequently.
- When the equipment is operating at high speed, ensure an interval of more than five minutes for the dynamic braking function. Failure to comply may result in damage to the internal dynamic braking circuit.
- Dynamic braking is common in rotating mechanical structures. For example, when a motor has stopped running, it keeps rotating due to the inertia of its load. In this case, this motor is in the generating state and short circuit current passes through the dynamic brake. If this situation continues, the drive, and even the motor, may be burned.

Precautions for grounding

When applications such as electric welders are involved, connect the PE cable of the motor to the screws of the die-cast structural component of the drive. Failure to comply may result in motor burnout.

Effects of electromagnetic fields on medical implants

The motor is hazardous to persons wearing medical implants nearby the equipment.

The electromagnetic field affects the function of medical implants being used (such as cardiac pacemakers), resulting in malfunctioning.

Safety labels

To ensure safe operation, comply with equipment-related safety labels. The following table describes the meanings of the safety labels.

Safety labels	Description
	• Connect the grounding terminal properly to prevent electric shock. Read through the guide and follow the safety instructions. • Do not touch terminals within 15 minutes after power-off to prevent electric shock. • Do not touch the heatsink when power is on. Failure to comply may result in burn.

1.2 Industrial Information Security

The product provides interfaces for network connection and data transmission. To protect factories, systems, machines, and networks from cyberattacks, it is essential to implement proper protection mechanism for industrial security.

Customers are responsible for providing and maintaining a secure connection between the product and their network or any other network to protect their factories, systems, machines, and networks from unauthorized access. Such systems or machines can be connected to an enterprise network or the Internet only when a secure connection is established and appropriate security measures (such as using antivirus software or installing firewalls) are in place.

Inovance continuously develops and improves its products and solutions to enhance safety. It is strongly recommended that you update the product promptly and always use the latest version.

Caution

Malware (such as viruses, Trojans, and worms) can bring the device into an unsafe operating state, resulting in death, serious injury, and property damage. Observe the following precautions:

- Always use the latest software version. If the product version is no longer supported or the latest version is not used, you will be exposed to increased risk of cyber attacks.
- Develop and maintain appropriate protective measures (including but not limited to antivirus software, firewalls, WAF, IPS/IDS, situational awareness system, identity authentication, and data encryption) to prevent the files in mobile storage devices from being damaged by malware, and to protect the products, networks, systems, and interfaces from unauthorized access, tampering, hacking, data leakage, or information theft.
- Check all safety-related interfaces and settings after commissioning.

1.3 Certifications, Directives, and Standards

Table 1–1 Compliance list

Certification	Directive		Standard
CE certification	EMC directive	2014/30/EU	EN IEC 61800-3
	LVD directive	2014/35/EU	EN 61800-5-1 EN 60034-1 EN 60034-5
	RoHS directive	2011/65/EU 2015/863/EU	-
Functional safety certification	Machinery directive	2006/42/EC	EN ISO 13849-1 EN 61800-5-2 EN IEC 62061
	-		EN-AR-N 61508
UL/cUL certification	-		UL61800-5-1 CSA C22.2 No.274 UL 1004-1 UL 1004-6 CSA C22.2 No.100

Note

The product certifications comply with the directives and standards specified in the preceding table.

1.4 Terms and Abbreviations

Terms and Abbreviations	Description
Cat.	Category of safety components in the control system. The categories are B, 1, 2, 3, and 4.
CCF	Common cause failure
DCavg	The average diagnostic coverage (%).
DTI	The diagnostic test interval time.
SFF	The safe failure fraction.
HFT	The hardware fault tolerance.
PFH	The probability of a dangerous failure per hour.
PL	The performance level.
SC	The system capability.
SIL	The safety integrity level.
T_1	The proof test interval.
DI	Digital input.
DO	Digital output.
PCB	Printed circuit board.
MCU	The microcomputer unit.
FPGA	The field programmable gate array.
MTTFd	The mean time to dangerous failure.
SRA	The safety-related application parameter.
nSRA	The non-SRA parameter.
STO	The safe torque off (STO) function brings the machine safely into a no-torque state and prevents it from unexpected start. When the STO function is enabled, the servo stops according to the stop mode (H02.08).

1.5 Safety Parameters

The STO function is available only in -FS models.

Item	Safety parameters
SIL	SIL3, IEC 61508 Maximum SIL3, EN IEC 62061
PFH	STO safety function: PFH ≤ 0.73×10^{-9} [1/h] (0.73% of SIL3)
Cat.	3, EN ISO 13849-1
PL	e, EN ISO 13849-1
DTI	STO safety function: ≤ 10 ms
MTTFd	645.64 years
DCavg	≥ 90% (medium)
T_1	20 years
Mission time	20 years
HFT	1
SC	SC3

Item	Safety parameters
MTTR	0 hour
MRT	0 hour
Operation mode	High demand or continuous mode
Device type	Type B

Note

- See ISO13849-2: 2012 for failure modes of devices.
- Failure sharing of different failure modes of each device.
- See SN29500 for failure rate of each device.
- The average maximum ambient temperature is 55 °C.
- To know more about the λ_{DD} and λ_{DU} of each safety function, contact Inovance technical support staff.

2 Function Overview

Functions of the drive are listed below. See details in corresponding chapters.

Function		Description	References
Model specifications		Supports the servo motors and third-party motors supported by the SV670-INT series servo drive.	*SV670-INT Series Flagship Servo Drive*
Secondary encoder		ABZ incremental encoder (with TTL signal)	-
High-resolution encoder		The servo drive is equipped with a high-performance encoder with a resolution up to 2^{23} (8388608) PPR.	-
AI, AO		Supports AI and AO.	-
External braking resistor		The external braking resistor is used only when the braking capability of the built-in braking resistor is insufficient.	-
Electronic gear ratio		Input pulse can be reduced or amplified: 0.001 to 4000 × Encoder resolution ÷ 10000.	*"3.9.3 Reference Frequency Division/ Multiplication (Electronic Gear Ratio)" on page 104*
Status display		The servo drive status is displayed on the 5-digit 8-segment LED.	-
External I/O display		The ON/OFF state of external I/O signals is displayed.	-
Inertia auto-tuning	Offline	The servo drive automatically calculates the load inertia ratio through inertia auto-tuning.	*"7.3.1 Offline inertia auto-tuning" on page 327*
	Online	The host controller sends a command to make the motor rotate, and the servo drive calculates the load inertia ratio in real time.	*"7.3.2 Online inertia auto-tuning" on page 330*
Automatic gain tuning	Supports two auto-tuning modes: STune and ETune.	The servo drive generates a group of gain parameters based on the correct inertia ratio.	*" Automatic gain tuning" on page 331*

Function		Description	References
Manual gain tuning	Basic gains	If the auto-tuned gain values fail to deliver desired performance, fine-tune the gains manually to improve the performance.	"7.5.1 Basic Parameters" on page 345
	Gain Switchover	Applies different gains for different status (operating or stop) of the motor. Gains can also be switched by external terminals during operation.	"7.5.2 Gain Switchover" on page 348
	Reference filter	Filters the position, speed, and torque references.	"7.5.3 Position reference filter" on page 353
	Feedforward gain	Improves the following behavior.	"7.5.4 Feedforward Gain" on page 353
	PDFF control	Adjusts the speed loop control mode to improve the anti-interference capability at low frequency range.	"7.5.5 PDFF control" on page 356
	Torque disturbance observer	Improves the resistance against torque disturbance.	"7.5.6 Torque disturbance observer" on page 357
	Speed observer	The speed observer, which facilitates quick positioning, applies in applications with slight load characteristic change and constant inertia.	"7.5.7 Speed observer" on page 358
	Model Tracking	The model tracking control can improve response and shorten the positioning time. It is available only in position control mode.	"7.5.8 Model Tracking" on page 360
	Friction Compensation	Performs positive/negative compensation based on the operating direction. It is active only in position control.	"7.5.9 Friction Compensation" on page 362
	Motor Cogging Torque Ripple Compensation	Reduce speed fluctuation while ensuring stable system margin.	"7.5.10 Motor Cogging Torque Ripple Compensation" on page 363
Parameter tuning in different control modes	Tunes parameter in speed, position, and torque modes.	-	" Parameter tuning in different control modes" on page 365
Vibration suppression	Mechanical Resonance Suppression	Suppresses mechanical resonance that may be generated when the response speed is excessively high.	"7.7.1 Mechanical Resonance Suppression" on page 368
	Low-frequency resonance suppression at the mechanical end	Activates the filter used to suppress low-frequency resonance.	"7.7.2 Low-frequency resonance suppression at the mechanical end" on page 374
Mechanical characteristic analysis		Analyzes the resonance frequency and characteristics of the mechanical system through a PC installed with Inovance software tool.	"7.8 Mechanical Characteristic Analysis" on page 376

Function		Description	References
High-performance tuning		Analyzes the mechanical resonance point and system bandwidth to simulate the effect on loop control when filters are used and parameters are tuned.	"7.9 High-Performance Tuning" on page 377
Profile position (PP) mode		The host controller sets parameters through the bus, and the servo drive generates position references and performs positioning control.	" Profile position (PP) mode" on page 42
Profile velocity (PV) mode		The host controller sets parameters via the bus, and the servo drive generates speed references and performs speed tracing.	" Profile velocity (PV) mode" on page 50
Profile torque (PT) mode		The host controller sets parameters via the bus, and the servo drive generates torque references and performs torque output.	" Profile torque (PT) mode" on page 55
Homing Mode (HM)		The host controller selects the homing mode through parameters, and the servo drive performs homing automatically with the position feedback set to the preset value.	" Homing Mode (HM)" on page 60
Process segment mode		Through process segment setting, the servo drive performs positioning control, fixed speed control, and parameter writing based on the process segment setting command.	" Process Segment Mode" on page 26
Position control mode		The servo drive works in position control mode.	" Position control mode" on page 83
Speed control mode		The servo drive works in speed control mode.	" Speed control mode" on page 121
Torque control mode		The servo drive works in torque control mode.	" Torque control mode" on page 143
Hybrid Control Mode	Position/Speed control switchover	Switchover between position control and speed control is implemented via external input signal.	"3.12 Hybrid Control Mode" on page 164
	Position/Torque control switchover	Switchover between speed control and torque control is implemented via external input signal.	
	Torque/Position control switchover	Switchover between torque control and position control is implemented via external input signal.	
	Torque/Speed/Position control switchover	Switchover between torque control, speed control and position control is implemented via external input signal.	
Interpolation (IP) mode		The interpolation mode can be used to achieve synchronous operations of multi-axis servo drives or single-axis servo drives.	" Interpolated Position (IP) Mode" on page 166
Position reference filter		Enables smooth acceleration and deceleration.	"3.9.4 Position reference filter" on page 109
Interrupt positioning		The servo drive interrupts the current position reference and executes the required displacement.	"3.14 Interrupt Positioning" on page 171
Frequency-division output function		Outputs the position reference pulses or the position pulses fed back by the encoder in the form of phase A/phase B quadrature pulses.	"3.9.6 Frequency Division Output" on page 112

Function	Description	References
Homing	The servo drive automatically searches for the mechanical home and positions the relative position between the mechanical home and the mechanical zero.	*"3.8.6 Homing Operation" on page 66* and *"3.15 Homing" on page 174*
Zero clamp	Keeps the motor in the position locked state when the motor speed drops below a certain value in speed control mode.	*"3.10.4 Zero Clamp" on page 137*
DI signal assignment	Assigns functions such as S-ON to corresponding pins.	-
Forced DO	Outputs signals not related to the drive status forcibly or used to check the wiring of output signals.	*"4.7 Communication-forced DO" on page 207*
Touch probe	This function is the same as the position latch function.	*"4.10 Touch probe" on page 219*
Black box	Captures the data at the moment of fault or save the data automatically under specified conditions.	*"4.9 Black Box" on page 215*
SEMI F47 voltage drop	Works with H0A.84 (Hold time of instantaneous stop) to keep the drive running when the power supply voltage drops.	*"4.11 SEMI F47 voltage drop" on page 224*
Position comparison output	Outputs a DO signal with designated pulse width after the drive reaches the preset target position.	*"4.8 Position Comparison" on page 208*
STO function	The safe torque off (STO) function brings the machine safely into a no-torque state and prevents it from unexpected start.	*" STO Integration" on page 230*

3 Basic Functions of the Servo Drive

The servo system consists of three major parts: servo drive, servo motor, and encoder.

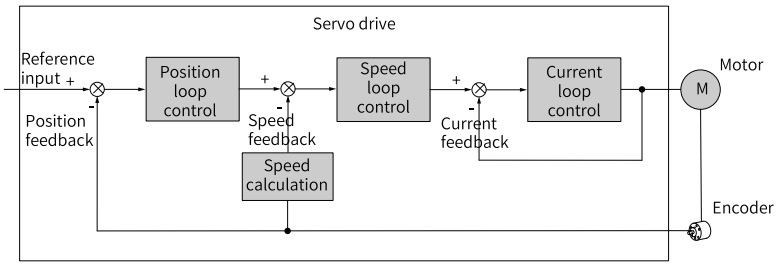


Figure 3-1 Structure of a basic servo system

As the control hub of the servo system, the servo drive performs accurate position, speed, torque, or hybrid control on the servo motor by processing the input signals and feedback signals. Position control is the most important mode of a servo system.

Descriptions of the control modes are as follows:

- Position control mode
  In position control mode, the servo drive controls the motor position based on position references. In position control mode, the target position of a motor is determined by the sum of position references, and the motor speed is determined by the position reference frequency. The servo drive performs quick and accurate position control and speed control through the feedback encoder installed on the motor or an external encoder (fully closed-loop control). The position control mode mainly applies to scenarios that require positioning control, such as manipulators, surface mounted technology (SMT) machines, engraving and milling machines (pulse train references), and computer numerical control (CNC) machine tools.
- Speed control mode
  In speed control, the device speed is controlled through speed references. In speed control mode, the servo drive performs quick and accurate speed control through the speed reference sent through communication. The speed control mode mainly applies to scenarios that require speed control or where a host controller is used for position control or the commands sent from the host controller are used as the speed references for the servo drive, such as the engraving and milling machines.
- Torque control mode
  In the torque control mode, the motor current is linearly proportional to the torque. Therefore, torque control is implemented through current control. The drive controls the motor output torque based on torque references. The torque reference can be set through communication. This control mode is mainly applicable to winding and unwinding devices with strict tension requirements. In these scenarios, the torque always changes with the winding radius so that the tension will not change along with the change of the winding radius.

3.1 Setting and Display of Operation Modes

Introduction to servo operation modes

The operation mode of the servo drive is set in 6060h. The operation mode of the drive can be viewed in 6061h.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6060h	6060h	Servo drive mode selection	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Real time	*" 6060h" on page 801*
6061h	6061h	Operation mode display	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Read-only	*" 6061h" on page 801*

Available communication synchronization cycle

The drive supports 1 ms or an integer multiple of 1 ms. The maximum synchronization cycle is 20 ms.

3.2 Conversion Factors

The gear ratio indicates the motor displacement (in encoder unit) corresponding to the load shaft displacement of 1 reference unit.

The gear ratio is comprised of the numerator 6091.01h and the denominator 6091.02h. It determines the proportional relation between the load shaft displacement (reference unit) and the motor displacement (encoder unit), as shown below.

Motor displacement = Load shaft displacement × Gear ratio

The motor is connected to the load through the reducer and other mechanical transmission mechanism. The gear ratio is related to the mechanical reduction ratio, mechanical dimensions, and motor resolution.

The position factor is calculated as follows:

$$\text{Gear ratio} = \frac{\text{Motor encoder resolution}}{\text{Load shaft resolution}}$$

☆Related parameters

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6091.01h	6091-01h	Motor resolution	1 to 4294967295	1	-	At stop	"6091_en.01h" on page 810
6091.02h	6091-02h	Load shaft resolution	1 to 4294967295	1	-	At stop	"6091_en.02h" on page 810

Take the load ball screw as an example:

Min. reference unit f_c = 1 mm

Screw lead P_B = 10 mm/r

Reduction ratio n = 5:1

Resolution of Inovance motor with 23-bit serial encoder (P) = 8388608 (PPR)

The position factor is calculated as follows:

Position factor:

$$\text{Position factor} = \frac{\text{Motor revolution P x n}}{P_B} = \frac{8388608 \times 5}{10} = \frac{41943040}{10} = 4194304$$

Therefore, 6091.01h = 4194304; 6091.02h = 1. That means when the load shaft displacement is 1 mm, the motor displacement is 4194304.

Reduce the values of 6091.01h and 6091.02h to a point where there is no common divisor, and take the final value.

3.3 Servo Drive States

Abide by the process stipulated in the CiA402 protocol when operating the servo drive. Otherwise, the servo drive cannot run in the designated status.

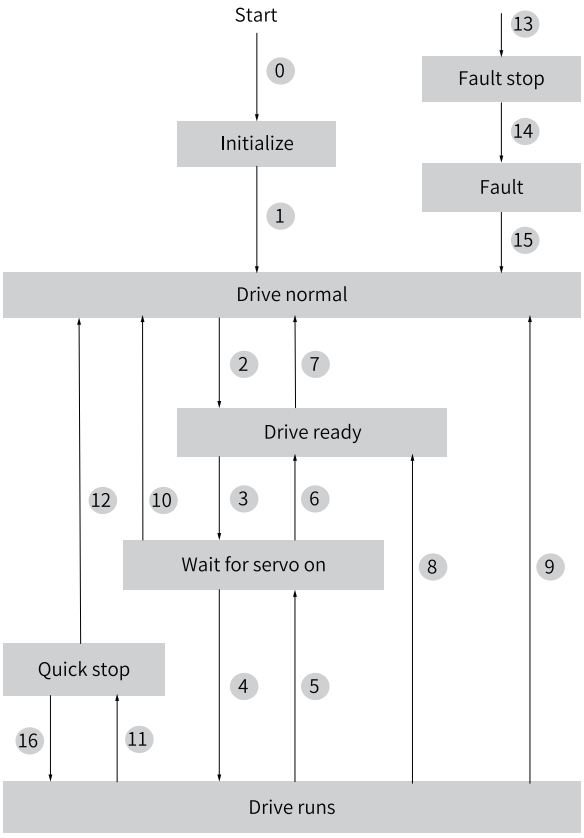


Figure 3-2 Switchover of CiA402 state machine

See the following table for descriptions of different states.

Initialization	Initialization of the drive and internal self-inspection are done. Parameters cannot be set, and the driving function cannot be executed.
No fault	No fault exists in the drive or the fault has been cleared. Parameter setting of the servo drive is allowed.
Ready to switch on	The servo drive is ready to run. Parameter setting of the servo drive is allowed.
Wait for the S-ON signal	The servo drive is waiting for the S-ON signal. Parameter setting of the servo drive is allowed.
Enable operation	The servo drive is operating properly and a certain operation mode has been enabled. The motor is energized and starts rotating when the speed reference value inputted is not 0. Only parameters whose "Setting Condition" is "During running" can be set.
Quick stop	Quick stop is activated, and the drive is in the process of quick stop. Only parameters whose "Setting Condition" is "During running" can be set.
Stop upon fault	A fault occurs, and the servo drive is in the process of stop. Only parameters whose "Setting Condition" is "During running" can be set.
Fault	The stop process is completed, and all the drive function are inhibited. Parameter setting is allowed for users to eliminate faults.

The following table describes the control commands and state switchover.

CiA402 state switchover		Control Word 6040h	bit0 to bit9[1] of status word 6041h
0	Power-on→Initialization	Natural transition, control command not required	0x0000
1	Initialization→No fault	Natural transition, control command not required If an error occurs during initialization, the drive directly goes to state 13.	0x0250/0x270
2	No fault → Ready to switch on	0x0006	0x0231
3	Ready to switch on→Wait for the S-ON signal	0x0007	0x0233
4	Wait for the S-ON signal→Servo running	0x000F	0x0237
5	Servo running→Wait for the S-ON signal	0x0007	0x0233
6	Wait for the S-ON signal→Ready to switch on	0x0006	0x0231
7	Ready to switch on→No fault	0x0000	0x0250
8	Servo running→Ready to switch on	0x0006	0x0231
9	Servo running→No fault	0x0000	0x0250
10	Wait for the S-ON signal→No fault	0x0000	0x0250
11	Servo running→Quick stop	0x0002	0x0217
12	Quick stop→No fault	Quick stop mode 605Ah can be set to 0 to 3. The process is performed automatically and no control command is required.	0x0250
13	No fault → Stop upon fault	If a fault occurs in any status other than "fault", the servo drive automatically switches to the stop-upon-fault state, without the need for a control command.	0x021F
14	Stop upon fault→Fault	The stop process is automatically performed, and no control command is required.	0x0218
15	Fault→No fault	0x80 bit7 is rising edge-triggered. bit7 remains at 1, and other control commands are inactive.	0x0250
16	Quick stop→Servo running	Set 605A to a value among 5 to 7. 0x0F is sent after the stop process is completed.	0x0237

Note

[1]: bit10 to bit15 of 6041h are related to the operation state of the servo drive, and their values are represented as 0 in the preceding table. For details about the status of these bits, check the operation modes of the servo drive.

3.3.1 Control Word 6040h

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time
Accessibility:	Read/write	Mapping:	RPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the control word.

Bit	Name		Description
0	Switch on	Switch on	1: Valid; 0: Invalid
1	Enable voltage	Enable voltage	1: Valid; 0: Invalid
2	Quick stop	Quick stop	0: Valid; 1: Invalid
3	Enable operation	Operation enabled	1: Valid; 0: Invalid
4 to 6	Operation mode specific	Operation mode specific	Related to the operation mode of the servo drive.
7	Fault Reset	Fault reset	0: Invalid 0→1: Fault reset is available only for faults and alarms that can be reset. 1: Other control commands are invalid. 1→0: Invalid
8	Halt	Halt	1: Valid; 0: Invalid
9	Operation mode specific	Operation mode specific	Related to the servo drive operation mode.
10	Reserve	Reserve	Not assigned
11 to 15	Manufacturer-specific	Manufacturer-specific	Manufacturer-specific

Note

- All bits in the control word constitute a control command.
- The meanings of bit0...bit3 and bit7 are the same in each mode. The servo drive switches to the preset status according to the CiA402 state machine switchover process only when commands are sent in sequence. Each command corresponds to a certain status.
- bit4–bit6 are related to each mode (see the control commands in different modes for details).
- bit9 is not defined.

3.3.2 Status Word 6041h

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only
Accessibility:	Read-only	Mapping:	TPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the status word.

Table 3–1 Description of each bit of 6041h

Bit	Name		Description
0	Ready to switch on	Ready to switch on	1: Valid; 0: Invalid
1	Switch on	Switch on	1: Valid; 0: Invalid
2	Enable operation	Operation enabled	1: Valid; 0: Invalid
3	Fault	Fault	1: Valid; 0: Invalid
4	Voltage enabled	Voltage enabled	1: Valid; 0: Invalid
5	Quick stop	Quick stop	0: Valid; 1: Invalid
6	Switch on disabled	Switch on disabled	1: Valid; 0: Invalid
7	Alarm	Warning	1: Valid; 0: Invalid
8	Manufacturer-specific	Manufacturer-specific	Not assigned
9	Remote control	Remote	1: Valid, control word activated 0: Invalid
10	Target arrival	Target arrival	1: Valid; 0: Invalid
11	Internal limit active	Internal limit active	1: Valid; 0: Invalid
12 to 13	Operation mode specific	Operation mode specific	Related to the servo drive operation mode.
14	Manufacturer-specific	Manufacturer-specific	Not assigned
15	HomeAttain	Home find	0: Homing completed 1: Homing completed

Table 3–2 Descriptions of setpoints of 6041h

Binary value	Description
xxxx xxxx x0xx 0000	Not ready to switch on
xxxx xxxx x1xx 0000	Switch on disabled
xxxx xxxx x01x 0001	Ready to switch on
xxxx xxxx x01x 0011	Switched on
xxxx xxxx x01x 0111	Operation enabled
xxxx xxxx x00x 0111	Quick stop active
xxxx xxxx x0xx 1111	Fault reaction active
xxxx xxxx x0xx 1000	Fault

Note

- Meanings of bit0 to bit9 are the same in each servo mode. After commands are sent in sequence by the control word 6040h, the servo drive feeds back the acknowledged status.
- Meanings of bit12 and bit13 vary with the servo mode. For details, see parameters related to each mode.
- The meanings of bit10, bit11, and bit15 are the same in each servo mode. These three bits indicate the servo status after a certain servo mode is executed.

3.4 Process Segment Mode

Set H02.00 (Control mode) to 7 (Position control mode) through the keypad or Inovance software tool to make the drive operate in process segment mode. The process segment mode is a multi-function position mode integrated with homing, constant speed control, and positioning control.

16 process segments are available, in which process segment 0 is the homing mode and process segments 1 to 15 are defined by users. The interval time and linkage mode among process segments can also be selected as needed. The setting flowchart is shown in the following figure.

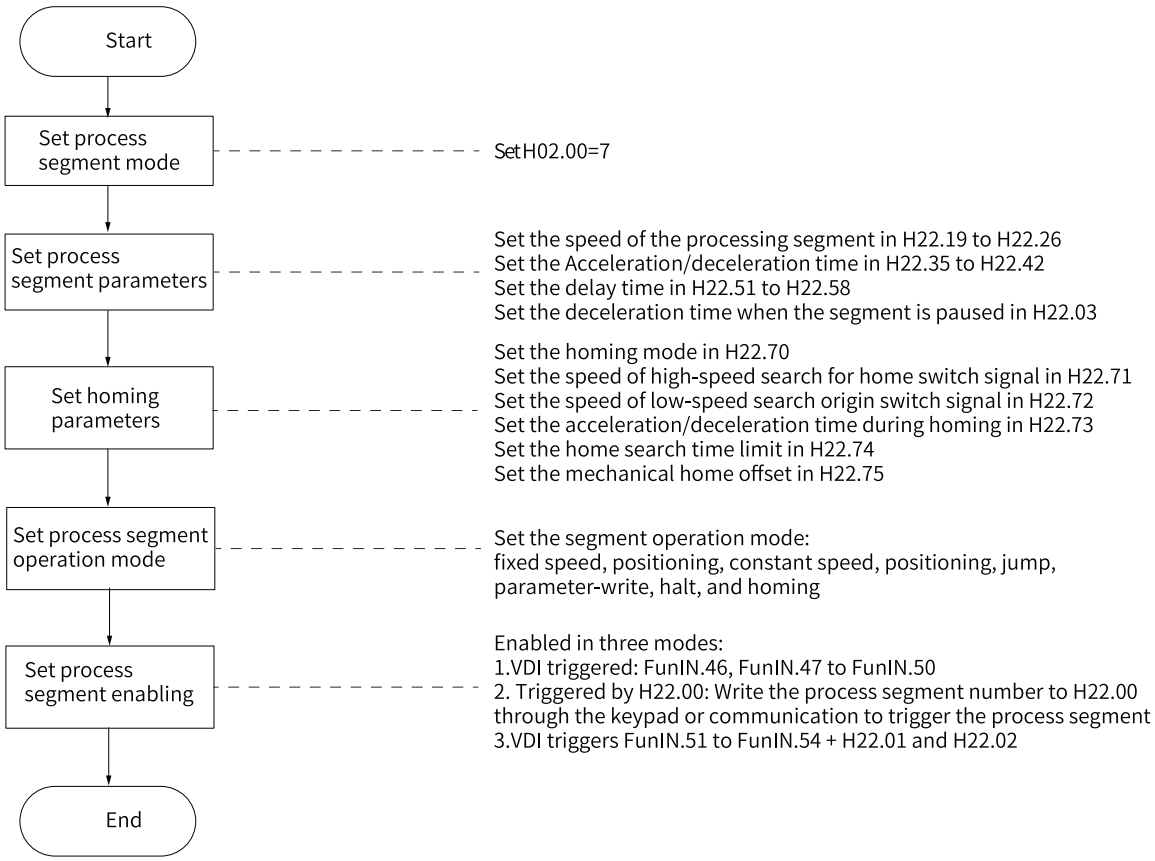


Figure 3-3 Flowchart for setting process segment mode

3.4.1 Mode Triggering

The following table shows how to trigger the process segment mode.

Trigger mode	Triggered by	Description
DI	DI: FunIN.46 (PrEnable) + FunIN.47 to 50 (PrCMD1 to 4)	Combine FunIN.47–FunIN.50 to form the process segment number to be triggered. Trigger the process segment through the rising edge of FunIN.46.
Parameter	H22.00	Write the process segment number to H22.00 through the keypad or communication to trigger the process segment.
DI + parameter	DI: FunIN.51–54 (PrEvent1–4) + H22.01/ H22.02	Set the process segment number to be triggered through H22.01 and H22.02. H22.01: DI: Triggered by the rising edge of FunIN.51... FunIN.54 H22.02: DI: Triggered by the falling edge of FunIN.51 to FunIN.54
Homing	DI: FunIN.32 (HomingStart)	Trigger the process segment through the rising edge of FunIN.32.
	H22.00 = 0	Parameter H22.00 = 0.
	FunIN.46 + FunIN.47–FunIN.50 (combined segment number being 0)	When the process segment is triggered by the rising edge of FunIN.46, the motor executes homing based on the set homing mode and home speed.
Halt	DI: FunIN.55 (PrSuspend)	Trigger the process segment through the rising edge of FunIN.55.
	H22.00 = 1000	When H22.00 is set to 1000, the process segment in progress is stopped immediately and the motor ramps to stop based on the deceleration time defined by H22.03. The motor remains enabled after stop.

When a DI is used to trigger the process segment, assign the DI of the servo drive with corresponding function and set the active logic of this DI.

Note

- PrEnable, PrSuspend, and PrEvent1 to PrEvent4 signals are edge-triggered. When DI is used, the effective signal width of the DI must be at least 0.125 ms.
- In process segment mode, FunIN.32 (HomingStart) is used to trigger the process segment homing mode.
- In position mode, FunIN.32 (HomingStart) is used to trigger the local homing mode.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H22.00	2022-01h	Process segment command trigger	0 to 1000	0	-	Real time	"*H22_en.00*" *on page 718*
H22.01	2022-02h	Process segment triggered by the event rising edge	0 to 65535	0	-	Real time	"*H22_en.01*" *on page 718*

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H22.02	2022-03h	Process segment triggered by the event falling edge	0 to 65535	0	-	Real time	"H22_en.02" on page 718
H22.03	2022-04h	Acceleration/ Deceleration time upon process segment pause	0: Acceleration/deceleration time 1: Acceleration/deceleration time 1 2: Acceleration/deceleration time 2 3: Acceleration/deceleration time 3 4: Acceleration/deceleration time 4 5: Acceleration/deceleration time 5 6: Acceleration/deceleration time 6 7: Acceleration/deceleration time 7	0	-	Real time	"H22_en.03" on page 719

Table 3–3 Description of function numbers

No.	Name	Function name	Function
FunIN.32	HomingStart	Homing	Active: Homing enabled (The HomingStart signal cannot be triggered repeatedly during homing.) Inactive: Homing inhibited
FunIN.46	ProceSon	Process segment enable	The process segment can be enabled only when the rising edge of the ProceSon signal is active. Otherwise, the process segment function is ineffective.
FunIN.47	ProceCmd1	Process segment command switchover 1	The segment number is a 4-bit binary. The relationship between the segment number and ProceCmd1 to ProceCmd4 is shown in "Table 3-4" on page 29. The DI logic is level-triggered. The ProceCmd value is 1 upon active level input or 0 upon inactive level input.
FunIN.48	ProceCmd2	Process segment command switchover 2	
FunIN.49	ProceCmd3	Process segment command switchover 3	
FunIN.50	ProceCmd4	Process segment command switchover 4	
FunIN.51	ProceEvTri1	Event trigger process segment 1	The DI assigned with event trigger process segment is used together with H22.01 and H22.02.
FunIN.52	ProceEvTri2	Event trigger process segment 2	
FunIN.53	ProceEvTri3	Event trigger process segment 3	
FunIN.54	ProceEvTri4	Event trigger process segment 4	
FunIN.55	ProceStop	Process segment pause	When the rising edge of the ProceStop signal is active, the process segment in progress stops immediately and the motor ramps to stop based on the deceleration time defined by H22.03. The motor remains enabled after stop.

Table 3–4 Relationship between the segment number and CMD1 to CMD4

ProceCmd4	ProceCmd3	ProceCmd2	ProceCmd1	Segment No.
0	0	0	0	0
0	0	0	1	1
...				
1	1	1	1	15

3.4.2 Related Parameters

The speed setpoint (SpdSet) and acceleration/deceleration time (AccTime/DecTime) for each segment in the process segment, and the interval time (DelayTime) upon completion of each process segment are set by three groups of parameters respectively, with each parameter group containing eight parameters.

During operation, you can select one parameter from each of the three parameter groups to generate the process segment.

1. Speed setpoint (SpdSet) (0.1 rpm to 6000.0 rpm)
   Corresponding to H22.19 to H22.26 (unit: 0.1 rpm).

2. Acceleration/Deceleration time (AccTime/DecTime) (0 ms to 65535 ms)
   Corresponding to H22.35 to H22.42

   The acceleration/deceleration time indicates the time for a motor to change from 0 rpm to 1000 rpm. The actual acceleration/deceleration time is therefore as follows:

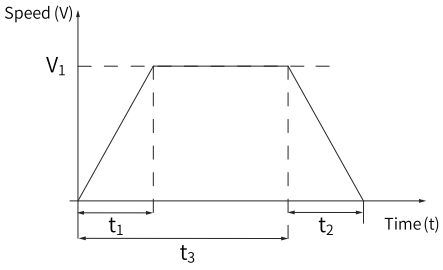


Figure 3-4 Example of the curve in fixed speed mode

As shown in the preceding figure, the speed reference is V_1 and the actual acceleration time t_1 is as follows:

$$t_1 = \frac{V_1}{1000} \times \text{Acceleration time set for the speed}$$

The actual deceleration time t_2 is:

$$t_2 = \frac{V_1}{1000} \times \text{Deceleration time set for the speed}$$

3. Interval time after completion of process segment (DelayTime) (0 ms to 65535 ms)
   The corresponding parameters are H22.51 to H22.58.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H22.19	2022-14h	Target speed	0.1 to 6000.0	50.0	[mm/s]/[rpm]	Real time	"H22_en.19" on page 721
H22.20	2022-15h	Target speed setpoint 1	0.1 to 6000.0	200.0	[mm/s]/[rpm]	Real time	"H22_en.20" on page 721
H22.21	2022-16h	Target speed setpoint 2	0.1 to 6000.0	500.0	[mm/s]/[rpm]	Real time	"H22_en.21" on page 721
H22.22	2022-17h	Target speed setpoint 3	0.1 to 6000.0	1000.0	[mm/s]/[rpm]	Real time	"H22_en.22" on page 722
H22.23	2022-18h	Target speed setpoint 4	0.1 to 6000.0	1500.0	[mm/s]/[rpm]	Real time	"H22_en.23" on page 722
H22.24	2022-19h	Target speed setpoint 5	0.1 to 6000.0	2000.0	[mm/s]/[rpm]	Real time	"H22_en.24" on page 722
H22.25	2022-1Ah	Target speed setpoint 6	0.1 to 6000.0	2500.0	[mm/s]/[rpm]	Real time	"H22_en.25" on page 722
H22.26	2022-1Bh	Target speed 7	0.1 to 6000.0	3000.0	[mm/s]/[rpm]	Real time	"H22_en.26" on page 722
H22.35	2022-24h	Acceleration/ Deceleration time	0 to 65535	50	ms	Real time	"H22_en.35" on page 723
H22.36	2022-25h	Acceleration/ Deceleration time 1	0 to 65535	200	ms	Real time	"H22_en.36" on page 723
H22.37	2022-26h	Acceleration/ Deceleration time 2	0 to 65535	500	ms	Real time	"H22_en.37" on page 723
H22.38	2022-27h	Acceleration/ Deceleration time 3	0 to 65535	1000	ms	Real time	"H22_en.38" on page 723
H22.39	2022-28h	Acceleration/ Deceleration time 4	0 to 65535	1500	ms	Real time	"H22_en.39" on page 724
H22.40	2022-29h	Acceleration/ Deceleration time 5	0 to 65535	2000	ms	Real time	"H22_en.40" on page 724

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H22.41	2022-2Ah	Acceleration/ Deceleration time 6	0 to 65535	2500	ms	Real time	"H22_en.41" on page 724
H22.42	2022-2Bh	Acceleration/ Deceleration time 7	0 to 65535	3000	ms	Real time	"H22_en.42" on page 724
H22.51	2022-34h	Delay after completion of the process segment	0 to 65535	0	ms	Real time	"H22_en.51" on page 725
H22.52	2022-35h	Delay 1 after completion of the process segment	0 to 65535	50	ms	Real time	"H22_en.52" on page 725
H22.53	2022-36h	Delay time 2 after completion of the process segment	0 to 65535	200	ms	Real time	"H22_en.53" on page 725
H22.54	2022-37h	Delay time 3 after completion of the process segment	0 to 65535	500	ms	Real time	"H22_en.54" on page 725
H22.55	2022-38h	Delay time 4 after completion of the process segment	0 to 65535	1000	ms	Real time	"H22_en.55" on page 726
H22.56	2022-39h	Delay time 5 after completion of the process segment	0 to 65535	1500	ms	Real time	"H22_en.56" on page 726
H22.57	2022-3Ah	Delay time 6 after completion of the process segment	0 to 65535	2000	ms	Real time	"H22_en.57" on page 726
H22.58	2022-3Bh	Delay time 7 after completion of the process segment	0 to 65535	3000	ms	Real time	"H22_en.58" on page 726

3.4.3 Operation Modes

The process segment mode supports the homing mode, constant speed mode, and positioning mode. Six operation modes are available, which are homing mode, constant speed mode, positioning mode, jump mode, parameter-write mode, and halt mode.

The homing mode is set in process segment 0 and the halt mode is set in process segment 1000. Other modes are set in process segments 1 to 15.

Each group of process segments consists of two parts, process segment definition and process segment data. The process segment parameters are H23.00 to H23.62 (16 groups in total), with each parameter group containing two 32-bit parameters.

<table>
<tr><th colspan="3">Process segment definition</th></tr>
<tr><th>Bit</th><th>Description</th><th>Value</th></tr>
<tr><td>3 to 0</td><td>Mode</td><td>
<table>
<tr><th>bit3 to bit0</th><th>Process segment mode</th><th>Description</th></tr>
<tr><td>0001</td><td>Constant speed mode</td><td>-</td></tr>
<tr><td>0010</td><td>Positioning mode</td><td>Stopped after positioning is done</td></tr>
<tr><td>0011</td><td>Positioning mode</td><td>Executing the next segment after positioning is done</td></tr>
<tr><td>0111</td><td>Jump mode</td><td>Jumping to the designated process segment</td></tr>
<tr><td>1000</td><td>Parameter-write mode</td><td>Writing specific parameters</td></tr>
</table>
</td></tr>
<tr><td>7 to 4</td><td>-</td><td>-</td></tr>
<tr><td>11 to 8</td><td>-</td><td>-</td></tr>
<tr><td>15 to 12</td><td>-</td><td>-</td></tr>
<tr><td>19 to 16</td><td>-</td><td>-</td></tr>
<tr><td>23 to 20</td><td>-</td><td>-</td></tr>
<tr><td>27 to 24</td><td>-</td><td>-</td></tr>
<tr><td>31 to 28</td><td>-</td><td>-</td></tr>
</table>

Process segment data	
Bit	Value
31 to 0	-

Note

If block 15 is the NC block that is automatically loaded to the last, the first block applies after block 15 is executed.

Homing mode

When process segment 0 is triggered, the homing function is triggered.

In process segment mode, the software homing function cannot be enabled.

See the following table for definitions of the homing mode.

Process segment definition		
Bit	Description	Value
3 to 0	-	-
7 to 4	PathNum	0: The motor stops after homing is done. 1 to 15: After homing is done, the PathNum segment is executed automatically after the DelayTime elapses.
11 to 8	-	-
15 to 12	-	-
19 to 16	-	-
23 to 20	DelayTime	Index of the interval time after the process segment is done executing. Indexes H22.51 to H22.58
27 to 24	-	-
31 to 28	-	-

Process segment data	
Bit	Value
31 to 0	Process segment data (32-bit) (not in use).

Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H22.70	2022-47h	Homing mode of process segment	-32768 to +32767	-2	-	Real time	"H22_en.70" on page 727
H22.71	2022-48h	Speed in high-speed searching for home switch signal	0 to 3000	100	[mm/s]/[rpm]	Real time	"H22_en.71" on page 727
H22.72	2022-49h	Speed in low-speed searching for home switch signal	0 to 1000	10	[mm/s]/[rpm]	Real time	"H22_en.72" on page 727
H22.73	2022-4Ah	Acceleration/Deceleration time during homing	0 to 1000	1000	ms	Real time	"H22_en.73" on page 727
H22.74	2022-4Bh	Home search time limit	0 to 65535	10000	ms	Real time	"H22_en.74" on page 728
H22.75	2022-4Ch	Mechanical home offset	-2147483648 to +2147483647	0	Reference unit	Real time	"H22_en.75" on page 728
H22.79	2022-50h	Relative/Absolute homing	0 to 65535	0	-	Real time	"H22_en.79" on page 728

☆ Related parameters:

No.	Name	Function name	Function
FunOut.16	HomeAttain	HomeAttain	Active: Homing completed in the process segment mode Inactive: Homing not completed

Constant speed mode

Mode 1 is the constant speed mode. When the constant speed mode is in progress, the motor operates to the set speed based on the set acceleration/deceleration time, and then keeps operating at the set speed.

<table>
<tr><th colspan="3">Process segment definition</th></tr>
<tr><th>Bit</th><th>Description</th><th>Value</th></tr>
<tr><td>3 to 0</td><td>Mode</td><td>1</td></tr>
<tr><td>7 to 4</td><td>Func</td><td>
<table>
<tr><th>Bit</th><th>Description</th><th>Description</th></tr>
<tr><td>4</td><td>Updated immediately (ImmedUpd)</td><td>The present segment overrides the previous segment, which means the previous segment will be interrupted so as to execute present segment. See “Special mode” on page 40Special Modes for details.</td></tr>
<tr><td>5</td><td>Loading next segment (Auto)</td><td>The next process segment applies after the constant speed is reached and the Delaytime elapses.</td></tr>
<tr><td>6</td><td>Unit</td><td>0: 0.1 rpm
1: PPS (pulses/s) (reference unit)</td></tr>
<tr><td>7</td><td>-</td><td>-</td></tr>
</table>
</td></tr>
<tr><td>11 to 8</td><td>AccTime</td><td rowspan="2">Index of the acceleration/deceleration time
Index H22.35 to H22.42</td></tr>
<tr><td>15 to 12</td><td>DecTime</td></tr>
<tr><td>19 to 16</td><td>...</td><td>-</td></tr>
<tr><td>23 to 20</td><td>DelayTime</td><td>Index of the interval time after the process segment is done executing.
Index H22.51 to H22.58.</td></tr>
<tr><td>27 to 24</td><td>-</td><td>-</td></tr>
<tr><td>31 to 28</td><td>-</td><td>-</td></tr>
</table>

Process segment data	
Bit	Value
31 to 0	Target speed (accurate to 0.1 rpm).

Where:

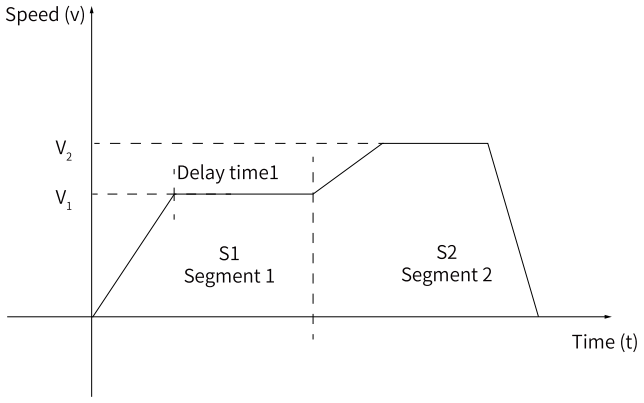


Figure 3-5 Time-speed curve

Segment 1: Constant speed mode; DelayTime1: Time interval set for the constant speed mode; V_1: Speed set for the constant speed mode

Segment 2: Positioning mode; V_2: Speed set for the positioning mode

S1 represents displacement 1 and S2 represents displacement 2.

Positioning mode

Modes 2 and 3 indicate the positioning mode. In mode 2, the drive stops after positioning is done. In mode 3, the next segment will be executed automatically after positioning is done.

When the positioning mode is in progress, the motor accelerates or decelerates at present speed to the set speed based on the set acceleration/deceleration time. After operating at constant speed for a period of time, the motor decelerates to 0 rpm based on the set deceleration time. Finally, the motor stops at the position set by the positioning mode.

<table>
<tr><th colspan="4">Process segment definition</th></tr>
<tr><th>Bit</th><th>Description</th><th colspan="2">Value</th></tr>
<tr><td>3 to 0</td><td>Mode</td><td colspan="2">Positioning mode 2: Stopped after positioning is done.
Position mode 3: Executing the next segment after positioning is done.</td></tr>
<tr><td>7 to 4</td><td>Func</td><td colspan="2"><table>
<tr><th>Bit</th><th>Description</th><th>Description</th></tr>
<tr><td>4</td><td>Updated immediately (ImmedUpd)</td><td>The present segment overrides the previous segment, which means the previous segment will be interrupted so as to execute present segment. See “ Special mode” on page 40Special Modes for details.</td></tr>
<tr><td>5</td><td>Overlap (OverLap)</td><td>The present segment can overlap with the next segment. During overlapping, the interval time of present segment is set to 0 forcibly. See “ Special mode” on page 40Special Modes for details.</td></tr>
<tr><td>6</td><td rowspan="2">Position reference type (CmdType)</td><td rowspan="2">bit6 and bit7 set to 00: Absolute positioning command (Final position = Target position)
bit6 and bit7 set to 10: Incremental positioning command (Final position = Previous final position + Target position)</td></tr>
<tr><td>7</td></tr>
</table></td></tr>
<tr><td>11 to 8</td><td>AccTime</td><td colspan="2" rowspan="2">Index of the acceleration/deceleration time
Index H22.35 to H22.42</td></tr>
<tr><td>15 to 12</td><td>DecTime</td></tr>
<tr><td>19 to 16</td><td>SpdSet</td><td colspan="2">Index of the speed setpoint
Index H22.19 to H22.26</td></tr>
<tr><td>23 to 20</td><td>DelayTime</td><td colspan="2">Index of the interval time after the process segment is done executing.
Index H22.51 to H22.58.</td></tr>
<tr><td>27 to 24</td><td>-</td><td colspan="2">-</td></tr>
<tr><td>31 to 28</td><td>-</td><td colspan="2">-</td></tr>
</table>

Process segment data	
Bit	Value
31 to 0	Target position (32-bit) (reference unit)

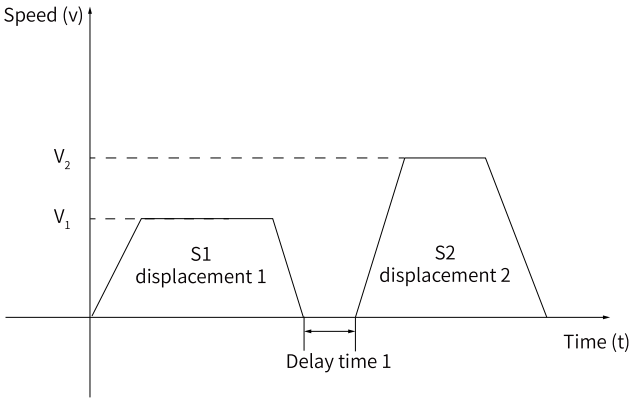


Figure 3-6 Time-speed curve

Segment 1: positioning mode; Mode = 3; OverLap = 0; Delaytime1: interval time set for the positioning mode; V_1: speed set for the positioning mode.

Segment 2: positioning mode; Mode = 2; ImmedUpd = 0; V_2: speed set for the positioning mode.

S1 represents displacement 1 and S2 represents displacement 2.


Jump mode

Mode 7 represents the jump mode. When the jump mode is in progress, the drive can jump to any process segment. When the target process segment exceeds the process segment range, E126.0 occurs.

Process segment definition		
Bit	Description	Value
3 to 0	Mode	7
4	Updated immediately (ImmedUpd)	The present segment overrides the previous segment, which means the previous segment will be interrupted so as to execute present segment. See *" Special mode" on page 40Special Modes* for details.
8 to 5	Threshold for jump	Index of the jump threshold. Index H22.83 to H22.90.
9	Flag for clearing the cumulative count when jumping to process segment B	1: Clear the cumulative number of jumps when jumping to process segment B.
19 to 10	-	-
23 to 20	DelayTime	Index of the interval time after the process segment is done executing. Index H22.51 to H22.58.
31 to 24	-	-


Process segment data	
Bit	Value
7 to 0	Number of process segment B.
15 to 8	Number of process segment A.
31 to 16	Cumulative number of jumps.

The jump operation is conditional. Every time the jump operation is executed, the jump count will be incremented by 1. When the cumulative count is lower than this cumulative number of jumps, process segment A applies. Otherwise, process segment B applies. When jumping to process segment B, if bit9 that defined by the process segment is 1, the cumulative count will be cleared and cumulated from zero again at next jump. The following shows the execution flowchart.

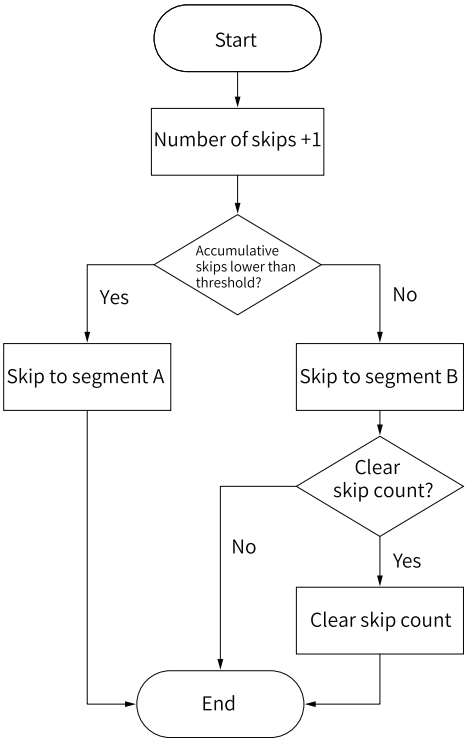


Application case


In the following example, the process segment jump function is used to achieve limited repetitive multi-position operations.

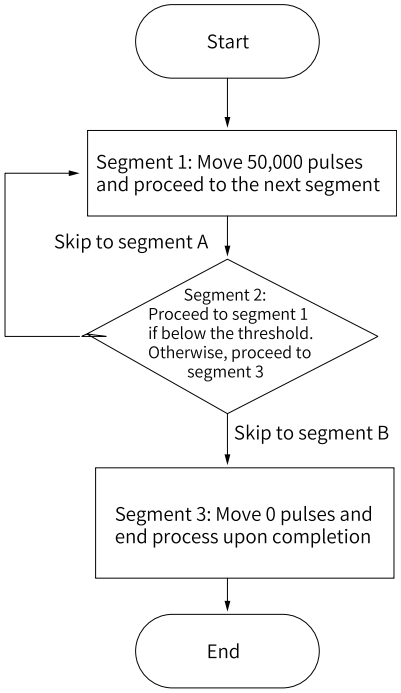


1. Configure process segment 1 as the position mode, and set 50000 pulses for forward operation.

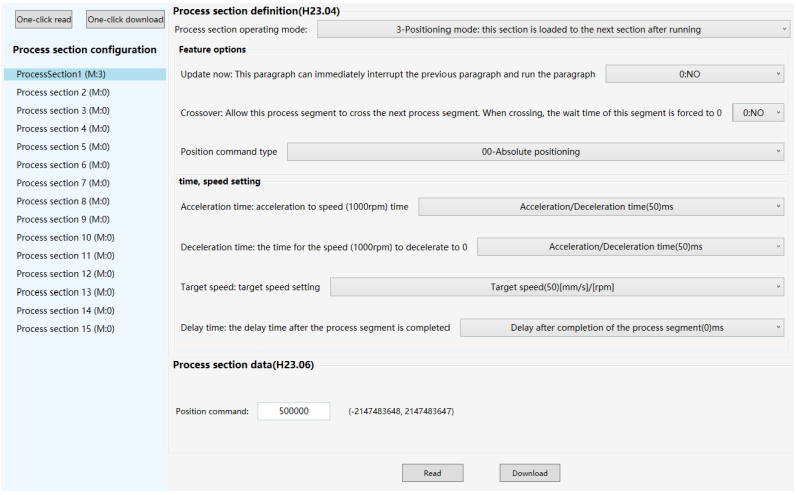

2. Configure process segment 2 and use the jump function.

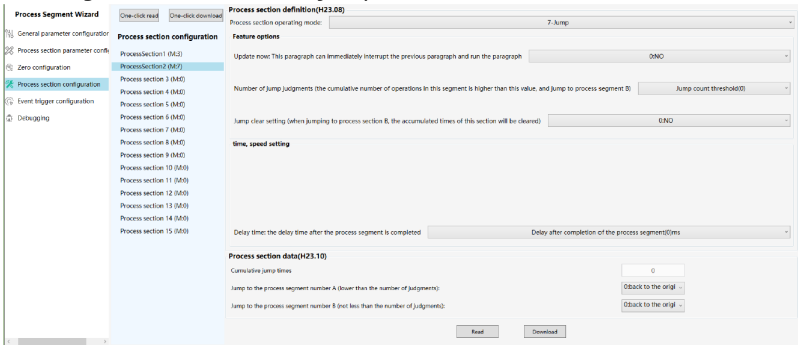

3. Configure process segment 3 in the positioning mode.

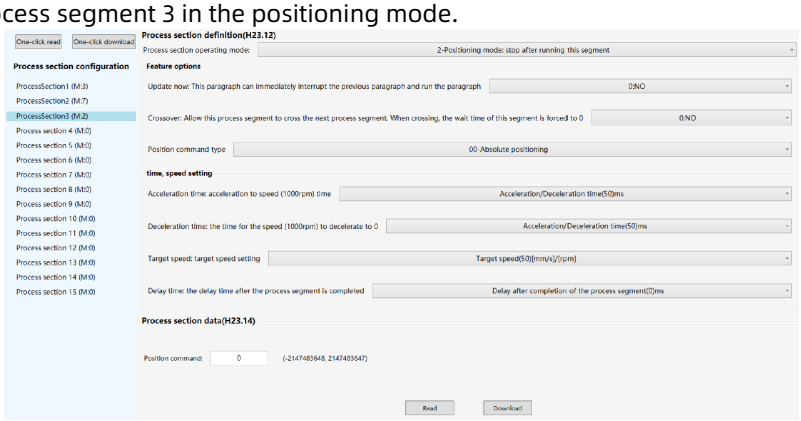

Parameter-write mode

Mode 8 represents the parameter-write mode. When parameter-write mode is in progress, you can re-write new parameters to the designated parameters and the new parameter can be saved to EEPROM as needed.

<table>
<tr><th colspan="4">Process segment definition</th></tr>
<tr><th>Bit</th><th>Description</th><th colspan="2">Value</th></tr>
<tr><td>3 to 0</td><td>Mode</td><td colspan="2">8</td></tr>
<tr><td>7 to 4</td><td>Func</td><td colspan="2"><table>
<tr><th>Bit</th><th>Description</th><th>Description</th></tr>
<tr><td>4</td><td>Updated immediately (ImmedUpd)</td><td>The present segment overrides the previous segment, which means the previous segment will be interrupted so as to execute present segment. See “ Special mode” on page 40Special Modes for details.</td></tr>
<tr><td>5</td><td>Loading next segment (Auto)</td><td>The next process segment applies automatically after the Delaytime elapses.</td></tr>
<tr><td>6</td><td>Save (Save)</td><td>0: Parameters not saved to EEPROM
1: Parameters saved to EEPROM</td></tr>
<tr><td>7</td><td>-</td><td>-</td></tr>
</table></td></tr>
<tr><td>11 to 8
15 to 12</td><td>Index (H_Idx)</td><td colspan="2">The parameter No.</td></tr>
<tr><td>19 to 16
23 to 20</td><td>Group number (H_Grp)</td><td colspan="2">The parameter group No.</td></tr>
<tr><td>27 to 24</td><td>DelayTime</td><td colspan="2">Index of the interval time after the process segment is done executing.
Index H22.51 to H22.58.</td></tr>
<tr><td>31 to 28</td><td>-</td><td colspan="2">-</td></tr>
</table>

Process segment data	
Bit	Value
31 to 0	Designated parameter data (32-bit)

Halt mode

During operation of the process segment (positioning mode, constant speed mode, or homing mode), if 1000 is written to H22.00 or FunIN.55 (PrSuspend) is triggered, the motor interrupts the present operation mode immediately and ramps to stop based on the deceleration time defined by H22.03. After stop, the motor remains enabled and stays at standstill. When the process segment is triggered again, the motor resumes normal operation.

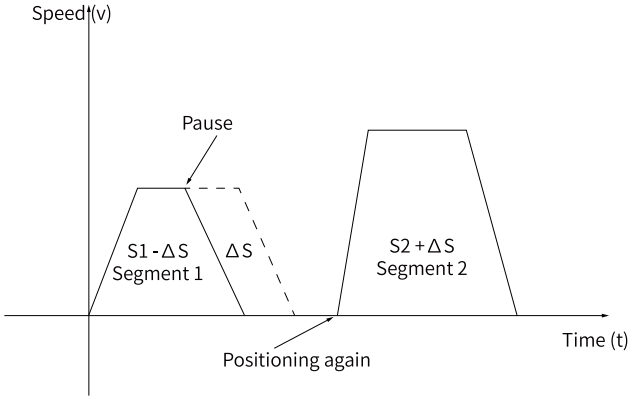


Figure 3-7 Time-speed curve

1st segment: positioning mode (The motor ramps to stop when halt is triggered during operation.)

Segment 2: Positioning mode

S1 represents the set displacement 1. S2 represents the set displacement 2. ΔS represents the remaining displacement after stop at specified position.

Special mode

ImmedUpd and OverLap functions are special functions which serve to generate complex process segment paths once triggered.

- **Overlap (OverLap)**
  When the overlap function is in progress, the present process segment can overlap with the next process segment. During overlapping, the interval time of present segment is set to 0 forcibly. The overlap function can be used in positioning control only.

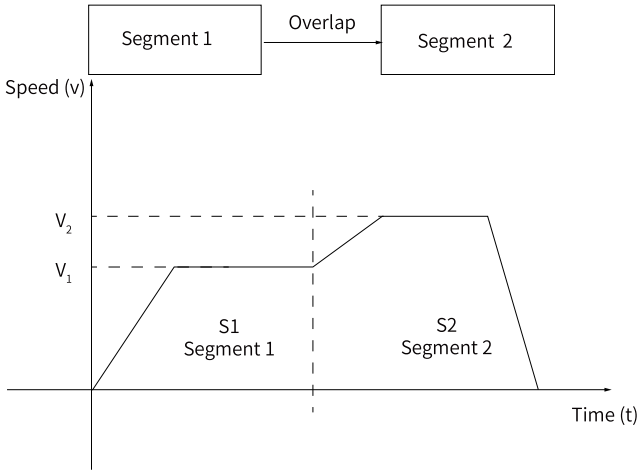


Figure 3-8 Time-speed curve

Segment 1: positioning mode; Mode = 3; OverLap = 1; V_1 : speed set for the positioning mode.

Segment 2: positioning mode; ImmedUpd = 0; V_2 : speed set for the positioning mode.

S1 represents the displacement for segment 1 and S2 represents the displacement for segment 2.

- **Updated immediately (ImmedUpd)**
  When the ImmedUpd mode is in progress, the present segment overrides the previous segment, which means the previous segment will be interrupted to execute present segment. The ImmedUpd mode can be used in positioning control and constant speed control.



The ImmedUpd mode can be further divided into internal ImmedUpd mode and external ImmedUpd mode.

  - Internal ImmedUpd mode

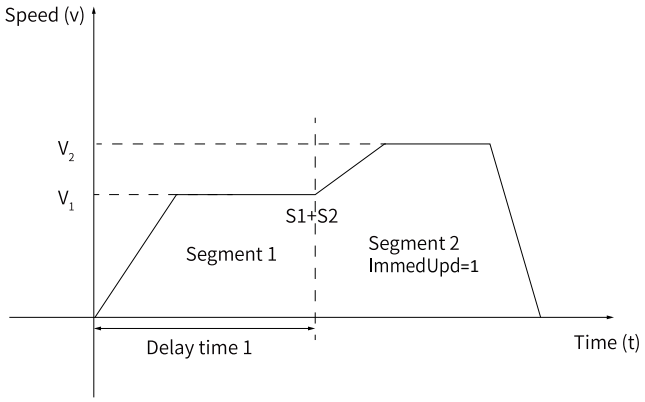


Figure 3-9 Time-speed curve

Segment 1: positioning mode; Mode = 3; DelayTime1: interval time set for the positioning mode; V_1: speed set for the positioning mode.

Segment 2: ImmedUpd = 1, V_2: speed set for segment 2

If segment 2 is positioning mode, S1 is the displacement for segment 1, and S2 is the displacement for segment 2, then the final positioning position is the sum of S1 and S2.

- External ImmedUpd mode

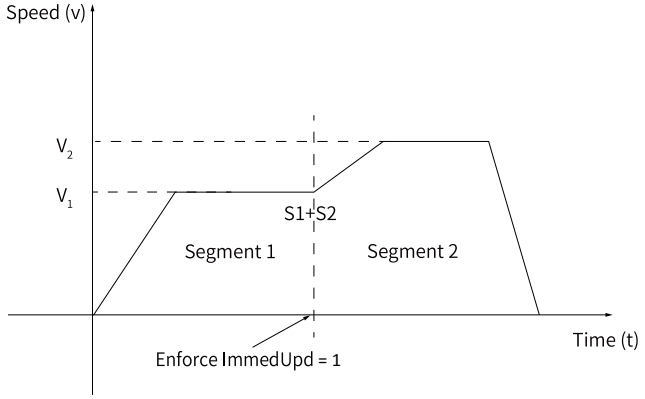


Figure 3-10 Time-speed curve

Segment 1: positioning mode; V_1: speed set for the positioning mode

Segment 2: ImmedUpd = 1, V_2: speed set for segment 2

If segment 2 is positioning mode, S1 is the displacement for segment 1, and S2 is the displacement for segment 2, then the final positioning position is the sum of S1 and S2.

Note

- The ImmedUpd function has higher priority over the overlap function. When the overlap function is set for process segment 1 and the ImmedUpd function is set for process segment 2, the ImmedUpd function will be executed immediately when process segments 1 and 2 are in progress.
- The external ImmedUpd function has higher priority over the internal ImmedUpd function.

3.4.4 DO and Sequence

FunOUT.22 (CmdOK, internal command completed) can be used to check whether the process segment command has been transmitted. FunOUT.5 (COIN, positioning completed) can be used to check whether positioning is completed. FunOUT.24 (McOk, motion control completed) can be used to check whether motion control is completed.

The sequence for process segment is shown as follows (taking positioning mode and H05.20 = 0 as example):

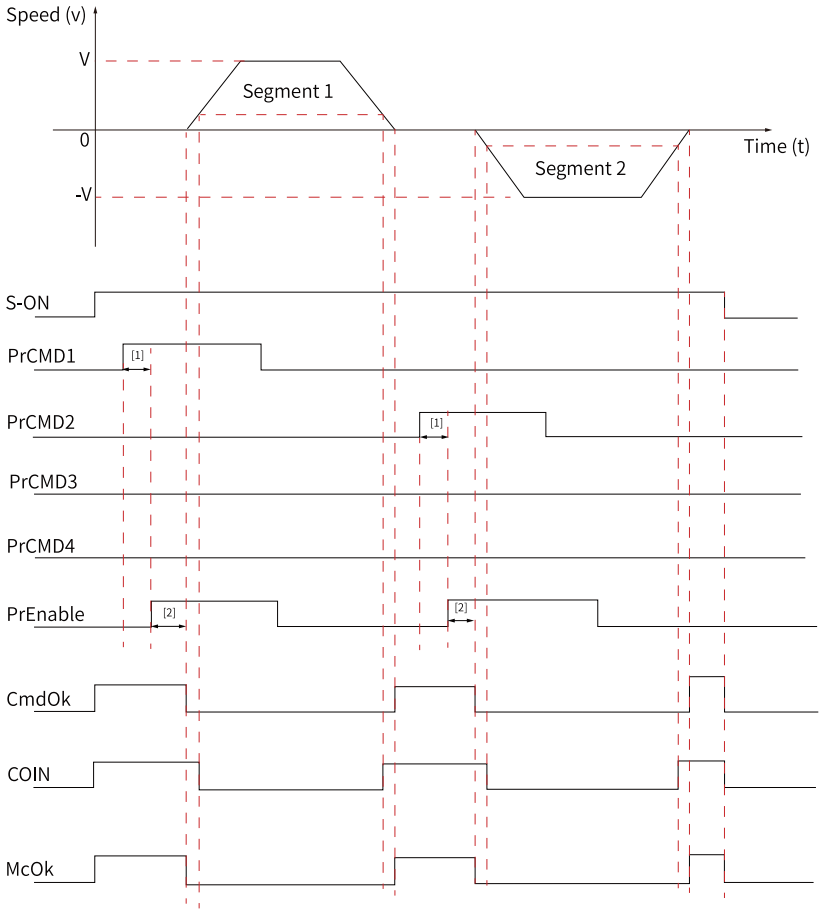


Figure 3-11 Sequence of process segment


Note

- [1] When DI is used, the effective signal width of the DI must be at least 0.125 ms.
- [2] The PrEnable signal is edge-triggered. The effective signal width of the DI must be at least 0.125 ms.

3.5 Profile Position (PP) Mode

The PP mode mainly applies to point-to-point positioning. In PP mode, the host controller sets the target position, operating speed, acceleration rate, and deceleration rate. The position profile generator inside the servo drive generates position profiles based on preceding settings, and the servo drive executes position control, speed control, and torque control.

3.5.1 Function block diagram

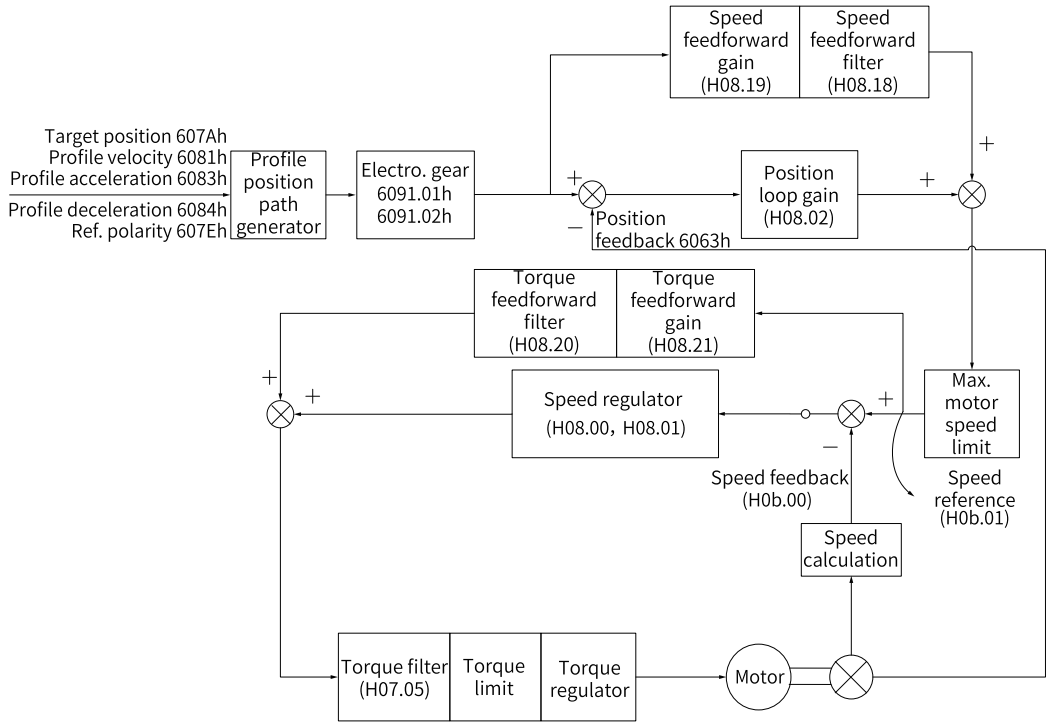

3.5.2 Configuration block diagram

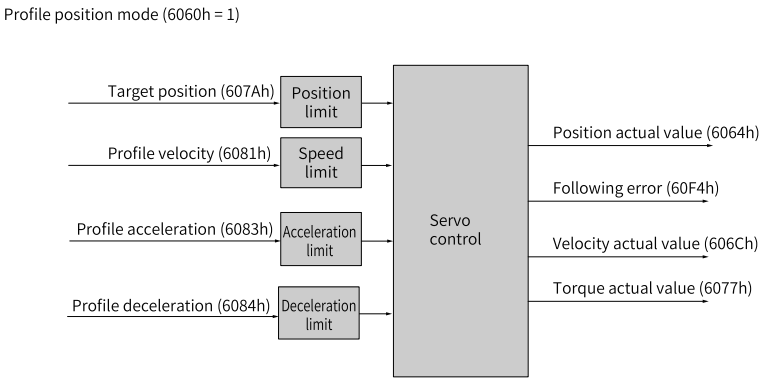


Figure 3-12 Profile position mode configuration block diagram

In profile position mode, the target position is triggered and activated based on the sequence of the new setpoint (bit4 of the control word) and setpoint acknowledge (bit12 of the status word).

The controller sets the New set-point bit (bit4 of the control word) to 1 to inform the servo drive of the new target position. The servo drive, after receiving the new target position, sets the Set-point acknowledge bit (bit12 of the status word) to 1. After the controller sets the New set-point to 0, if the servo drive can receive the new target position, the Set-point acknowledge bit will be set to 0. Otherwise, it is kept to 1.

The linkage mode of position references is determined by bit5 (Change set immediately) of the control word. When bit5 is set to 1, sequential linkage applies between position references. When bit5 is set to 0, zero-passing linkage applies between position references.

Sequential mode:

The target position of present segment is in the process of positioning. After the new target position is prepared, the controller sets the new set-point bit to 1, and the servo drive performs positioning based on the new target position.

In sequential mode, the sequence diagram of bit4 of the control word (New setpoint) and bit12 of the status word (Setpoint acknowledge) is as follows.


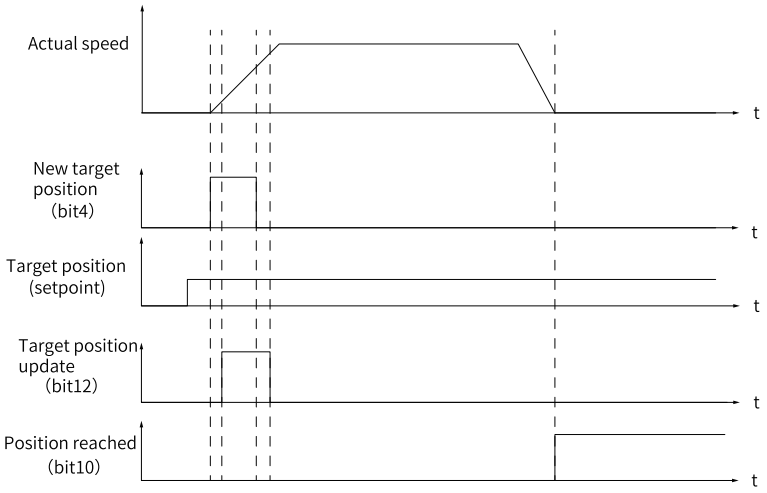


Figure 3-13 Sequence in sequential mode

Single-point mode:

The target position of present segment is in the process of positioning. After the new target position is prepared, the controller sets the new set-point bit to 1, and the servo drive performs positioning based on the new target position after the position reference of present segment is transmitted.


The sequence diagram of the new setpoint bit (bit4 of the control word) and the setpoint acknowledge bit (bit12 of the status word) is as follows.

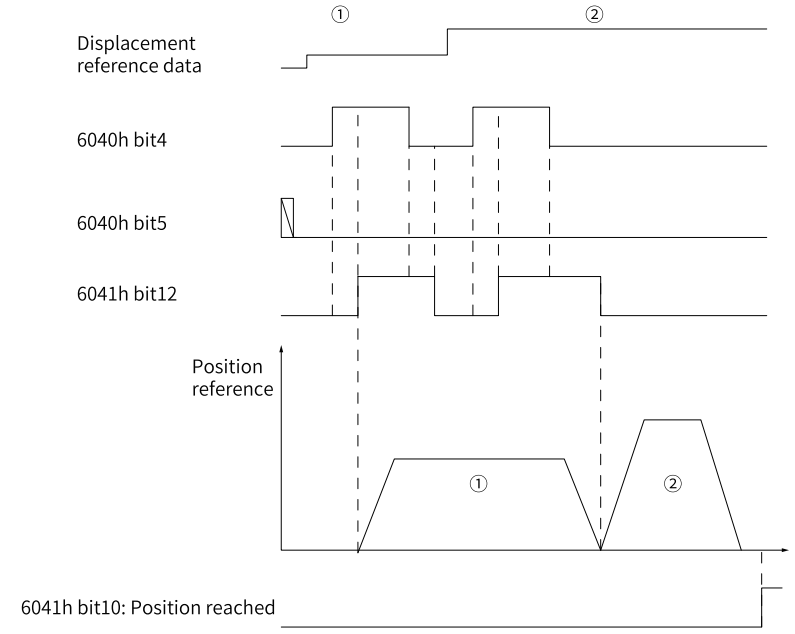

Note: If you need to change any parameter of the displacement reference, send the trigger signal again.

Figure 3-14 Sequence in single-point mode

In single-point mode, the servo drive caches one target position, which is to cache a new segment of target position when current target position is under execution. The sequence diagram is as follows.

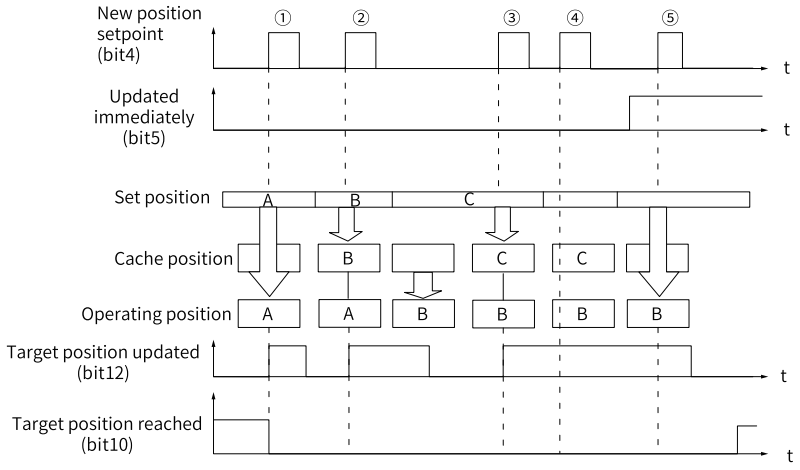

- ① If the cache position is empty, the set position will be immediately executed.
- ②③ If a position reference is currently under execution, the new position setpoint will be saved in the cache. After the current position reference is transmitted, the cached setpoint will be executed, after which a new setpoint can be received.
- ④⑤ The new setpoints cannot be received if the cache is exhausted. In this case, you can set the attribute bit of the setpoint to 1 (Change set immediately) to activate the setpoint.

3.5.3 Recommended configuration

The basic configuration for the PP mode is described in the following table.

RPDO	TPDO	Remarks
6040h: control word	6041h: status word	Mandatory
607Ah: target position	6064h: position actual value	Mandatory
6081h: Profile velocity	-	Mandatory
6083h: Profile acceleration	-	Optional
6084h: profile deceleration	-	Optional
6060h: modes of operation	6061h: modes of operation display	Optional

3.5.4 Related parameters

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time
Accessibility:	Read/write	Mapping:	RPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the control word.

Bit	Name		Description
0	Switch on	Switch on	1: Valid; 0: Invalid
1	Enable voltage	Enable voltage	1: Valid; 0: Invalid
2	Quick stop	Quick stop	0: Valid; 1: Invalid
3	Enable operation	Operation enabled	1: Valid; 0: Invalid
4	New set-point	New set-point	0→1: Trigger a new target position 1→ 0: Clear bit12 of the status word
5	Change set immediately	Change set immediately	0: Not immediately 1: Immediately
6	abs/rel	abs/rel	0: abs 1: rel
8	Halt	Halt	0: Keep present operating state 1: Halt

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only
Access:	Read-only	Mapping:	TPDO

Setpoint:
0x0 to 0xFFFF
Description:
See section "Basic Functions of the Servo Drive" for the description of the status word.

Bit	Name		Description
0	Ready to switch on	Ready to switch on	1: Valid; 0: Invalid
1	Switch on	Switch on	1: Valid; 0: Invalid
2	Enable operation	Operation enabled	1: Valid; 0: Invalid
3	Fault	Fault	1: Valid; 0: Invalid
4	Voltage enabled	Voltage enabled	1: Valid; 0: Invalid
5	Quick stop	Quick stop	0: Valid; 1: Invalid
6	Switch on disabled	Switch on disabled	1: Valid; 0: Invalid
7	Alarm	Warning	1: Valid; 0: Invalid
8	Manufacturer-specific	Manufacturer-specific	Not assigned
9	Remote control	Remote	1: Valid, control word activated 0: Invalid
10	Target arrival	Target arrival	0: Target position not reached 1: Target position reached
11	Internal limit active	Internal limit active	0: Position reference within the limit 1: Position reference beyond the limit
12	Set-point acknowledge	Set-point acknowledge	0: Acknowledged 1: Not acknowledged
13	Following error	Following error	0: No error 1: Excessive deviation
14	Manufacturer-specific	Manufacturer-specific	Not assigned
15	HomeAttain	Home find	0: Homing completed 1: Homing completed

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6060h	6060h	Servo drive mode selection	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Real time	"6060h" on page 801
6061h	6061h	Operation mode display	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Read-only	"6061h" on page 801
6064h	6064h	Position feedback	-2147483648 to +2147483647	0	Reference unit	Read-only	"6064h" on page 802

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6065h	6065h	Threshold of excessive position deviation	0 to 4294967295	219895614	Reference unit	Real time	"6065h" on page 802
6066h	6066h	Time to trigger excessive position deviation	0 to 65535	0	ms	Real time	"6066h" on page 803
6067h	6067h	Position reach threshold	0 to 4294967295	46976	Reference unit	Real time	"6067h" on page 803
6068h	6068h	Position reach window time	0 to 65535	0	ms	Real time	"6068h" on page 803
607Ah	607Ah	Target position	-2147483648 to +2147483647	0	Reference unit	Real time	"607Ah" on page 806
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808
6081h	6081h	Profile velocity	0 to 4294967295	111848106	Reference unit/s	Real time	"6081h" on page 808
6083h	6083h	Profile acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6083h" on page 809
6084h	6084h	Profile deceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6084h" on page 809

3.5.5 Related Function Settings

Note

In absolute position mode, the running direction of the servo is determined by the direction of the shortest relative displacement between the start absolute position and the target absolute position (607Ah).

Positioning completed

Positioning completed: When position deviation fulfills the set condition, the positioning process is completed. In this case, the servo drive sets bit10 of the status word, and the host controller, once receives the signal, acknowledges that positioning is completed.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6067h	6067h	Position reach threshold	0 to 4294967295	46976	Reference unit	Real time	"6067h" on page 803
6068h	6068h	Position reach window time	0 to 65535	0	ms	Real time	"6068h" on page 803

Note

6067h only reflects the threshold of absolute position deviation when positioning is done. It is not related to the positioning accuracy.


Position deviation monitoring function

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6065h	6065h	Threshold of excessive position deviation	0 to 4294967295	219895614	Reference unit	Real time	"6065h" on page 802
6066h	6066h	Time to trigger excessive position deviation	0 to 65535	0	ms	Real time	"6066h" on page 803

Speed limit

In PP mode, 607Fh can be used to limit the maximum speed in forward/reverse operation. Note that the maximum speed cannot exceed the maximum operating speed allowed by the motor.

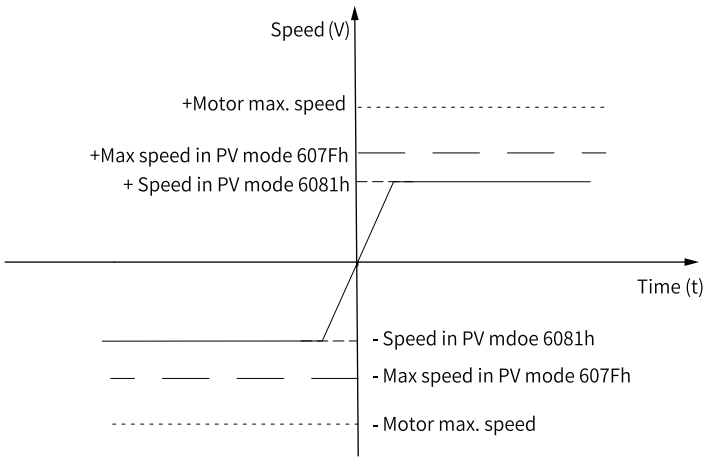

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808

Acceleration and deceleration limits

In profile position mode, the change rate of position references can be limited through the acceleration and deceleration limits.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
6083h	6083h	Profile acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6083h" on page 809
6084h	6084h	Profile deceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6084h" on page 809

Reference polarity

You can change the position reference direction through setting the position reference polarity.


☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808

3.6 Profile Velocity (PV) Mode

In PV mode, the host controller sends the target speed, acceleration rate, and deceleration rate to the servo drive. The servo drive generates speed reference profiles and performs speed control and torque control.

3.6.1 Function block diagram

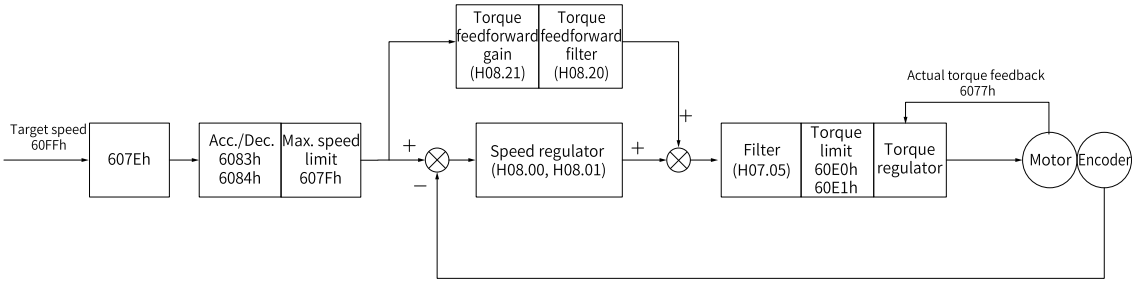

3.6.2 Configuration block diagram

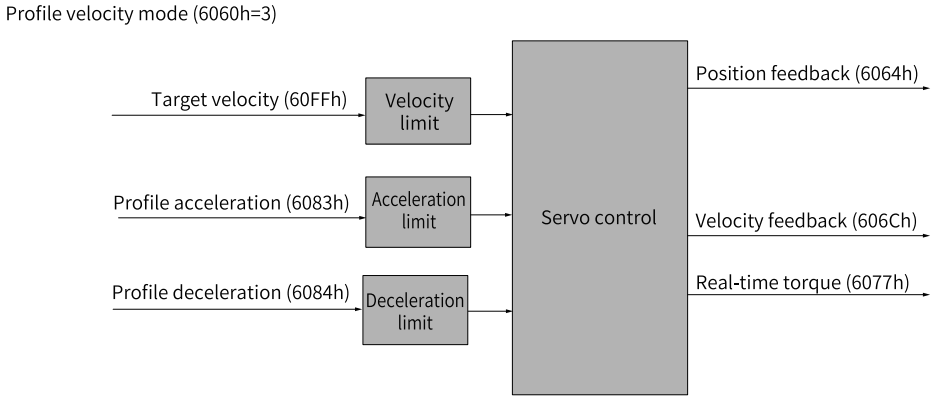


Figure 3-15 Configuration block diagram in PV mode

3.6.3 Recommended configuration

The following table describes the basic configuration for the profile velocity (PV) mode.

RPDO	TPDO	Remarks
6040h: control word	6041h: status word	Mandatory
60FFh: target velocity	-	Mandatory
-	6064h: position actual value	Optional
-	606Ch: velocity actual value	Optional
6083h: Profile acceleration	-	Optional
6084h: profile deceleration	-	Optional
6060h: modes of operation	6061h: modes of operation display	Optional

3.6.4 Related parameters

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time
Accessibility:	Read/write	Mapping:	RPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the control word.

Bit	Name		Description
0	Switch on	Switch on	1: Valid; 0: Invalid
1	Enable voltage	Enable voltage	1: Valid; 0: Invalid
2	Quick stop	Quick stop	0: Valid; 1: Invalid

Bit	Name		Description
3	Enable operation	Operation enabled	1: Valid; 0: Invalid
8	Halt	Halt	0: Keep present operating state, 1: Halt

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only
Accessibility:	Read-only	Mapping:	TPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the status word.

Bit	Name		Description
0	Ready to switch on	Ready to switch on	1: Valid; 0: Invalid
1	Switch on	Switch on	1: Valid; 0: Invalid
2	Enable operation	Operation enabled	1: Valid; 0: Invalid
3	Fault	Fault	1: Valid; 0: Invalid
4	Voltage enabled	Voltage enabled	1: Valid; 0: Invalid
5	Quick stop	Quick stop	0: Valid; 1: Invalid
6	Switch on disabled	Switch on disabled	1: Valid; 0: Invalid
7	Alarm	Warning	1: Valid; 0: Invalid
8	Manufacturer-specific	Manufacturer-specific	Not assigned
9	Remote control	Remote	1: Valid, control word activated 0: Invalid
10	Target arrival	Target arrival	0: The target velocity is not reached. 1: The target velocity is reached.
11	Internal limit active	Internal limit active	0: Position feedback within the limit 1: Position feedback beyond the limit
12	Speed	Speed	0: Speed is not 0 1: Speed is 0
13	-	N/A	N/A
14	Manufacturer-specific	Manufacturer-specific	Not assigned
15	-	N/A	N/A

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
606Ch	606Ch	Actual speed	-2147483648 to +2147483647	0	Reference unit/s	Read-only	"606Ch" on page 803
606Dh	606Dh	Velocity window	0 to 65535	10	rpm	Real time	"606Dh" on page 804
606Eh	606Eh	Velocity window time	0 to 65535	0	ms	Real time	"606Eh" on page 804
606Fh	606Fh	Zero speed signal threshold	0 to 65535	10	rpm	Real time	"606Fh" on page 805
6070h	6070h	Velocity threshold time	0 to 65535	0	ms	Real time	"6070h" on page 805
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808
6083h	6083h	Profile acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6083h" on page 809
6084h	6084h	Profile deceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6084h" on page 809
60FFh	60FFh	PV target velocity	-2147483648 to +2147483647	0	Reference unit/s	Real time	"60FFh" on page 820

3.6.5 Related Function Settings

Monitoring on speed reach status

This function serves to check whether the speed reference of the servo drive is consistent with the motor speed feedback.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
606Dh	606Dh	Velocity window	0 to 65535	10	rpm	Real time	"606Dh" on page 804
606Eh	606Eh	Velocity window time	0 to 65535	0	ms	Real time	"606Eh" on page 804

Monitoring on zero speed


This function is used to check whether the absolute value of motor speed feedback is lower than the set threshold. If yes, the motor is considered to be close to standstill (zero speed). bit12 of 6041h is set to 1.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
606Fh	606Fh	Zero speed signal threshold	0 to 65535	10	rpm	Real time	"606Fh" on page 805
6070h	6070h	Velocity threshold time	0 to 65535	0	ms	Real time	"6070h" on page 805

Speed limit

In profile velocity (PV) mode, 607Fh can be used to limit the maximum speed in forward and reverse running, but its value must not exceed the maximum allowable speed of the motor.

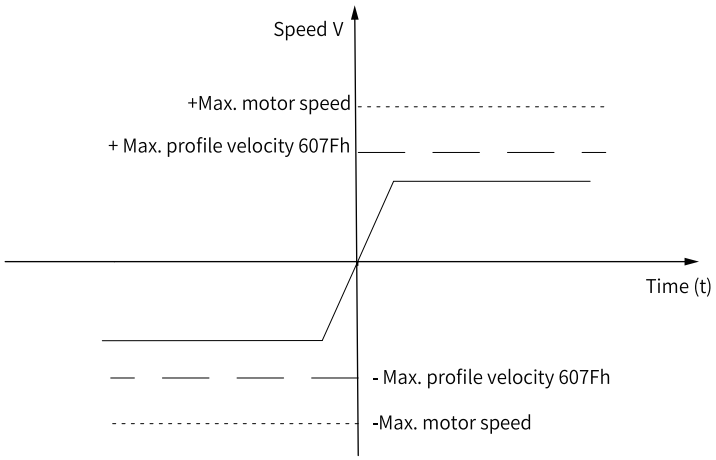

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808

Acceleration and deceleration limits

In profile velocity (PV) mode, the change rate of speed references can be limited through acceleration and deceleration limits.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
60C5h	60C5h	Maximum acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"60C5h" on page 817
60C6h	60C6h	Max. deceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"60C6h" on page 817

Reference polarity

You can change the speed reference direction by setting the speed reference polarity.


☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808

3.7 Profile Torque (PT) Mode

In PT mode, the host controller sends the target torque (6071h) and the torque slope (6087h) to the servo drive. The servo drive generates torque reference profiles and executes torque control.

3.7.1 Function block diagram

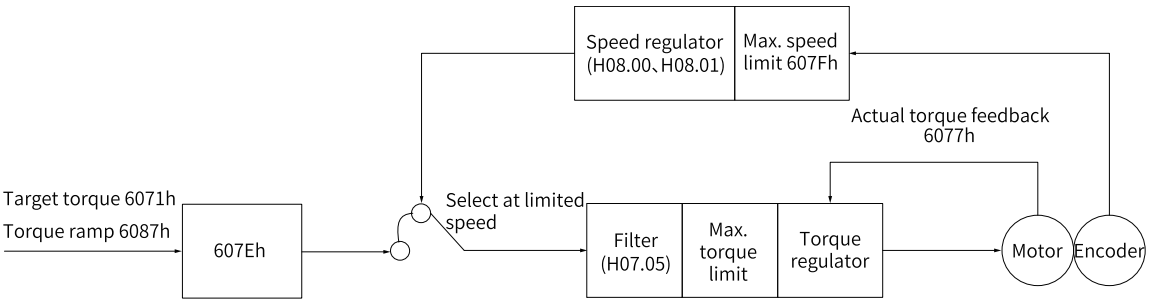

3.7.2 Recommended configuration

The following table describes the basic configuration for the profile torque (PT) mode.

RPDO	TPDO	Remarks
6040h: control word	6041h: status word	Mandatory
6071h: target torque	-	Mandatory
6087h: torque slope	-	Optional
-	6064h: position actual value	Optional
-	606Ch: velocity actual value	Optional
-	6077h: torque actual value	Optional
6060h: modes of operation	6061h: modes of operation display	Optional

3.7.3 Configuration block diagram

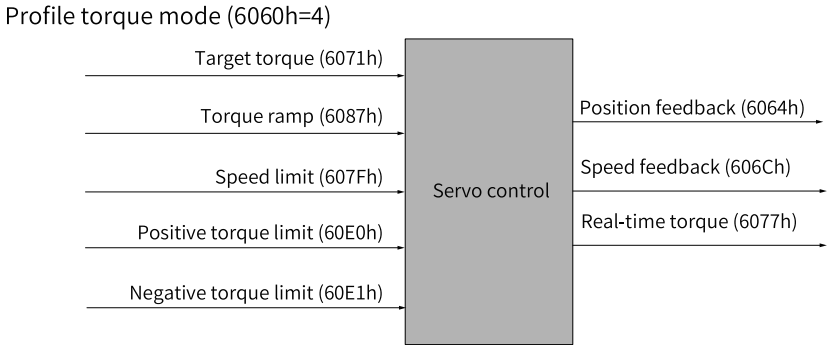


Figure 3-16 Profile torque (PT) mode

3.7.4 Related parameters

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time
Accessibility:	Read/write	Mapping:	RPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the control word.

Bit	Name		Description
0	Switch on	Switch on	1: Valid; 0: Invalid
1	Enable voltage	Enable voltage	1: Valid; 0: Invalid
2	Quick stop	Quick stop	0: Valid; 1: Invalid
3	Enable operation	Operation enabled	1: Valid; 0: Invalid
8	Halt	Halt	0: Keep present operating state, 1: Halt

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only
Accessibility:	Read-only	Mapping:	TPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the status word.

Bit	Name		Description
0	Ready to switch on	Ready to switch on	1: Valid; 0: Invalid
1	Switch on	Switch on	1: Valid; 0: Invalid
2	Enable operation	Operation enabled	1: Valid; 0: Invalid
3	Fault	Fault	1: Valid; 0: Invalid
4	Voltage enabled	Voltage enabled	1: Valid; 0: Invalid
5	Quick stop	Quick stop	0: Valid; 1: Invalid
6	Switch on disabled	Switch on disabled	1: Valid; 0: Invalid
7	Alarm	Warning	1: Valid; 0: Invalid
8	Manufacturer-specific	Manufacturer-specific	Not assigned
9	Remote control	Remote	1: Valid, control word activated 0: Invalid
10	Target arrival	Target arrival	0: Target torque not reached 1: Target torque reached
11	Internal limit active	Internal limit active	0: Position feedback within the limit 1: Position feedback beyond the limit
12 to 14	No assignment	N/A	No assignment, always being 0
15	-	N/A	N/A

☆ Related parameters:


Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H07.17	2007-12h	Speed limit source	0: Internal speed limit 1: V-LMT 2: H07.19 or H07.20 as defined by DI	0	-	Real time	"H07_en.17" on page 474
6060h	6060h	Servo drive mode selection	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Real time	"6060h" on page 801
6061h	6061h	Operation mode display	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Read-only	"6061h" on page 801
6071h	6071h	Target torque	-4000 to 4000	0	0.10%	Real time	"6071h" on page 805
6072h	6072h	Maximum torque	0 to 4000	3500	0.10%	Real time	"6072h" on page 806
6074h	6074h	Torque reference	-4000 to 4000	0	0.10%	Read-only	"6074h" on page 806
6077h	6077h	Torque actual value	-4000 to 4000	0	0.10%	Read-only	"6077h" on page 806

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808
6087h	6087h	Torque ramp	0 to 4294967295	4294967295	0.1%/s	Real time	"6087h" on page 810
60E0h	60E0h	Positive torque limit	0 to 4000	3500	0.10%	Real time	"60E0h" on page 818
60E1h	60E1h	Negative torque limit	0 to 4000	3500	0.10%	Real time	"60E1h" on page 818

3.7.5 Related Function Settings

Speed limit in torque control mode

In torque control mode, 607Fh can be used to limit the maximum speed in forward and reverse running. Note that the maximum speed cannot exceed the maximum operating speed allowed by the motor.

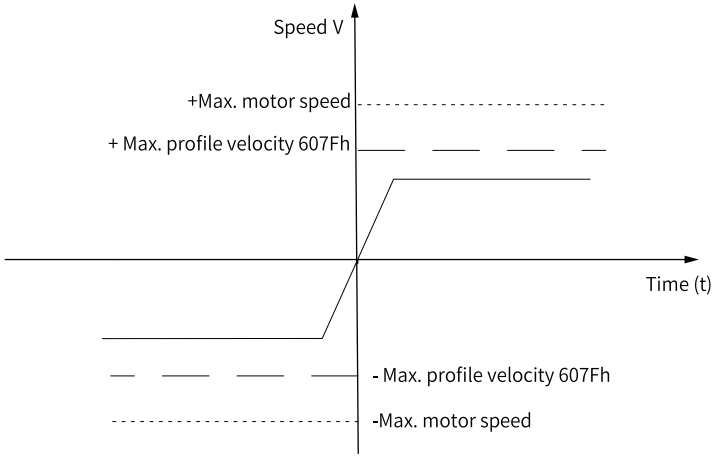


☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808

Torque limit

To protect the mechanical devices, you can limit the torque references of the servo drive in position, speed, and torque control modes by setting 6072h (Max torque), 60E0h (Positive torque limit value),

and 60E1h (Negative torque limit value). Note that the maximum torque allowed by the servo drive cannot be exceeded.

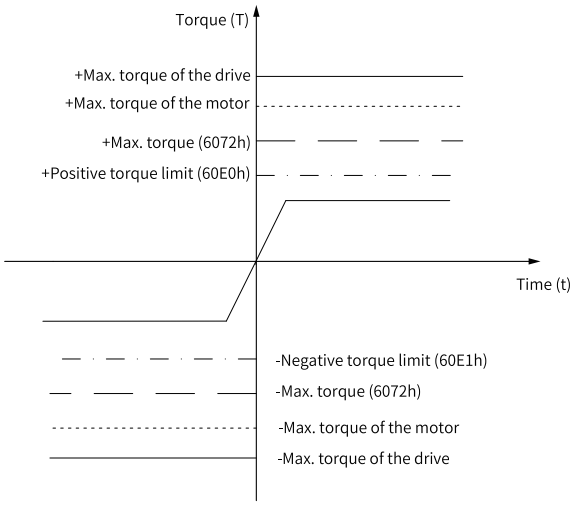

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
6072h	6072h	Maximum torque	0 to 4000	3500	0.10%	Real time	"6072h" on page 806
60E0h	60E0h	Positive torque limit	0 to 4000	3500	0.10%	Real time	"60E0h" on page 818
60E1h	60E1h	Negative torque limit	0 to 4000	3500	0.10%	Real time	"60E1h" on page 818

Torque reference polarity


You can change the torque reference direction through setting the torque reference polarity.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808

Monitoring on torque reach

This function is used to determine whether the torque reference value reaches the set torque base value. If yes, a corresponding torque arrival signal will be output to the host controller.

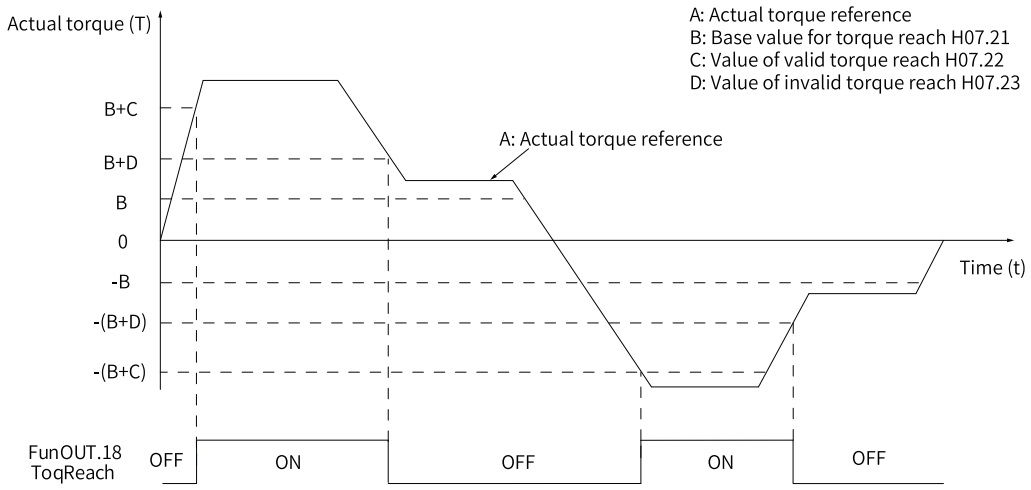

- Actual torque reference (viewed in H0b.02): A
- Reference value for torque arrival (H07.21): B
- Value of valid torque arrival (H07.22:) C
- Value of invalid torque arrival (H07.23): D

C and D are offsets on the basis of B.

The torque reach DO signal can be activated only when the actual torque reference meets the following condition: |A| ≥ B + C. Otherwise, the torque reached signal remains inactive.

The torque reach signal is deactivated only when the actual torque reference meets the following condition: |A| < B + D. Otherwise, the torque reached signal remains active.

3.8 Homing Mode (HM)

This mode searches for the home and determines the position relationship between the home and zero.


- Mechanical home: Refers to a fixed position on the device, which can correspond to a certain home switch and motor Z signal.
- Mechanical zero: the absolute zero point on the machine.

After homing is done, the motor stops at the mechanical home. The relation between the mechanical home and mechanical zero can be set in 607Ch.

Home = Zero + 607Ch (Home offset)

When 607Ch = 0, the zero is the same as the home.

3.8.1 Function block diagram

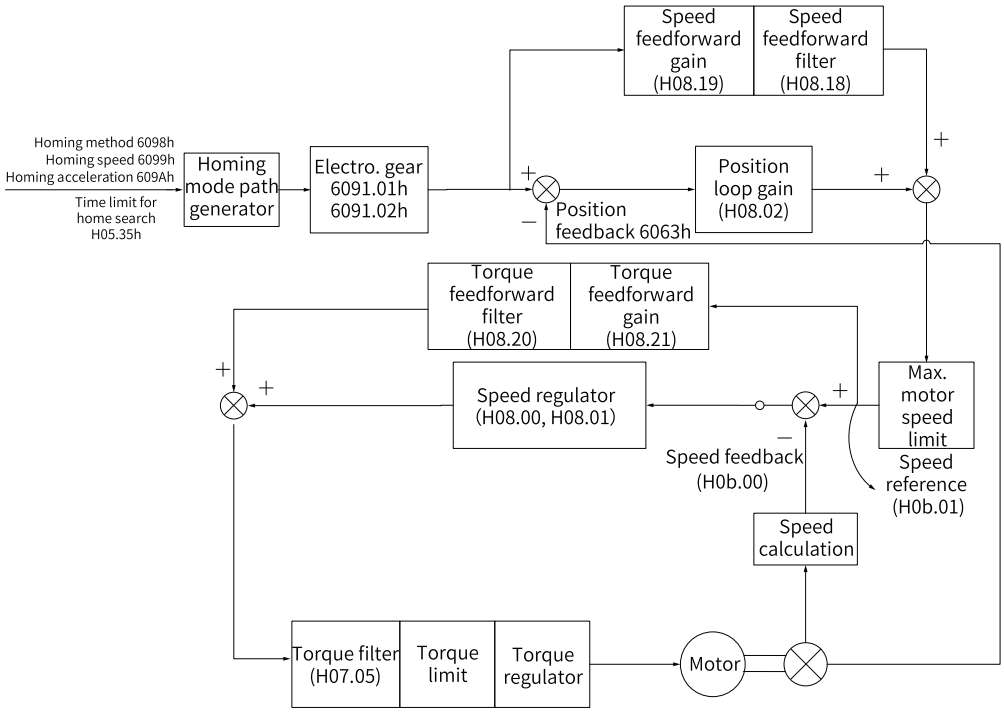

3.8.2 Recommended configuration

The basic configuration for the homing mode is shown in the following table.

RPDO	TPDO	Remarks
6040h: control word	6041h: status word	Mandatory
6098h: Homing method	-	Optional
6099.01h: Speed during search for switch	-	Optional
6099.02h: Speed during search for zero	-	Optional
609Ah: Homing acceleration	-	Optional
-	6064h: position actual value	Optional
6060h: modes of operation	6061h: modes of operation display	Optional

3.8.3 Configuration block diagram

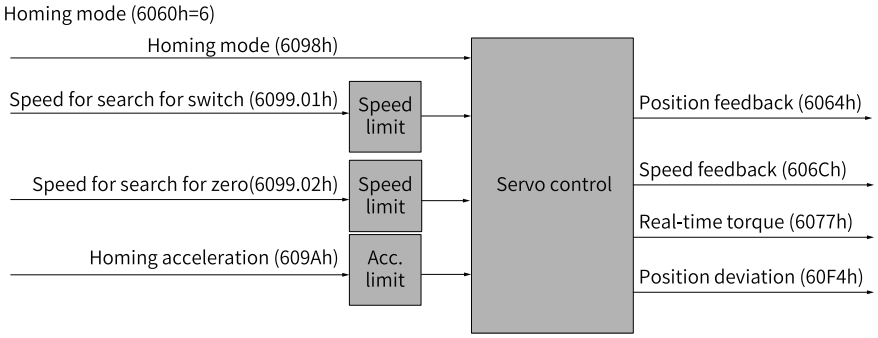


Figure 3-17 Homing mode

3.8.4 Related parameters

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time
Accessibility:	Read/write	Mapping:	RPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the control word.

Bit	Name		Description
0	Switch on	Switch on	1: Valid; 0: Invalid
1	Enable voltage	Enable voltage	1: Valid; 0: Invalid
2	Quick stop	Quick stop	0: Valid; 1: Invalid
3	Enable operation	Operation enabled	1: Valid; 0: Invalid
4 [1]	Enable homing	Enable homing	0→1: Start, 1→0: Stop
8	Halt	Halt	0: Keep present operating state, 1: Halt

Note

[1]: bit4 is not available for P models.

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Accessibility: Read-only Mapping: TPDO

Value range:
0x0 to 0xFFFF

Description:
See section "Basic Functions of the Servo Drive" for the description of the status word.

Bit	Name		Description
0	Ready to switch on	Ready to switch on	1: Valid; 0: Invalid
1	Switch on	Switch on	1: Valid; 0: Invalid
2	Enable operation	Operation enabled	1: Valid; 0: Invalid
3	Fault	Fault	1: Valid; 0: Invalid
4	Enable voltage	Voltage enabled	1: Valid; 0: Invalid
5	Quick stop	Quick stop	0: Valid; 1: Invalid
6	Switch on disabled	Switch on disabled	1: Valid; 0: Invalid
7	Alarm	Warning	1: Valid; 0: Invalid
8	Manufacturer-specific	Manufacturer-specific	Not assigned
9	Remote control	Remote	1: Valid, control word activated 0: Invalid
10	Target arrival	Target arrival	1: Home is found or homing is interrupted or failed 0: Disabled or home is not found
11	Internal limit active	Internal limit active	0: Position reference within the limit 1: Position reference beyond the limit
12	Homing attained	Homing attained	0: Homing not attained 1: Homing attained
13	Homing error	Homing error	0: No error 1: Error is present
15	HomeAttain	Home find	0: Homing completed 1: Homing completed

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6060h	6060h	Servo drive mode selection	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Real time	"6060h" on page 801
6061h	6061h	Operation mode display	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Read-only	"6061h" on page 801

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
6065h	6065h	Threshold of excessive position deviation	0 to 4294967295	219895614	Reference unit	Real time	"6065h" on page 802
6066h	6066h	Time to trigger excessive position deviation	0 to 65535	0	ms	Real time	"6066h" on page 803
607Ch	607Ch	Home offset	-2147483648 to +2147483647	0	Reference unit	Real time	"607Ch" on page 807
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808
6098h	6098h	Homing method	-3 to +35	1	-	Real time	"6098h" on page 811
6099.01h	6099-01h	Speed during search for deceleration point signal	0 to 4294967295	111848106	Reference unit/s	At stop	"6099_en.01h" on page 812
6099.02h	6099-02h	Speed during search for home signal	0 to 4294967295	11184810	Reference unit/s	At stop	"6099_en.02h" on page 812
609Ah	609Ah	Homing acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"609Ah" on page 812
60C5h	60C5h	Maximum acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"60C5h" on page 817

3.8.5 Related Function Settings

Homing timeout

When the homing duration exceeds the value defined by H05.35 (Homing time limit), the servo drive reports E601.0 (Homing timeout).

E601.0 can be used to determine whether the homing speed and the acceleration setpoint are proper and whether the deceleration point signal and home signal are connected properly.

☆ Related parameters:

Parameter	Comm. address	Function	Setpoint	Default value	Unit	Change mode	Page
H05.35	2005-24h	Home search time limit	0 to 65535	10000	-	Real time	"H05_en.35" on page 446

Actual position calculation method

After homing, the calculation method for the present mechanical position can be defined by 607Ch.

☆ Related parameters:

Parameter	Comm. address	Function	Setpoint	Default value	Unit	Change mode	Page
607Ch	607Ch	Home offset	-2147483648 to +2147483647	0	Reference unit	Real time	"607Ch" on page 807


Position deviation monitoring function

☆ Related parameters:

Parameter	Comm. address	Function	Setpoint	Default value	Unit	Change mode	Page
6065h	6065h	Threshold of excessive position deviation	0 to 4294967295	P type = 219895614 N type: 27486951	Reference unit	Real time	"6065h" on page 802
6066h	6066h	Time to trigger excessive position deviation	0 to 65535	0	ms	Real time	"6066h" on page 803

Speed limit

In homing mode, 607Fh can be used to limit the maximum speed in forward/reverse running, but its value cannot exceed the maximum permissible speed of the motor.

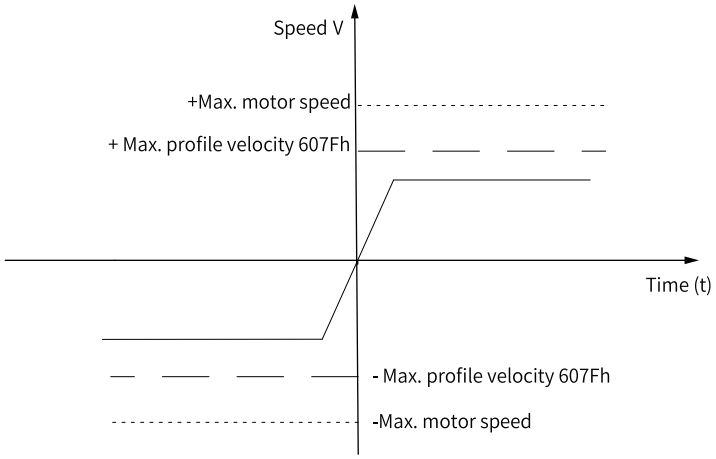

☆ Related parameters:

Parameter	Comm. address	Function	Setpoint	Default value	Unit	Change mode	Page
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"607Fh" on page 808

Acceleration limit

In homing mode, the change rate of position references can be limited through the acceleration limit.

☆ Related parameters:

Parameter	Comm. address	Function	Setpoint	Default value	Unit	Change mode	Page
60C5h	60C5h	Maximum acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"60C5h" on page 817

3.8.6 Homing Operation

Note

Threshold for torque homing:

- 6098h = 3: When the motor hits the hardware position limit, the torque feedback reaches the limit value (H05.58). After the motor stops, the first Z signal is searched in the reverse direction as the home.
- 6098h = -2/-1: The limit is the minimum value among H05.58 (Threshold in limit-triggered homing), 6072h (Maximum torque reference), 60E0h (Positive torque limit), and 60E1h (Negative torque limit).

Note: In the figure, "H" represents high speed 6099.01h, "L" represents low speed 6099.02h, and "-" represents reverse run.

6098h = 1

Home: motor Z signal

Deceleration point: negative limit switch

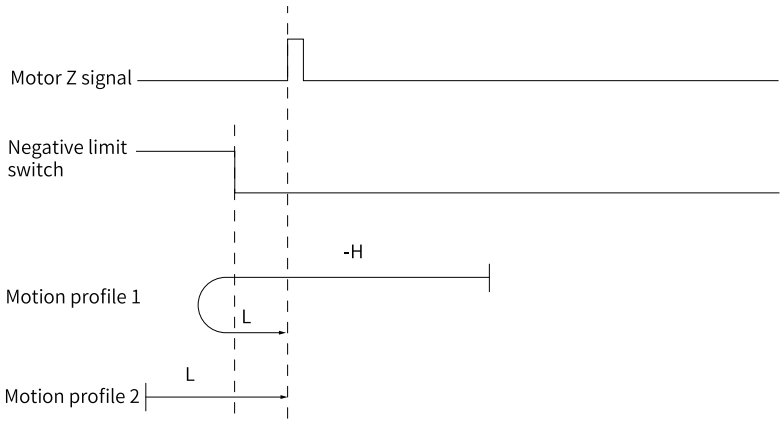


Figure 3-18 Motor operation curve and speed in mode 1

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 2

Home: Z signal

Deceleration point: positive limit switch

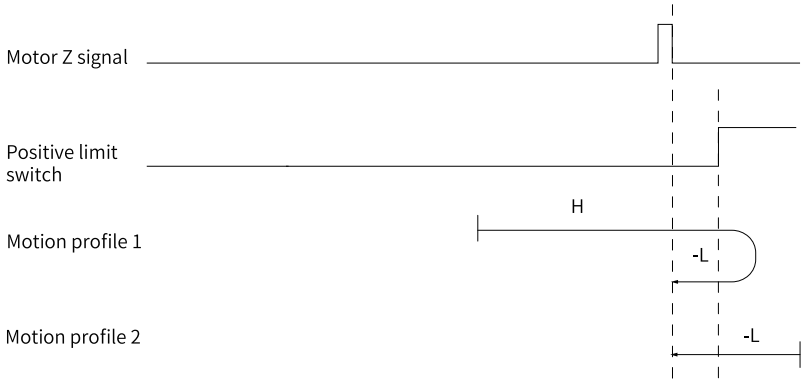


Figure 3-19 Motor operation curve and speed in mode 2

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 3

Home: Z signal

Deceleration point: home switch (HW)

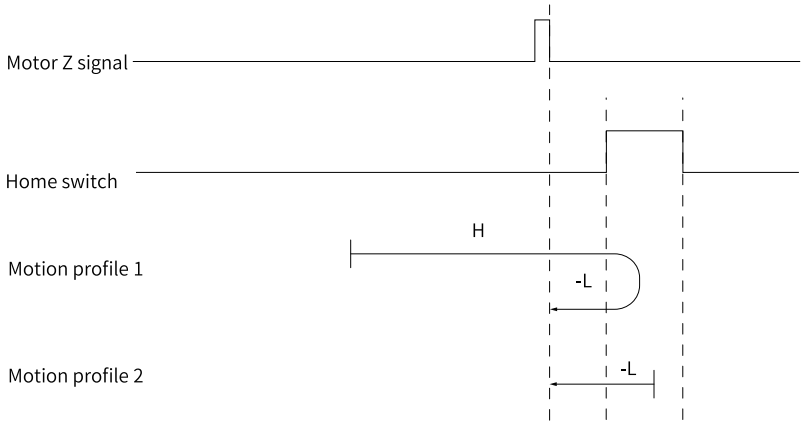


Figure 3-20 Motor operation curve and speed in mode 3

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 4

Home: Z signal

Deceleration point: home switch (HW)

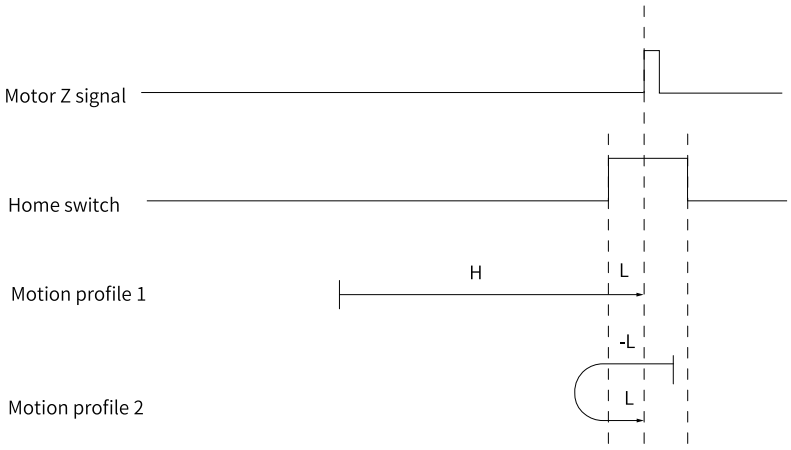


Figure 3-21 Motor running curve and speed in mode 4

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 5

Home: Z signal

Deceleration point: home switch (HW)

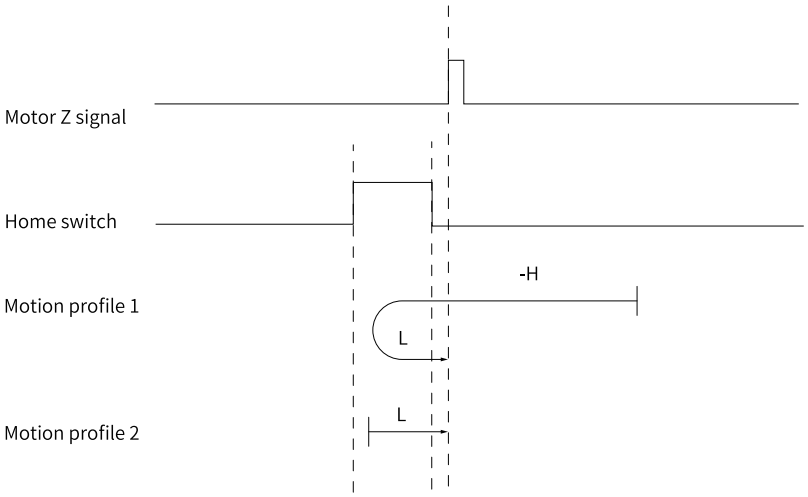


Figure 3-22 Motor running curve and speed in mode 5

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 6

Home: Z signal

Deceleration point: home switch (HW)

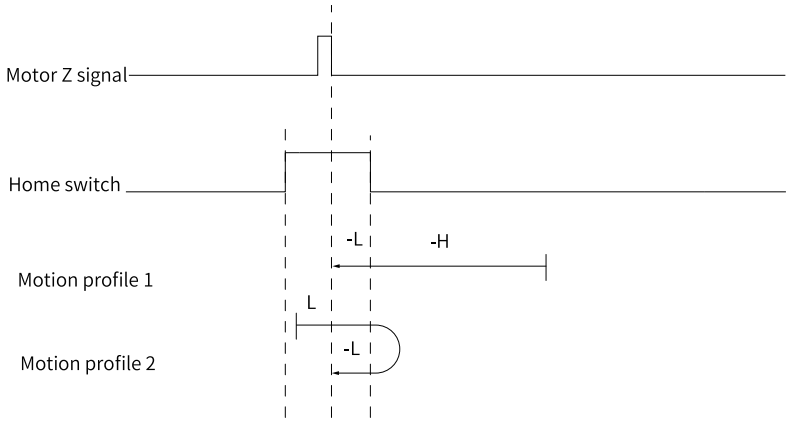


Figure 3-23 Motor running curve and speed in mode 6

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 7

Home: Z signal

Deceleration point: home switch (HW)

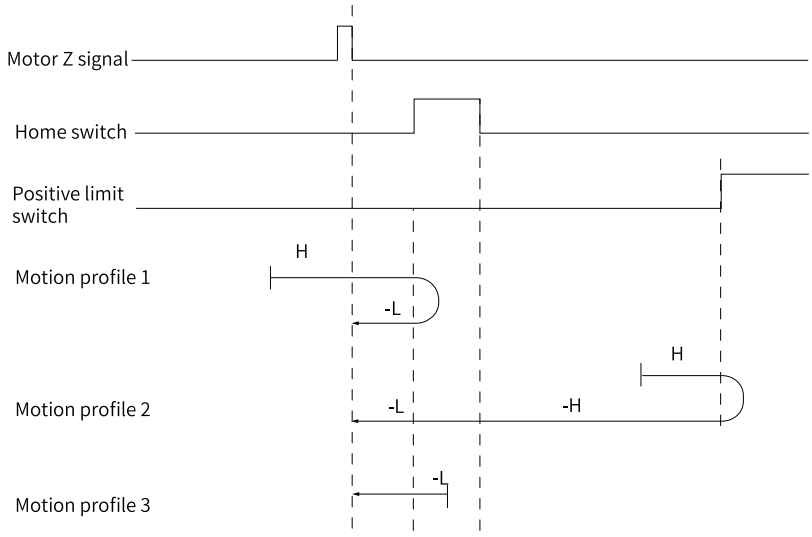


Figure 3-24 Motor operation curve and speed in mode 7

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 8

Home: Z signal

Deceleration point: home switch (HW)

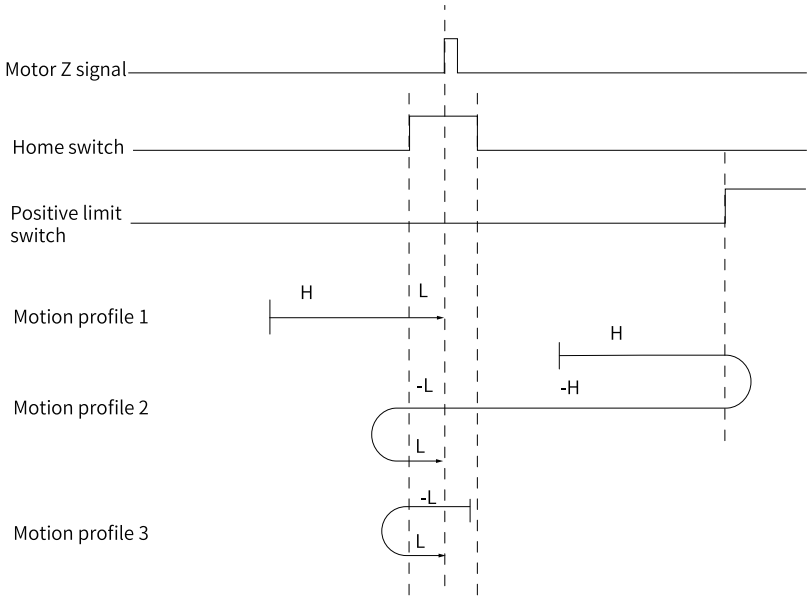


Figure 3-25 Motor running curve and speed in mode 8

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 9

Home: Z signal

Deceleration point: home switch (HW)

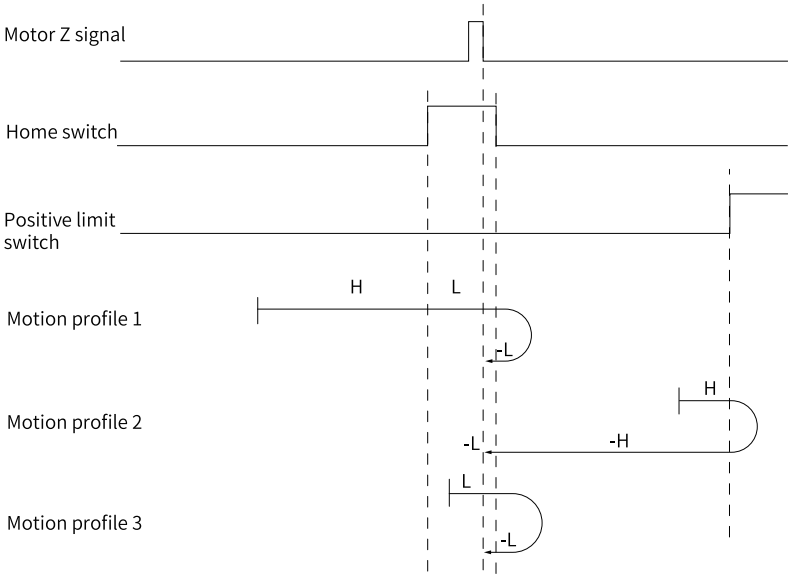


Figure 3-26 Motor running curve and speed in mode 9

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.

- Motion profile 3: Deceleration point signal active at start.

6098h = 10

Home: Z signal

Deceleration point: home switch (HW)

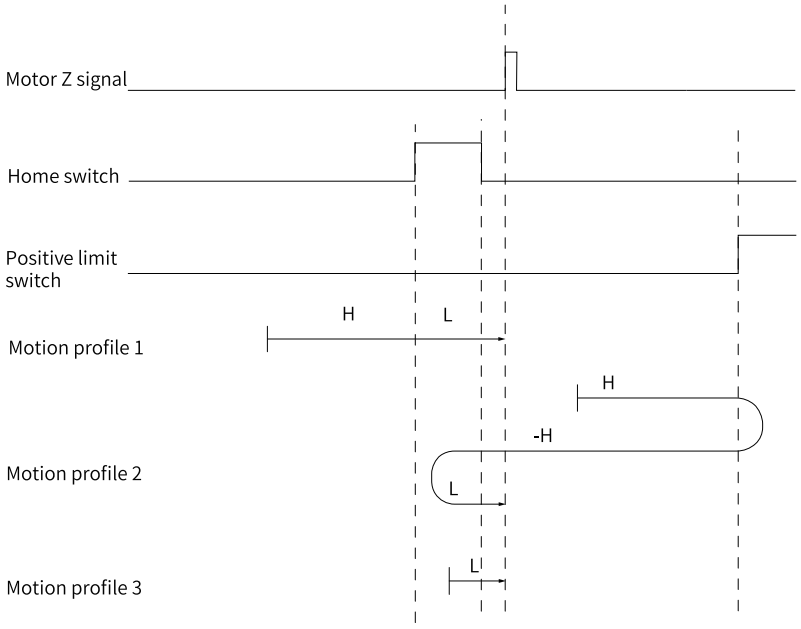


Figure 3-27 Motor running curve and speed in mode 10

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 11

Home: Z signal

Deceleration point: home switch (HW)

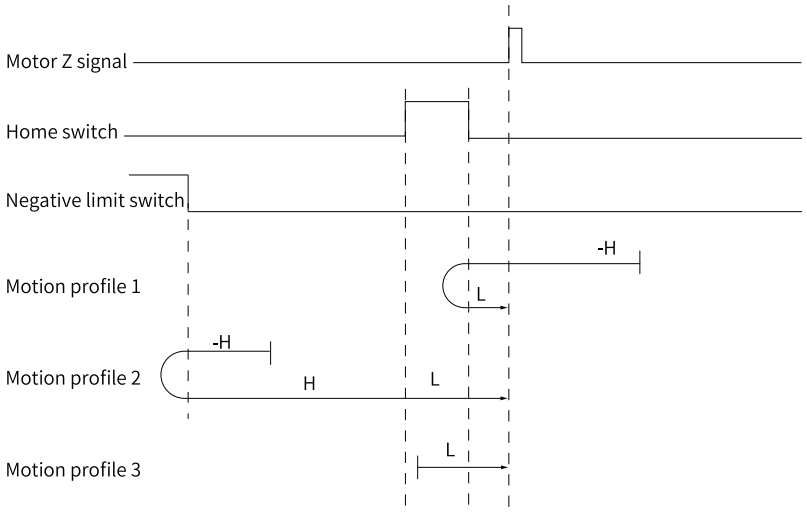


Figure 3-28 Motor running curve and speed in mode 11

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 12

Home: Z signal

Deceleration point: home switch (HW)

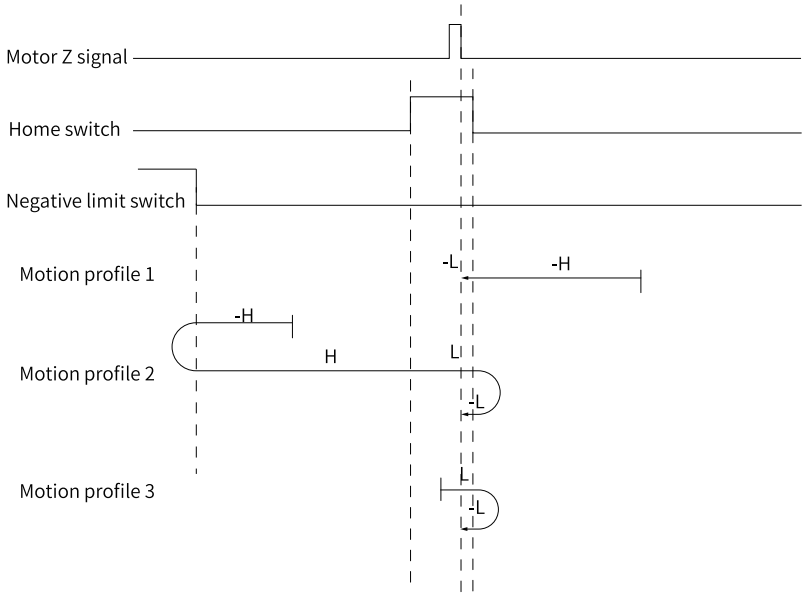


Figure 3-29 Motor running curve and speeds in mode 12

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 13

Home: Z signal

Deceleration point: home switch (HW)

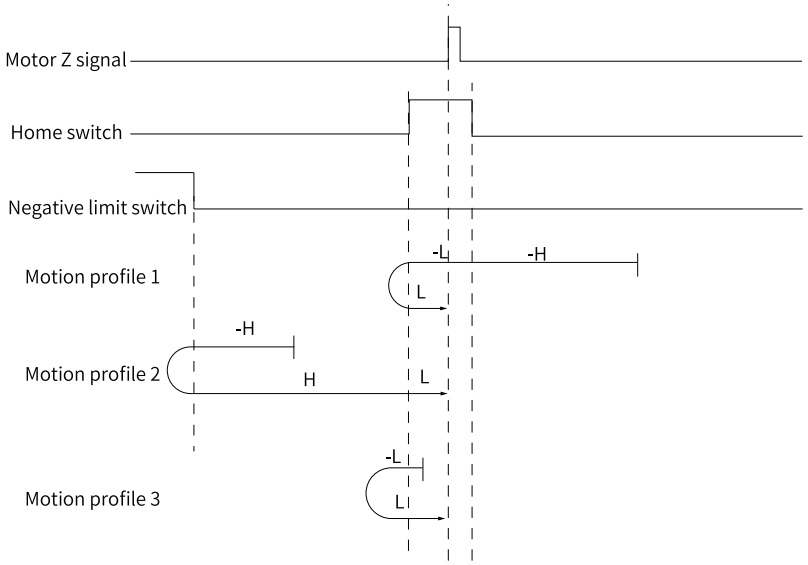


Figure 3-30 Motor running curve and speed in mode 13

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 14

Home: Z signal

Deceleration point: home switch (HW)

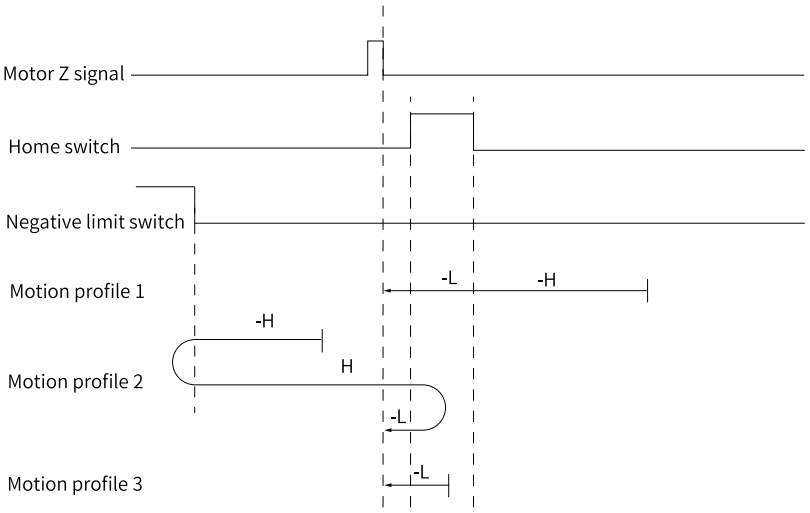


Figure 3-31 Motor running curve and speed in mode 14

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 17

Home: negative limit switch

Deceleration point: negative limit switch

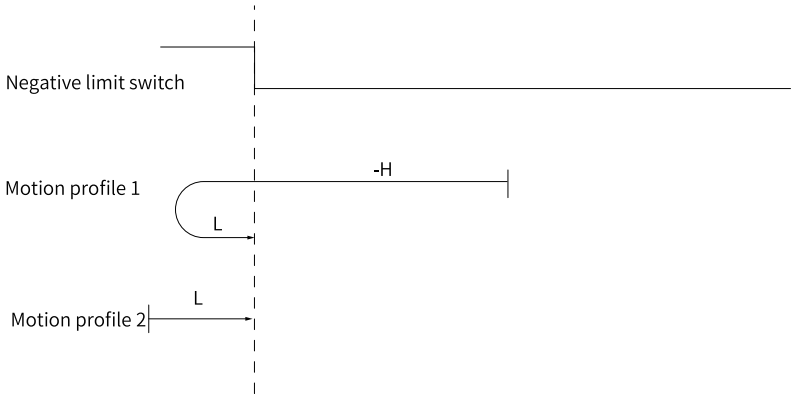


Figure 3-32 Motor running curve and speed in mode 17

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 18

Home: positive limit switch

Deceleration point: positive limit switch

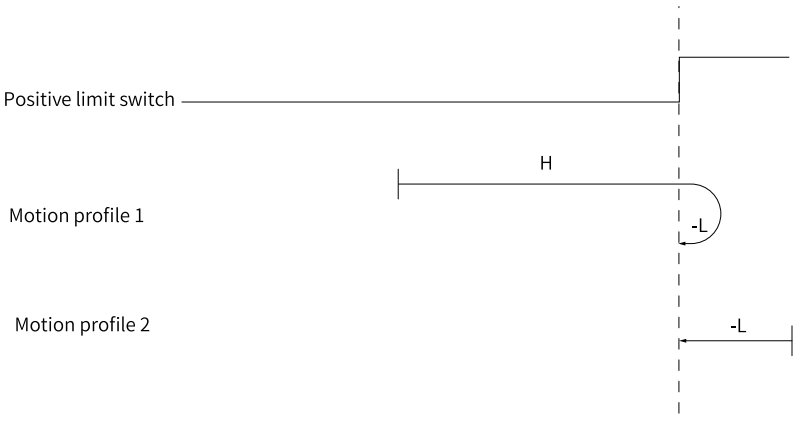


Figure 3-33 Motor running curve and speed in mode 18

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 19

Home: home switch (HW)

Deceleration point: home switch (HW)

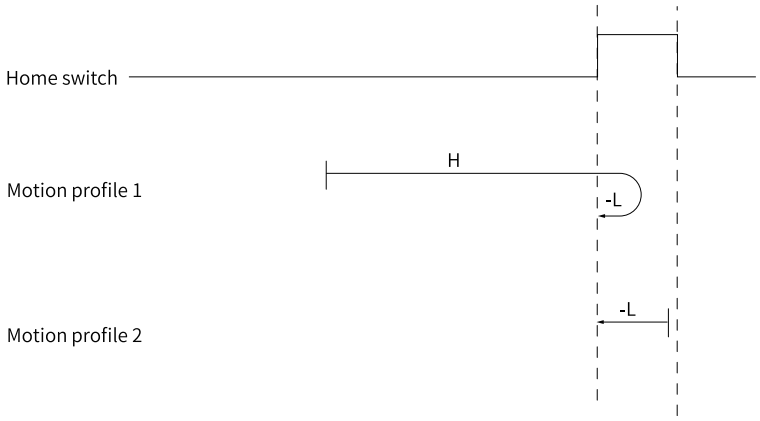


Figure 3-34 Motor running curve and speed in mode 19

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 20

Home: home switch (HW)

Deceleration point: home switch (HW)

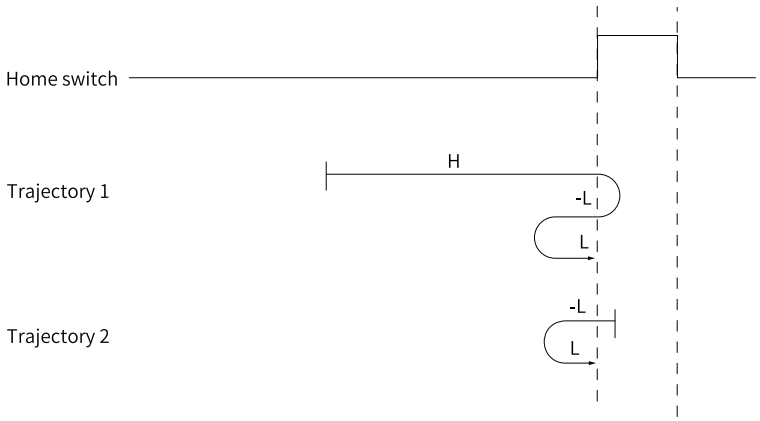


Figure 3-35 Motor running curve and speed in mode 20

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 21

Home: home switch (HW)

Deceleration point: home switch (HW)

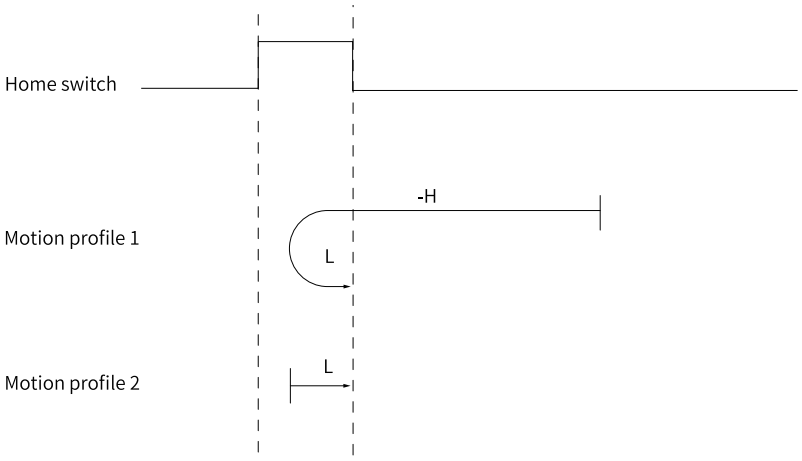


Figure 3-36 Motor running curve and speed in mode 21

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 22

Home: home switch (HW)

Deceleration point: home switch (HW)

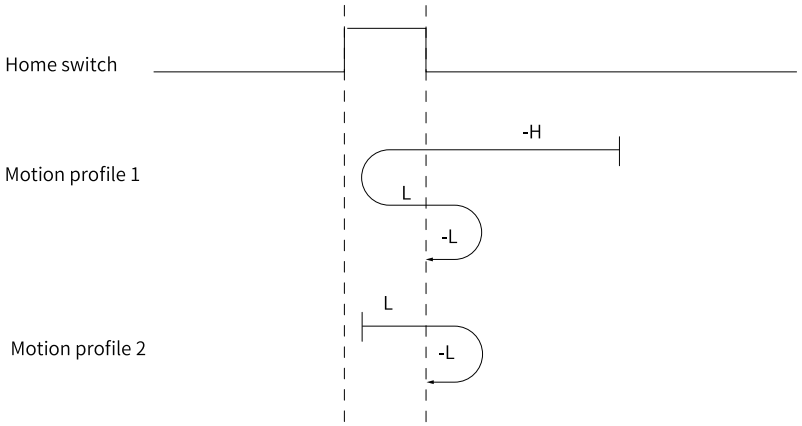


Figure 3-37 Motor running curve and speed in mode 22

- Motion profile 1: Deceleration point signal inactive at start of homing
- Motion profile 2: Deceleration point signal active at start of homing

6098h = 23

Home: home switch (HW)

Deceleration point: home switch (HW)

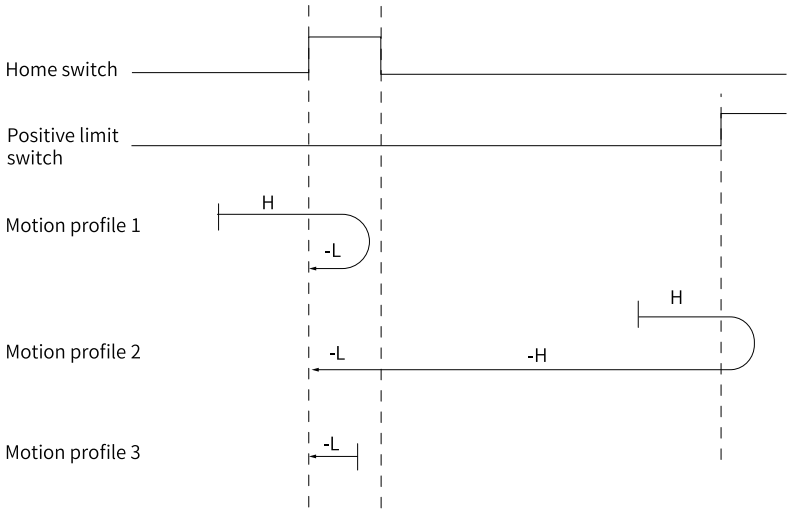


Figure 3-38 Motor running curve and speed in mode 23

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 24

Home: home switch (HW)

Deceleration point: home switch (HW)

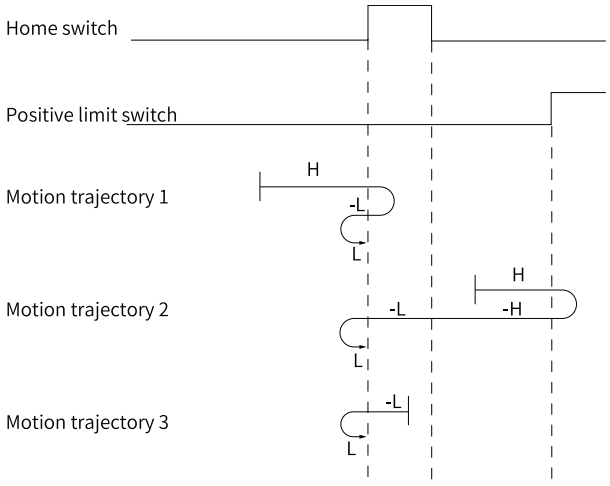


Figure 3-39 Motor running curve and speed in mode 24

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 25

Home: home switch (HW)

Deceleration point: home switch (HW)

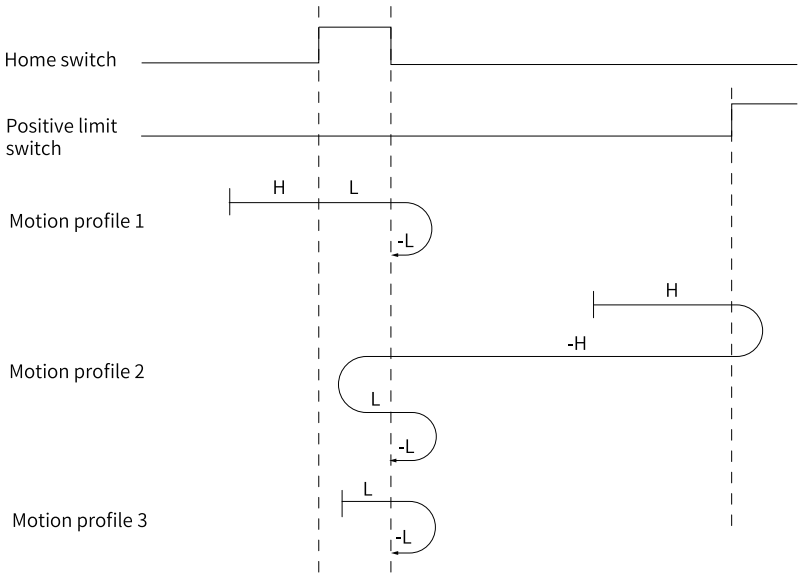


Figure 3-40 Motor running curve and speed in mode 25

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 26

Home: home switch (HW)

Deceleration point: home switch (HW)

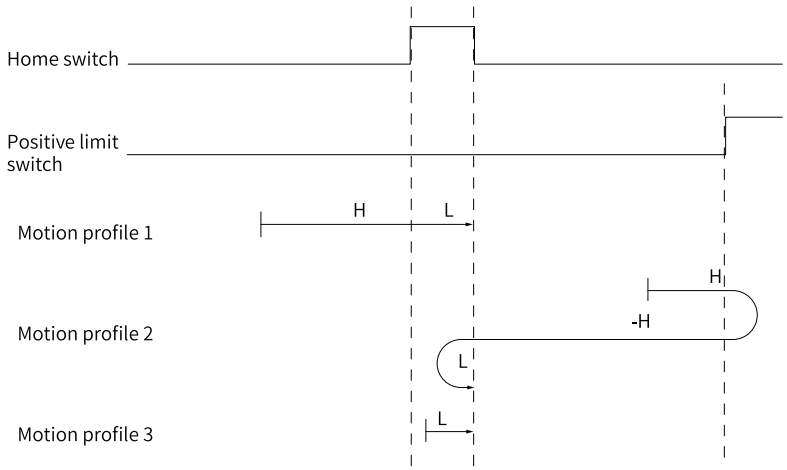


Figure 3-41 Motor running curve and speed in mode 26

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the positive limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the positive limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 27

Home: home switch (HW)

Deceleration point: home switch (HW)

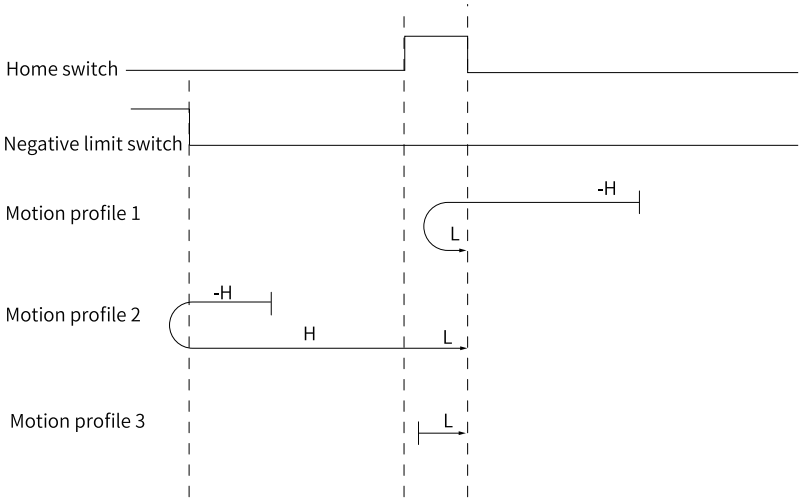


Figure 3-42 Motor running curve and speed in mode 27

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 28

Home: home switch (HW)

Deceleration point: home switch (HW)

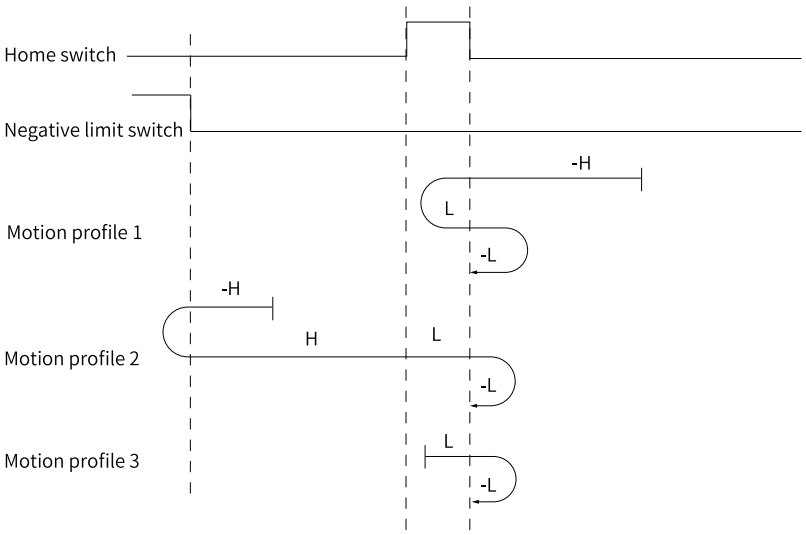


Figure 3-43 Motor running curve and speed in mode 28

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.

- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 29

Home: home switch (HW)

Deceleration point: home switch (HW)

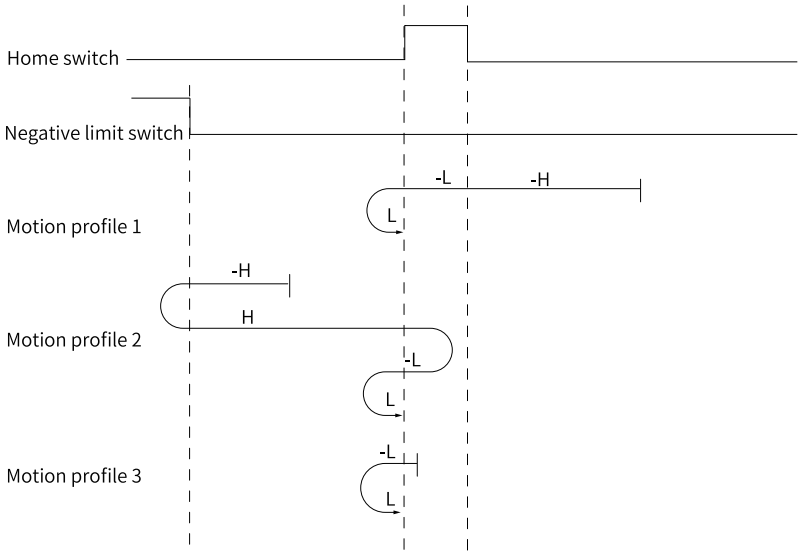


Figure 3-44 Motor running curve and speed in mode 29

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 30

Home: home switch (HW)

Deceleration point: home switch (HW)

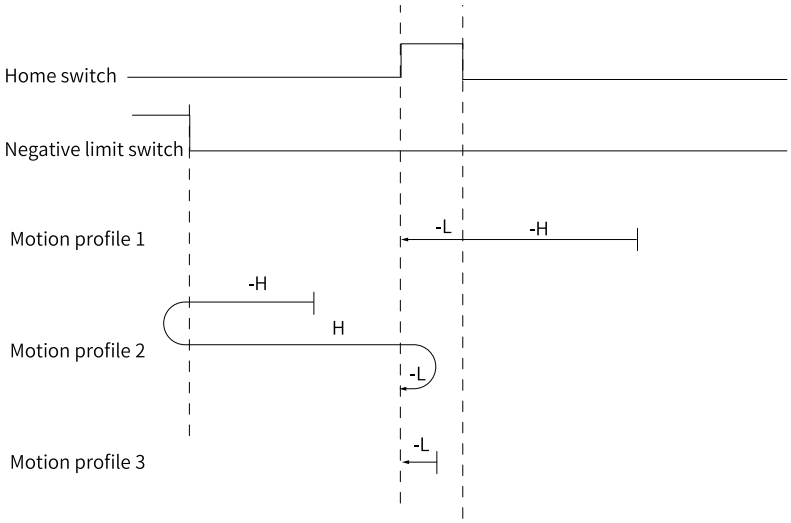


Figure 3-45 Motor running curve and speed in mode 30

- Motion profile 1: Deceleration point signal inactive at startup in homing mode, not hitting the reverse limit switch.
- Motion profile 2: HW signal inactive at startup in homing mode, hitting the reverse limit switch.
- Motion profile 3: Deceleration point signal active at start.

6098h = 31/32

This mode is not defined in the CiA402 protocol. It can be used for extension purpose.

6098h = 33/34

Home: Z signal

Deceleration point: none

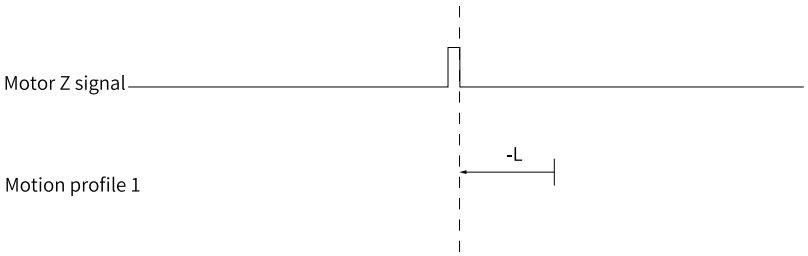


Figure 3-46 Motor running curve and speed in mode 33

- Motion profile 1: The motor runs in the reverse direction at low speed and stops at the first Z signal.

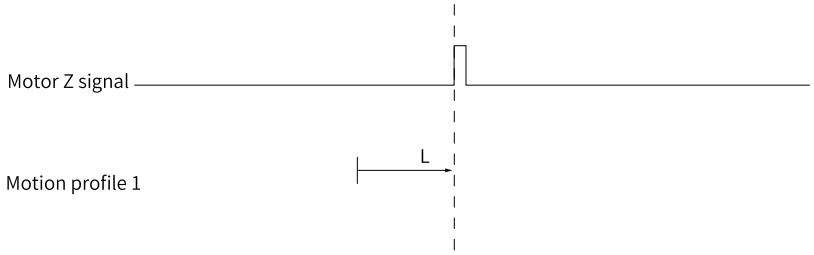


Figure 3-47 Motor running curve and speed in mode 34

- Motion profile 1: The motor runs in the forward direction at low speed and stops at the first Z signal.

6098h = 35

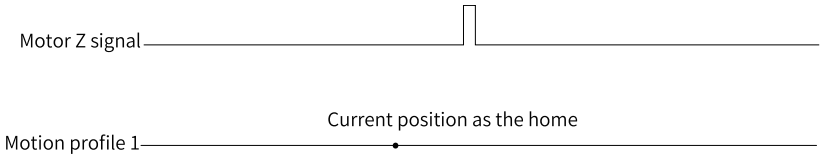


Figure 3-48 Motor running curve and speed in mode 35

Homing mode 35: The present position is taken as the mechanical home. After homing is triggered (control word 6040h: 0x0F → 0x1F),

6098h = -1

The motor runs in the reverse direction at a high speed first. If the status where the torque reaches the limit and the speed is near zero after the axis hits the mechanical limit persists, it indicates that the axis has reached the mechanical limit position. In this case, the motor runs in the forward direction at a low speed and stops after reaching the rising edge of the Z signal for the first time.

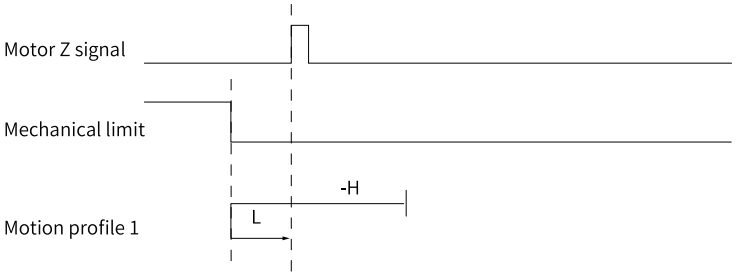


Figure 3-49 Motor running curve and speed in mode –1

6098h = -2

The servo motor runs in the forward direction at a high speed first. If the torque reaches the limit and the speed is near zero when the motor hits the mechanical limit, and such status persists, it indicates that the motor reaches the mechanical limit position. In this case, the motor runs in the reverse direction at a low speed and stops at the first Z signal after reaching the rising edge.

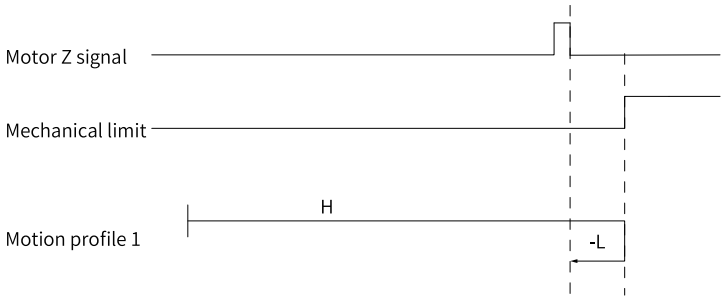


Figure 3-50 Motor running curve and speed in mode –2

6098h=-3

Home: motor Z signal

Deceleration point: none

- If the single-turn position is close to the reverse home, the homing profile is motion profile 1.
- If the single-turn position is close to the forward home, the homing profile is motion profile 2.

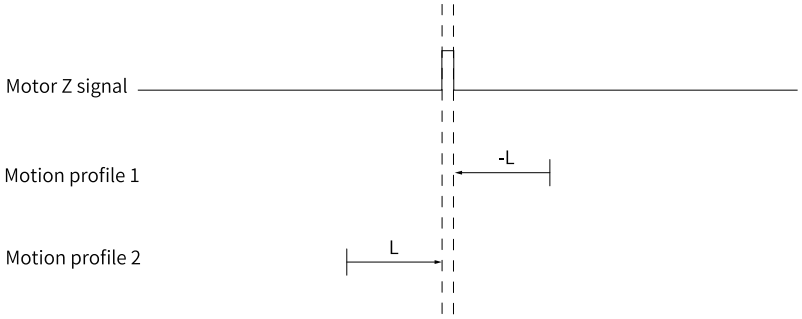


Figure 3-51 Motor running curve and speed in mode -3

- Motion profile 1: The motor runs in the reverse direction at a low speed and stops at the first Z signal.
- Motion profile 2: The motor runs in the forward direction at a low speed and stops at the first Z signal.

3.9 Position Control Mode

★Terms:

- Reference unit: the minimum identifiable value input from the host controller to the drive.
- The encoder unit means the value obtained after the input reference is processed by electronic gear ratio.

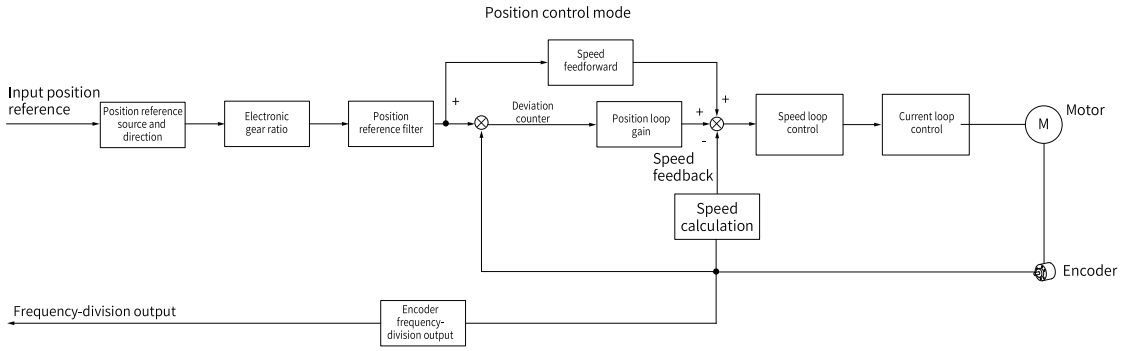


Figure 3-52 Block diagram of the position control mode

Set H02.00 (Control mode) to 1 (Position control mode) through the keypad or Inovance software tool to make the drive operate in the position control mode. Set the servo drive parameters based on the mechanical structure and specifications.

The following part uses the basic parameter setting to describe the position control mode.

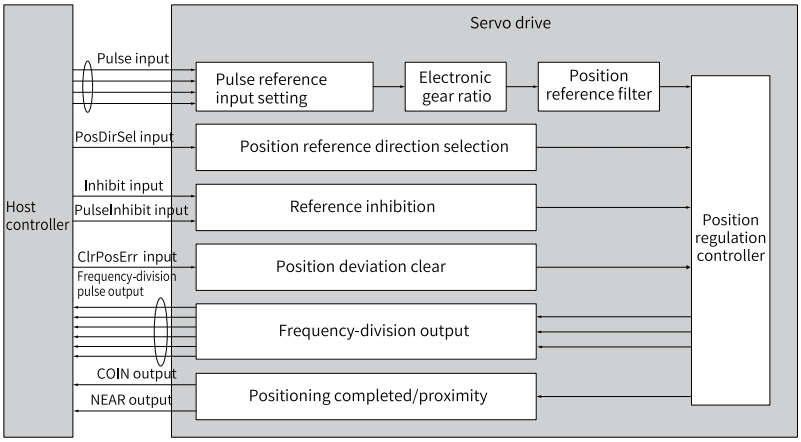


Figure 3-53 Signal exchange between the servo drive and the host controller

3.9.1 Function block diagram

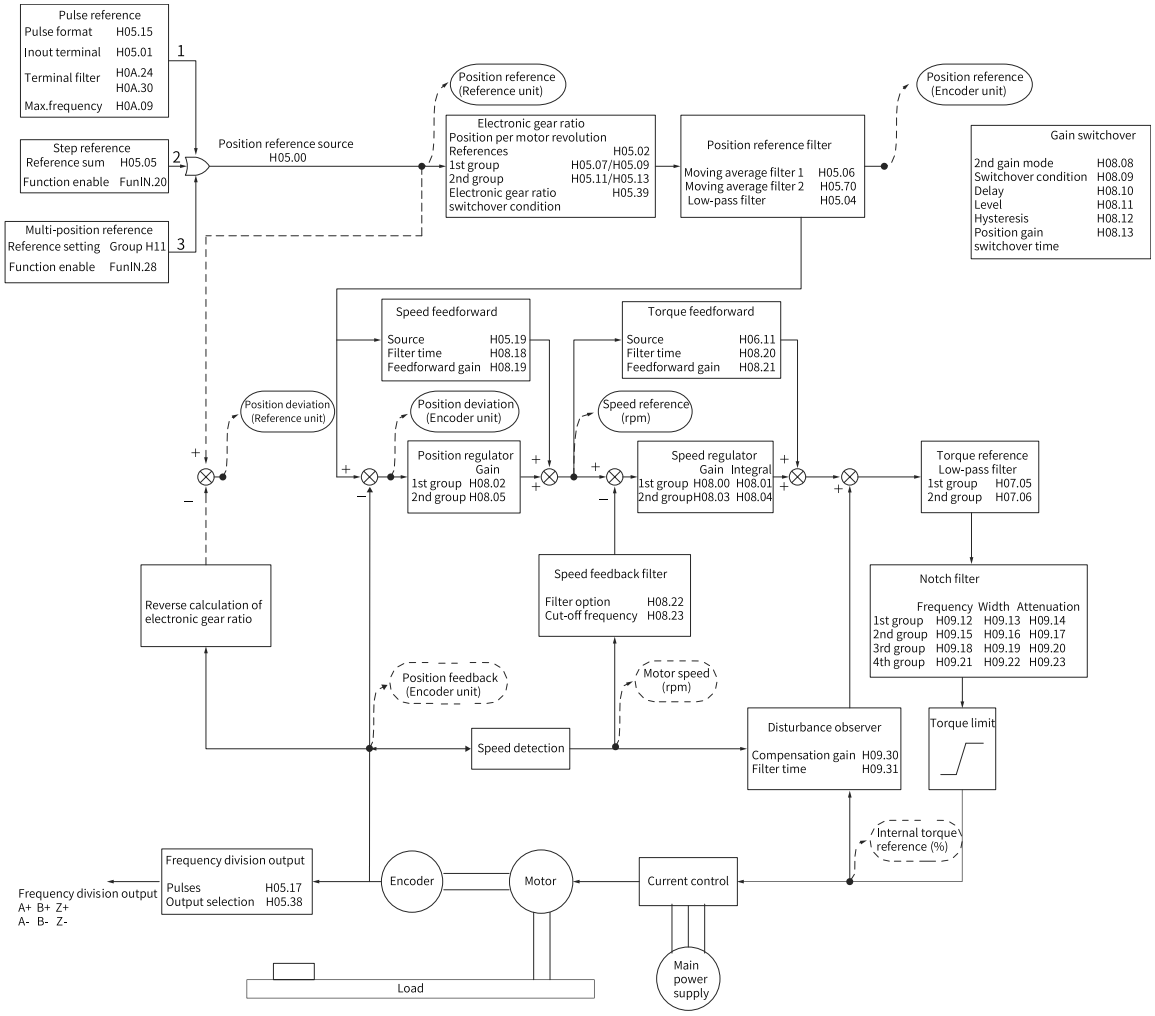


Figure 3-54 Block diagram of position control

3.9.2 Position Reference Input

The position reference input setting includes position reference source, direction, and inhibition.

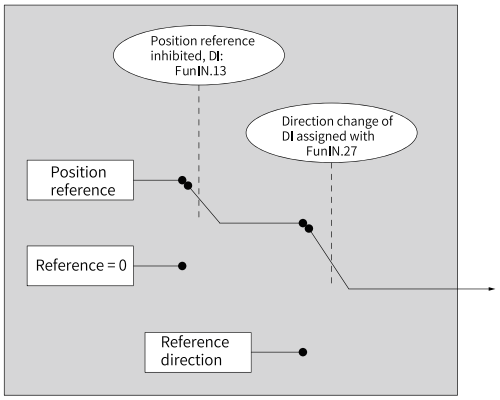


Figure 3-55 Block diagram of position reference input setting

Position reference source

In position control mode, set the position reference source in H05.00 first.

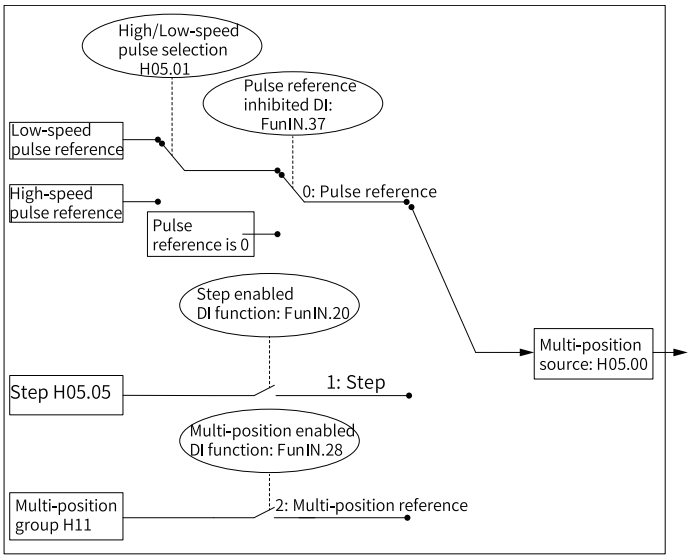


Figure 3-56 Setting of the position reference source

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.00	2005-01h	Main position reference source	0: Pulse reference 1: Step amount 2: Multi-position reference	0	-	Real time	"H05_en.00" on page 433

- **Pulse reference as the source (H05.00 = 0)**
  Perform the following operations to obtain the correct pulse input format.


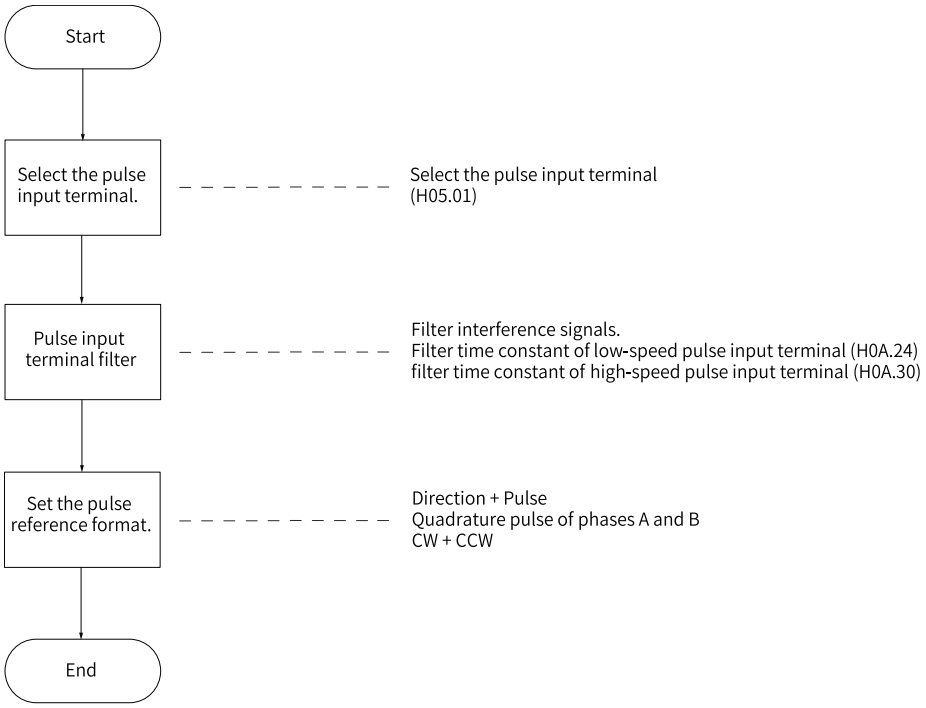


Figure 3-57 Flowchart of setting pulse reference as the source

- Pulse input terminal

  The servo drive provides two pulse input terminals.

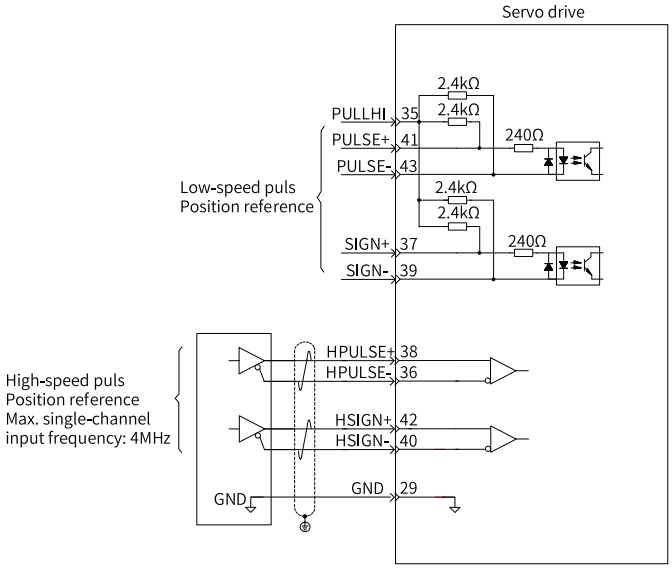

The low-speed pulse input terminals (PULSE+, PULSE-, SIGN+, SIGN-) receive open-collector input (maximum single input frequency is 200 kpps).

The high-speed pulse input terminals (HPULSE+, HPULSE-, HSIGN+, HSIGN-) only receive differential input (maximum single input frequency is 4 Mpps).

Note

Low-speed pulses and high-speed pulses are not allowed to be connected simultaneously.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.01	2005-02h	Position pulse reference input terminal selection	0: Low speed 1: High speed	0	-	At stop	"H05_en.01" on page 433

For details on the interface circuit, see *SV670P-INT Series Servo Drive Hardware Guide*.

Table 3–5 Pulse input specifications

Pulse type		Maximum input frequency	Voltage	Forward current
High-speed pulse	Differential signal	4 Mpps	5 V	< 15 mA
Low-speed pulse	Differential signal	200 kpps	5 V	< 15 mA
	Open-collector signal	200 kpps	24 V	< 15 mA

- Pulse input terminal filter

  Set the filter time to filter the pulses from the low-speed/high-speed pulse input terminals to prevent motor malfunction due to interference on the servo drive.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0A.24	200 A-19h	Filter time constant of low-speed pulse input terminal	0 to 255	30	25 ns	At stop	"H0A_en.24" on page 518
H0A.30	200 A-1Fh	Filter time constant of high-speed pulse input terminal	0 to 255	2	ns	At stop	"H0A_en.30" on page 519

If the filter time constant is t_F, and the minimum width of input signals is t_{min}, the input signal and filtered signal are as shown in the following figure. The filtered signal has a t_F delay over the input signal.

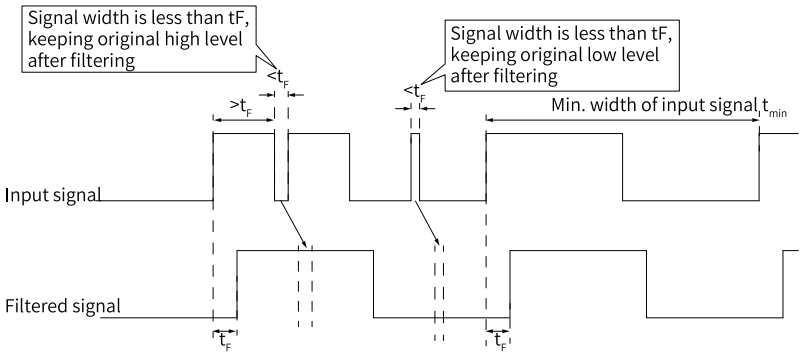


Figure 3-58 Sample signal filtering waveform

The pulse input pin filter time t_F must meet the following requirement: $t_F \leq$ (20% to 25%) t_{min}.

The recommended filter parameter setting based on the maximum frequency (minimum width) of input pulses is described in the following table.

Table 3–6 Recommended filter parameter settings

Pulse input terminal	Parameter	Maximum frequency of input pulses	Recommended filter time constant (25 ns)
Low-speed pulse input terminal	H0A.24	< 167 kpps	30
		167 kpps to 200 kpps	20
High-speed pulse input	H0A.30	200 kpps to 1 Mpps	5
		> 1 Mpps	3

For example, if the filter time constant is set to 30, the actual filter time is 30 × 25 = 750 ns.

- Pulse input format

  The servo drive supports three pulse input formats:

















  - Direction + Pulse (positive or negative logic)
  - Phase A + phase B quadrature pulse, 4-frequency multiplication
  - CW + CCW

  Set the pulse reference form appropriate for the host controller or other pulse generators.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.15	2005-10h	Pulse input format	0: Direction + Pulse, positive logic 1: Direction + Pulse, negative logic 2: Phase A + phase B quadrature pulse, quadrupled frequency 3: CW + CCW	0	-	At stop	"H05_en.15" on page 436

Table 3–7 Pulse forms

H02.02	H05.15	Pulse form	Signal	Diagram of forward pulses	Diagram of reverse pulses
0	0	Pulse + Direction Positive logic	PULSE SIGN		
	1	Pulse + Direction Negative logic	PULSE SIGN		
	2	Phase A + phase B quadrature pulse 4-frequency multiplication	PULSE (phase A) SIGN (phase B)	Phase A leads phase B by 90°. 	Phase B leads phase A by 90°. 
	3	CW + CCW	PULSE (CW) SIGN (CCW)		
1	0	Pulse + Direction Positive logic	PULSE SIGN		
	1	Pulse + Direction Negative logic	PULSE SIGN		
	2	Phase A + phase B quadrature pulse 4-frequency multiplication	PULSE (phase A) SIGN (phase B)	Phase B leads phase A by 90°. 	Phase A leads phase B by 90°. 
	3	CW + CCW	PULSE (CW) SIGN (CCW)		

The following table describes the maximum frequencies and widths of position pulses from different terminals.

Table 3–8 Pulse reference specifications

Input terminal	Single-channel max. input frequency (pps)	Min. time width (μs)	
High-speed pulse input	4 Mpps	t1	0.125
		t2	0.125
		t3	0.125
		t4	0.0625
		t5	0.125
		t6	0.125
Low-speed pulse input terminal	200 kpps	t1	2.5
		t2	2.5
		t3	2.5
		t4	1.25
		t5	2.5
		t6	2.5

The rising time and falling time of position pulses must be smaller than 0.1 μs.

- Pulse frequency
  Set the maximum position pulse frequency in H0A.09.
- EB01.0 (Pulse input error) occurs when the actual input pulse frequency exceeds H0A.09.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0A.09	200 A-0Ah	Max. pulse input frequency in position control	100 to 16000	16000	kHz	At stop	"H0A_en.09" on page 515

- **Step reference as position reference source (H05.00 = 1)**

Caution

When the servo drive is in running state (Servo ON signal active), the motor is in locked state if the step reference function is valid and rotates if this function is invalid. After the H05.05 reference is executed, the function becomes invalid, and the motor enters the locked state.

The drive supports step operation, which means the drive can operate at a fixed speed until the set displacement is reached. The setting flowchart is shown in the following figure.

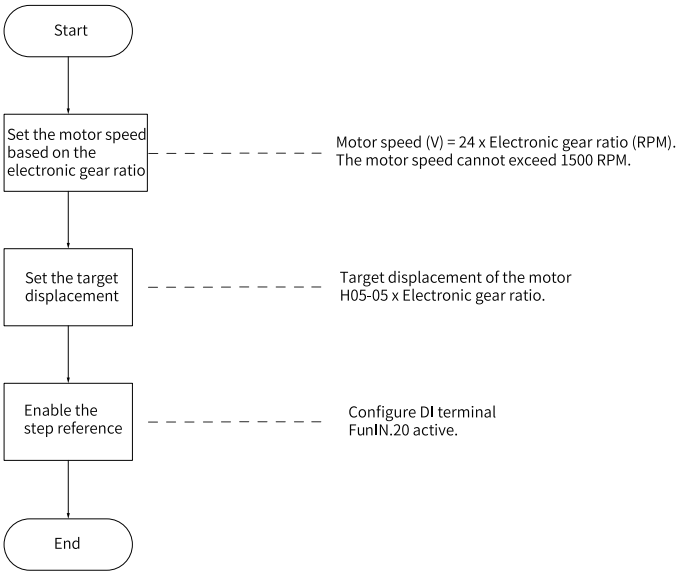


Figure 3-59 Flowchart of setting step reference as the source

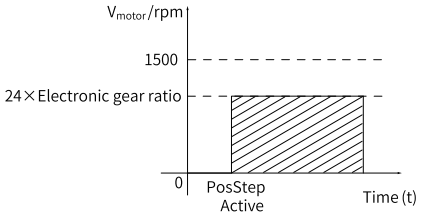


Figure 3-60 Motor operating curve (H05.00 = 1)

The hatched area in the preceding figure indicates the motor displacement: H05.05 × Electronic gear ratio (encoder unit).

- Relationship between the motor speed and electronic gear ratio
  When the position reference source is step setting, the motor speed is set based on the electronic gear ratio. The motor speed in this case must not exceed 1500 RPM.

  V_{motor}=24 x Electronic gear ratio (I

- Motor displacement
  When the step reference is used as the position reference source, the sum of position references (reference unit) is set in H05.05. The sign of the setpoint of H05.05 determines the motor direction of rotation.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.05	2005-06h	Step size	-9999 to +9999	50	Reference unit	At stop	"H05_en.05" on page 434

- Step reference
  To use the step reference as the position reference source, assign FunIN.20 (PosStep, step reference enable) to a certain DI of the drive, and set the active logic of this DI.

  ☆ Related parameters:

No.	Name	Function name	Function
FunIN.20	PosStep	Step reference	Servo running state: Active: The position reference defined by H05.05 is input to the servo drive, driving the motor to run. Inactive: Servo motor is in the locked state.

FunIN.20 (Step reference) is edge-triggered. After executing the step position reference, the servo motor enters the locked state. After FunIN.20 becomes active again, the servo motor executes the position reference set in H05.05.

- **Multi-position reference as the position reference source (H05.00 = 2)**

  The servo drive supports multi-position operation. It stores 16 position references. You can set the displacement, maximum running speed, and acceleration/deceleration time of each position. You can also set the time interval and switch mode between positions according to actual requirements. The setting flowchart is shown in the following figure.

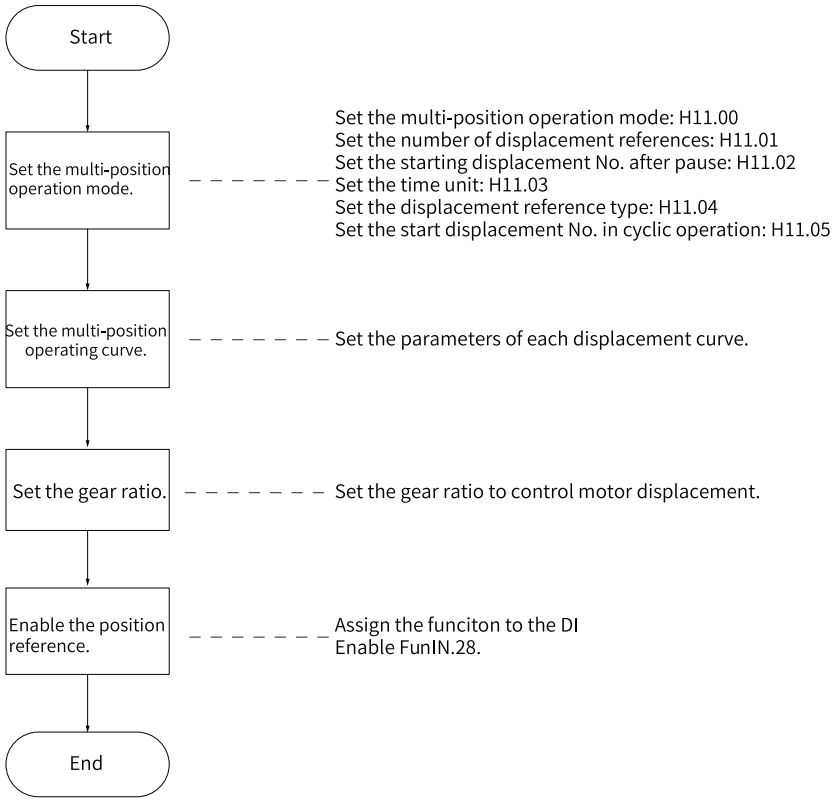


Figure 3-61 Flowchart of setting multi-position reference as the source


  - Multi-position running mode

    ☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H11.00	2011-01h	Multi-position running mode	0: Individual operation (number of displacements defined by H11.01) 1: Cyclic operation (number of displacement defined by H11.01) 2: DI-based operation (defined by DI) 3: Sequential operation 5: Axis-controlled continuous operation	1	-	At stop	"H11_en.00" on page 568
H11.01	2011-02h	Number of position references in multi-position mode	1 to 16	1	-	At stop	"H11_en.01" on page 572
H11.02	2011-03h	Starting position number after pause	0: Continue to execute the remaining positions 1: Start from position 1	0	-	At stop	"H11_en.02" on page 572
H11.03	2011-04h	Waiting time unit	0: ms 1: s	0	-	At stop	"H11_en.03" on page 573
H11.04	2011-05h	Displacement reference type	0: Relative displacement reference 1: Absolute displacement reference	0	-	Real time	"H11_en.04" on page 573
H11.05	2011-06h	Starting position number in sequential operation	0 to 16	0	-	At stop	"H11_en.05" on page 573

1. **Stop after running a single cycle (H11.00 = 0)**

Table 3–9 Description of individual operation

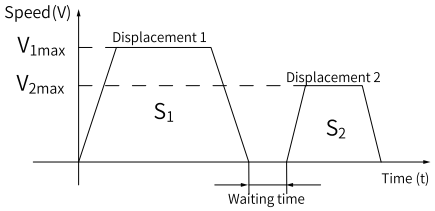
Mode description	Operating curve
• The drive stops after one cycle of operation. • The drive switches to the next position automatically. • The time interval between positions can be set as needed. • The PoslnSen (multi-position reference enable) signal is level-triggered.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds S_1 , S_2 : displacements of 1st and 2nd positions • The positioning completed signal is active after each displacement is reached. • If the PoslnSen signal is switched off during running, the servo drive discards the uncompleted displacement and stops. After the stop process is completed, the positioning completion signal is active. • After the PoslnSen signal is enabled again, the drive executes the displacement defined by H11.02. • If the S-ON signal is switched off during operation, the motor stops as defined by H02.05 (Stop mode at S-ON OFF). The COIN (positioning completed) signal is deactivated after the motor stops. • When a certain displacement is in progress, the logic change of the DI assigned with FunIN.27 (PosDirSel) does not affect the operating direction in this displacement.

★Terms:

A complete operation cycle covers all the position references defined by H11.01.


2. **Cyclic operation (H11.00 = 1)**

Table 3–10 Description of cyclic operation

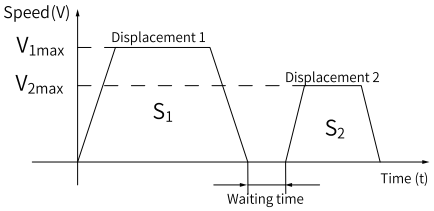Mode description	Operating curve
• The drive starts from position 1 again after each cycle of operation. • The drive switches to the next position automatically. • The time interval between positions can be set as needed. • The cyclic operation mode remains active when the FunIN.28 (Multi-position reference enable) is active. • The PoslnSen (multi-position reference enable) signal is level-triggered.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds S_1 , S_2 : displacements of 1st and 2nd positions • The positioning completed signal is active after each displacement is reached. • If the PosInsen signal is switched off during operation, the drive discards the unfinished displacement and stops. The COIN (positioning completed) signal is activated after the drive stops. • After the PoslnSen signal is enabled again, the drive executes the displacement defined by H11.02. • If the S-ON signal is switched off during operation, the motor stops as defined by H02.05 (Stop mode at S-ON OFF). The COIN (positioning completed) signal is deactivated after the motor stops. • When a certain displacement is in progress, the logic change of the DI assigned with FunIN.27 (PosDirSel) does not affect the operating direction in this displacement.

3. **DI-based operation (H11.00 = 2)**

Table 3–11 Descriptions of DI-based operation

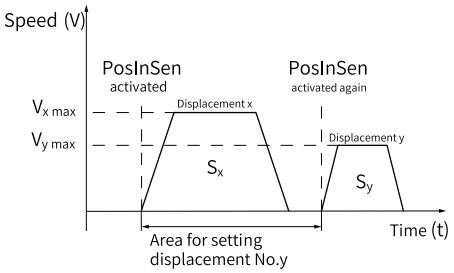Mode description	Operating curve
• When the servo drive runs the current position, you can set the next position No. After the position reference of the current number is completed, the servo motor stops. After the PoslnSen (position reference enable) signal is enabled again, the present displacement will be executed. • The speed No. is determined by the DI logic. • The time internal between positions is determined by the command delay of the host controller. • The PoslnSen (multi-position reference enable) signal is edge-triggered.	 V_{xmax} , V_{ymax} : maximum operating speeds at position x and position y S_x , S_y : displacements of xth and yth positions • The positioning completed signal is active after each displacement is reached. • If the PosInsen (multi-position reference enable) signal is switched off during operation, the drive continues to execute the unfinished displacement and outputs the COIN (positioning completed) signal. • The position No. is switched over according to the following sequence: a. Wait until displacement x is done executing before switching the displacement number. b. When displacement x is in progress or done, switch off the PoslnSen (multi-position reference enable) signal first, and then change the displacement No. from x to y. If x = y, the drive executes displacement x again. c. After displacement x is done executing, switch on the PoslnSen (multi-position reference enable) signal again to make the drive execute displacement y. • If the S-ON signal is switched off during operation, the motor stops as defined by H02.05 (Stop mode at S-ON OFF). The COIN (positioning completed) signal is deactivated after the motor stops. • When a certain displacement is in progress, the logic change of the DI assigned with FunIN.27 (PosDirSel) does not affect the operating direction in this displacement.

In multi-position operation mode, assign four DIs with FunIN.6 to FunIN.9 respectively, and set the active logic of these DIs.

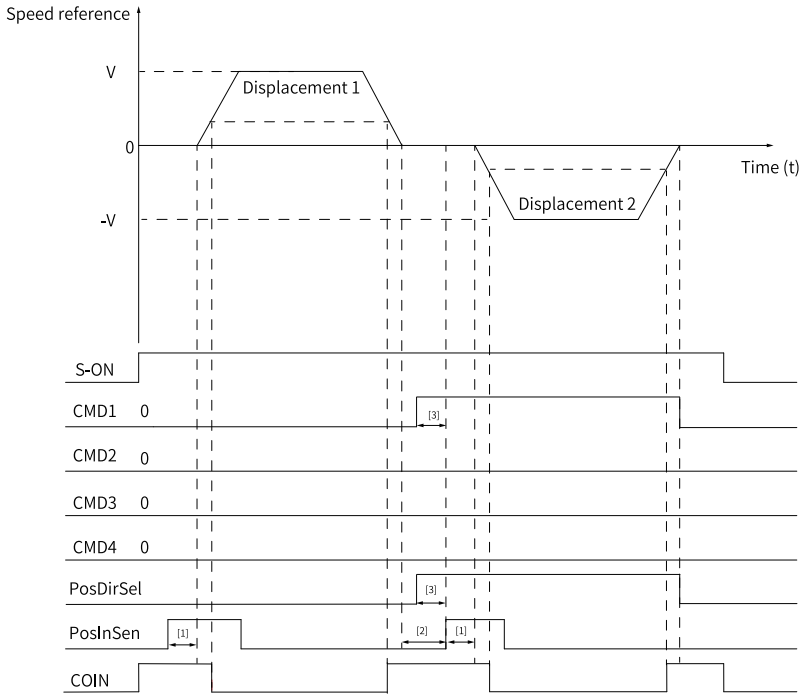


Figure 3-62 Multi-position time sequence

Note

- [1]: The PosInSen signal is edge-triggered. The minimum signal widths required by the normal DI and high-speed DI are 3 ms and 0.25 ms respectively.
- [2]: The area for switching the displacement number, which refers to the interval that starts from the time when the last position reference is transmitted to the time when the next PosInSen (multi-position reference enable) signal is activated again.
- [3]: When a normal DI is used, an effective signal width of 0.125 ms must be maintained.

☆ Related parameters:

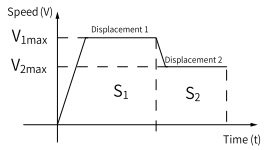
No.	Name	Function name	Function
FunIN.6	CMD1	Multi-reference switchover 1	The position No. is a 4-bit binary. The relationship between the position No. and CMD1 to CMD4 is shown in *"Table 3-12" on page 98*. The DI terminal logic is level-triggered. The signal is 1 when the input level is active, and 0 when the input level is inactive.
FunIN.7	CMD2	Multi-reference switchover 2	
FunIN.8	CMD3	Multi-reference switchover 3	
FunIN.9	CMD4	Multi-reference switchover 4	

Table 3–12 Relationship between the position No. and CMD1 to CMD4

CMD4	CMD3	CMD2	CMD1	Segment No.
0	0	0	0	1
0	0	0	1	2
...				
1	1	1	1	16

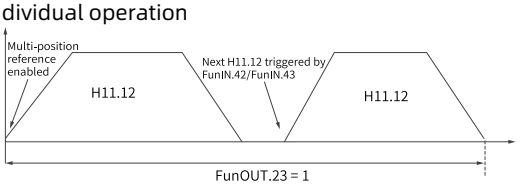
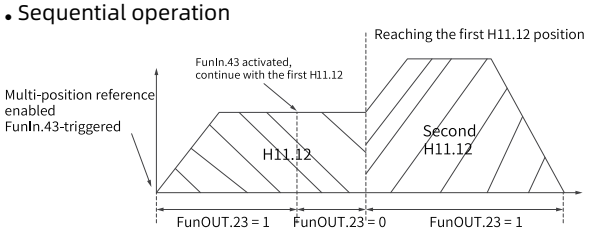
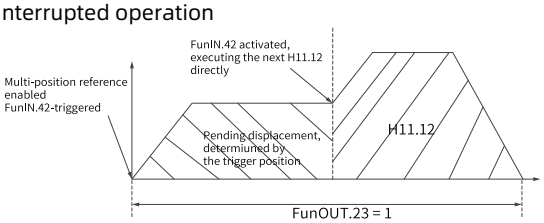
4. **Sequential operation (H11.00 = 3)**

Table 3–13 Description of sequential operation

Mode description	Operating curve
• The drive stops after one cycle of operation. • (H11.05 = 0 or H11.05 > H11.01). • The starting position after the first cycle of operation is defined by H11.05. • The drive switches to the next position automatically. • There is no waiting time between positions. • The PoslnSen (multi-position reference enable) signal is level-triggered.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds S_1 , S_2 : displacements of 1st and 2nd positions • The positioning completed signal is active after each displacement is reached. • If the PosInsen signal is switched off during operation, the drive discards the unfinished displacement and stops. The COIN (positioning completed) signal is activated after the drive stops. • After the PoslnSen signal is enabled again, the drive executes the displacement defined by H11.02. • If the S-ON signal is switched off during operation, the motor stops as defined by H02.05 (Stop mode at S-ON OFF). The COIN (positioning completed) signal is deactivated after the motor stops. • When a certain displacement is in progress, the logic change of the DI assigned with FunIN.27 (PosDirSel) does not affect the operating direction in this displacement.

5. **Axis-controlled continuous operation (H11.00 = 5)**

Table 3–14 Description of axis-controlled continuous operation

Mode description	Operating curve
• The drive executes only one displacement. • The individual operation mode, sequential operation mode, and interrupted operation mode are included. • The PoslnSen (multi-position reference enable) signal is level-triggered.	• Individual operation  • The PoslnSen (multi-position reference enable) signal is triggered only once (FunIN.43/42 triggered later). The drive stops after executing the distance defined by H11.12. • Sequential operation  • The PoslnSen (multi-position reference enable) signal is triggered only once. Write H11.12 again and activate FunIN.43 when the distance defined by the first H11.12 is still in progress.• After receiving the new distance (or speed), which is the second H11.12, the servo drive continues executing the first H11.12 until the distance defined by the first H11.12 is reached. Then, it starts to execute the second H11.12 directly. The travel distance therefore is the sum of the first H11.12 and the second H11.12. • Interrupted operation  • The PoslnSen (multi-position reference enable) signal is triggered only once. Write H11.12 (such as 1000000) again and activate FunIN.42 when the first H11.12 (such as 9000000) is still in progress. After receiving the new distance (or speed), which is the second H11.12, the drive stops executing the first H11.12 and turns to executing the second H11.12.

☆ Related parameters:

No.	Name	Function name	Function
FunIN.42	MultiBlockTrig	Axis control command executed immediately	Active: Newly written command activated immediately Inactive: Newly written command not activated
FunIN.43	MultiBlockWr	Axis control command not executed immediately	Active: Newly written command activated after current displacement is done executing Inactive: Newly written command not activated
FunOUT.23	WrNextBlockEn	Command input	Active: Next command input allowed Inactive: Next command input inhibited

- Setting the multi-position operating curve

  The servo drive supports 16 position references. You can set the displacement, maximum running speed, and acceleration/deceleration time of each position. The following descriptions take the 1st position as an example.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H11.12	2011-0Dh	Displacement of position 1	-1073741824 to 1073741824	10000	Reference unit	Real time	"H11_en.12" on page 574
H11.14	2011-0Fh	Maximum running speed of position 1	1 to 10000	200	rpm	Real time	"H11_en.14" on page 574
H11.15	2011-10h	Acceleration/ Deceleration time of position 1	0 to 65535	10	ms	Real time	"H11_en.15" on page 575
H11.16	2011-11h	Waiting time after completion of position 1	0 to 10000	10	ms(s)	Real time	"H11_en.16" on page 575

The actual motor running curve according to the preceding setting is shown in the following figure.

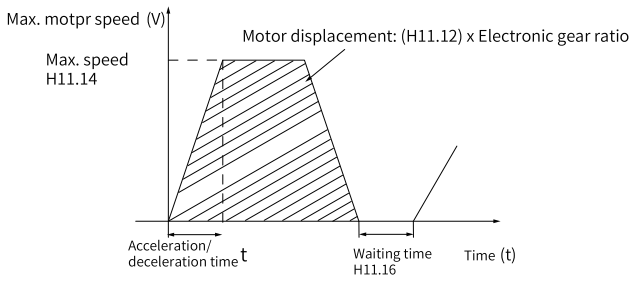


Figure 3-63 Motor running curve of 1st displacement

Actual time (t) taken to accelerate to H11.14:

$$t = \frac{(H11.14)}{1000} \times (H11.15)$$

For parameter settings of other 15 displacements, see Chapter "Parameter List".

- Setting PosInSen (multi-position reference enable) mode
  To use the multi-position reference as the position reference source, assign FunIN.28 (PosInSen, multi-position reference enable) to a certain DI of the drive, and set the active logic of this DI.

  ☆ Related function No.:

No.	Name	Function name	Function
FunIN.28	PosInSen	Multi-position reference signal enable	Active: The motor executes the multi-position reference. Inactive: Servo motor is in the locked state. Note: • When H11.00 is set to 0, 1, or 3, the logic of the DI assigned with the PosInSen signal is level-triggered. • When H11.00 is set to 2, the logic of the DI assigned with the PosInSen signal is edge-triggered.

Position reference direction selection

A DI terminal is used to change the position reference direction and further the motor direction. Assign FunIN.27 (PosDirSel, position reference direction) to a DI of the drive, and set the active logic of this DI.

☆ Related parameters:

No.	Name	Function name	Function
FunIN.27	PosDirSel	Position reference direction selection	Inactive: Actual position reference direction same as the set direction. Active: Actual position reference direction opposite to the set direction.

The actual motor direction is related to the rotating direction in H02.02, positive/negative of position reference, position reference direction (FunIN.27).

Table 3–15 Motor rotation direction

H02.02	Sign of position reference	FunIN.27	Direction of motor rotation
0	+	Inactive	Counterclockwise
0	+	Active	Clockwise
0	-	Inactive	Clockwise
0	-	Active	Counterclockwise
1	+	Inactive	Clockwise
1	+	Active	Counterclockwise
1	-	Inactive	Counterclockwise
1	-	Active	Clockwise

Position reference inhibited

The servo drive provides the position reference inhibited function (FunIN.13: Inhibit) and pulse input inhibited function (FunIN.37:PulseInhibit).

- Position reference inhibited function
  The drive sets all the position references to 0, which means it does not respond to any internal or external position references, and the motor is in the locked state in position control mode. In this case, the servo drive can be switched to other control modes.

  To use FunIN.13(Inhibit, position reference), assign FunIN.13 to a certain DI and set the active logic of this DI. It is recommended to use the high-speed DI (DI7 or DI8) terminal.

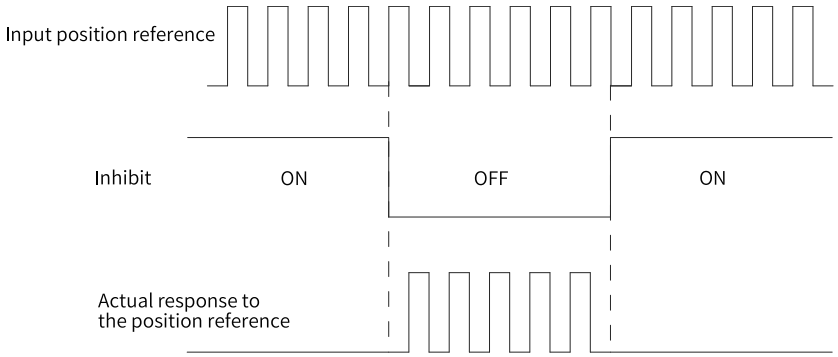


Figure 3-64 Waveform example of position reference inhibited

☆ Related function No.:

No.	Name	Function name	Function
FunIN.13	Inhibit	Position reference inhibited	Inactive: The drive responds to position references in position control mode. Active: The drive does not respond to any internal or external position references in position control modes.

- Pulse input inhibited
  The drive sets all the pulse references to 0, which means it does not respond to any pulse references inputted from the pulse input terminal, but it can respond to position references in other forms in position control mode. In this case, the servo drive can be switched to other control modes.

  When pulse reference inhibition is activated in position control mode, no other forms of position references are used and pulse signals are input in the pulse input terminal, the input position reference counter (H0b.13) stops counting.

  If position references in other forms are used in position control mode, the input position reference counter (H0b.13) continues counting the these position references, and these references will be executed.

  To use this function, configure a DI terminal of the servo drive with function 37 (FunIN.37: PulseInhibit, pulse input inhibited), and set the terminal logic. It is recommended to use the high-speed DI (DI7 or DI8) terminal.

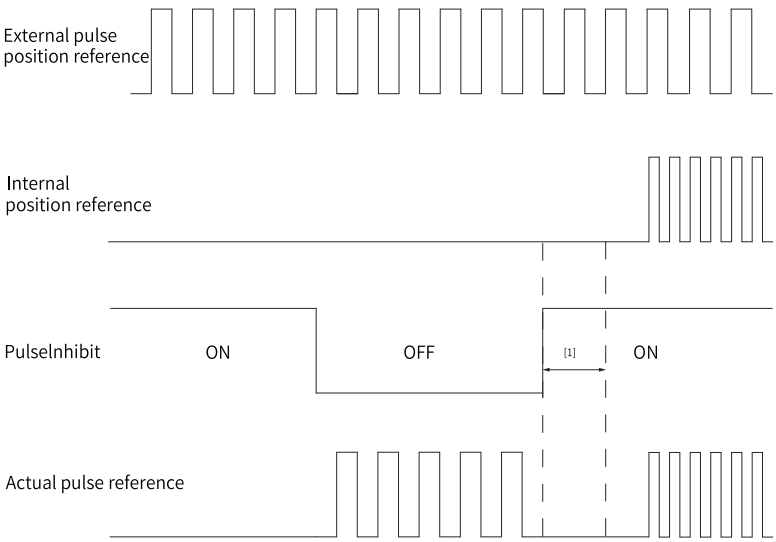


Figure 3-65 Waveform example for pulse reference inhibited

Note

[1] When a DI is used, keep an interval of at least 0.5 ms from the moment the DI logic is deactivated to the moment the internal position reference is inputted.

☆ Related function No.:

No.	Name	Function name	Function
FunIN.37	PulseInhibit	Pulse reference inhibited	The position reference source is pulse reference (H05.00 = 0) in position control mode: Inactive: The drive responds to pulse references. Active: The drive does not respond to pulse references.

3.9.3 Reference Frequency Division/Multiplication (Electronic Gear Ratio)

Definition

In position control mode, the input position reference (reference unit) defines the load displacement, and the motor position reference (encoder unit) defines the motor displacement. The electronic gear ratio is used to establish a proportional relationship between the input position reference and motor position reference.

The electronic gear ratio, which allows frequency division (electronic gear ratio < 1) or frequency multiplication (electronic gear ratio > 1), can be used to set the actual displacement corresponding to the input position reference per reference unit, or used to increase the position reference frequency when the motor speed needed cannot be fulfilled due to limited pulse output frequency of the host controller or limited parameter value range.

★Terms:

- Reference unit: the minimum identifiable value input from the host controller to the drive.

- Encoder unit: the value of the input reference multiplied/divided by the electronic gear ratio.

Procedure for setting the electronic gear ratio

The electronic gear ratio varies with the mechanical structure. Set it according to the following flowchart.

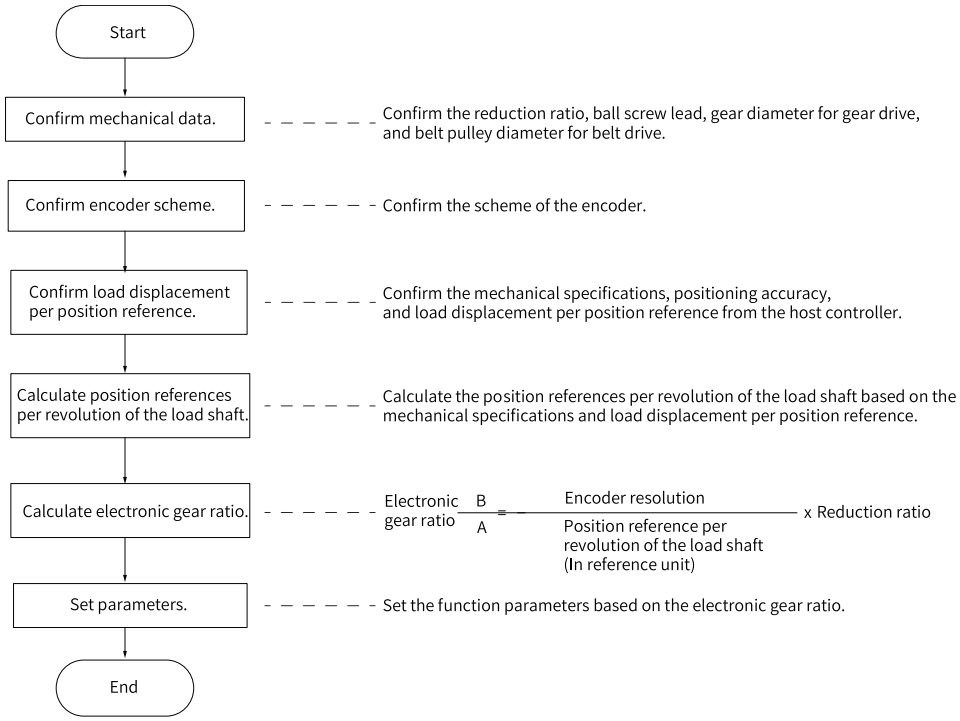


Figure 3-66 Procedure for setting the electronic gear ratio

See the following figure for how to set parameters.

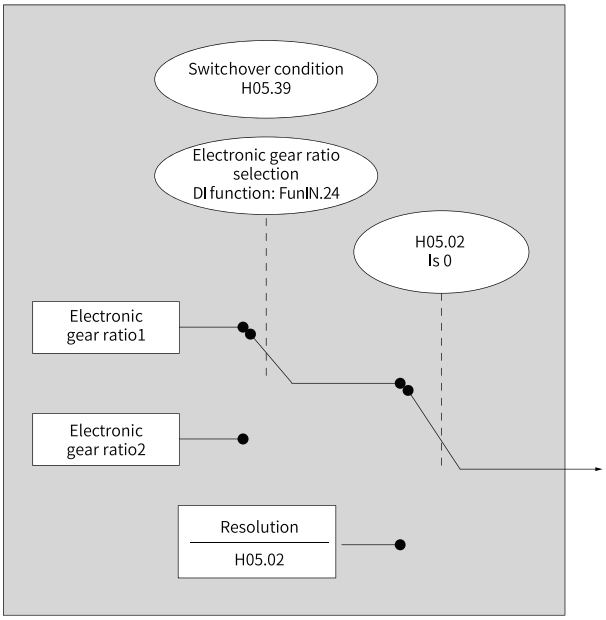


Figure 3-67 Procedure for setting the electronic gear ratio

Note

When the setpoint of H05.02 (Pulses per revolution) is not 0, the following formula applies:

Electronic gear ratio $\frac{B}{A} = \frac{\text{Resolution}}{\text{H05.02}}$

. When H05-02 is set to 0, electronic gear ratios 1 and 2 are invalid.

Related parameters

- Setting the electronic gear ratio parameters

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H05.02	2005-03h	Number of position references per motor revolution	0 to 4294967295	0	PPR	At stop	"H05_en.02" on page 433
H05.07	2005-08h	Electronic gear ratio 1 (numerator)	1 to 1073741824	8388608	-	Real time	"H05_en.07" on page 435
H05.09	2005-0Ah	Electronic gear ratio 1 (denominator)	1 to 1073741824	10000	-	Real time	"H05_en.09" on page 435
H05.11	2005-0Ch	Electronic gear ratio 2 (numerator)	1 to 1073741824	8388608	-	Real time	"H05_en.11" on page 435
H05.13	2005-0Eh	Electronic gear ratio 2 (denominator)	1 to 1073741824	10000	-	Real time	"H05_en.13" on page 435

- Setting the electronic gear ratio switchover condition

Caution

The motor speed may fluctuate significantly if the electronic gear ratio changes sharply in real time or electronic gear ratio 1 differs greatly from electronic gear ratio 2. In this case, set H05.04 (First-order low-pass filter time constant) properly to allow smooth switchover of the position reference.

  - When H05.02 = 0, electronic gear ratio switchover is supported. Determine whether to switch between electronic gear ratios 1 and 2 based on mechanical conditions and set the condition for switching the electronic gear ratio.
  - Only one electronic gear ratio is effective at a moment.
  - The effective time of real-time change on the current electronic gear ratio is also restricted by the switchover conditions.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H05.39	2005-28h	Electronic gear ratio switchover condition	0: Switchover after position reference is kept 0 for 2.5 ms 1: Switchover in real time	0	-	At stop	"H05_en.39" on page 447

Assign FunIN.24 (GEAR_SEL, electronic gear ratio selection) to a certain DI and set the active logic of this DI.

☆ Related parameters:

No.	Name	Function name	Function
FunIN.24	GEAR_SEL	Electronic gear ratio switchover	Inactive: Electronic gear ratio 1 used in position control mode Active: Electronic gear ratio 2 used in position control mode

See the following table for the electronic gear ratio used by the servo drive.

H05.02	H05.39	Level of DI terminal with FunIN.24	Electronic gear ratio
0	0	Inactive	$\frac{H05.07}{H05.09}$
		Active	$\frac{H05.11}{H05.13}$
	1	Inactive	$\frac{H05.07}{H05.09}$
		Active	$\frac{H05.11}{H05.13}$
1 to 1048576	-		-

Resolution of serial encoder = 2^n(P/r), where "n" is the bits of the serial encoder.

For example, the resolution of a 23-bit serial encoder is 2^{23} PPR, which is 8388608 PPR.

- Calculation of electronic gear ratio

The following figure shows the relationship among the position reference (reference unit), load displacement, and electronic gear ratio.

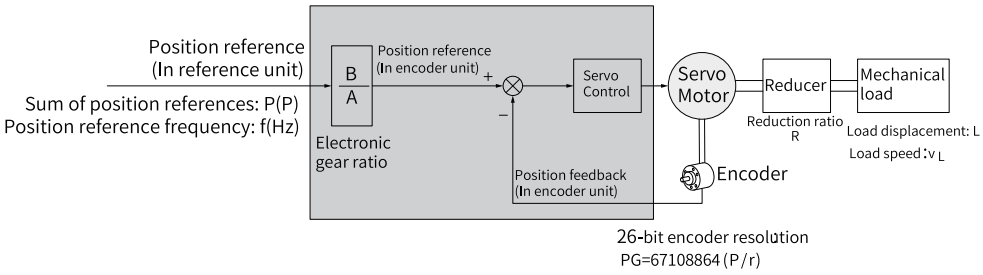


Figure 3-68 Relationship among the position reference (reference unit), load displacement, and electronic gear ratio

Take the ball screw in linear motion as an example, with P_B (mm) as the screw lead, P_G as the encoder resolution, and R as the reduction ratio of the reducer.

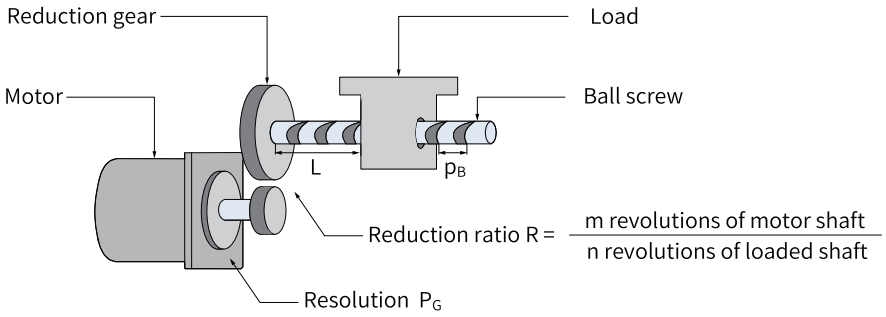


Figure 3-69 Ball screw

- When the load displacement per pulse ΔL (mm) known:

  When the mechanical displacement is ΔL, correspondingly the load shaft rotates $\frac{\Delta L}{p_B}$ revolutions and the motor shaft rotates $\frac{\Delta L}{p_B} \times R$ revolutions. Then:

  $$1 \times \frac{B}{A} = \frac{\Delta L}{p_B} \times R \times P_G$$

  Therefore, the electronic gear ratio is:

  $$\frac{B}{A} = \frac{\Delta L}{p_B} \times R \times P_G$$

- When the load displacement L (mm) and position reference sum P (P) are known:

  When the mechanical displacement is L, correspondingly the load shaft rotates $\frac{L}{p_B}$ revolutions and the motor shaft rotates $\frac{L}{p_B} \times R$ revolutions. Then:

  $$P \times \frac{B}{A} = \frac{L}{p_B} \times R \times P_G$$

  Therefore, the electronic gear ratio is:

  $$\frac{B}{A} = \frac{L}{p_B} \times R \times P_G \times \frac{1}{P}$$

- When the load moving speed V_L (mm/s) and position reference frequency f (Hz) are known:

  Load shaft speed: $\frac{v_L}{p_B}$ (r/s)

  Motor speed: $v_M = \frac{v_L}{p_B} \times R$ (r/s)

  Relationship between position reference frequency, electronic gear ratio, and motor speed:




  $$f \times \frac{B}{A} = v_M \times P_G$$

  Therefore, the electronic gear ratio is:

  $$\frac{B}{A} = \frac{v_M \times P_G}{f}$$

- Example for setting the electronic gear ratio

Table 3–16 Electronic gear ratio setting example

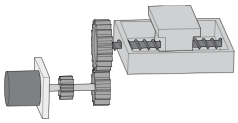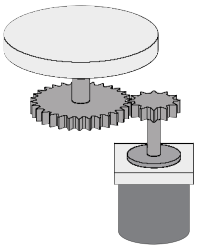Item	Name	Mechanical structure		
		Transmission with ball screw	Transmission with belt pulley	Rotary load
	-			
1	Mechanical parameters	Reduction ratio R: 1:1 Screw pitch: 0.01 m	Reduction ratio R: 5:1 Belt pulley diameter: 0.2 m (Circumference of belt pulley): 0.628 m	Reduction ratio (R): 10/1 Load rotation angle when the load axis rotates one revolution: 360°
2	Encoder resolution	23 bit = 8388608 P/r	23 bit = 8388608 P/r	23 bit = 8388608 P/r
3	Load displacement per position reference (reference unit)	0.0001 m	0.000005 m	0.01°
4	Position references per revolution of the load shaft (reference)	$\frac{0.01}{0.0001} = 100$	$\frac{0.628}{0.000005} = 125600$	$\frac{360}{0.01} = 36000$
5	Calculate	$\frac{B}{A} = \frac{8388608}{100} \times \frac{1}{1}$	$\frac{B}{A} = \frac{8388608}{125600} \times \frac{5}{1}$	$\frac{B}{A} = \frac{8388608}{36000} \times \frac{10}{1}$
6	Setting	H05.07 = 8388608 H05.09=100	H05.07=41943040 H05.09=125600	H05.07=83886080 H05.09=36000

3.9.4 Position reference filter

Position reference filter serves to filter the position references (in encoder unit) multiplied or divided by the electronic gear ratio, which includes first-order low-pass filtering and moving average filtering. It involves the first-order filter and moving average filter.

It is applicable to the following conditions:

- The acceleration/deceleration process is not performed on the position references sent from the host controller.
- The pulse reference frequency is low.
- The electronic gear ratio is larger than 10.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H05.04	2005-05h	First-order low-pass filter time constant	0.0 to 6553.5	0.0	ms	At stop	"H05_en.04" on page 434
H05.06	2005-07h	Moving average filter time constant 1	0.0 to 128.0	0.0	ms	At stop	"H05_en.06" on page 434

Note

This function does not affect the displacement value (position reference sum).

If the setting is excessive, the response delay may be too large. Set the filter time constant based on actual conditions.

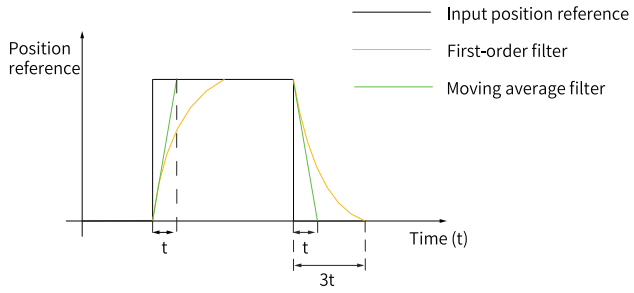


Figure 3-70 First-order filter and moving average filter of rectangular position reference

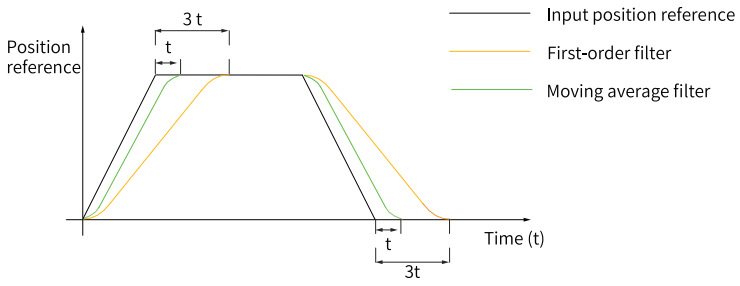


Figure 3-71 First-order filter and moving average filter of trapezoid position reference

3.9.5 Position Deviation Clearance

Position deviation = Position reference sum – Position feedback sum

This function enables the drive to clear the position deviation when certain conditions are met (H05.16).

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.16	2005-11h	Clear action selection	0: Position deviation cleared upon S-OFF and fault 1: Position deviation cleared upon S-OFF and fault 2: Position deviation cleared upon non-operational state or active DI function 35	0	-	At stop	"H05_en.16" on page 438





When H05.16 = 2, set a DI terminal of the servo drive with function 35 (FunIN.35:ClrPosErr, position deviation cleared), and set the terminal logic. It is recommended to use the high-speed DI (DI7 or DI8) terminal.

☆ Related parameters:

No.	Name	Function name	Function
FunIN.35	ClrPosErr	Position deviation cleared	Active: Position deviation cleared Invalid: Position deviation not cleared

Set the function as follows:

Table 3–17 Position deviation clear

Setpoint	Clear condition	Clear time
H05.16=0	Position deviation is cleared upon S-OFF or in the non-operational state.	
H05.16=1	Position deviation is cleared upon S-OFF or a fault.	
H05.16=2	Position deviation is cleared upon S-OFF or active DI function 35 (ClrPosErr, clear position deviation).	 (Rising edge-triggered)
		 (Falling edge-triggered)

3.9.6 Frequency Division Output

Caution

It is recommended to use the active edge output by the Z signal in cases where a high precision frequency-division output of Z signal is required.

Parameter	bit	Description
H05.41	Bit 0: Frequency-division Z signal output polarity	0: Positive (falling edge-triggered) 1: Negative (rising edge-triggered)
	Bit 1: OCZ signal output polarity	0: Positive (falling edge-triggered) 1: Negative (rising edge-triggered)

The frequency-division output function outputs the position reference pulses or encoder feedback position references as A/B phase quadrature pulses.

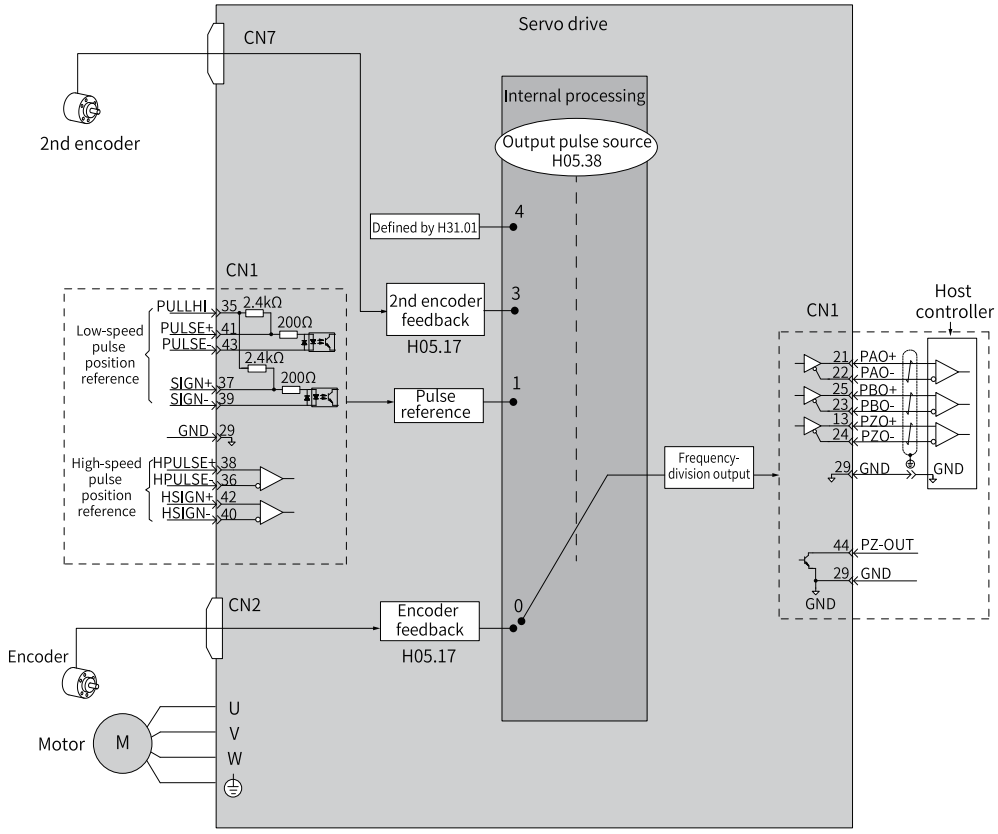


Figure 3-72 Schematic diagram of frequency-division output

- It is recommended to use synchronous output (H05.38 = 1) of pulse references in case of synchronous tracing of multi-axis servo pulses. When the host controller is used for closed-loop feedback, it is recommended to use encoder frequency-division output (H05.38 = 0).
- When the host controller provides closed-loop feedback, it is recommended to use encoder frequency-division output (H05.38 = 3). When the host controller provides a set output frequency, it is recommended to use frequency-division output (H05.38 = 4).

The servo drive provides one frequency-division terminal:









- Phase A pulses: PAO+ and PAO-, differential output, maximum output pulse frequency: 4 Mpps
- Phase B pulses: PBO+ and PBO-, differential output, maximum output pulse frequency: 4 Mpps
- Phase Z pulses: PZO+ and PZO-, differential output, maximum output pulse frequency: 4 Mpps
- PZ-OUT, GND, open-collector output, maximum output pulse frequency 100 kpps

When using the frequency-division output function, set the output pulse source (H05.38), phase (H02.03), resolution (H05.17), and phase Z pulse polarity (H05.41) according to requirements.

When the output source is encoder frequency-division pulse (H05.38 = 0), the motor rotates one revolution and the phase A/B output pulses per motor revolution are determined by H05.17 (Encoder frequency-division pulses). The pulse width (T) of phase A/B is determined by the motor speed. The phase Z, whose width is also T, is synchronized with phase A. The Z signal is output once per motor revolution.

When the output source is set in H31.01 (H05.38 = 4), the output pulse frequency of phase A/B (quadrupled frequency) is determined by H31.01. In this case, no phase Z pulse is output.

Table 3–18 Pulse diagrams of encoder frequency-division (H05.38 = 0)

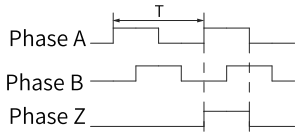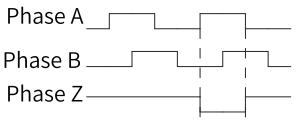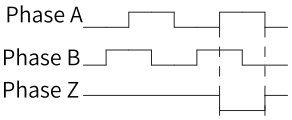H02.03 (Output pulse phase)	H05.41 (Z pulse output polarity)	Pulse output diagram of forward run	Pulse output diagram of reverse run
0	0	 Phase A leads phase B by 90°.	 Phase B leads phase A by 90°.
	1	 Phase A leads phase B by 90°.	 Phase B leads phase A by 90°.
1	0	 Phase B leads phase A by 90°.	 Phase A leads phase B by 90°.
	1	 Phase B leads phase A by 90°.	 Phase A leads phase B by 90°.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H02.03	2002-18h	Resistance of built-in braking resistor	0 to 65535	50	Ω	Read-only	"H02_en.03" on page 391
H05.17	2005-12h	Number of encoder frequency-division pulses	0 to 4194303	2500	PPR	At stop	"H05_en.17" on page 438
H05.38	2005-27h	Frequency-division output source	P-type models: 0: Encoder frequency-division output 1: Pulse reference synchronous output 2: Frequency-division output inhibited 3: Second encoder frequency-division output 4: H31.01 N-type models: 0: Encoder frequency-division output 2: Frequency-division output inhibited 3: Second encoder frequency-division output 4: H31.01	0	-	Real time	"H05_en.38" on page 446
H05.41	2005-2Ah	Z pulse output polarity	bit0: Frequency-division Z output polarity 0: Positive (high level upon active Z pulse) 1: Negative (low level upon active Z pulse) bit1: OCZ output polarity 0: Positive (high level upon active Z pulse) 1: Negative (low level upon active Z pulse) bit2: Inner loop probe Z signal source 0: Motor Z signal 1: Frequency-division output Z signal	0x1	-	At stop	"H05_en.41" on page 448

3.9.7 Motion Control Completed, Internal Command Completed, Positioning Completed, Proximity

- "Motion control completed" refers to the completion of command transmission and positioning in the position control mode. In this case, the servo drive outputs a McOK (motion control completed) signal, and the host controller, upon receiving the signal, acknowledges the motion control is done.
- "Internal command completed" refers to the completion of command transmission. In this case, the internal multi-position reference is zero. the servo drive outputs the internal reference completed signal (CmdOk). After receiving this signal, the host controller determines that all multi-position references are sent. Homing completion is not dependent on the completion state of internal commands.

- Positioning completion: When the position deviation fulfills the condition set by users (H05.20), it indicates the positioning in position control mode is completed. Meanwhile, the servo drive outputs positioning completed (COIN) signal, and the host controller, after receiving this signal, confirms the positioning is completed.

The following figure shows the schematic diagram.

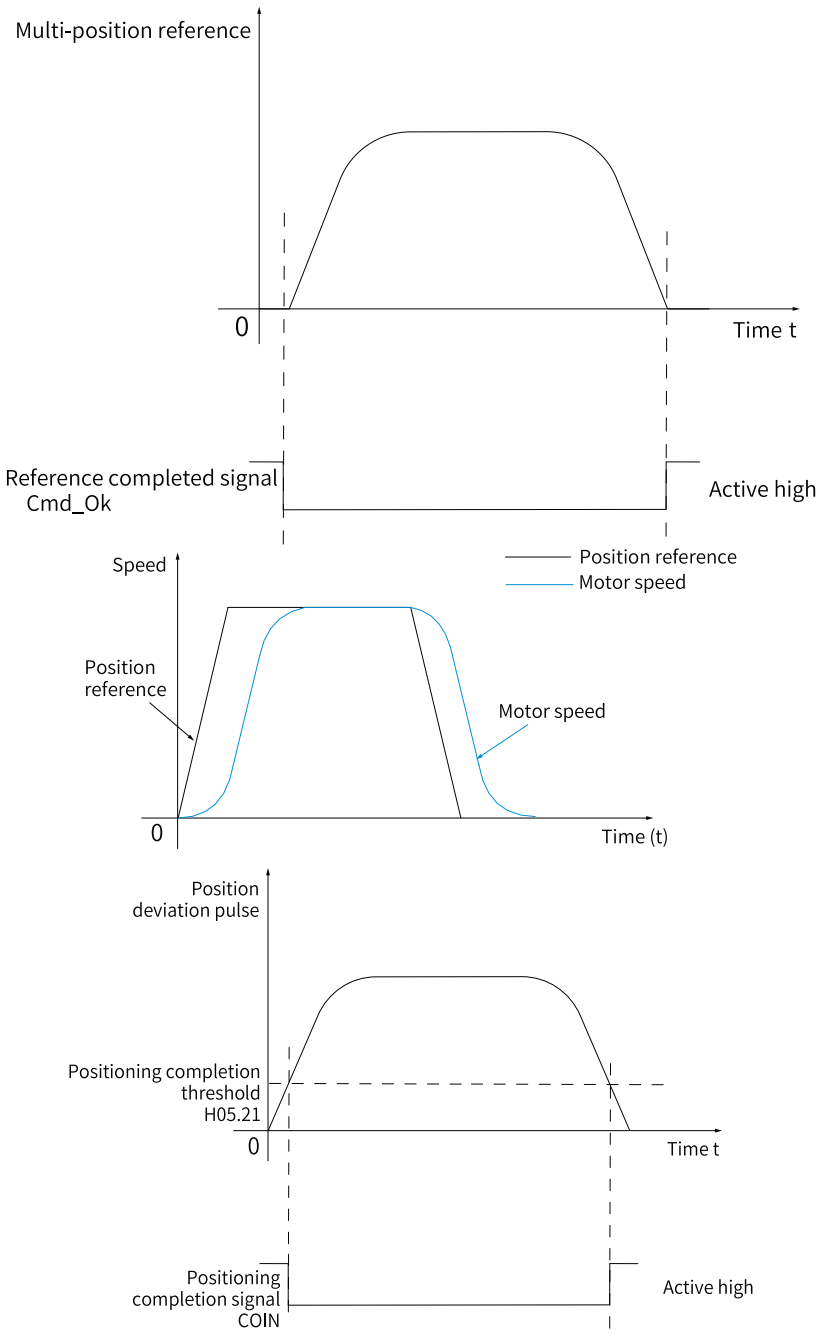


Figure 3-73 Diagram of positioning completed function

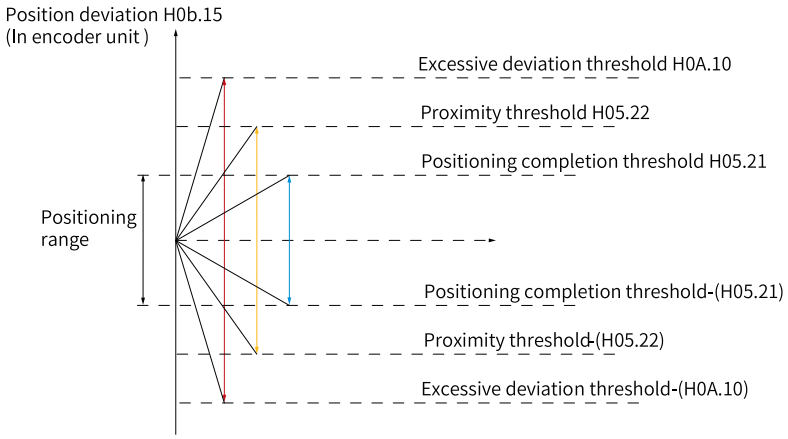
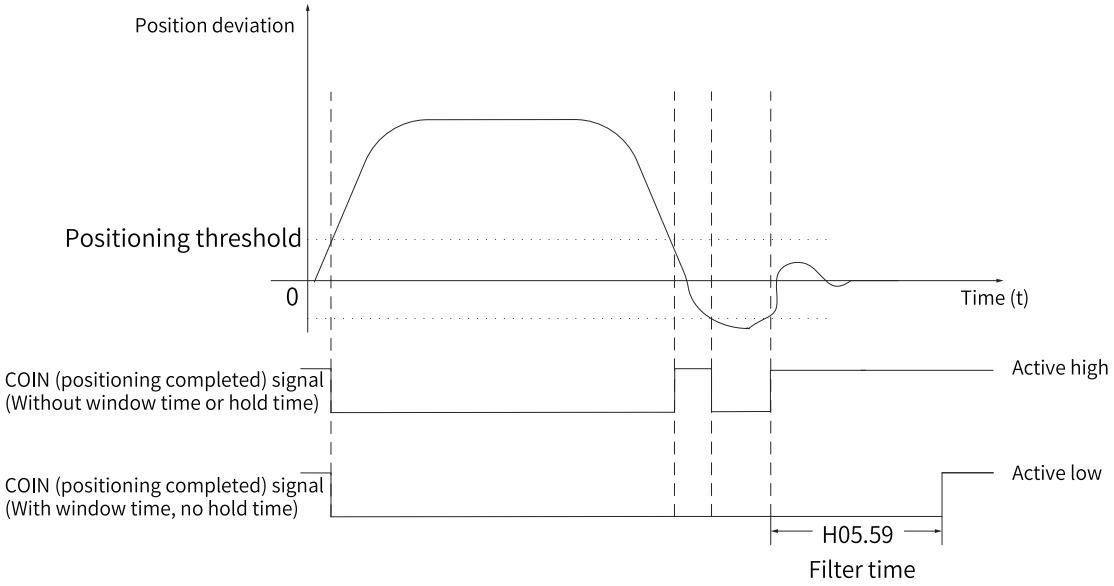


Figure 3-74 Position deviation-related signals

You can set the unit for positioning completed, proximity, and excessive position deviation in H0A.17. When position deviation meets the condition defined by H05.20, the servo drive outputs a NEAR signal to prepare for positioning completed.

Before using the positioning completed or near function, set the output condition, deviation threshold, time window, and holding time. The following figure shows the schematic diagram of positioning completed time window and holding time.



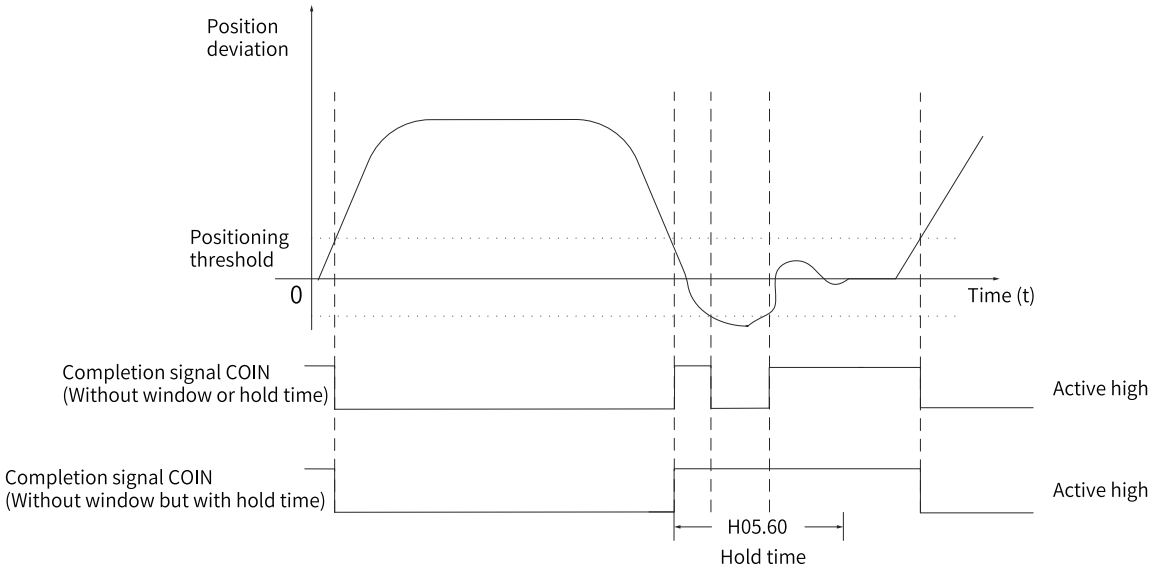


Figure 3-75 Diagram of positioning completed time window and holding time

When the retention function for positioning completed output is used, the value 0 indicates that the positioning completed signal remains active until the moment when the position reference is received for the next time.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H05.20	2005-15h	Condition for positioning completed signal output	0: The positioning completion signal ON is outputted when the absolute value of position deviation is lower than the value of H05.21. 1: The positioning completion signal ON is outputted when the absolute position deviation is lower than the setpoint of H05.21 and the filtered position reference is 0. 2: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21 and the unfiltered position reference is 0. 3: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21 and the unfiltered position reference is 0. If the positioning hold time is within the time defined by H05.60 continuously and the position reference is 0, the positioning completion signal will be output. After the positioning hold time defined by H05.60 elapses, whether the positioning completion signal is outputted depends on the non-filtered position reference and absolute value of position deviation. 4: The positioning completion signal ON is outputted when the absolute position deviation is lower than the setpoint of H05.21 and the filtered position reference is 0. If the positioning hold time is within the time defined by H05.60 continuously and the position reference is 0, the positioning completion signal will be output. After the positioning hold time defined by H05.60 elapses, whether the positioning completion signal is output depends on the filtered position reference and absolute value of position deviation. 5: The positioning completion signal ON is outputted when the non-filtered position reference is 0, the zero speed signal is ON, and the absolute value of position deviation is lower than H05.21. 6: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21, the zero speed signal is ON, and the filtered position reference is 0.	0	-	Real time	"H05_en.20" on page 439

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H05.20	2005-15h	Condition for positioning completed signal output	7: Positioning completion is judged after the delay defined by H05.60 elapses, with unfiltered position reference being 0. The positioning completion signal ON is output when the non-filtered position reference is 0 and the absolute position deviation is lower than H05.21. 8: Positioning completion is judged after the delay defined by H05.60 elapses and the filtered position reference is 0. The positioning completion signal ON is output when the filtered position reference is 0 and the absolute position deviation is lower than H05.21. 9: Positioning completion is judged after the delay defined by H05.60 elapses when the non-filtered position reference is 0 and the absolute value of position deviation is lower than H05.21. The positioning completion signal ON is output when the non-filtered position reference is 0 and the absolute position deviation is lower than H05.21. 10: Positioning completion is judged after the delay defined by H05.60 elapses when the filtered position reference is 0 and absolute position deviation is lower than H05.21. The positioning completion signal ON is output when the filtered position reference is 0 and the absolute position deviation is lower than H05.21.	0	-	Real time	
H05.21	2005-16h	Threshold of positioning completion	1 to 65535	5872	Encoder unit	Real time	"H05_en.21" on page 441
H05.22	2005-17h	Threshold of proximity	1 to 65535	65535	Encoder unit	Real time	"H05_en.22" on page 442
H05.59	2005-3Ch	Positioning window time	0 to 30000	0	ms	Real time	"H05_en.59" on page 453

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H05.60	2005-3Dh	Hold time of positioning completion	0 to 30000	0	ms	Real time	"H05_en.60" on page 453
H0A.17	200 A-12h	Reference pulse selection	0: Pulse unit 1: Reference unit	0	-	At stop	"H0A_en.17" on page 516

Caution

- Set H05.22 to a value higher than H05.21 in general cases.
- H05.21 only reflects the absolute threshold when the positioning completed signal is active. It is not related to the positioning precision.
- An excessively high speed feedforward gain (H08.19) or low-speed operation reduces the absolute position deviation. In this case, the COIN (positioning completed) signal may keep active if H05.21 is set to an excessively high value. To improve the positioning accuracy, decrease the value of H05.21.
- When H05.21 is set to a low value along with small position deviation, you can change the condition for outputting the COIN (positioning completed) signal in H05.20.
- An inactive S-ON signal deactivates the COIN (positioning completed) signal and NEAR (proximity) signal output.
- The output of position proximity DO is not affected by H05.60 (positioning completion holding time) or H05.59 (positioning window time) and you need not to evaluate the change of the positioning command.

To apply motion control/internal command/positioning completion and the proximity function, assign four DO terminals with FunOUT.24 (McOk, motion control completed), FunOUT.22 (CmdOk, internal command completed), FunOUT.5 (COIN, positioning completed), and FunOUT.6 (NEAR, proximity) respectively, and set the active logic of these terminals.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.60	2005-3Dh	Hold time of positioning completion	0 to 30000	0	ms	Real time	"H05_en.60" on page 453

☆ Related parameters:

No.	Name	Function name	Function
FunOut.5	COIN	Positioning completed	Active: The absolute position deviation meets the threshold defined by H05.21 in position control mode, indicating positioning is done. Invalid: In position control mode, the servo drive is performing positioning.
FunOut.6	NEAR	Positioning almost completed	Active: The absolute position deviation meets the condition defined by H05.22, indicating the servo drive is close to the target position. Invalid: In position control mode, the servo drive is performing positioning.

No.	Name	Function name	Function
FunOUT.22	CmdOk	Internal command completed	Active: The transmission of the multi-position reference or interrupt positioning reference is done in position control mode. Inactive: The transmission of the multi-position reference or interrupt positioning reference is in progress in position control mode.
FunOUT.24	McOk	Motion control completed	Active: The transmission of the multi-position reference or interrupt positioning reference and the positioning process are done in position control mode. Inactive: The transmission of the multi-position reference or interrupt positioning reference or positioning is in progress in position control mode.

3.10 Speed Control Mode

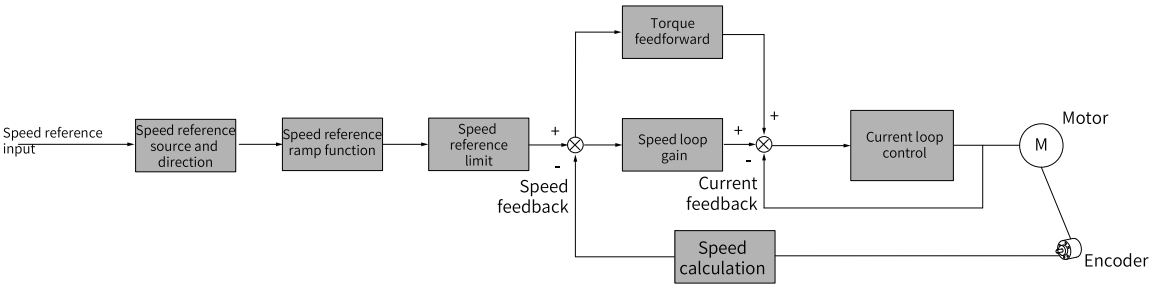


Figure 3-76 Block diagram of speed control

Set H02.00 (Mode selection) to 0 (Speed mode) through the keypad or Inovance servo commissioning software to enable the speed control mode. Set the servo drive parameters based on the mechanical structure and specifications. The following part uses the basic parameter setting to describe the speed control mode.

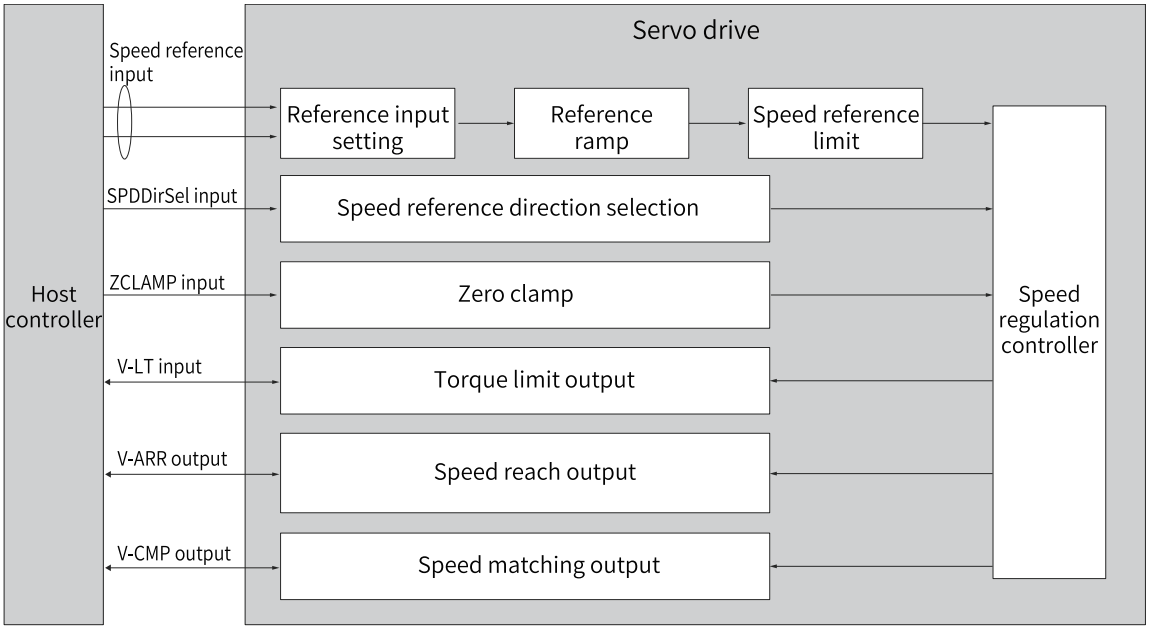


Figure 3-77 Signal exchange between the servo drive and the host controller

3.10.1 Function block diagram

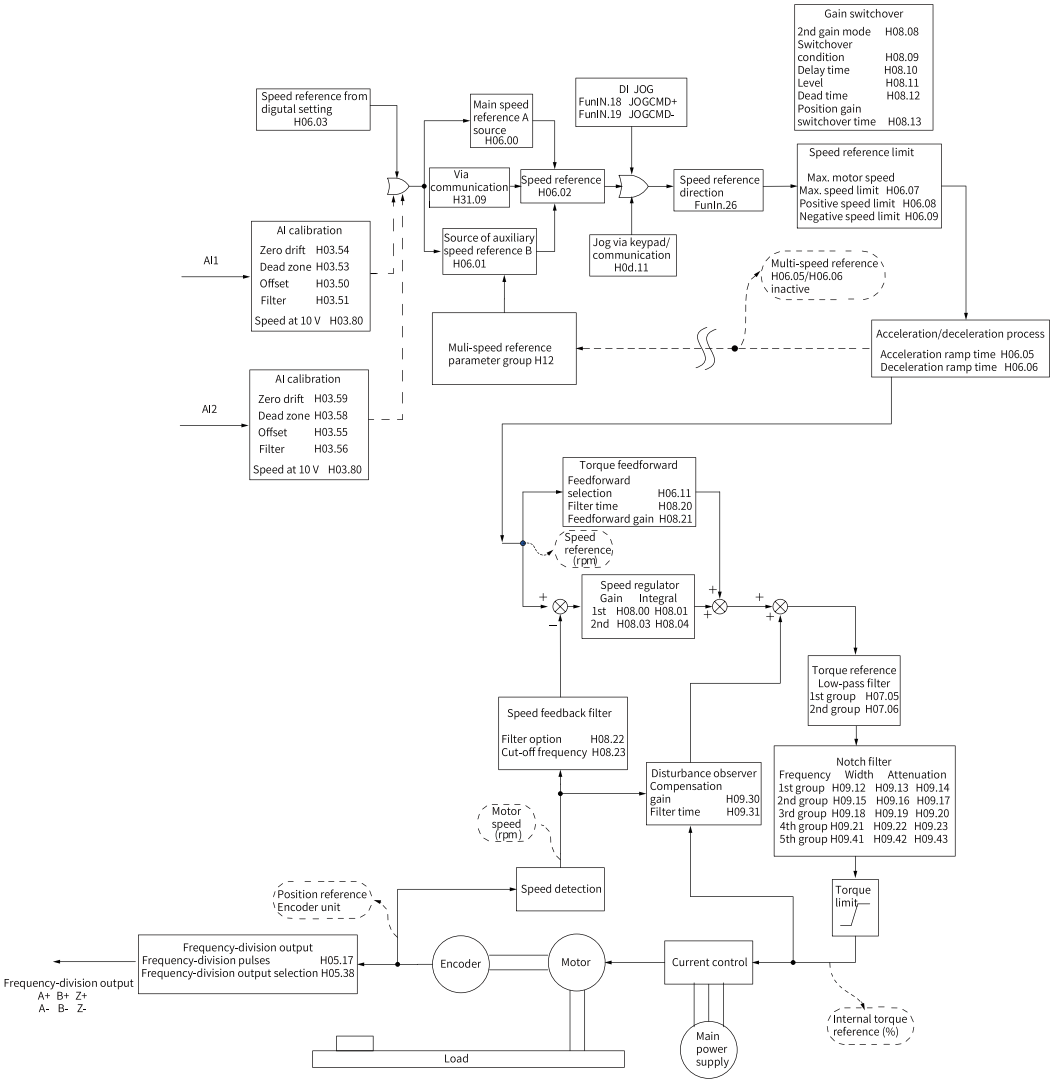


Figure 3-78 Block diagram of speed control parameters

3.10.2 Speed Reference Input

Speed reference source

Five speed reference sources are available in speed control mode, which can be set in H06.02.

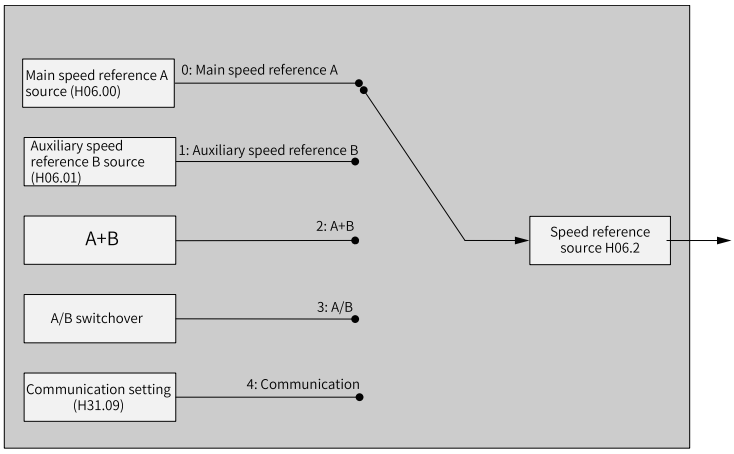


Figure 3-79 Speed reference source

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.02	2006-03h	Speed reference source	0: Source of main speed reference A 1: Source of auxiliary speed reference B 2: A+B 3: Switchover between A and B 4: Communication	0	-	At stop	"H06_en.02" on page 455

- **Source of main speed reference A**

  The sources of main speed reference A include digital setting and analog voltage setting. Digital setting refers to the internal speed reference. Analog voltage setting refers to the external speed reference.

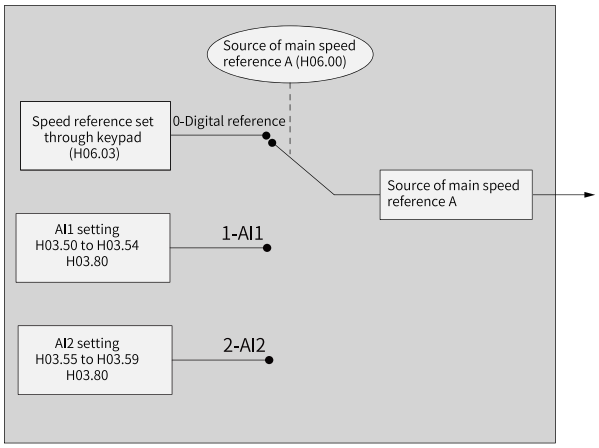


Figure 3-80 Source of main speed reference A

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.00	2006-01h	Source of main speed reference A	0: H06.03 1: AI1 2: AI2	0	-	At stop	"H06_en.00" on page 455

- **Digital setting**

  The speed reference is set in H06.03.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.03	2006-04h	Speed reference set through keypad	-10000 to 10000	200	rpm	Real time	"H06_en.03" on page 456

- **Analog voltage setting**

  The analog voltage signal output by the host controller or other devices is processed and then used as the speed reference.


  Analog voltage input terminal:

  The servo drive provides two AIs: AI1 and AI2.

  AI1 voltage-type input: 12-bit, -10 V to +10 V; maximum allowable voltage: ± 12 VDC; input impedance: 74 kΩ.

  AI2 voltage-type input: 12-bit, -10 V to +10 V; maximum allowable voltage: ±12 VDC; input impedance: 74 kΩ.

  Analog input circuit:

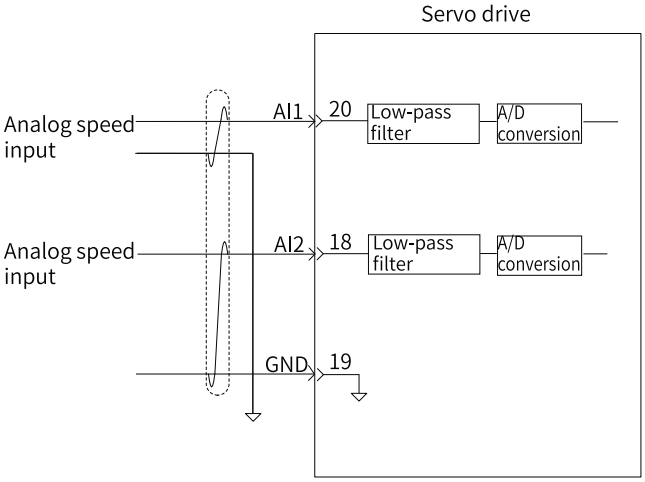

  Procedure:

  The following figure takes AI1 as an example to describe the analog setting of the speed reference.

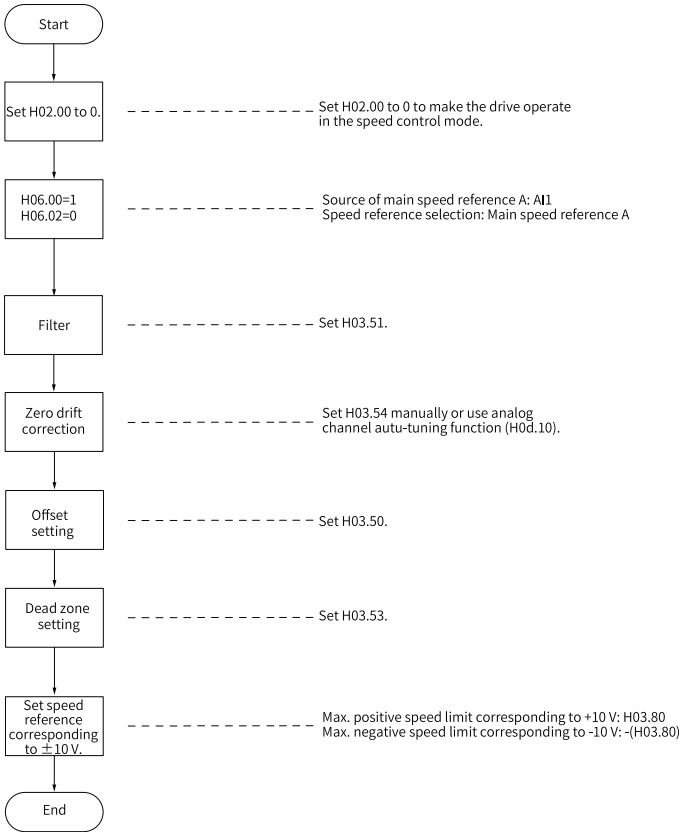


Figure 3-81 Flowchart of setting speed reference by analog voltage

Terms:

- Zero drift: the value of the servo drive sampling voltage relative to GND when the input voltage of the analog channel is zero.
- Offset: the input voltage value of the analog channel when the sampling voltage is zero after zero drift calibration.
- Dead zone: the input voltage range of the analog channel when the sampling voltage is zero.

In the following figure, y_1 represents the unprocessed AO voltage, y_6 represents the final speed reference after being processed by the servo drive.




Figure 3-82 AI processing of servo drive

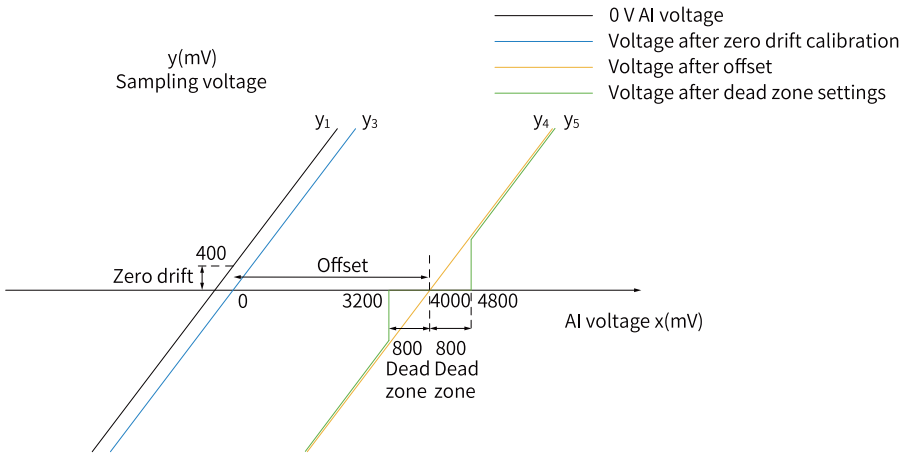


Figure 3-83 Example of sampling voltage and AI processing of servo drive

- **Filter:**
  The servo drive provides filter function for analog channels. Setting the filter time constant in H03.56 prevents motor reference fluctuation caused by unstable analog input voltage and eliminates motor malfunction caused by disturbing signals. The filter function cannot eliminate or suppress the zero drift or dead zone.

- **Zero drift calibration**
  It calibrates the analog output voltage offset relative to the actual input voltage 0 V.

  In the preceding figure, the analog output voltage without being processed by the servo drive is y_1. Take the filter time constant H03.51 = 0.00 ms as an example, and the sampling voltage after filter y_2 is the same as y_1.

  That is, when the actual input voltage x = 0, the output voltage y_1 = 400 mV. Therefore, the zero drift voltage is 400 mV.

  Set H03.54 to 400.0 (mV) manually. The sampling voltage after zero drift calibration is shown by y_3. $y_3 = y_1 - 400.0$

  Zero drift calibration can also be carried out by using the analog automatic tuning function in H0D-10.

- **Offset setting**
  It sets the actual input voltage corresponding to sampling voltage 0.

  Assume that the actual input voltage x = 4000 mV when the sampling voltage y_4 = 0. That is, the offset is 4000 mV.

  Set H03.50 to 4000 (mV). The sampling voltage after offset $y_4 = x - 4000 = y_3 - 4000$

- **Dead zone calibration**
  It sets the effective input voltage range when the sampling voltage of the servo drive is not 0.

  After the offset is set, if the sampling voltage is always 0 when the input voltage x is within 3200 mV to 4800 mV, the dead zone is 800 mV.

  Set H03.53 to 800.0 (mV). The sampling voltage after dead zone calibration is shown as y_5:

$$y_5 = \begin{cases} 0 & 3200 \leqslant x \leqslant 4800 \\ y_4 & 4800 < x \leqslant 10000 \text{ or } -10000 \leqslant x < 3200 \end{cases}$$

– **Speed reference calculation**

After setting the zero drift, offset, and dead zone, set the speed reference corresponding to 10 V (10000 mV) in H03.80 (Speed corresponding to 10 V) to obtain the actual speed reference y_6:

$$y_6 = \frac{y_5}{10000} x \ (\text{H03.80})$$

This value is used as the speed reference set via analog in the speed control mode.

The left figure below applies when no offset exists. The right figure below applies when offset exists. After all setting is completed correctly, view the sampling voltage of AI1 in H0b.21 or the speed reference corresponding to analog input in H0b.01.

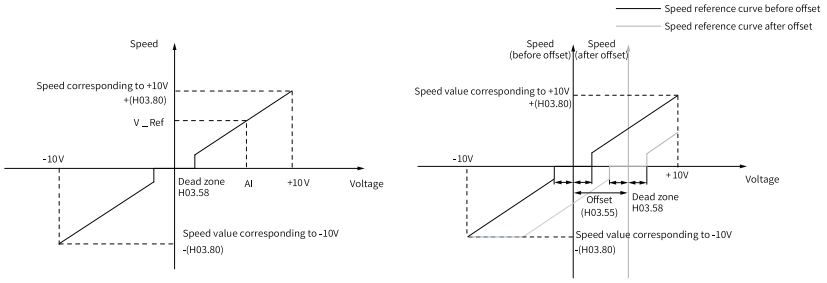


Figure 3-84 AI1 without offset (left) & AI1 after offset (right)

The relationship between the final speed reference y_6 and the input voltage x is:

$$y_6 = \begin{cases} 0 & B\text{-}C \leqslant x \leqslant B\text{+}C \\ x\text{-}B & B\text{+}C < x \leqslant 10000 \text{ or } -10000 \leqslant x < B\text{-}C \end{cases}$$

Where, B represents offset and C represents dead zone.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.50	2003-33h	Voltage-type AI1 offset	-5000 to +5000	0	mV	Real time	"H03_en.50" on page 420
H03.51	2003-34h	Voltage-type AI1 input filter time constant	0.00 to 655.35	2.00	ms	Real time	"H03_en.51" on page 420
H03.53	2003-36h	Voltage-type AI1 dead zone	0.0 to 1000.0	10.0	mV	Real time	"H03_en.53" on page 420
H03.54	2003-37h	Voltage-type AI1 zero drift	-500.0 to +500.0	0.0	mV	Real time	"H03_en.54" on page 421
H03.55	2003-38h	Voltage-type AI2 offset	-5000 to +5000	0	mV	Real time	"H03_en.55" on page 421

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.56	2003-39h	Voltage-type AI2 input filter time constant	0.00 to 655.35	2.00	ms	Real time	"H03_en.56" on page 421
H03.58	2003-3Bh	Voltage-type AI2 dead zone	0.0 to 1000.0	10.0	mV	Real time	"H03_en.58" on page 421
H03.59	2003-3Ch	Voltage-type AI2 zero drift	-500.0 to +500.0	0.0	mV	Real time	"H03_en.59" on page 422
H03.80	2003-51h	Speed corresponding to analog 10 V	0 to 10000	3000	rpm	At stop	"H03_en.80" on page 424
H0d.10	200d-0Bh	Automatic tuning of analog channel	0: No operation 1: Adjust AI1 2: Adjust AI2	0	-	At stop	"H0d_en.10" on page 553

– **Speed analog in dead zone with linearization mode**

The dead zone mode is supported. In this mode, the motor starts operation from zero speed when the voltage value exceeds the dead zone.

The following figure takes AI1 as an example to describe the analog setting of the speed reference in dead zone mode.

After you set the zero drift, offset, and dead zone, set the sampling voltage in H03.80. The value represents the speed reference at 10 V (10000 mV) in other modes.

In the following figure, the gray line represents a general mode, and the green line represents the dead zone with linearization mode.

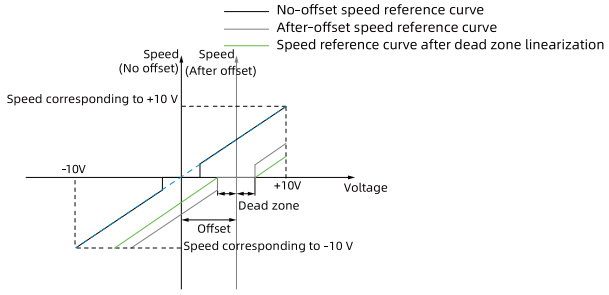


Figure 3-85 AI1 in a general mode and dead zone mode

The relationship between the final speed reference y_6 and the input voltage x is:

$$y_6 = \begin{cases} 0 & B-C \le x \le B+C \\ x-(B+C) & B+C \le x \le 10000 \\ x-(B-C) & -10000 \le x \le B-C \end{cases}$$

Where, B represents offset and C represents dead zone.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H03.49	2003-32h	AI1/AI2 dead zone mode	0: a general mode 1: dead zone mode	0	-	At stop	"H03_en.49" on page 420

- **Source of auxiliary speed reference B**

  The auxiliary speed reference B sources include digital setting, analog setting, and multi-speed references. Digital setting and multi-speed references produce the internal speed reference, and analog setting produces the external speed reference.

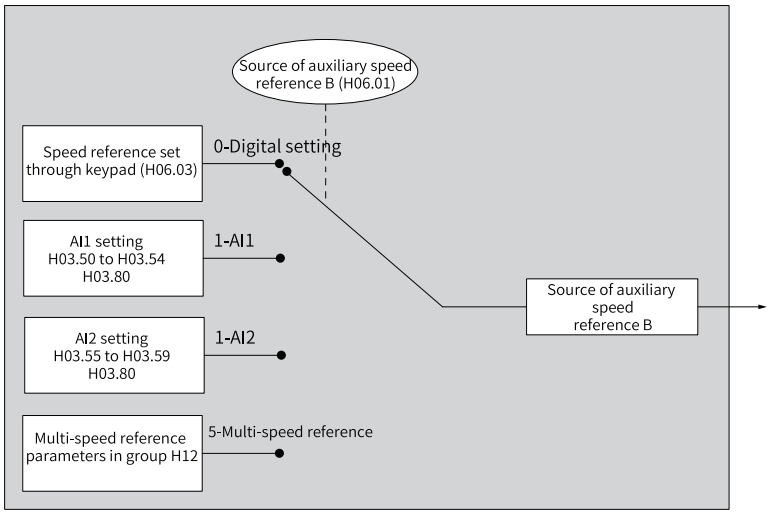


Figure 3-86 Source of auxiliary speed reference B

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.01	2006-02h	Source of auxiliary speed reference B	0: H06.03 1: AI1 2: AI2 5: Multi-speed reference	1	-	At stop	"H06_en.01" on page 455

The digital setting mode is the same as that of the main speed reference A source. The following part describes how to set auxiliary speed reference B via multi-speed reference.

The servo drive supports multi-speed running. The servo drive stores 16 speed references, and the maximum running speed and running time of each can be set. Four groups of acceleration/deceleration time are optional. The setting flowchart is shown in the following figure.

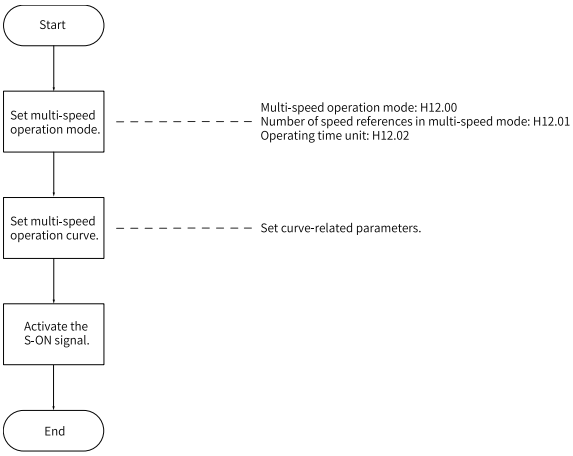


Figure 3-87 Multi-speed reference setting flowchart

1. Setting of multi-speed running mode

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H12.00	2012-01h	Multi-speed operation mode	0: Stop after running for one cycle (number of speeds defined by H12.01) 1: Cyclic operation (number of speeds defined by H12.01) 2: DI-based operation	1	-	At stop	"H12_en.00" on page 591
H12.01	2012-02h	Number of speed references in multi-speed mode	1 to 16	16	-	At stop	"H12_en.01" on page 592
H12.02	2012-03h	Operation time unit	0: s 1: min	0	-	At stop	"H12_en.02" on page 593

Assign an external DI terminal with FunIN.5: DIR-SEL to select the multi-speed running direction.

☆ Related parameters:


No.	Name	Function name	Function
FunIN.5	DIR-SEL	Multi-reference direction	Inactive: Reference direction by default Active: Opposite to the reference direction

The following takes "H12.01 = 2" as an example to describe each mode.

- Individual operation (H12.00 = 0)
  Set H12.00 to 0 to select the individual operation mode.

Set H12.01 and H12.02 as needed. Then, set the reference value, operating time, and acceleration/deceleration time of each speed. The drive executes multi-speed references in a sequence from speed 1 to speed N. After all the speeds are executed, the drive stops.

Table 3–19 Description of individual operation

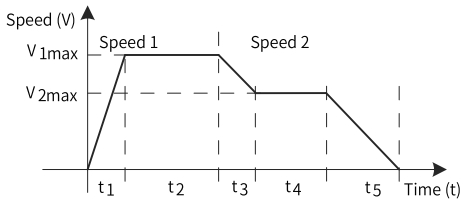Mode description	Operating curve
• The drive stops after one cycle of operation. • The drive switches to the next position automatically.	 • V_{1max} and V_{2max} : reference values of speed 1 and speed 2 • t_1 : actual acceleration/deceleration time of speed 1 • t_3 , t_5 : actual acceleration/deceleration time of 2nd speed • Operating time = Time taken in switching from the last speed to current speed + Duration of constant-speed operation at current speed (For example, the operating time of speed 1 is the sum of $t_1 + t_2$, and the operating time of speed 2 is the sum of $t_3 + t_4$). • Do not set the operating time of a certain speed to 0. Otherwise, the drive skips this speed and switches to the next speed directly. • The speed reach signal is activated when the motor speed feedback reaches the maximum operating speed set for this speed. • If the servo ON signal becomes OFF during running of a certain speed, the servo motor stops according to the stop mode in H02.05.


★Terms:

A complete operation cycle covers all the multi-speed references defined by H12.01.

- Cyclic running (H12.00 = 1)
  Set H12.00 to 1 to select the cyclic operation mode.

  Set H12.01 and H12.02 based on the number of speeds and the operating time unit. Then set the reference value, operating time and acceleration/deceleration time for each speed. The drive executes the set speeds in a sequence from speed 1 to speed N (last speed). After all the speeds are executed, the drive jumps to speed 1 and repeats the preceding process.

Table 3–20 Description of cyclic operation

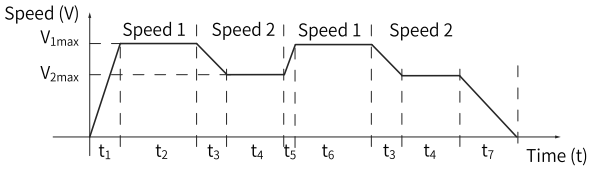
Mode description	Operating curve
• The drive starts from position 1 again after each cycle of operation. • The drive switches to the next position automatically. • The cyclic running state remains if the servo ON signal is active.	 • V_{1max}, V_{2max}: maximum values of the 1st and 2nd speeds • Operating time = Time taken in switching from the last speed to current speed + Duration of constant-speed operation at this speed. For example, the operating time of speed 1 is the sum of t_1 and t_2, and the operating time of speed 2 is the sum of t_3 and t_4. • Do not set the operating time of a certain speed to 0. Otherwise, the drive skips this speed and switches to the next speed directly. • The speed reach signal is activated when the motor speed feedback reaches the maximum operating speed set for this speed. • If the servo ON signal becomes OFF during running of a certain speed, the servo motor stops according to the stop mode in H02.05.

- DI switchover (H12.00 = 2)

  Set H12.00 to 2 to select DI-based operation.

  Set H12.01 and H12.02 based on the number of speeds to be executed and the operating time unit. Then, set the reference value, operating time and acceleration/deceleration time for each speed. The drive executes the speed references according to ON/OFF combination of the external DIs (CMDx).

Table 3–21 Descriptions of DI-based operation

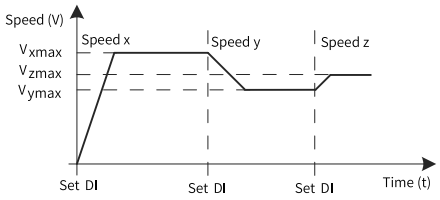Mode description	Operating curve
• The drive operates continuously as long as the S-ON signal is active. • The speed No. is determined by the DI logic. • The operating time of each speed is determined only by the interval time of speed switchover.	 • x and y: speed number (The relationship between the speed number and the DI logic is described below.) • The operating time is independent of the parameter setpoint. If the speed No. changes during operation, the drive switches to the new speed No. immediately. • The speed reach signal is activated when the motor speed feedback reaches the maximum operating speed set for this speed. • If the servo ON signal becomes OFF during running of a certain speed, the servo motor stops according to the stop mode in H02.05.

When the multi-speed operation mode is DI-based operation, assign DI functions 6 to 9 (multi-reference switchover) to four DIs and set the active logic of these DIs. In addition, assign FunIN.5 (DIR-SEL, direction selection in DI-based multi-speed operation) to a certain DI to switch the speed reference direction.

☆ Related parameters:

No.	Name	Function name	Function
FunIN.5	DIR-SEL	Setting of multi-speed DI switchover running direction	Switches over the speed reference direction in multi-speed DI switchover mode. Inactive: Reference direction Active: Opposite to the reference direction
FunIN.6	CMD1	Multi-reference switchover 1	The speed No. is a 4-bit binary value. The relationship between the speed no. and CMD1 to CMD4 is shown in *"Table 3-22" on page 133*. The value of CMD is 1 upon active DI level and 0 upon inactive DI level.
FunIN.7	CMD2	Multi-reference switchover 2	
FunIN.8	CMD3	Multi-reference switchover 3	
FunIN.9	CMD4	Multi-reference switchover 4	

Table 3–22 Relationship between the segment No. and CMD1 to CMD4

CMD4	CMD3	CMD2	CMD1	Segment No.
0	0	0	0	1
0	0	0	1	2
...				
1	1	1	1	16

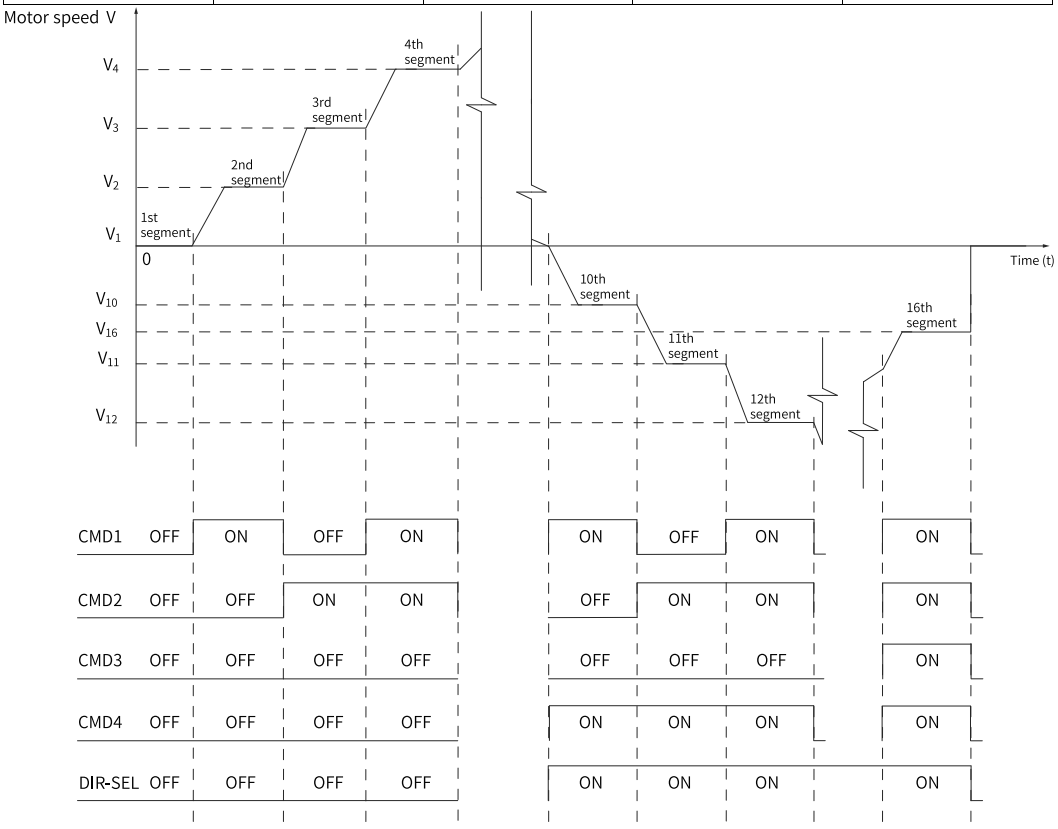


Figure 3-88 Example of multi-speed curve

2. Setting the multi-speed curve

The following takes the 1st speed as an example.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H12.03	2012-04h	Acceleration time 1	0 to 65535	10	ms	Real time	"H12_en.03" on page 593
H12.04	2012-05h	Deceleration time 1	0 to 65535	10	ms	Real time	"H12_en.04" on page 593
H12.09	2012-0Ah	Acceleration time 4	0 to 65535	150	ms	Real time	"H12_en.09" on page 595
H12.10	2012-0Bh	Deceleration time 4	0 to 65535	150	ms	Real time	"H12_en.10" on page 595
H12.20	2012-15h	1st speed reference	-10000 to 10000	0	rpm	Real time	"H12_en.20" on page 595
H12.21	2012-16h	Operation time of the 1st speed reference	0.0 to 6553.5	5.0	s(m)	Real time	"H12_en.21" on page 595
H12.22	2012-17h	Acceleration/ Deceleration and S-curve smoothing parameter time in speed 1	bit0 to bit7: Acceleration/deceleration time 0: Zero acceleration/deceleration time 1: Acceleration/deceleration time 1 2: Acceleration/deceleration time 2 3: Acceleration/deceleration time 3 4: Acceleration/deceleration time 4 bit8-bit15: S curve smoothing parameter 1: Smoothing parameter 1 2: Smoothing parameter 2 3: Smoothing parameter 3 4: Smoothing parameter 4 5: Smoothing parameter 5 6: Smoothing parameter 6 7: Smoothing parameter 7 8: Smoothing parameter 8	256	-	Real time	"H12_en.22" on page 596

For speed references in multi-speed operation mode, besides the reference value and operating time, four groups of acceleration/deceleration time options are also available. There is no acceleration/deceleration time by default.

The following describes the actual acceleration/deceleration time and the operating time in cases where H12.00 (Multi-speed operation mode) is set to 1 (Individual operation).

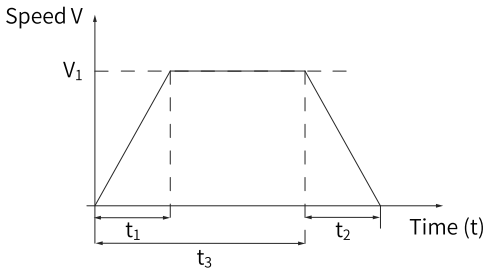


Figure 3-89 Example of multi-speed curve

As shown in the preceding figure, the speed reference is V_1 and the actual acceleration time is t_1:

$$t_1 = \frac{V_1}{1000} \times \text{Acceleration time set for this speed}$$

The actual deceleration time t_2 is:

$$t_2 = \frac{V_1}{1000} \times \text{Deceleration time set for this speed}$$

Operating time = Time taken in switching from the last speed to present speed + Duration of constant-speed operation at present speed (as shown by t_3 in the preceding figure)

- **A/B switchover**

  When setting H06.02 (Speed reference source) to 3 (Switched between A and B), you need to assign FunIN.4 (DI-SEL) to the corresponding DI. The input signal of this DI determines which source (A or B) is active.

  ☆ Related parameters:

No.	Name	Function name	Description
FunIN.4	CMD-SEL	Main/Auxiliary reference switchover	Inactive: Current reference being A Active: Current running reference being B

- **Communication**

  When H06.02 (Speed reference source) is set to 4 (Communication), the speed reference is the setpoint of H31.09. H31.09 is not displayed on the keypad, it can be set through communication only.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H31.09	2031-0Ah	Speed reference set through communication	-9999.000 to 9999.000	0.000	rpm	Real time	"H31_en.09" on page 742

Speed reference direction

A DI terminal with FunIN.26 (SPDDirSel, speed reference direction selection) is used to change the speed reference direction. The input signal of this DI determines the speed reference direction.

☆ Related parameters:

No.	Name	Function name	Description
FunIN.26	SPDDirSel	Speed reference direction	Inactive: Forward direction Active: Reverse direction.

The actual motor direction is determined by the rotation direction specified in parameter H02.02, speed reference direction, and DI switchover of speed reference direction (FunIN.26).

Table 3–23 Actual motor rotation direction in the speed control mode

H02.02	Sign of speed reference	FunIN.26	Direction of motor rotation
0	+	Inactive	Counterclockwise
0	+	Active	Clockwise
0	-	Inactive	Clockwise
0	-	Active	Counterclockwise
1	+	Inactive	Clockwise
1	+	Active	Counterclockwise
1	-	Inactive	Counterclockwise
1	-	Active	Clockwise

3.10.3 Ramp Function

The ramp function is used to smooth the acceleration rate of speed references based on acceleration/deceleration time settings.

In speed control mode, a high acceleration rate easily leads to motor jerk or intense vibration. In this case, increasing the acceleration/deceleration time smoothens the motor speed change, preventing mechanical damage caused by jerk or vibration.

Caution

- When the speed reference source is digital setting, analog voltage setting or jog speed, the acceleration time and deceleration time are set through parameters H06.05 and H06.06.
- When the speed reference source is multi-speed reference, the acceleration time and deceleration time are set in parameter group H12. For details, see section "H12 Multi-speed references".

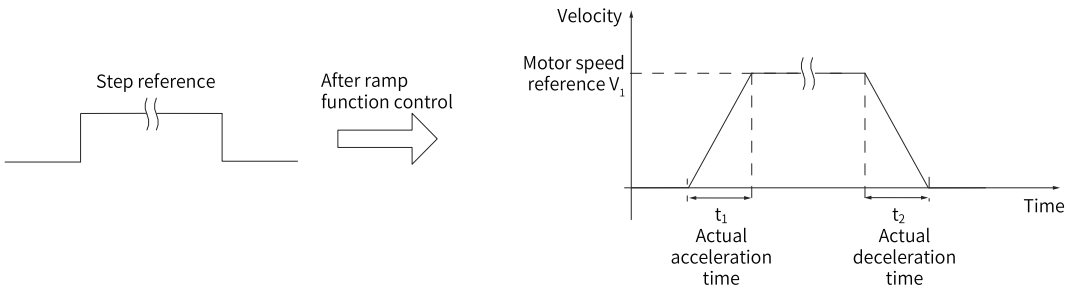


Figure 3-90 Ramp function diagram

- H06.05: Defines the time for the speed reference to change from 0 rpm to 1000 rpm.
- H06.06: Defines the time for the speed reference to change from 1000 rpm to 0 rpm.

The formulas of calculating the actual ramp-up/down time are as follows:

$$\text{Actual acceleration time } t_1 = \frac{\text{Speed reference}}{1000} \times \text{Speed reference acceleration ramp time}$$

$$\text{Actual deceleration time } t_2 = \frac{\text{Speed reference}}{1000} \times \text{Speed reference deceleration ramp time}$$

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.05	2006-06h	Acceleration ramp time of speed reference	0 to 65535	0	ms	Real time	"H06_en.05" on page 457
H06.06	2006-07h	Deceleration ramp time of speed reference	0 to 65535	0	ms	Real time	"H06_en.06" on page 457

3.10.4 Zero Clamp

Caution

- The zero speed clamp function is used in the system in which the host controller does not construct the position loop in speed control mode.
- If servo motor oscillation occurs in zero speed clamp state, adjust the position loop gain.

In speed control mode, if FunIN.12 (ZCLAMP) is enabled, and the speed reference amplitude is smaller than or equal to the value of H06.15, the motor enters zero position clamp state. In this case, a position loop is built inside the drive and the speed reference is invalid.

The motor is clamped the minimum quantization error of the encoder. Even if it rotates due to external force, it will return to the zero position and be clamped.

When the speed reference amplitude exceeds the value of H06.15, the motor exits from the zero clamp state and continues running according to the speed reference received. If the signal of the DI terminal with FunIN.12 (ZCLAMP) is inactive, the zero speed clamp function is disabled.

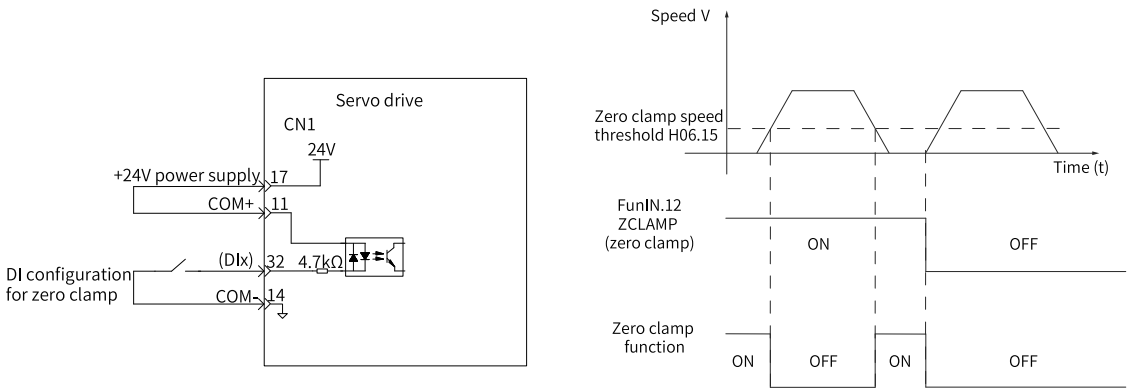


Figure 3-91 Wiring and waveform of zero clamp

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.15	2006-10h	Speed threshold for zero clamp	0 to 10000	10	rpm	Real time	"H06_en.15" on page 459

☆ Related parameters:

No.	Name	Function name	Description
FunIN.12	ZCLAMP	Zero speed clamp	Inactive: Zero clamp disabled Active: Zero clamp enabled

3.10.5 Speed Reference Limit

Caution

When the actual speed of the motor exceeds H0A.08 (Overspeed threshold), E500.0 (Motor overspeed) occurs. For details of H0A.08, see "H0A_en.08" on page 514. The speed reference limit must be lower than the value of H0A.08.

In speed control mode, the speed reference can be limited. The sources of speed reference limit include:

- H06.07 specifies the speed limit of speed reference in both forward and reverse directions. If the speed reference exceeds the setting of H06.07, the speed reference will be limited to this value.
- H06.08 specifies the speed reference in the forward direction. If the speed reference exceeds this value, the speed reference will be limited to this value.
- H06.09 specifies the speed limit in the reverse direction. If the speed reference exceeds this value, the speed reference will be limited to this limit.
- The maximum motor speed varies with the actual motor model.

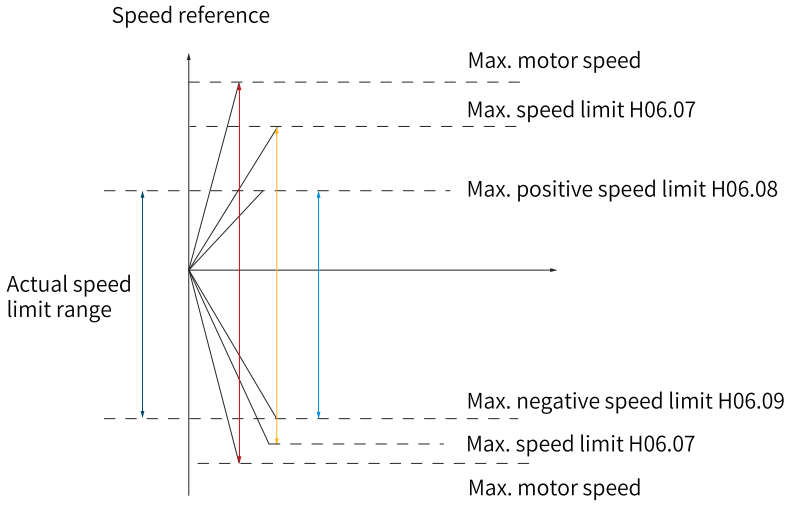


Figure 3-92 Example of speed reference limit

The actual motor rotational speed amplitude meets the following requirements:

- |Forward speed reference| ≤ min {maximum motor speed, H06.07, H06.08}
- |Reverse speed reference| ≤ min {maximum motor speed, H06.07, H06.09}

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.07	2006-08h	Maximum speed limit	0 to 10000	7000	rpm	Real time	"H06_en.07" on page 457
H06.08	2006-09h	Positive speed limit	0 to 10000	7000	rpm	Real time	"H06_en.08" on page 457
H06.09	2006-0Ah	Negative speed limit	0 to 10000	7000	rpm	Real time	"H06_en.09" on page 458

3.10.6 Speed-Related DO

Different DO signals are output to the host controller based on comparison between the speed feedback after filter and different thresholds. The related filter time is set in H0A.27.

Motor rotation DO signal

When the absolute value of the filtered actual motor speed reaches the value of H06.16 (Threshold of TGON (motor rotation) signal), the motor is acknowledged to be rotating. In this case, the drive outputs the motor rotation signal (FunOUT.2: TGON) to acknowledge that the motor is rotating. When the absolute value of the filtered actual motor speed is lower than the value of H06.16, the motor is not rotating.

Judgment on the motor rotation signal (FunOUT.2, TGON) is not affected by the operating state or control mode of the drive.

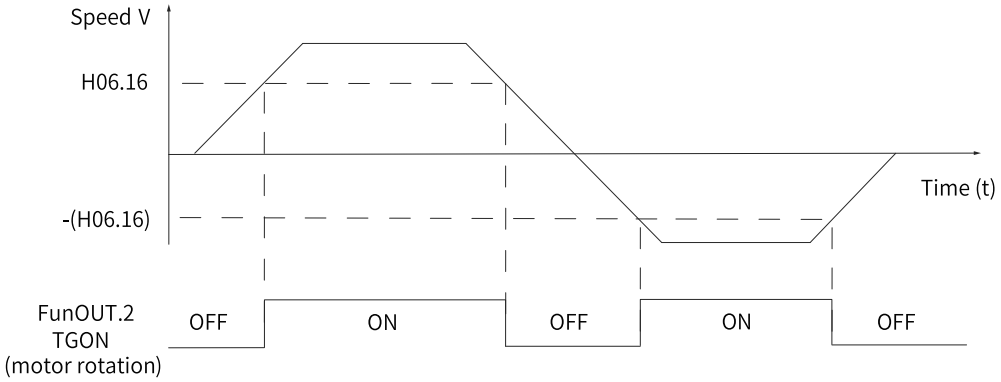


Figure 3-93 Motor rotation signal waveform

Note

In the preceding figure, ON indicates that the motor rotation DO signal is active. OFF indicates that the motor rotation DO signal is inactive.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.16	2006-11h	Threshold of motor rotation state	0 to 1000	20	rpm	Real time	"H06_en.16" on page 459

To use the TGon signal, assign a DO with FunOUT.2 (TGon, motor rotation) and set the active logic of this DO.

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.2	TGON	Motor rotation	Inactive: The absolute value of filtered motor speed is lower than the setpoint of H06.16. Active. The absolute value of filtered motor speed reaches the setpoint of H06.16.

Speed matching DO signal

A delay of 10 rpm is present in the speed matching signal.

When the absolute value of the difference between the motor speed after filter and the speed reference satisfies the setting of H06.17, the actual motor speed is considered to reach the speed reference. At this moment, the servo drive outputs the speed matching signal (FunOUT.4: V-CMP). When the absolute value of the difference between the motor speed after filter and the speed reference exceeds the setting of H06.17, the speed consistent signal is inactive.

If the servo drive is not in running status or in speed control, the speed consistent signal (FunOUT.4: V-CMP) is always inactive.

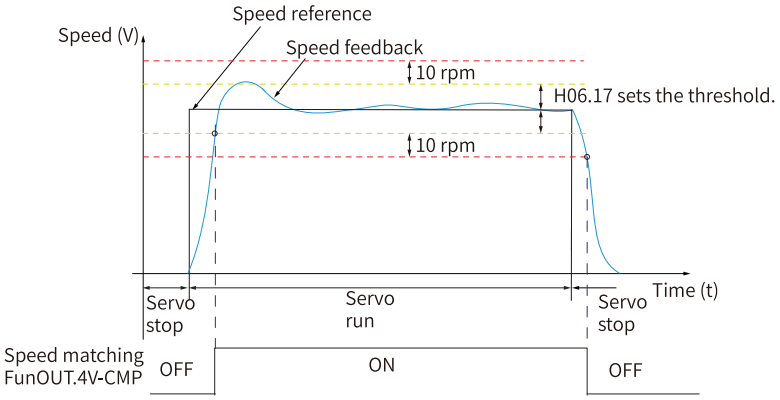


Figure 3-94 Speed matching signal waveform

Note

In the preceding figure, "ON" indicates the the V-Cmp (speed matching) signal is active. "OFF" indicates the V-Cmp signal is inactive.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.17	2006-12h	Threshold of speed consistency signal	0 to 100	10	rpm	Real time	"H06_en.17" on page 460

Set a DO terminal of the servo drive with function 4 (FunOUT.4:V-CMP, speed consistent) and set the terminal logic.

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.4	V-Cmp	Speed consistent	Inactive: The absolute difference between the filtered actual motor speed and the speed reference is higher than the value of H06.17. Active: The absolute difference between the filtered actual motor speed and the speed reference is lower than or equal to the value of H06.17.

Speed reached DO signal

A delay of 10 rpm is present in the speed reach signal. When the absolute value of the motor speed after filter exceeds H06.18 + 10 rpm, the motor speed is considered to reach the desired value. At this moment, the servo drive outputs the speed arrival signal (FunOUT.19: V-Arr). On the contrary, when the absolute value of filtered motor speed is lower than H06.18 - 10 rpm, the speed reach signal is inactive.

Judgment on the speed reached signal (FunOUT.19: V-Arr) is not influenced by the servo drive status and control mode.

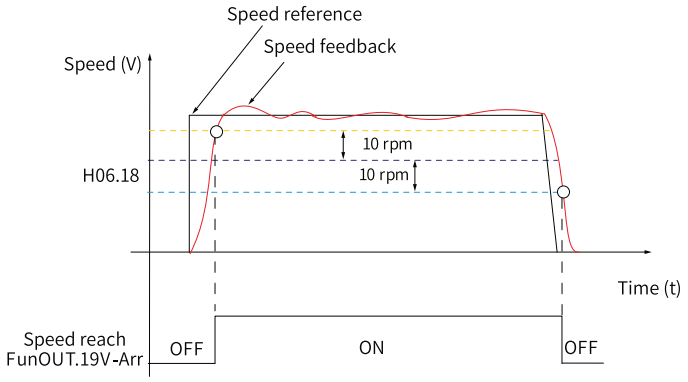


Figure 3-95 Speed reached signal waveform

Note

In the preceding figure, "ON" indicates the V-Arr (speed reached) signal is active. "OFF" indicates the V-Arr (speed reached) signal is inactive.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.18	2006-13h	Threshold of speed arrival signal	20 to 10000	1000	rpm	Real time	"H06_en.18" on page 460

To use the V-Arr signal, assign FunOUT.19 (V-Arr, speed reach) to a DO and set the active logic of this DO.

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.19	V-Arr	Speed reached	Inactive: The absolute value of filtered motor speed feedback exceeds H06.18. Active: The absolute value of filtered motor speed feedback is lower than or equal to the value of H06.18.

Zero speed DO signal

A delay of 10 rpm is present in the zero speed signal. When the absolute value of the motor speed after filter is smaller than the setting of H06.19, the motor speed is considered to be close to 0. At this moment, the servo drive outputs the zero speed signal (FunOUT.3: V-Zero). On the contrary, when the absolute value of actual motor speed is higher than H06.19 + 10 rpm, the motor is in the rotational state and the V-Zero (zero speed) signal is inactive.

Acknowledgment of the zero speed (FunOUT.3: V-Zero) signal is not affected by the operating state and control mode of the drive.

The interference in the speed feedback can be filtered by the speed feedback DO filter. You can set the corresponding filter time constant in H0A.27.

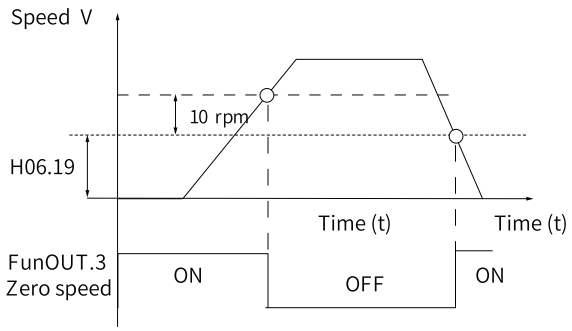


Figure 3-96 Zero speed signal waveform

Note

In the preceding figure, "ON" indicates the V-Zero (zero speed) signal is active. "OFF" indicates the V-Zero (zero speed) signal is inactive.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H06.19	2006-14h	Threshold of zero speed output signal	1 to 10000	10	rpm	Real time	"H06_en.19" on page 460

Set a DO terminal of the servo drive with function 3 (FunOUT.3: ZERO, zero speed) and set the terminal logic.

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.3	V-ZERO	Zero speed signal	Inactive: The difference between motor speed feedback and the reference value is higher than the setpoint of H06.19. Active: The difference between motor speed feedback and the reference value is lower than or equal to the value of H06.19.

3.11 Torque Control Mode

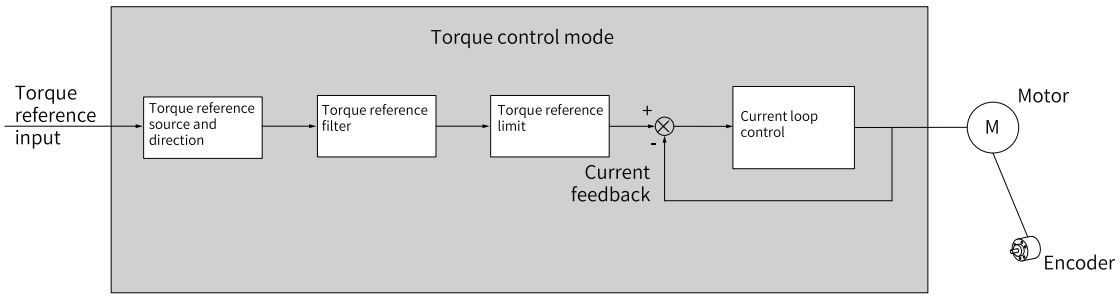


Figure 3-97 Torque control block diagram

Set H02.00 (Control mode selection) to 2 (Torque control mode) through the keypad or the Inovance software tool to make the drive operate in torque control mode. Set the servo drive parameters based on the mechanical structure and specifications. The following part uses the basic parameter setting to describe the torque control mode.

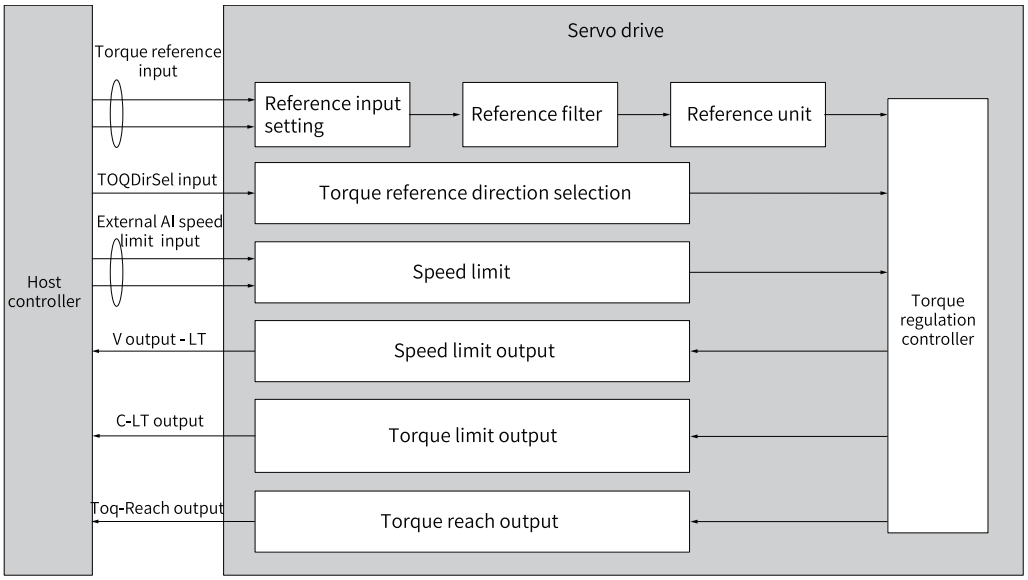


Figure 3-98 Signal exchange between the servo drive and the host controller

3.11.1 Function block diagram

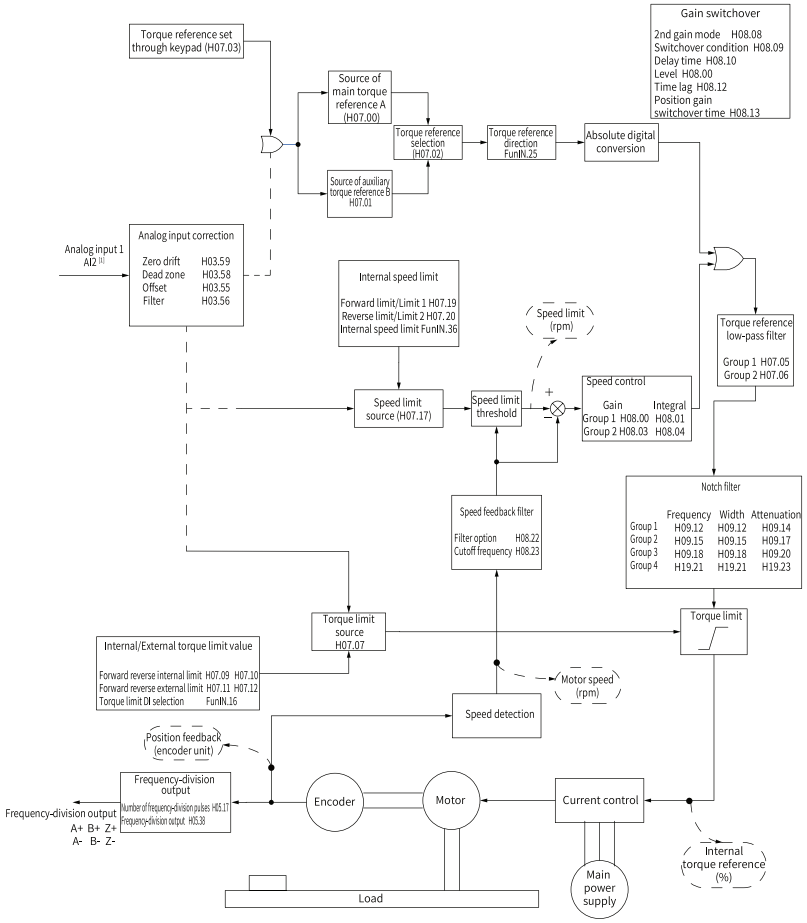


Figure 3-99 Block diagram of torque control

Note

[1]: When AI1 is used as the analog input, the corresponding parameters are H03.54 (zero drift), H03.53 (dead zone), H03.50 (offset), and H03.51 (filter).

3.11.2 Torque reference input

Torque reference source

Five torque reference sources are available in torque control mode, which can be set in H07.02.

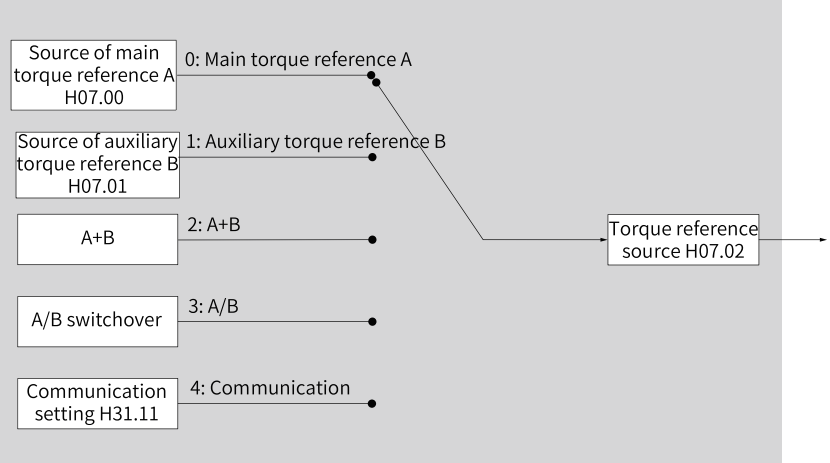


Figure 3-100 Selection of torque reference source

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.02	2007-03h	Torque reference source	0: Source of main torque reference A 1: Source of auxiliary torque reference B 2: Source of A+B 3: Switched between A and B 4: Communication	0	-	At stop	"H07_en.02" on page 471

- **Sources of main torque reference A**
  The sources of main torque reference A include digital setting and analog voltage setting. Digital setting produces the internal speed reference, and the analog voltage setting produces the external speed reference.

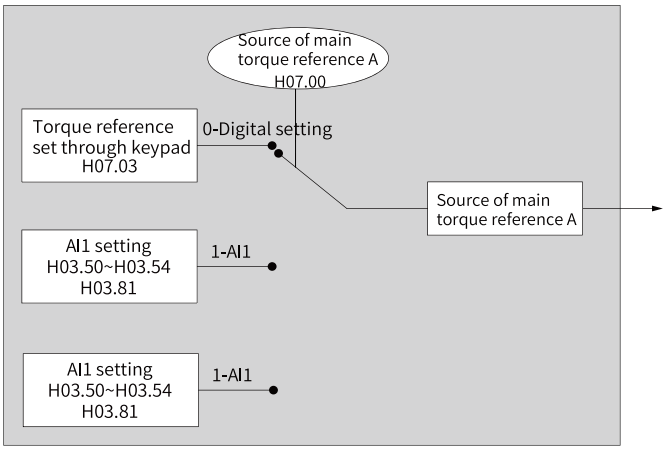


Figure 3-101 Description of main torque reference A sources

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.00	2007-01h	Sources of main torque reference A	0: H07.031 : AI1 2: AI2	0	-	At stop	"H07_en.00" on page 470

- **Digital setting**

  In digital setting, the torque reference is set in H07.03, which defines the percentage of the torque reference to the rated torque of the motor.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.03	2007-04h	Torque reference set through keypad	-400.0 to 400.0	0.0	%	Real time	"H07_en.03" on page 471

- **Analog voltage setting**

  The analog voltage signal output by the host controller or other devices is processed and then used as the torque reference.


  Analog voltage input terminal:

  The servo drive provides two AIs: AI1 and AI2.

  AI1 voltage-type input: 12-bit, -10 V to +10 V; maximum allowable voltage: ± 12 VDC; input impedance: 74 kΩ.

  AI2 voltage-type input: 12-bit, -10 V to +10 V; maximum allowable voltage: ±12 VDC; input impedance: 74 kΩ.

  Analog input circuit:

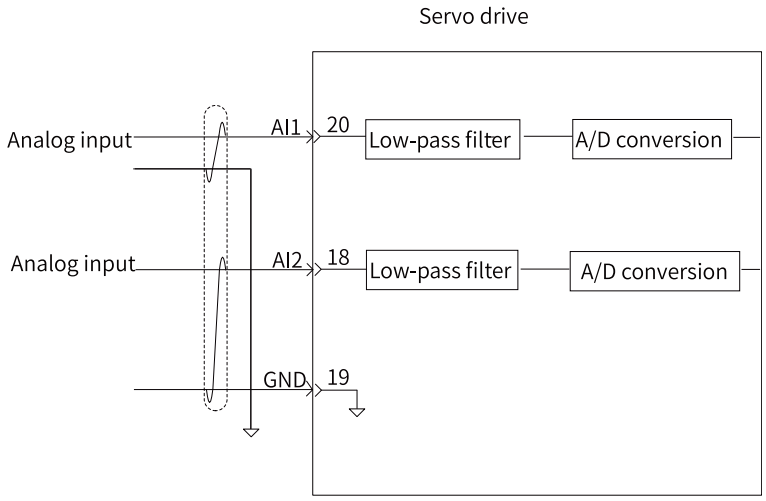

Procedure:

The following table takes AI1 as an example to describe the analog setting of the torque reference.

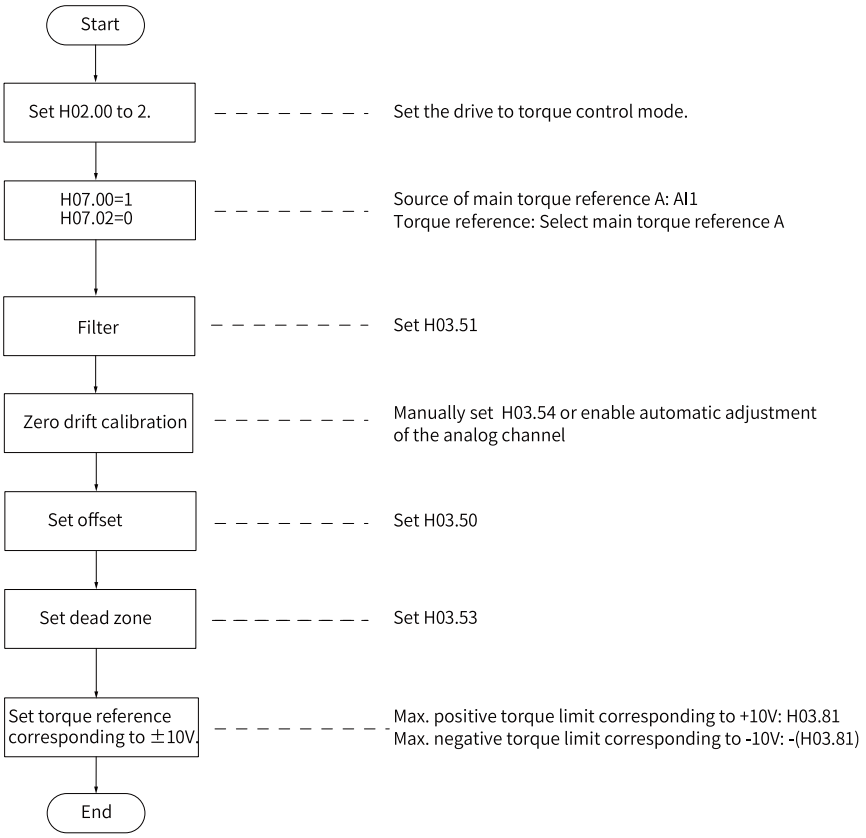


Figure 3-102 Flowchart of setting torque reference by analog voltage

★Terms:

- Zero drift: the value of the servo drive sampling voltage relative to GND when the input voltage of the analog channel is zero.
- Offset: the input voltage value of the analog channel when the sampling voltage is zero after zero drift calibration.
- Dead zone: the input voltage range of the analog channel when the sampling voltage is zero.

In the following figure, y_1 represents the unprocessed AO voltage, y_6 represents the final torque reference after being processed by the servo drive.




Figure 3-103 AI processing of servo drive

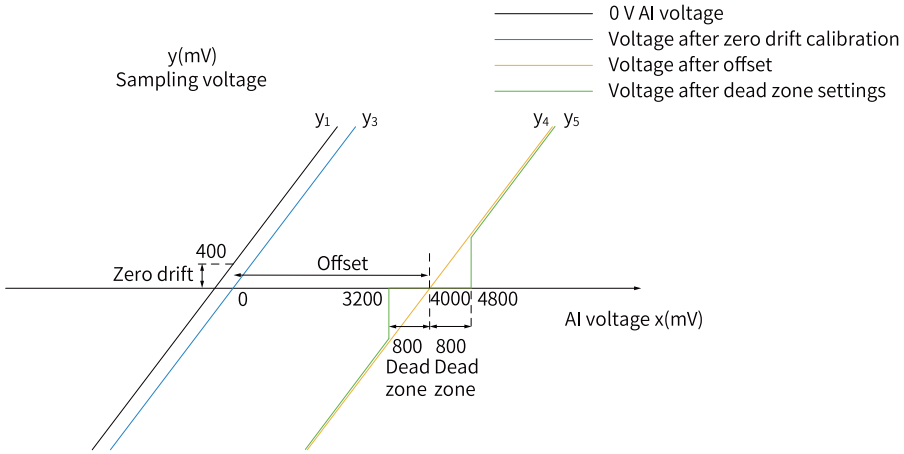


Figure 3-104 Example of sampling voltage and AI processing of servo drive

- **Filter:**
  The servo drive provides the analog channel filter function. Setting the filter time constant in H03.51 prevents motor reference fluctuation due to instable analog input voltage and eliminates motor malfunction due to signal interference. The filter function cannot eliminate or suppress the zero drift or dead zone.

- **Zero drift calibration**
  It calibrates the analog output voltage offset relative to the actual input voltage 0 V.

  In the preceding figure, the analog output voltage without being processed by the servo drive is y_1. Take the filter time constant H03.51 = 0.00 ms as an example, and the sampling voltage after filter y_2 is the same as y_1.

  That is, when the actual input voltage x = 0, the output voltage y_1 = 400 mV. Therefore, the zero drift voltage is 400 mV.

  Set H03.54 to 400.0 (mV) manually. The sampling voltage after zero drift calibration is shown by y_3. $y_3 = y_1 - 400.0$

  Zero drift can also be corrected automatically through H0d.10 (Automatic tuning of analog channels).

- **Offset setting**
  It sets the actual input voltage corresponding to sampling voltage 0.

  Assume that the actual input voltage x = 4000 mV when the sampling voltage y_4 = 0. That is, the offset is 4000 mV.

  Set H03.50 to 4000 (mV). The sampling voltage after offset $y_4 = x - 4000 = y_3 - 4000$

- **Dead zone calibration**

  It sets the effective input voltage range when the sampling voltage of the servo drive is not 0.

  After the offset is set, if the sampling voltage is always 0 when the input voltage x is within 3200 mV to 4800 mV, the dead zone is 800 mV.

  Set H03.53 to 800.0 (mV). The sampling voltage after dead zone calibration is shown as y_5:

$$y_5 = \begin{cases} 0 & 3200 \leqslant x \leqslant 4800 \\ y_4 & 4800 < x \leqslant 10000 \text{ or } -10000 \leqslant x < 3200 \end{cases}$$

- **Torque reference calculation**

  After setting the zero drift, offset, and dead zone, set the speed reference corresponding to 10 V (10000 mV) in H03.81 (Speed corresponding to 10 V) to obtain the actual torque reference y_6:

$$y_6 = \frac{y_5}{10000} \times (\text{H03.81})$$

  This value is used as the torque reference set via analog in the torque control mode.

  The left figure below applies when no offset exists. The right figure below applies when offset exists. After proper settings, you can view the AI1 sampling voltage value through H0b.21 in real time or view the torque reference value corresponding to the input analog value through H0b.01.

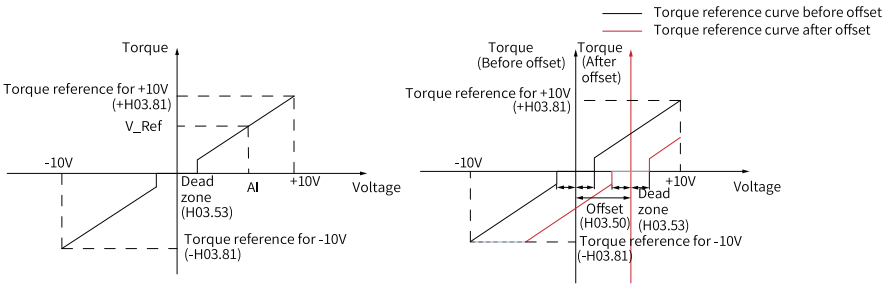


Figure 3-105 AI1 without offset (left) & AI1 after offset (right)

The relationship between the final torque reference y_6 and the input voltage x is:

$$y_6 = \begin{cases} 0 & B-C \leqslant x \leqslant B+C \\ x-B & B+C < x \leqslant 10000 \text{ or } -10000 \leqslant x < B-C \end{cases}$$

Where, B represents offset and C represents dead zone.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.50	2003-33h	Voltage-type AI1 offset	-5000 to +5000	0	mV	Real time	"H03_en.50" on page 420
H03.51	2003-34h	Voltage-type AI1 input filter time constant	0.00 to 655.35	2.00	ms	Real time	"H03_en.51" on page 420

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.53	2003-36h	Voltage-type AI1 dead zone	0.0 to 1000.0	10.0	mV	Real time	"H03_en.53" on page 420
H03.54	2003-37h	Voltage-type AI1 zero drift	-500.0 to +500.0	0.0	mV	Real time	"H03_en.54" on page 421
H03.55	2003-38h	Voltage-type AI2 offset	-5000 to +5000	0	mV	Real time	"H03_en.55" on page 421
H03.56	2003-39h	Voltage-type AI2 input filter time constant	0.00 to 655.35	2.00	ms	Real time	"H03_en.56" on page 421
H03.58	2003-3Bh	Voltage-type AI2 dead zone	0.0 to 1000.0	10.0	mV	Real time	"H03_en.58" on page 421
H03.59	2003-3Ch	Voltage-type AI2 zero drift	-500.0 to +500.0	0.0	mV	Real time	"H03_en.59" on page 422
H03.81	2003-52h	Torque corresponding to analog 10 V	0.00 to 8.00	1.00	-	At stop	"H03_en.81" on page 424
H0d.10	200d-0Bh	Automatic tuning of analog channel	0: No operation 1: Adjust AI1 2: Adjust AI2	0	-	At stop	"H0d_en.10" on page 553

- **Torque analog in dead zone with linearization mode**

  The dead zone mode is supported for torque analog, which is same as that for speed analog. In this mode, the motor starts operation from zero torque when the voltage value exceeds the dead zone.

  The following figure takes AI1 as an example to describe the analog setting of the torque reference in dead zone mode.

  After you set the zero drift, offset, and dead zone, set the sampling voltage in H03.81. The value represents the torque reference at 10 V (10000 mV) in other modes.

  In the following figure, the red line represents a general mode, and the green line represents the dead zone with linearization mode.

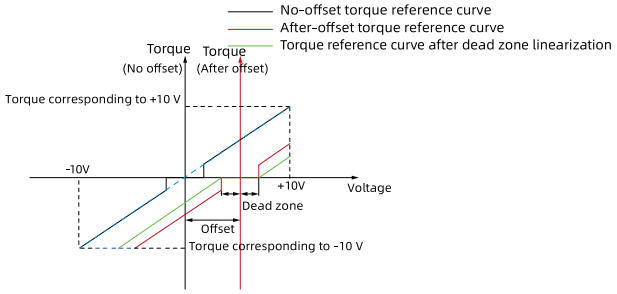


Figure 3-106 AI1 in a general mode and dead zone mode

The relationship between the final torque reference y_6 and the input voltage x is:

$$y_6 = \begin{cases} 0 & B-C \le x \le B+C \\ x-(B+C) & B+C \le x \le 10000 \\ x-(B-C) & -10000 \le x \le B-C \end{cases}$$

Where, B represents offset and C represents dead zone.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H03.49	2003-32h	AI1/AI2 dead zone mode	0: a general mode 1: dead zone mode	0	-	At stop	"H03_en.49" on page 420

- **Sources of auxiliary torque reference B**
  The source of auxiliary torque reference B is set in the same way as the source of main torque reference A. For descriptions of related parameters, see "H07_en.01" on page 470.
- **A/B switchover**
  When setting H07.02 (Torque reference source) to 3 (Switched between A and B), you need to assign FunIN.4 (DI-SEL) to the corresponding DI. The input signal of this DI determines which source (A or B) is active.

  ☆ Related parameters:

No.	Name	Function name	Description
FunIN.4	CMD-SEL	Running reference switchover	OFF: Active reference being A ON: Active reference being B

- **Communication**
  When H07.02 (Torque reference source) is set to 4 (Communication), the torque reference is the value of H31.11. H31.11 is not displayed on the keypad, it can be set through communication only.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H31.11	2031-0Ch	Torque reference set through communication	-100.000 to 100.000	0.000	%	Real time	"H31_en.11" on page 743

Torque reference direction

A DI terminal with FunIN.25 (TOQDirSel, torque reference direction selection) is used to change the torque reference direction.

☆ Related parameters:

No.	Name	Function name	Description
FunIN.25	ToqDirSel	Torque reference direction	Inactive: The actual torque reference direction is the same as the set direction. Active: The actual torque reference direction is opposite to the set direction.

The actual motor direction is related to the rotating direction in H02.02, positive/negative of torque reference, and torque reference direction (FunIN.25).

Table 3–24 Actual direction of rotation in torque control mode

H02.02	Torque reference direction	FunIN.25	Direction of motor rotation
0	+	Inactive	Counterclockwise
0	+	Active	Clockwise
0	-	Inactive	Clockwise
0	-	Active	Counterclockwise
1	+	Inactive	Clockwise
1	+	Active	Counterclockwise
1	-	Inactive	Counterclockwise
1	-	Active	Clockwise

3.11.3 Torque reference filter

Caution

Pay attention to the responsiveness during setting as an excessively high setpoint lowers down the responsiveness.

In position, speed, torque, and hybrid control modes, the servo drive smoothens torque references through the low-pass filter to reduce vibration.

The servo drive offers two low-pass filters for torque references, in which the low-pass filter 1 is used by default.

The servo drive switches to low-pass filter 2 when gain switchover is enabled (H08.08 = 1 and H08.09 ≠ 0) and the condition defined by H08.09 is met.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.05	2007-06h	Torque reference filter time constant 1	0.00 to 30.00	0.50	ms	Real time	"H07_en.05" on page 471
H07.06	2007-07h	Torque reference filter time constant 2	0.00 to 30.00	0.27	ms	Real time	"H07_en.06" on page 472

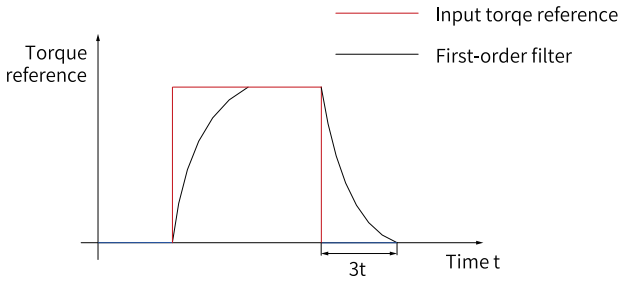


Figure 3-107 Rectangular torque reference first-order filter

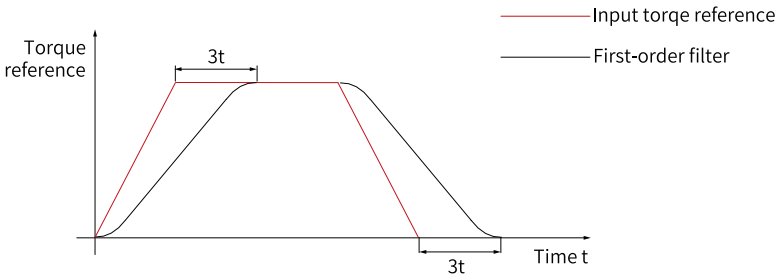


Figure 3-108 Trapezoid torque reference first-order filter

Note

In the preceding figures, the letter "t" in "3t" refer to the torque reference filter time constant. Pay attention to the responsiveness when you set the constant because an excessively high setpoint decreases the responsiveness.

3.11.4 Torque Reference Limit

Caution

Torque reference limit is needed and active in all the control modes.

Torque references are limited to protect the servo drive and motor.

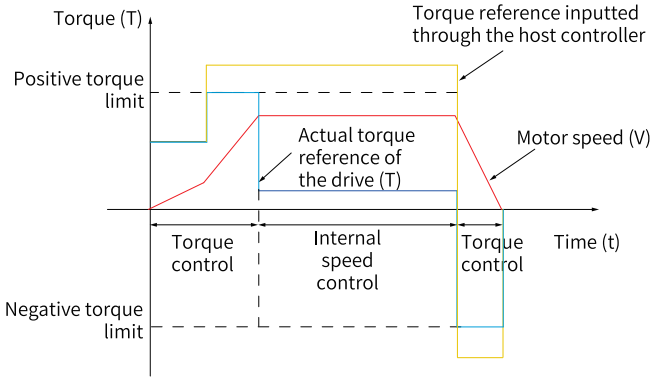


Figure 3-109 Torque reference and torque limit

When the absolute value of the torque reference input from the host controller or output by the speed regulator is higher than the absolute value of the torque reference limit, the actual torque

reference of the drive is limited to the torque reference limit. Otherwise, the torque reference input from the host controller or output by the speed regulator is used.

Only one torque reference limit is valid at a moment. The positive/negative torque limit must be lower than or equal to the maximum torque of the drive and the motor and ±400.0% of the rated torque.

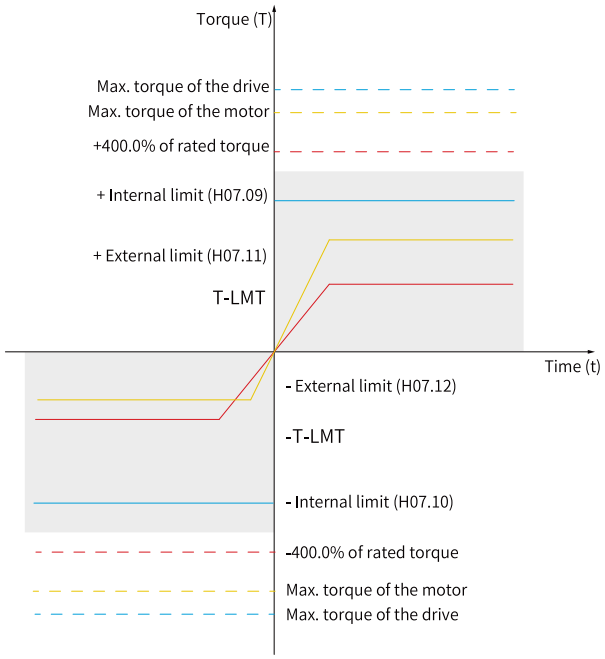


Figure 3-110 Torque limit example

Setting the torque limit source

You can set the torque limit source in H07.07.

After the torque limit is set, the servo drive torque reference is restricted to within the torque limit. After the torque reference reaches the limit, the motor runs according to the torque limit. The torque limit must be set according to the load conditions. If the setting is very small, it may cause longer acceleration/deceleration time of the motor, and the actual motor speed may not reach the required value at constant speed running.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H07.07	2007-08h	Torque limit source	0: Positive/Negative internal torque limit 1: Internal or external limit as defined by DI 2: T_LMT 3: T_LMT or external limit as defined by DI (FunIN.16 or FunIN.17) 4: T_LMT or internal limit (FunIN.16 or FunIN.17) as defined by DI	0	-	Real time	"H07_en.07" on page 472

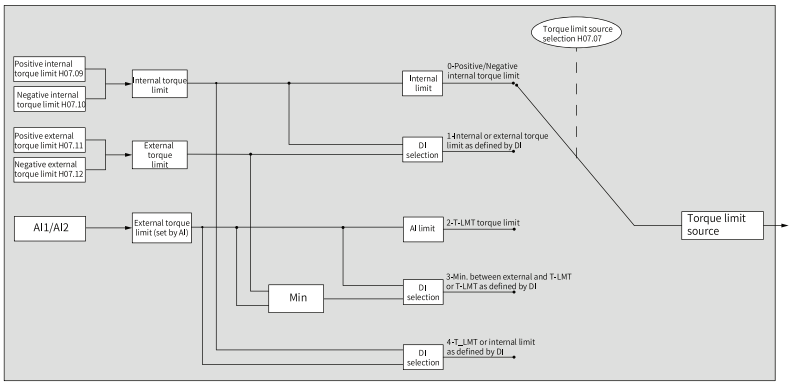


Figure 3-111 Torque limit source

The following figures show the torque limit curve when the absolute torque reference input from the host controller is larger than the torque limit.

- H07.07 = 0 (Positive/Negative internal torque limit)
  The torque reference limit is determined only by H07.09 and H07.10.

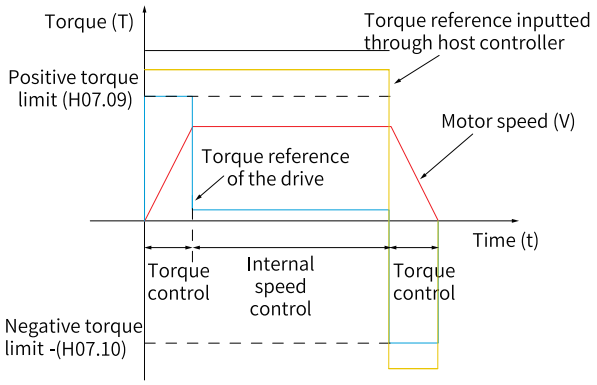


Figure 3-112 Torque limit curve (H07.07 = 0)

- H07.07 = 1 (internal or external limit as defined by DI)
  The torque reference limit value is determined by the logic state of external DI signals. The positive torque limit is selected between H07.09 (Positive internal torque limit) and H07.11 (Positive external torque limit). The negative torque limit is selected between H07.10 (Negative internal torque limit) and H07.12 (Negative external torque limit).

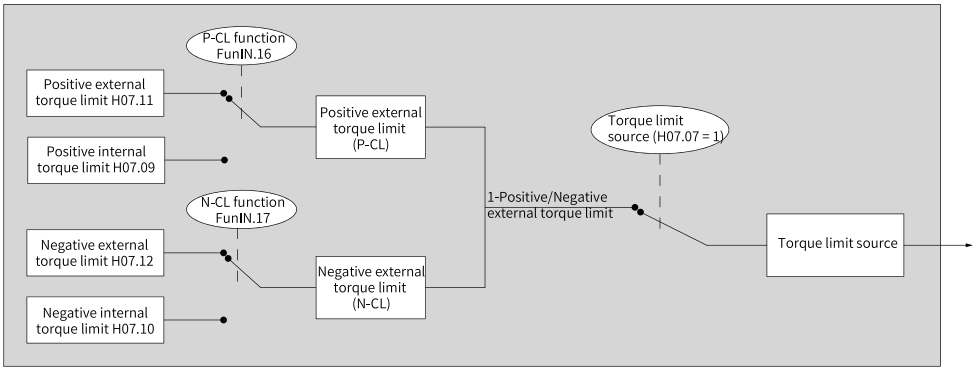
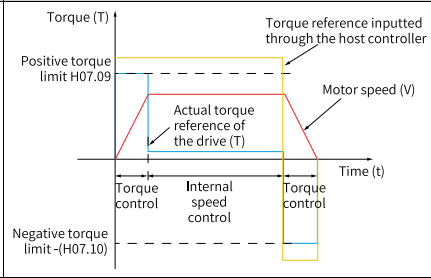
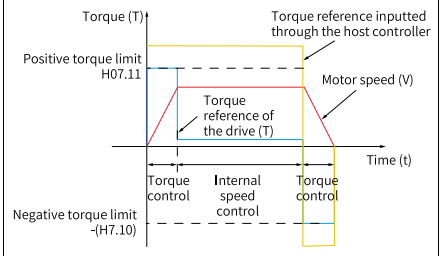
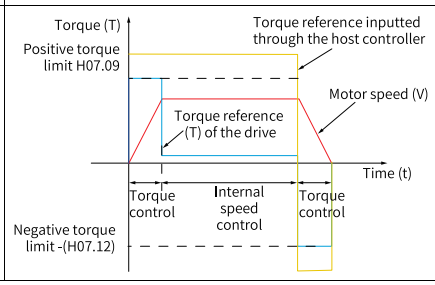
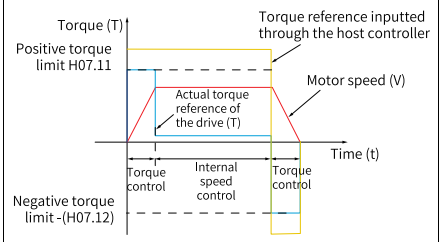


Figure 3-113 Torque limit source (H07.07 = 1)

Table 3–25 Description of H07.07 = 1

<table>
<tr><th colspan="2" rowspan="2">State of DI signal</th><th colspan="2">P-CL</th></tr>
<tr><th>OFF</th><th>ON</th></tr>
<tr><td rowspan="2">N-CL</td><td>OFF</td><td>
</td><td>
</td></tr>
<tr><td>ON</td><td>
</td><td>
</td></tr>
</table>

Set two DI terminals of the servo drive respectively with function 16 (FunIN.16: P-CL, external positive torque limit) and function 17 (FunIN.17: N-CL, external negative torque limit) and set the terminal logics.

☆ Related parameters:

No.	Name	Function name	Description
FunIN.16	P-CL	Positive external torque limit	The torque limit source is switched based on H07.07 (Torque limit source). H07.07 = 1: Valid: Positive external torque limit enabled Invalid: Positive internal torque limit enabled
FunIN.17	N-CL	Negative external torque limit	The torque limit source is switched based on H07.07 (Torque limit source). H07.07 = 1: Valid: Negative external torque limit enabled Invalid: Negative internal torque limit enabled

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H07.09	2007-0Ah	Positive internal torque limit	0.0 to 400.0	350.0	%	Real time	*"H07_en.09" on page 473*
H07.10	2007-0Bh	Negative internal torque limit	0.0 to 400.0	350.0	%	Real time	*"H07_en.10" on page 473*

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H07.11	2007-0Ch	Positive external torque limit	0.0 to 400.0	350.0	%	Real time	"H07_en.11" on page 473
H07.12	2007-0Dh	Negative external torque limit	0.0 to 400.0	350.0	%	Real time	"H07_en.12" on page 473

- H07.07 = 2 (T-LMT as torque limit)

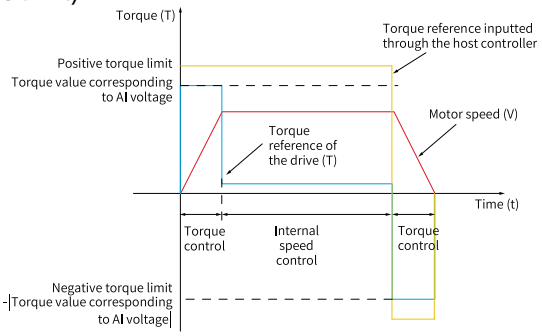


Figure 3-114 AI torque limit curve

- H07.07 = 3: T_LMT or external limit used as torque limit as defined by DI (FunIN.16 or 17)
  When the logic of the external DI signal (P-CL) is inactive, the positive torque limit is defined by the torque value corresponding to the input voltage of external AI. When the logic of the external DI signal (P-CL) is active, the positive torque limit is defined by the minimum of H07.11 and the AI value corresponding to the AI voltage.

  When the logic of the external DI signal (N-CL) is inactive, the negative torque limit is defined by the torque value corresponding to the external AI voltage. When the logic of the external DI signal (N-CL) .is active, the negative torque limit is defined by the minimum of H07.12 and the torque value corresponding to the AI voltage.

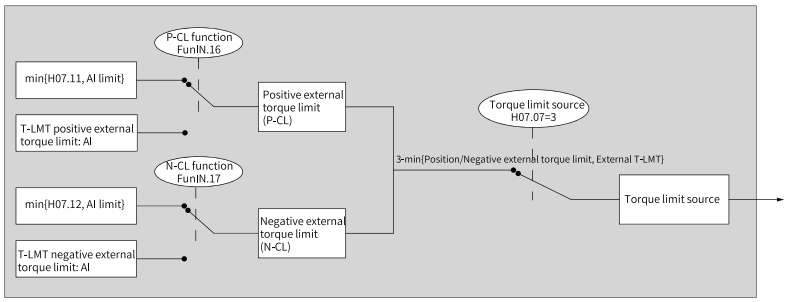
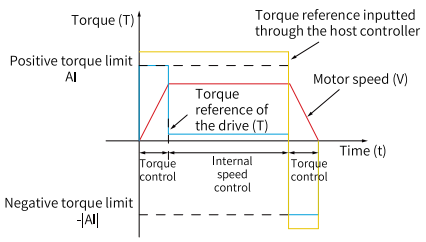
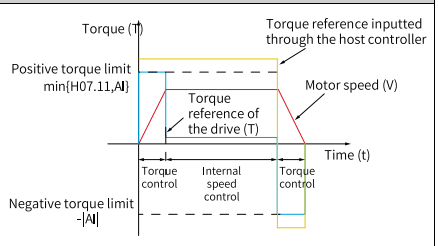
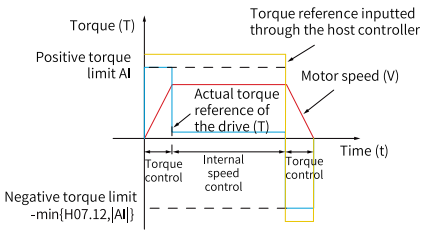
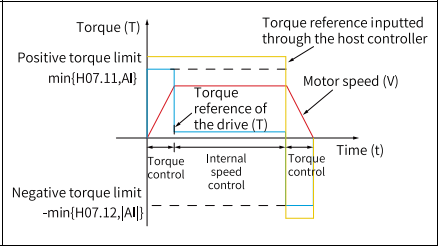


Figure 3-115 Torque limit source (H07.07 = 3)

Table 3–26 Description of H07.07 = 3

<table>
<tr><th colspan="2" rowspan="2">State of DI signal</th><th colspan="2">P-CL</th></tr>
<tr><th>OFF</th><th>ON</th></tr>
<tr><td rowspan="2">N-CL</td><td>OFF</td><td>
</td><td>
</td></tr>
<tr><td>ON</td><td>
</td><td>
</td></tr>
</table>

- H07.07 = 4: T_LMT or internal limit used as torque limit as defined by DI
  When the logic of the external DI signal (P-CL) is inactive, the positive torque limit is defined by H07.09. When the logic of the external DI (P-CL) is active, the positive torque limit is defined by the torque value corresponding to the AI voltage.

  When the logic of the external DI signal (N-CL) is inactive, the negative torque limit is defined by H07.10. When the logic of the external (DI-CL) is active, the negative torque limit is defined by the torque value corresponding to the AI voltage.

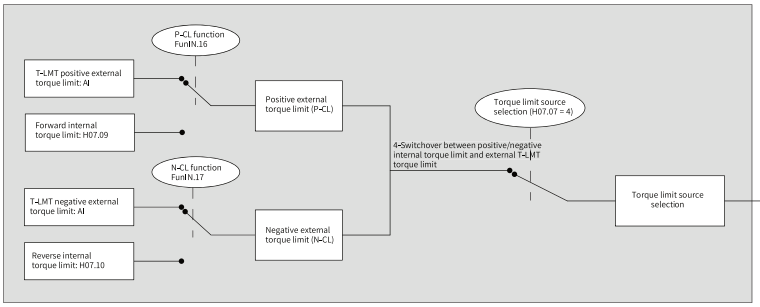
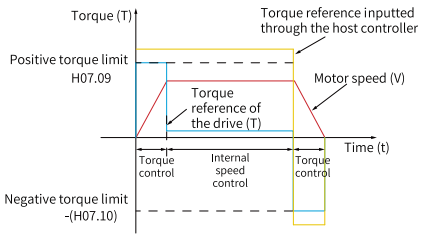
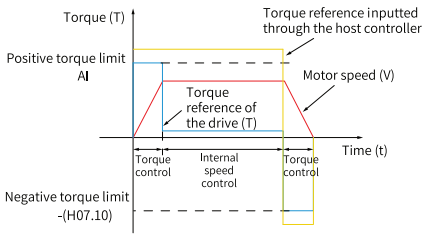
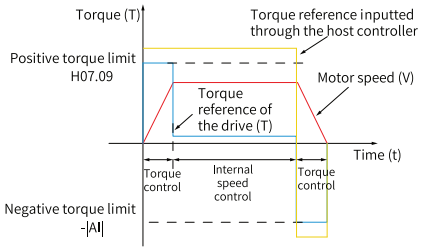
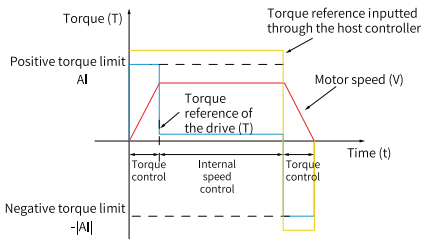


Figure 3-116 Torque limit source (H07.07 = 4)

Table 3–27 Description of H07.07 = 4

State of DI signal		P-CL	
		OFF	ON
N-CL	OFF		
	ON		

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H07.09	2007-0Ah	Positive internal torque limit	0.0 to 400.0	350.0	%	Real time	"H07_en.09" on page 473
H07.10	2007-0Bh	Negative internal torque limit	0.0 to 400.0	350.0	%	Real time	"H07_en.10" on page 473
H07.11	2007-0Ch	Positive external torque limit	0.0 to 400.0	350.0	%	Real time	"H07_en.11" on page 473
H07.12	2007-0Dh	Negative external torque limit	0.0 to 400.0	350.0	%	Real time	"H07_en.12" on page 473

Setting the torque limit DO source

When the torque reference reaches the torque limit, the servo drive outputs the torque limit signal to the host controller. Set a DO terminal of the servo drive with function 7 (FunOUT.7: C-LT, torque limit) and set the terminal logic.

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.7	C-LT	Torque limit	Active: The torque reference value reaches the torque limit and is limited by the torque limit. Inactive: The torque reference does not reach the torque limit.

3.11.5 Speed Limit in Torque Control

In the torque control mode, if the torque reference is larger than the load torque on mechanical side, the motor keeps accelerating, which may causes overspeed and damages the machine. Therefore, the motor speed must be limited to protect the machine.

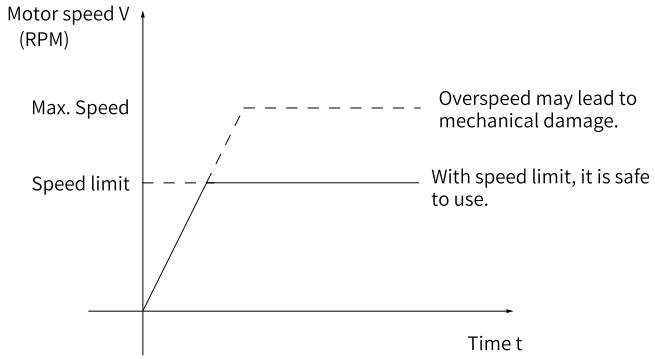


Figure 3-117 Speed limit in the torque control mode

Setting the speed limit source

In torque control mode, you can set the speed limit source in H07.17. After the speed limit is set, the actual motor speed is restricted to within the speed limit. After reaching the speed limit, the motor keeps constant-speed running at the speed limit value. The speed limit must be set according to the load conditions.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H17.17	2017-12h	VDI9 logic level selection	0: Active when the written value is 1 1: Active when the written value changes from 0 to 1	0	-	Real time	"H17_en.17" on page 634

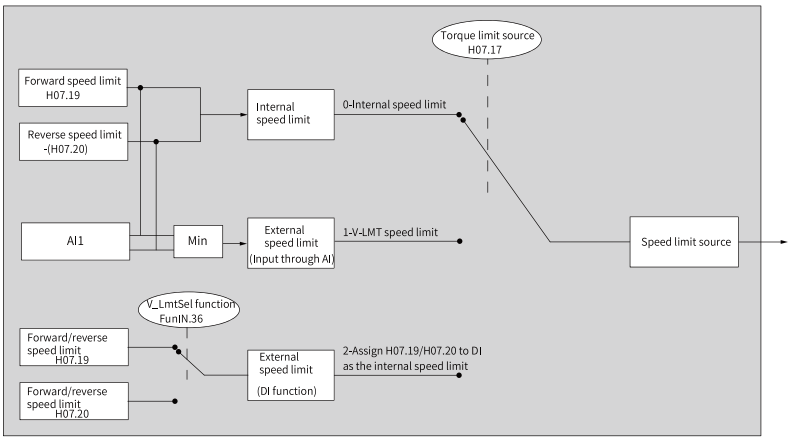


Figure 3-118 Speed limit source

- H07.17 = 0 (Internal speed limit)
  The speed limit is determined only by H07.19 (Positive speed limit) and H07.20 (Negative speed limit).

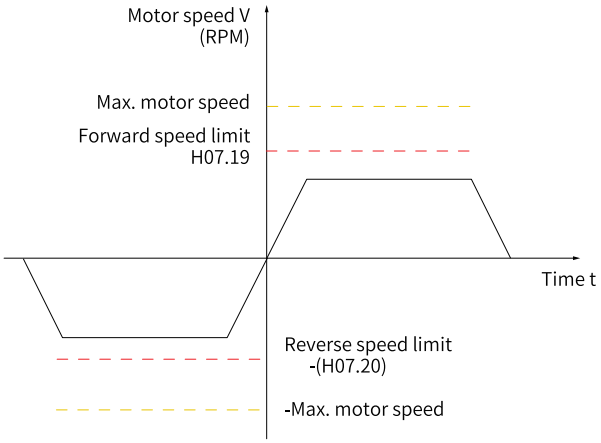


Figure 3-119 Speed limit curve (H07.17 = 0)

- H07.17 = 1 (V- LMT as speed limit)
  When the speed limit defined by AI is lower than the internal speed limit (H07.19/H07.20), the former applies. When the speed limit defined by AI is higher than the internal speed limit (H07.19/H07.20), the latter applies.

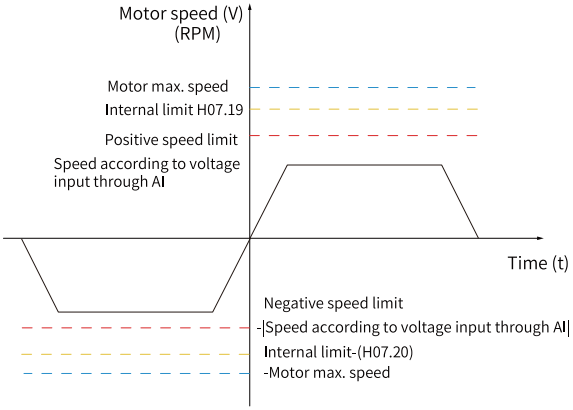


Figure 3-120 Speed limit curve (H07.17 = 1)


- H07.17 = 2 (H07.19 or H07.20 used as speed limit as defined by DI)
  H07.19 or H07.20 is used as the speed limit based on the logic of the DI.

  To use this function, set a DI terminal of the servo drive with function 36 (FunIN.36: V-LmtSel, internal speed limit source) and set the terminal logic.

  ☆ Related parameters:

No.	Name	Function name	Description
FunIN.36	V_LmtSel	Internal speed limit source	Inactive: H07.19 used as positive/negative internal speed limit. Active: H07.20 used as positive/negative internal speed limit.

Table 3–28 Speed limit description

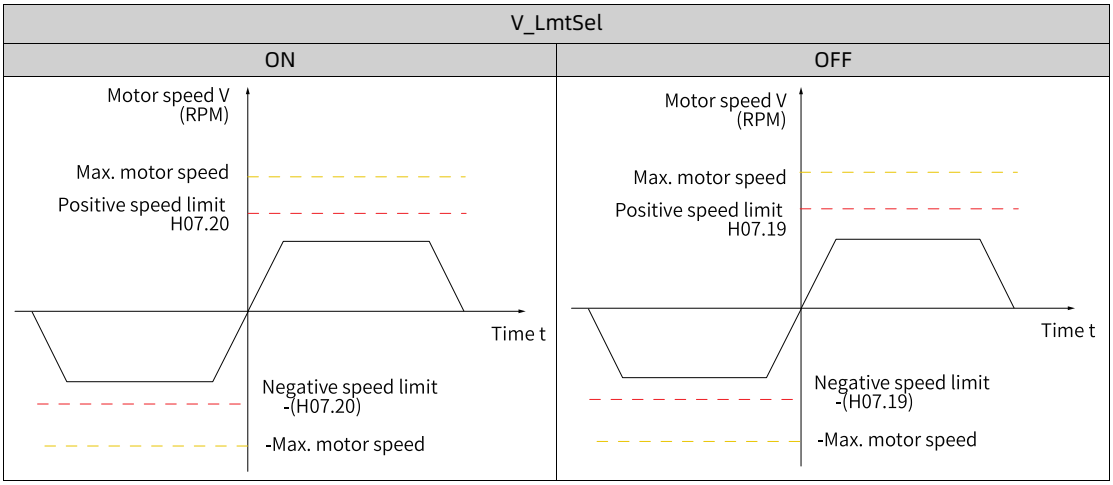

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H07.19	2007-14h	Positive speed limit/Speed limit 1 in torque control	0 to 10000	3000	rpm	Real time	"H07_en.19" on page 474
H07.20	2007-15h	Negative speed limit/Speed limit 2 in torque control	0 to 10000	3000	rpm	Real time	"H07_en.20" on page 475

Setting the speed limit DO source

In torque control mode, the servo drive outputs the V- LT (FunOUT.8: speed limit) signal to the host controller when the absolute value of the motor speed remains above the speed limit in the period defined by H07.40. If any of the conditions is not met, the speed limit signal is invalid.

The speed limit signal (FunOUT.8:V-LT) is judged only in torque mode and servo running state.

Set a DO terminal of the servo drive with function 8 (FunOUT.8:V-LT) and set the terminal logic.

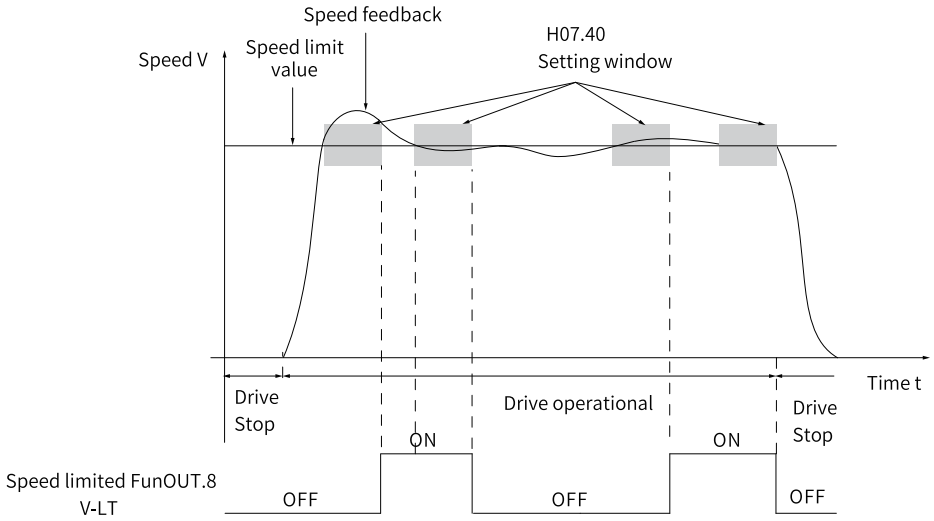


Figure 3-121 Example of speed limit DO waveform

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.8	V-LT	Speed limit	Inactive: The motor speed does not reach the speed limit. Valid: The motor speed reaches the speed limit and speed loop built internally based on the speed limit

3.11.6 Torque reached output

This function is used to determine whether the actual torque reference reaches the setting range. When the actual torque reference reaches the threshold, the servo drive outputs the related DO signal (FunOUT.18: ToqReach, torque reached) to the host controller.

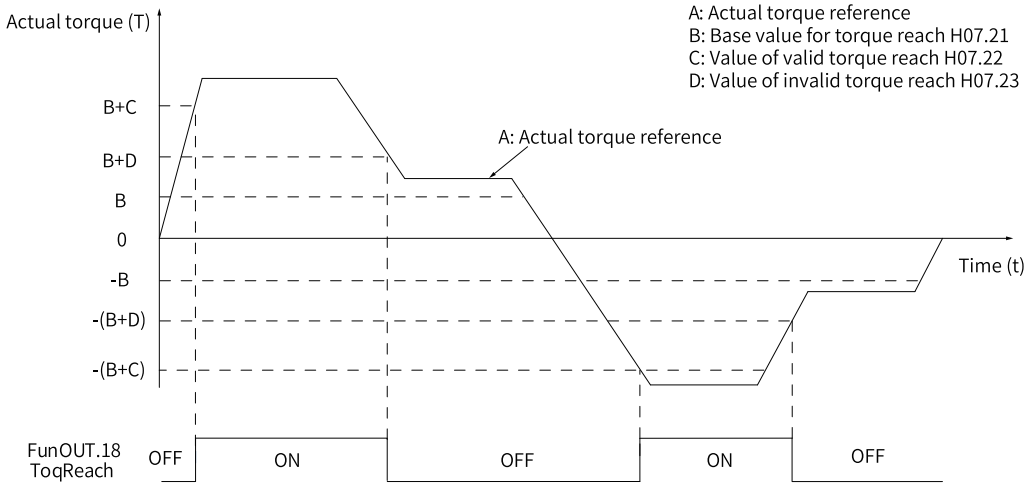


Figure 3-122 Example of torque reached output waveform

- Actual torque reference (viewed in H0b.02): A
- Base value for torque reach (H07.21): B.
- Threshold of valid torque reach H07.22: C

- Threshold of invalid torque reach (H07.23): D.

C and D are offsets on the basis of B.

The torque reach DO signal can be activated only when the actual torque reference meets the following condition: |A| ≥ B + C. Otherwise, the torque reached signal remains inactive.

The torque reach signal is deactivated only when the actual torque reference meets the following condition: |A| < B + D. Otherwise, the torque reached signal remains active.

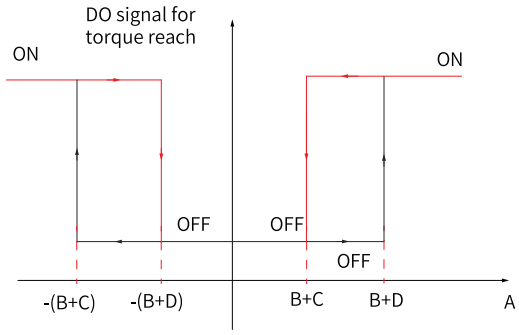


Figure 3-123 Torque reached output active description

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.21	2007-16h	Base value for torque arrival	0.0 to 400.0	0.0	%	Real time	"H07_en.21" on page 475
H07.22	2007-17h	Threshold of active torque arrival	0.0 to 400.0	20.0	%	Real time	"H07_en.22" on page 475
H07.23	2007-18h	Threshold of inactive torque arrival	0.0 to 400.0	10.0	%	Real time	"H07_en.23" on page 475

To use the torque reached function, set a DO terminal of the servo drive with function 18 (FunOUT.18: ToqReach, torque reached) and set the terminal logic.

☆ Related parameters:

No.	Name	Function name	Description
FunOUT.18	ToqReach	Torque arrival	Active: The absolute value of the torque reference reaches the setpoint. Inactive: The absolute value of the torque reference is lower than the setpoint.

3.12 Hybrid Control Mode

The hybrid control mode means that the servo drive can switch between different control modes when the S-ON signal is active and the servo status is "run". Switchover between the following modes is supported:

- Torque control mode → Speed control mode
- Speed control mode → Position control mode
- Torque control mode → Position control mode
- Speed control mode → Position control mode → Torque control mode

You can enable the compound control mode by setting H02.00 through the keypad or the software tool.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H02.00	2002-01h	Control mode selection	0: Speed control mode 1: Position control mode 2: Torque control mode 3: Torque/Speed control mode 4: Speed/Position control mode 5: Torque/Position control mode 6: Torque/Speed/Position compound mode 7: Process segment 8: CANopen mode	1	-	At stop	"H02_en.00" on page 389

Set the servo drive parameters of different control modes based on the mechanical structure and specifications.

When H02.00 is set to 3, 4, or 5, assign a DI with FunIN.10 (M1_SEL, mode switchover 1) and set the active logic of this DI. When H02.00 is set to 6, assign two DIs with FunIN.10 (Mode switchover 1) and FunIN.11 (Mode DI 2) and set the active logic of these two DIs.

☆ Related parameters:

No.	Name	Function name	Function
FunIN.10	M1_SEL	Mode switchover 1	Defines the present control mode during compound control when the servo drive is in the "run" state, as shown in "Table 3-29" on page 165.
FunIN.11	M2_SEL	Mode switchover 2	Defines the present control mode during compound control when the servo drive is in the "run" state, as shown in "Table 3-30" on page 166.

Table 3–29 Servo drive control mode

H02.00	M1_SEL terminal logic	Control mode
3	Inactive	Torque mode
	Active	Speed mode
4	Inactive	Speed mode
	Active	Position mode
5	Inactive	Torque mode
	Active	Position mode

Table 3–30 Servo drive control mode

H02.00	M2_SEL terminal logic	M1_SEL terminal logic	Control mode
6	-	Active	Position mode
	Active	Inactive	Speed mode
	Inactive	Inactive	Torque mode

Note

It is recommended to switch from other control modes to the position control mode only in the zero speed state.

3.13 Interpolated position (IP) mode

The interpolation mode can be used to achieve synchronous operations of multi-axis servo drives or single-axis servo drives. When the servo drive is not enabled, after the host controller sets the interpolation cycle, the displacement curve is planned in advance according to actual application requirements. When the servo drive is running, different absolute position points on the displacement curve are periodically sent to the slave. The slave synchronously receives the displacement reference, subdivides, and evenly transmits the displacement reference increment based on the position loop control cycle. Position control, speed control, and torque control are performed by the servo drive.


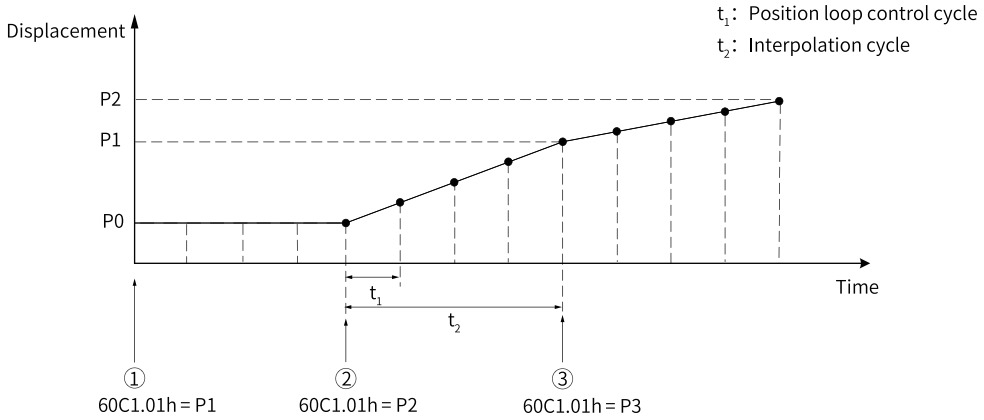


Figure 3-124 Motor displacement profile in single-axis linear interpolation

Note

- 1: The current absolute position of the servo motor is P0. After receiving the first absolute position reference P1, the servo motor starts to plan the first displacement curve.
- 2: The current absolute position of the servo motor is P0. The servo motor starts to move towards the first absolute position P1. After receiving the second absolute position reference P2, the servo motor starts to plan the second displacement curve.
- 3: The servo motor reaches the first absolute position P1 and starts to move towards the second absolute position P2. After receiving the third absolute position reference P3, the servo motor starts to plan the third displacement curve.
- t_1 : Position loop control cycle, which is defined by the servo drive
- t_2 : Interpolation cycle, which can be defined through the object dictionary 60C2h The SV670P-INT series servo drive supports a synchronization cycle of 1 ms to 20 ms. Synchronization cycles beyond this range will be restricted by this range.
- P0/P1/P2: absolute position. An absolute position reference is sent through 60C1.1h. The interpolation mode supports absolute position references only.
- The displacement reference increments in each synchronization cycle are P1-P0 and P2-P1.
- When using the interpolation mode, set the position loop period to 1 k.
- The displacement reference increments in each synchronization cycle are P1-P0 and P2-P1.

3.13.1 Function Block Diagram

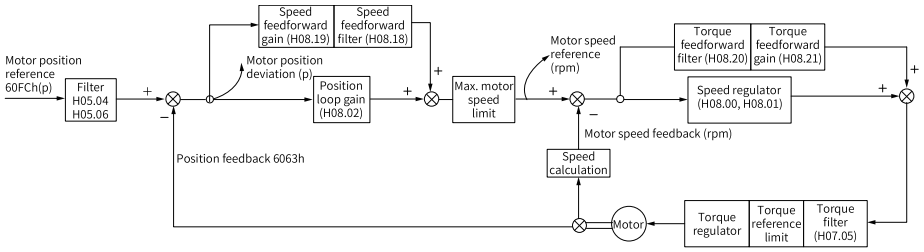

3.13.2 Configuration Block Diagram

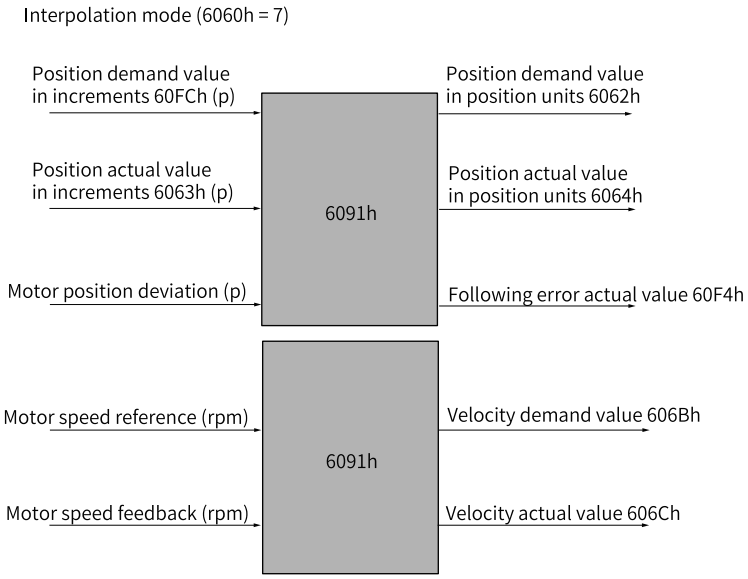


Figure 3-125 IP mode configuration

3.13.3 Recommended Configuration

Basic configuration:

RPDO	TPDO	Remarks
6040h: control word	6041h: status word	Mandatory
60C1.01h: target position	6064h: position actual value	Mandatory
6060h: modes of operation	6061h: modes of operation display	Optional

3.13.4 Related parameters

The control word 6040h in IP mode is described as follows:

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time
Accessibility:	Read/write	Mapping:	RPDO

Value range:

0x0 to 0xFFFF

Description:

See section "Basic Functions of the Servo Drive" for the description of the control word.

Bit	Name	Setpoint	Description
0 to 3	-	See the relationship between status switching and control commands.	See the object dictionary.
4	Interpolation mode enable	-	0: Interpolation interrupted 1: Interpolation enabled bit4 must remain 1 during interpolation. bit12 of 6041h can be used as a feedback indicating whether the interpolation mode is activated.
5 and 6	N/A	-	-
7 to 15	-	See the relationship between status switching and control commands.	See the object dictionary.

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Accessibili- Read-only Mapping: TPDO
ty:

Value range:

0x0 to 0xFFFF

Description:

Indicates the drive status.

Bit	Name	Setpoint	Description
0 to 9	-	See the relationship between status switching and control commands.	See the object dictionary.
10	Target reached	-	0: Target position not reached 1: Target position reached
11	Software internal limit reached	-	0: The actual position value does not reach the software position limit. 1: The actual position value reaches the software position limit.
12	Interpolation mode activated	-	0: Interpolation is not activated. 1: Interpolation is activated.
13	Position deviation	-	0: Acceptable position deviation 1: Excessive position deviation
14	N/A	-	-
15	HomeAttain	-	0: Homing not performed or completed. 1: Homing is complete and the reference point is found.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
6060h	6060h	Servo drive mode selection	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Real time	"6060h" on page 801
6061h	6061h	Operation mode display	1: Profile position (PP) mode 3: Profile velocity (PV) mode 4: Profile torque (PT) mode 6: Homing (HM) mode 7: Interpolation (IP) mode	0	-	Read-only	"6061h" on page 801
6064h	6064h	Position feedback	-2147483648 to +2147483647	0	Reference unit	Read-only	"6064h" on page 802
6066h	6066h	Time to trigger excessive position deviation	0 to 65535	0	ms	Real time	"6066h" on page 803
607Fh	607Fh	Maximum speed	0 to 4294967295	4294967295	Reference unit/s	Real time	"6067h" on page 803

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
60C1.01h	60C1-01h	Interpolation displacement	-2147483648 to +2147483647	0	Reference unit	Real time	"60C1_en.01h" on page 816
60C2.01h	60C2-01h	Interpolation period time constant	1 to 20	1	-	Real time	"60C2_en.02h" on page 816
6081h	6081h	Profile velocity	0 to 4294967295	111848106	Reference unit/s	Real time	"6081h" on page 808
6083h	6083h	Profile acceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6083h" on page 809
6084h	6084h	Profile deceleration	0 to 4294967295	4294967295	Reference unit/s²	Real time	"6084h" on page 809

3.13.5 Related Function Settings

Positioning completed

Positioning completed: When position deviation fulfills the set condition, the positioning process is completed. In this case, the servo drive sets bit10 of the status word 6041h, and the host controller, once receives the signal, acknowledges that positioning has been completed.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
6067h	6067h	Position reach threshold	0 to 4294967295	46976	Reference unit	Real time	"6067h" on page 803
6068h	6068h	Position reach window time	0 to 65535	0	ms	Real time	"6068h" on page 803

Detection on excessive position deviation

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
6065h	6065h	Threshold of excessive position deviation	0 to 4294967295	219895614	Reference unit	Real time	"6065h" on page 802

Reference polarity

You can change the position reference direction through setting the position reference polarity.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
607Eh	607Eh	Reference polarity	0x0 to 0xFF	0x0	-	Real time	"607Eh" on page 808

3.14 Interrupt Positioning

Caution

The interrupt positioning signal cannot be triggered during homing.

Function description

If interrupt positioning is triggered in position control mode, the servo drive halts the current operation and turns to executing the pre-set position reference. To be specific, when the servo ON signal is active in position control mode, if this function is enabled, the servo motor runs the position reference for position change on fly in the original direction (before the function is triggered).

When interrupt positioning is in progress, the servo drive does not respond to any other internal/external position references (including another interrupt positioning command). In this case, the input position reference counter (H0b.13) counts only the interrupt positioning reference. After interrupt positioning is done, the servo drive may or may not respond to the position references depending on the setpoint of H05.29 (Interrupt positioning clear signal). The position references received during interrupt positioning are invalid.

After the running of this function is complete, the servo drive outputs the position change on fly completed signal (FunOUT.15:XintCoin) and positioning completed signal (FunOUT.5:COIN) signal simultaneously. After receiving the position change on fly completed signal, the host controller confirms that the running of this function is complete. The output of the position change on fly completed signal is irrelevant to the S-ON signal and DI8 terminal logic.

This function takes effect on the following conditions:

- The motor speed is higher than or equal to 10 rpm before interrupt positioning is triggered, or the setpoints of H05.26 and H05.24 are not 0.
- The DI assigned with FunIN.33 (Interrupt positioning inhibited) is not used or the logic of this DI is inactive.

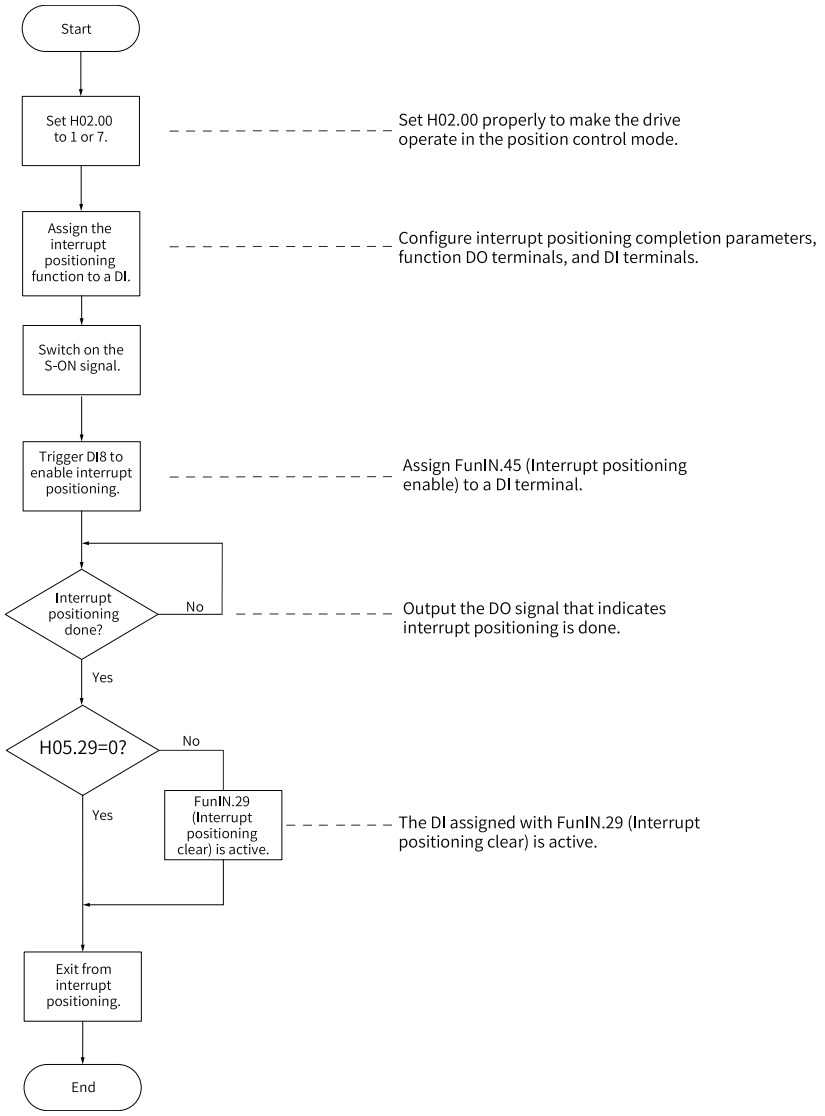


Figure 3-126 Flowchart of interrupt positioning signal

Parameter settings

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.24	2005-19h	Displacement of interrupt positioning	-1073741824 to 1073741824	10000	Reference unit	Real time	"H05_en.24" on page 442
H05.26	2005-1Bh	Constant operating speed in interrupt positioning	0 to 10000	200	rpm	Real time	"H05_en.26" on page 443

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.27	2005-1Ch	Acceleration/ Deceleration time of interrupt positioning	0 to 65535	10	ms	Real time	"H05_en.27" on page 443
H05.29	2005-1Eh	Interrupt positioning cancellation signal	0: Disable 1: Enable	1	-	Real time	"H05_en.29" on page 443

☆ Related parameters:

No.	Name	Function name	Function
FunIN.29	XintFree	Interrupt positioning clear	Active: The interrupt positioning state is cleared, which means the servo drive can respond to other position references. Inactive: The interrupt positioning signal is retained, and the servo drive does not respond to other position references.
FunIN.33	XintInHibit	Interrupt positioning inhibited	Active: Interrupt positioning inhibited Invalid: Interrupt positioning allowed
FunIN.45	XintEn	Interrupt positioning enable	Active: Interrupt positioning enabled Inactive: Interrupt positioning disabled The DI assigned with FunIN.45 (Interrupt positioning enable) is used to trigger interrupt positioning.
FunOut.15	XintCoin	Interrupt positioning completed	Active: In position control mode, interrupt positioning is completed. Inactive: In position control mode, interrupt positioning is not completed.

When DI7 is assigned with FunIN.45, the active logic of DI7 is as follows:

Table 3–31 Active logic of DI7 during interrupt positioning

H03.15	Active logic of DI7
0	Low level triggered
1	High level triggered

The constant speed for interrupt positioning is shown in the following figure.

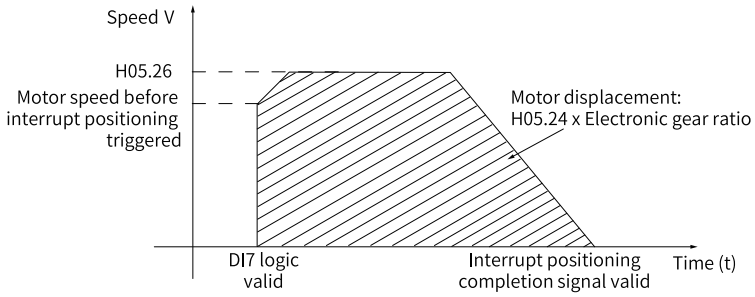


Figure 3-127 Motor running curve of interrupt positioning

Table 3–32 Motor speed for interrupt positioning

H05.26	Motor speed (rpm) before triggering interrupt positioning	Interrupt positioning status	Constant operating speed in interrupt positioning
0	< 10	Inactive	-
	≥ 10	Active	Motor speed before interrupt positioning is triggered
1 to 6000	-	Active	H05.26

3.15 Homing

Caution

- The homing signal is shielded when the position change on fly or multi-position function is running.
- To use the homing function, ensure H11.00 is not set to 5 as the setpoint 5 indicates enhanced axis control mode, in which the homing function is shielded.
- Do not set H05.30=6 or H05.30=8 during motor operation upon receiving references; otherwise speed fluctuations will occur.

Function description

- Home (or mechanical home) refers to the position of the home switch or Z signal. It is defined by parameter H05.31 (Homing mode).
- Zero point refers to the positioning target point, which equals home + offset. It is defined by parameter H05.36. When H05.36 (Mechanical home offset) is set to 0, the zero position coincides with the home.

Homing function: When the S-ON signal is active in position control mode, the servo motor proactively searches for the zero position and completes positioning if the homing function is triggered.

During the homing operation, the servo drive shields the other position references (including the homing reference triggered again). After the homing operation is completed, the servo drive can respond to other position references.

This function includes two actions:

- Home attaining: After receiving the homing signal, the servo drive proactively locates the relative position between the motor shaft and the preset mechanical home reference point. The drive finds the home and then moves through the offset from the home reference point to the zero point. The homing mode usually applies in initial searching for the zero position.
- Electric home attaining: After finding the absolute zero position, the servo drive moves a certain displacement from the current position.

After the homing operation is completed (including home attaining and electric home attaining), the absolute motor position (H0b.07) is the same as the mechanical home offset (H05.36).

After the homing operation is completed, the servo drive outputs the home attaining completed signal (FunOUT.16: HomeAttain) or electric home attaining completed signal (FunOUT.17:

ElecHomeAttain). After receiving this signal, the host controller confirms that the homing operation is completed. These two signals are irrelevant to the servo mode and running state.

Table 3–33 Comparison between homing and electrical homing

Action	Homing mode (H05.30)	Homing direction, deceleration point, and home	Trigger signal	Total motor displacement
Homing	0	-	-	-
	1	Determined by H05.31	HomingStart	Determined by the mechanical home coordinate and offset displacement
	3		Enable servo	
	4		Enable servo	
	6	-	-	-
	8	-	-	-
Electrical homing	2	The homing direction is consistent with the motor displacement sign (+/-). The deceleration point or home signal is not needed.	HomingStart	(H05.36 - H0b.07) × Electronic gear ratio
	5		Enable servo	

Homing

Caution

- Do not set H05.30=6 or H05.30=8 during motor operation upon receiving references. Otherwise, speed fluctuations will occur.
- Set mechanical limit switches before enabling the homing function. For homing upon hit-and-stop, set the offset to a value within the travel range to prevent the machine from collision due to high-speed operation during homing.
- When the motor hits the limit switch during homing, the drive reports E950.0 (Forward overtravel) or E952.0 (Reverse overtravel), and the motor, if H05.40 is set to 0 or 1, stops in the stop mode defined by H02.07.

The following part takes examples to describe homing:

- Forward, home switch as deceleration point and home (H05.31 = 0)
- Reverse, home switch as deceleration point and home (H05.31 = 1)
- Forward, Z signal as deceleration point and home (H05.31 = 2)
- Reverse, Z signal as deceleration point and home (H05.31 = 3)
- Forward, home switch as deceleration point and Z signal as home (H05.31 = 4)
- Reverse, home switch as deceleration point and Z signal as home (H05.31 = 5)
- Forward, positive limit switch as deceleration point and home (H05.31 = 6)
- Reverse, negative limit switch as deceleration point and home (H05.31 = 7)
- Forward, positive limit switch as deceleration point and Z signal as home (H05.31 = 8)
- Reverse, negative limit switch as deceleration point and Z signal as home (H05.31 = 9)
- Forward, mechanical limit position as deceleration point and home (H05.31 = 10)
- Reverse, mechanical limit position as deceleration point and home (H05.31 = 11)
- Forward, mechanical limit position as deceleration point and Z signal as home (H05.31 = 12)
- Reverse, mechanical limit position as deceleration point and Z signal as home (H05.31 = 13)
- Forward single-turn homing (H05.31 = 14)

- Reverse single-turn homing (H05.31 = 15)
- Single-turn nearby homing (H05.31 = 16)

Note

In the following figures, "H" represents the high speed defined in 6099.01h, "L" represents the low speed defined in 6099.02h, and "-" indicates reverse run.

- Forward, home switch as deceleration point and home (H05.31 = 0)

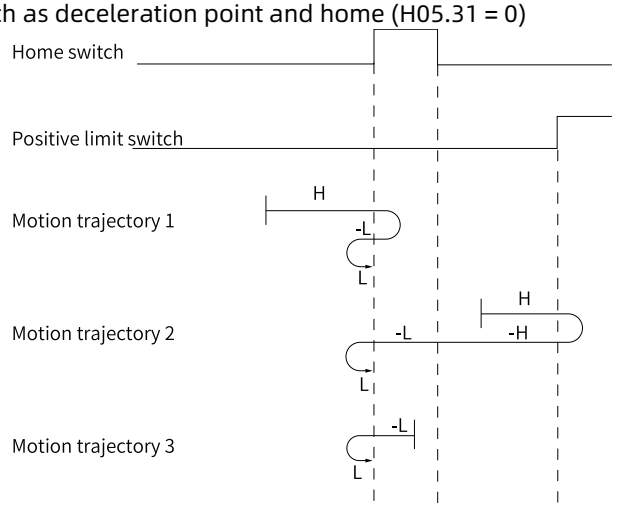


Figure 3-128 Motor running curve and speed in mode 0

  - Motion profile 1: The home switch (deceleration point) signal is active when the motor starts running, with the positive limit switch not triggered in the whole process.
  - Motion profile 2: The home switch (deceleration point) signal is inactive when the motor starts to run, with the positive limit switch triggered.
  - Motion profile 3: The home switch (deceleration point) signal is active when the motor starts running, with the positive limit switch not triggered in the whole process.

- Reverse, home switch as deceleration point and home (H05.31 = 1)

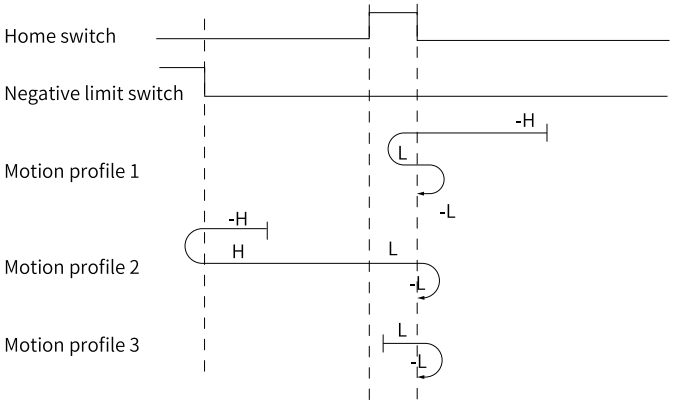


Figure 3-129 Motor operation curve and speed in mode 1

  - Motion profile 1: The home switch (deceleration point) signal is active when the motor starts running, with the positive limit switch not triggered in the whole process.
  - Motion profile 2: The home switch (deceleration point) signal is inactive when the motor starts running, with the negative limit switch triggered.

- Motion profile 3: The home switch (deceleration point) signal is active when the motor starts running, with the negative limit switch not triggered in the whole process.

- Forward, Z signal as deceleration point and home (H05.31 = 2)

Caution

Note: In Modes 2 and 3 (H05.31 = 2 or 3) where the motor Z signal acts as the home and deceleration point, the actual stop position of the motor may not be on the rising edge on the same side of the motor Z signal. A deviation of ±1 pulse (in encoder unit) may be present in the stop position.

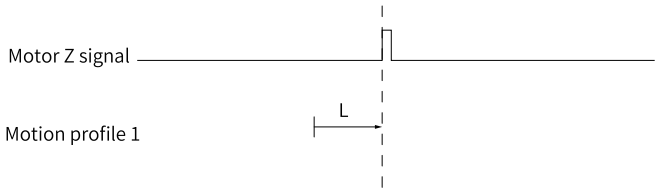


Figure 3-130 Motor operation curve and speed in mode 2

- Motion profile 1: The Z signal is inactive when the motor starts running, with the positive limit switch not triggered in the whole process.

- Reverse, Z signal as deceleration point and home (H05.31 = 3)

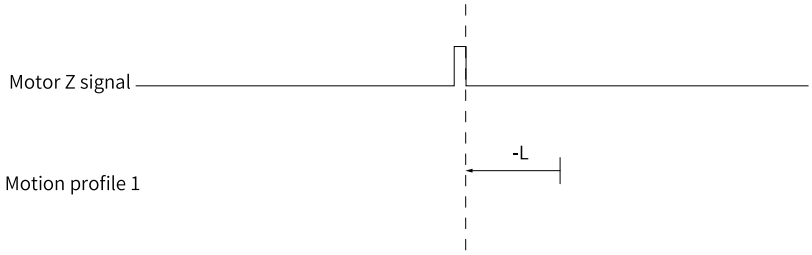


Figure 3-131 Motor operation curve and speed in mode 3

- Motion profile 1: The Z signal is inactive when the motor starts running, with the negative limit switch not triggered in the whole process.

- Forward, home switch as deceleration point and Z signal as home (H05.31 = 4)

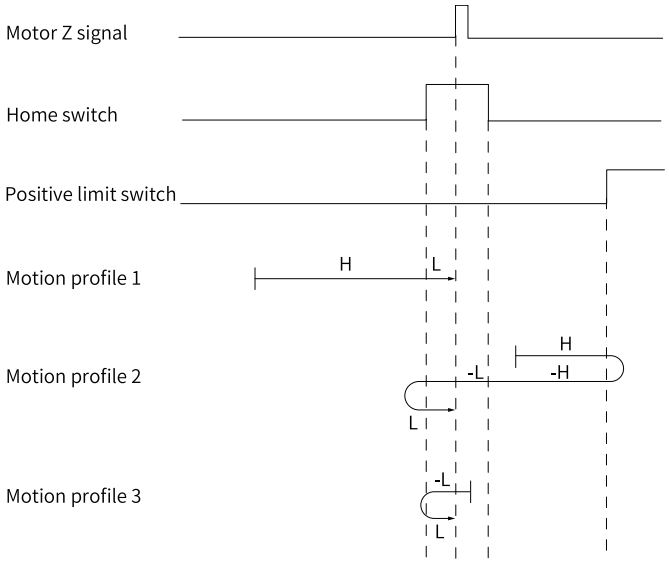


Figure 3-132 Motor running curve and speed in mode 4

- Motion profile 1: The home switch signal is inactive when the motor starts running, with the positive limit switch not triggered in the whole process.
- Motion profile 2: The home switch signal is inactive when the motor starts running, with the positive limit switch triggered.
- Motion profile 3: The home switch signal is active when the motor starts running, with the positive limit switch not triggered in the whole process.

- Reverse, home switch as deceleration point and Z signal as home (H05.31 = 5)

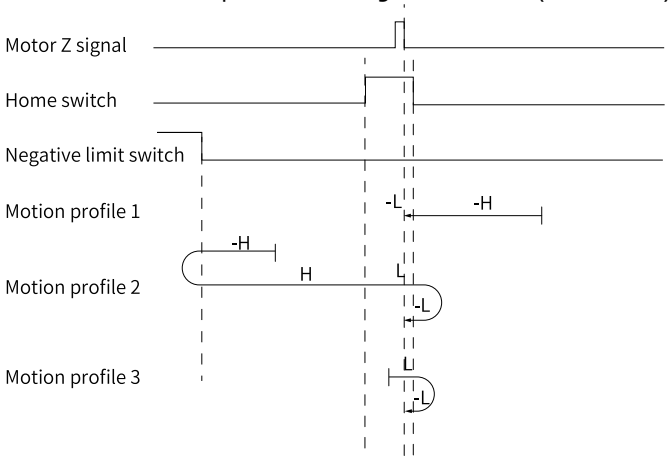


Figure 3-133 Motor running curve and speed in mode 5

- Motion profile 1: The home switch signal is inactive when the motor starts running, with the positive limit switch not triggered in the whole process.
- Motion profile 2: The home switch signal is inactive when the motor starts running, with the positive limit switch triggered.
- Motion profile 3: The home switch signal is active when the motor starts running, with the negative limit switch not triggered in the entire process.

- Forward, positive limit switch as deceleration point and home (H05.31 = 6)

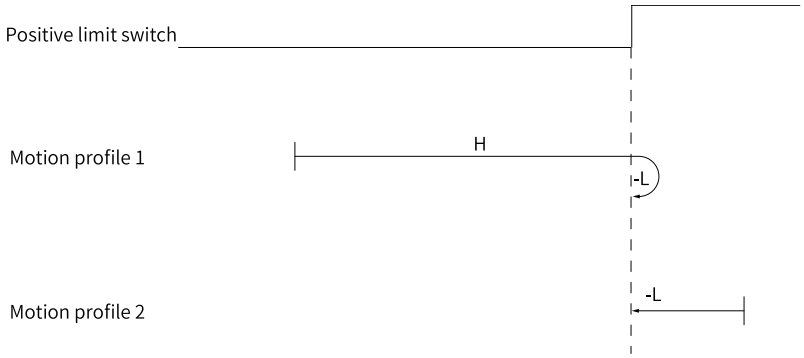


Figure 3-134 Motor running curve and speed in mode 6

- Motion profile 1: The positive limit switch signal is inactive when the motor starts running.
- Motion profile 2: The positive limit switch signal is active when the motor starts running.

- Reverse, negative limit switch as deceleration point and home (H05.31 = 7)

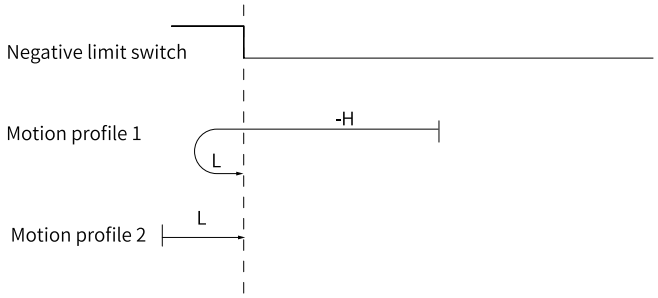


Figure 3-135 Motor operation curve and speed in mode 7

- Motion profile 1: The negative limit switch signal is inactive when the motor starts running.
- Motion profile 2: The negative limit switch signal is active when the motor starts running.

- Forward, positive limit switch as deceleration point and Z signal as home (H05.31 = 8)

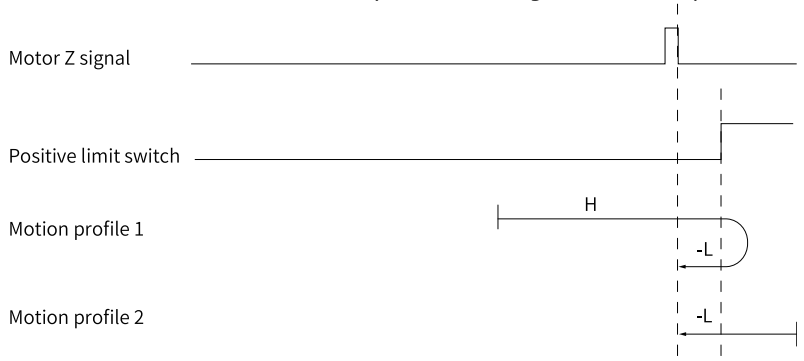


Figure 3-136 Motor running curve and speed in mode 8

- Motion profile 1: The positive limit switch signal is inactive when the motor starts running.
- Motion profile 2: The positive limit switch signal is active when the motor starts running.

- Reverse, negative limit switch as deceleration point and Z signal as home (H05.31 = 9)

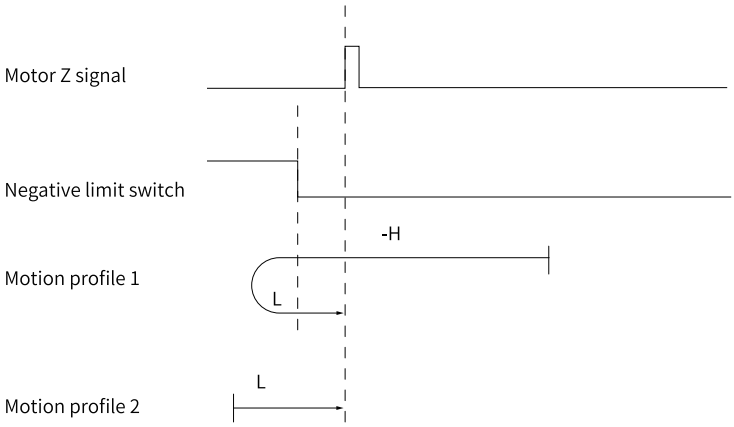


Figure 3-137 Motor running curve and speed in mode 9

- Motion profile 1: The negative limit switch signal is inactive when the motor starts running.
- Motion profile 2: The negative limit switch signal is active when the motor starts running.

- Forward, mechanical limit position as deceleration point and home (H05.31 = 10)

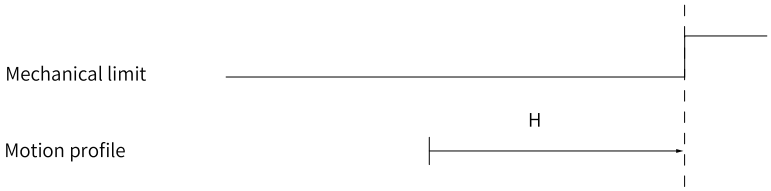


Figure 3-138 Motor running curve and speed in mode 10

- Motion profile: The positive limit switch signal is inactive when the motor starts running.

- Reverse, mechanical limit position as deceleration point and home (H05.31 = 11)

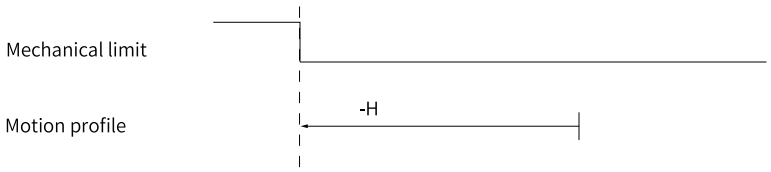


Figure 3-139 Motor running curve and speed in mode 11

- Motion profile: The negative limit switch signal is inactive when the motor starts running.

- Forward, mechanical limit position as deceleration point and Z signal as home (H05.31 = 12)

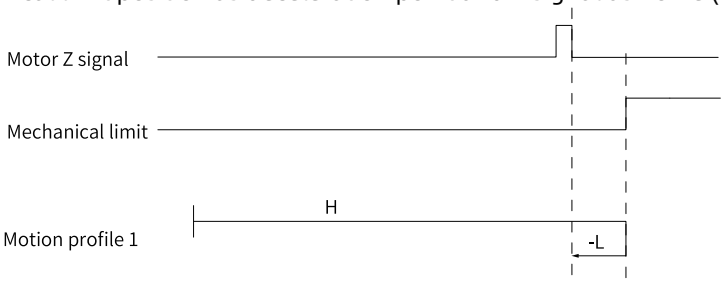


Figure 3-140 Motor running curve and speeds in mode 12

- Motion profile 1: The positive limit switch signal is inactive when the motor starts running.

- Reverse, mechanical limit position as deceleration point and Z signal as home (H05.31 = 13)

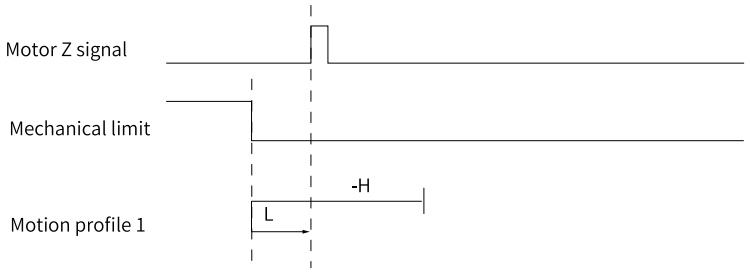


Figure 3-141 Motor running curve and speed in mode 13

- Motion profile 1: The negative limit switch signal is inactive when the motor starts running.

- Forward single-turn homing (H05.31 = 14)

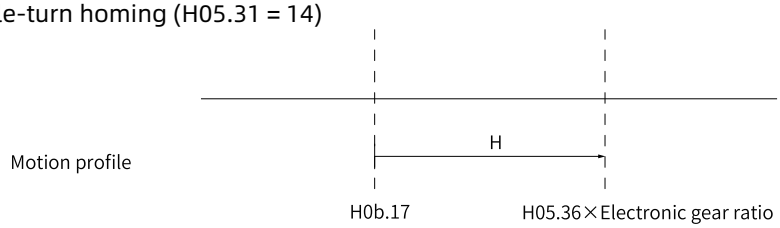


Figure 3-142 Motor running curve and speed in mode 14

- Motion profile: The positive limit switch signal is inactive when the motor starts running.

Note

When H05.31=14/15/16, the single-turn homing is only effective in absolute position single-turn mode (H02.01 = 4).

- Reverse single-turn homing (H05.31 = 15)

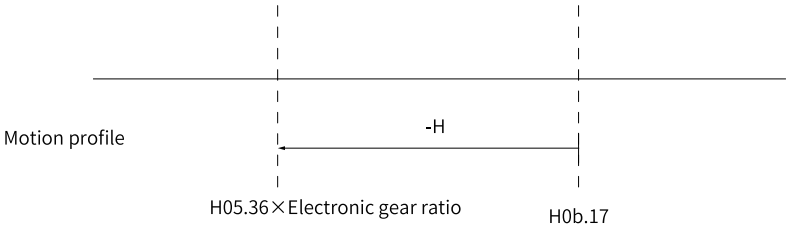


Figure 3-143 Motor running curve and speed in mode 15

- Motion profile: The negative limit switch signal is inactive when the motor starts running.

Note

When H05.31=14/15/16, the single-turn homing is only effective in absolute position single-turn mode (H02.01 = 4).

- Single-turn nearby homing (H05.31 = 16)

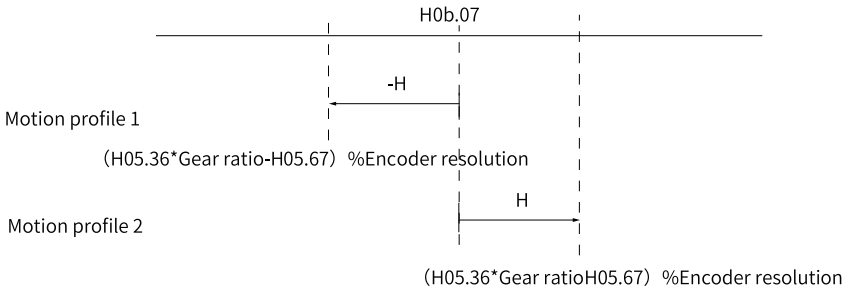


Figure 3-144 Motor running curve and speed in mode 16

- Motion profile 1: The positive limit switch signal is inactive when the motor starts running.
- Motion profile 2: The negative limit switch signal is inactive when the motor starts running.

Note

When H05.31=14/15/16, the single-turn homing is only effective in absolute position single-turn mode (H02.01 = 4).

Evaluation condition for torque homing: After the motor reaches the hardware limit, and the torque feedback reaches the limit value defined in H05.58 (mechanical torque limit, in 0.1%), the first Z signal in the reverse direction is searched for and regarded as the home after the motor stops.

Electrical homing: starting electrical homing (H05.30 = 5)

The mechanical zero position is obtained after homing is done. In this case, you can make the motor move from current position (H0b.07) to the designated position (H05.36) by setting H05.36.

In electrical homing mode, the motor runs at the speed defined by H05.32 in the direction defined by the sign (+/-) of the displacement value. The total displacement is determined by the difference between H05.36 and H0b.07. The motor stops immediately after the displacement reference is done executing.

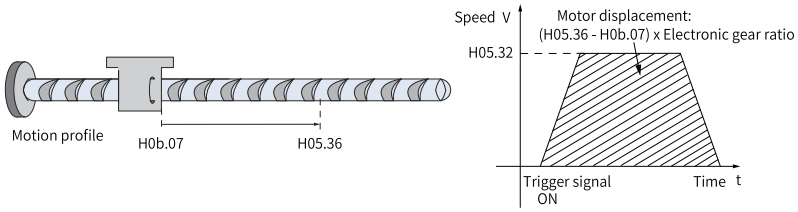
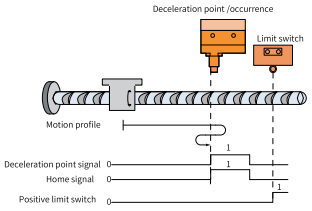
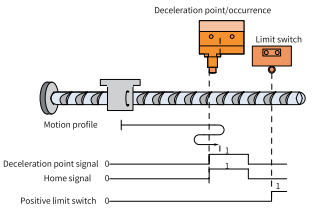
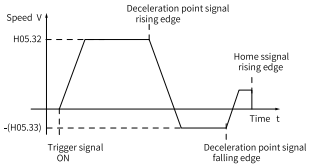
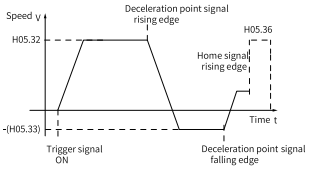


Figure 3-145 Motor running curve and speed of electrical homing

Mechanical home and mechanical zero

The following takes "H05.30 = 0" as an example to describe the difference between mechanical home and mechanical zero.

Table 3–34 Difference between mechanical home and mechanical zero

Mechanical zero different from mechanical home	Mechanical zero same as mechanical home
If the home offset is present (H05.36 ≠ 0) and the mechanical home differs from the mechanical zero (H05.40 = 0 or 2), the motor stops immediately after reaching the rising edge of the home signal during acceleration or forward operation at constant speed. After stop, the motor absolute position (H0b.07) is changed to the setpoint of H05.36 (Mechanical home offset) forcibly.	If the home offset is present (H05.36 ≠ 0) and the mechanical home coincides with the mechanical zero (H05.40 = 1 or 3), the motor continues running after reaching the rising edge of the home switch signal during acceleration or forward operation at constant speed until the absolute position (H0b.07) reaches the setpoint of H05.36 (Mechanical home offset).
	
	

Parameter settings

- Setting the homing mode

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.30	2005-1Fh	Homing enable selection	P-type models: 0: Disabled 1: Homing enabled through the HomingStart signal input from DI 2: Electrical homing enabled through the HomingStart signal input from DI 3: Homing started immediately upon power-on 4: Homing executed immediately 5: Electrical homing started 6: Current position as home 8: D-triggered position as home N-type models: 0: Disabled 6: Current position used as the home	0	-	Real time	"H05_en.30" on page 443
H05.31	2005-20h	Mode of home return	0: Forward, home switch as deceleration point and home 1: Reverse, home switch as deceleration point and home 2: Forward, Z signal as deceleration point and home 3: Reverse, motor Z signal as deceleration point and home 4: Forward, home switch as deceleration point and Z signal as home 5: Reverse, home switch as deceleration point and Z signal as home 6: Forward, positive limit switch as deceleration point and home 7: Reverse, negative limit switch as deceleration point and home 8: Forward, positive limit switch as deceleration point and Z signal as home 9: Reverse, negative limit switch as deceleration point and Z signal as home 10: Forward, mechanical limit position as deceleration point and home 11: Reverse, mechanical limit position as deceleration point and home 12: Forward, mechanical limit position as deceleration point and Z signal as home 13: Reverse, mechanical limit position as deceleration point and Z signal as home 14: Forward single-turn homing 15: Reverse single-turn homing 16: Nearby single-turn homing	0	-	Real time	"H05_en.31" on page 444

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.40	2005-29h	Mechanical home offset and action upon overtravel	0: H05.36 as the coordinate after homing, reverse homing applied after homing triggered again on overtravel 1: H05.36 as the relative offset after homing, reverse homing applied after homing triggered again on overtravel 2: H05.36 as the coordinate after homing, reverse homing auto-applied on overtravel 3: H05.36 as the relative offset after homing, reverse homing auto-applied on overtravel	0	-	Real time	"H05_en.40" on page 447

- Setting the homing running curve

  If the home switch signal is turned on after the deceleration signal becomes active but deceleration is insufficient, the positioning may be inaccurate. Take the displacement required by deceleration into account before setting the deceleration point and homing signal input position. The acceleration/deceleration time during homing (H05.34) also affect the positioning stability.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.32	2005-21h	Speed in high-speed searching for home switch signal	0 to 3000	100	rpm	Real time	"H05_en.32" on page 445
H05.33	2005-22h	Speed in low-speed searching for home switch signal	0 to 1000	10	rpm	Real time	"H05_en.33" on page 445
H05.34	2005-23h	Acceleration/ Deceleration time during homing	0 to 1000	1000	ms	Real time	"H05_en.34" on page 445
H05.35	2005-24h	Home search time limit	0 to 65535	10000	-	Real time	"H05_en.35" on page 446
H05.36	2005-25h	Mechanical home offset	-2147483648 to +2147483647	0	Reference unit	Real time	"H05_en.36" on page 446

  ☆ Related parameters:

No.	Name	Function name	Function
FunIN.31	HomeSwitch	Home switch	Active: Current position as home Set the logic of the DI terminal with this function to high/low-level triggered according to the output of the host controller. See the following table.
FunIN.32	HomingStart	Homing	Active: Homing enabled (The HomingStart signal cannot be triggered repeatedly during homing.) Inactive: Homing inhibited
FunIN.41	HomingRecord	DI-triggered point as the home	The edge-triggered position is taken as the home.
FunOut.16	HomeAttain	HomeAttain	Active: Homing completed in position control mode Inactive: Homing not completed
FunOut.17	ElecHomeAttain	Electrical homing completed	Valid: Electrical home attaining completed in position control mode Invalid: Electrical home attaining not completed

Logic of DI with HomeSwitch	Actual valid level
0 (Low level)	Low level
1 (High level)	High level

Sequence

- H05.30 = 1 or 2

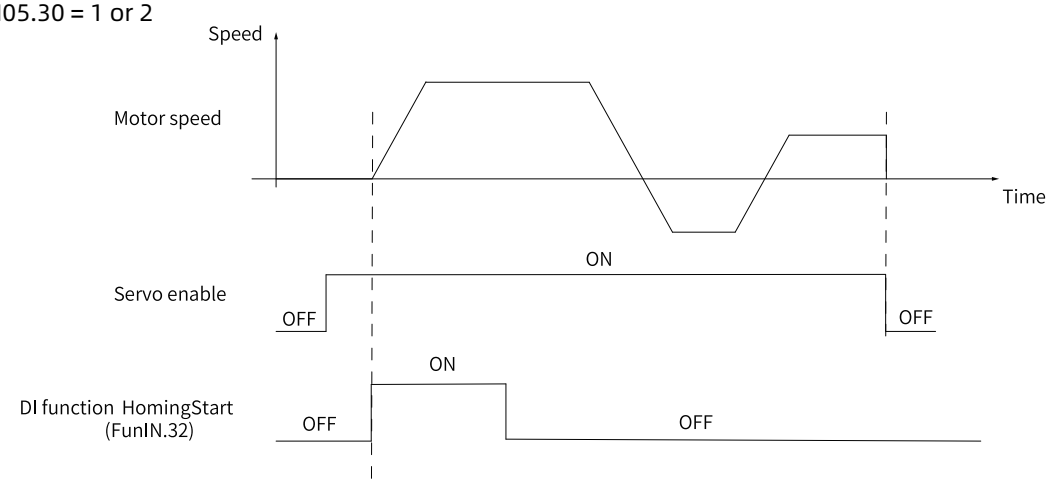


Figure 3-146 Example of time sequence diagram

  - Switch on the S-ON signal first and then the HomingStart signal.
  - During homing, the S-ON signal remains active and the change of the HomingStart signal is shielded.
  - During homing, the motor stops if the S-ON signal is switched off. To enable homing again, switch on the S-ON signal first and then the HomingStart signal.
  - If E601.0 (Homing timeout) occurs, the motor stops, but the S-ON signal remains active. In this case, trigger the HomingStart signal again to reset E601.0, and execute homing again.
  - The homing operation can be triggered repeatedly.

- H05.30 = 3

- The homing operation is executed only when the S-ON signal is switched on for the first time after power-on.
- The motor stops when E601.0 (Homing timeout) occurs. To reset E601.0, deactivate the S-ON signal.
- The homing operation can only be triggered again at next power-on.

- H05.30 = 4 or 5
  - The homing operation is executed immediately after the S-ON signal is switched on upon power-on.
  - If the S-ON signal is deactivated during homing, the motor stops immediately. To trigger homing again, activate the S-ON signal again.
  - When E601.0 (Homing timeout) occurs, H05.30 is set to 0 and the motor stops. To reset E601.0, deactivate the S-ON signal. To perform homing again, reset H05.30. After homing is done, H05.30 is set to 0. To perform homing again, set H05.30 again.
- H05.30 = 6
  - To take the current position as the home and achieve home offset (H05.40 = 0 or 2, H05.36 ≠ 0), set H05.36 and H05.40 first, and then set H05.30 to 6. Otherwise, H0b.07 retains the previous value of H05.36 rather than the one set currently.
  - After homing is done, H05.30 will be set to 0. To enable homing again, re-write H05.36 and set H05.30 to 6.
- H05.30 = 8
  - To take the DI-triggered position as the home, assign FunIN.41 to a DI first and set the current position as the home.
  - To enable home offset (H05.40 = 0 or 2, H05.36 ≠ 0), set H05.36 and H05.40 first, and then set H05.30 to 6. Otherwise, H0b.07 retains the previous value of H05.36 rather than the one set currently.

4 Common Functions

4.1 Absolute System

4.1.1 Overview

The absolute encoder detects the motor position within one revolution and counts the number of revolutions. For example, a 23-bit encoder whose resolution is 8388608 (2^{23}) PPR records the 23-bit multi-turn data. The absolute system integrated with the absolute encoder works in absolute position linear mode or absolute position rotating mode. These modes apply to position control, speed control, and torque control modes. The absolute encoder with a battery can back up data when the servo drive is powered off. This enables the servo drive to calculate the absolute mechanical position upon power-on again. Therefore, the homing operation is not required.

To match the absolute encoder with the SV670-INT series servo drives, set H00.00 (Motor code) to 14101 (Inovance 23-bit absolute encoder). Set H02.01 (Absolute system selection) according to the actual condition. E731.0 (Encoder battery failure) will occur upon initial power-on of the battery. Set H0d.20 (Absolute encoder reset function) to 1 to reset E731.0 before performing the homing operation.

Note

When you change the value of H02.02 (Direction of rotation) or H0d.20 (Absolute encoder reset selection), the absolute position recorded by the encoder changes suddenly, causing the mechanical absolute position reference to change. In this case, perform the homing operation. After homing is done, the deviation between the mechanical absolute position and that recorded in the encoder will be calculated automatically and saved in the EEPROM of the servo drive.

Table 4–1 Absolute modes supported by the motor for SV670-INT

Type	Incremental mode	Absolute position linear mode	Absolute position rotation mode	Single-turn absolute mode
DDL motor + ABZ incremental encoder (with TTL signal)	√	×	×	×
DDL motor + Inovance incremental encoder	√	×	×	×
DDR motor + ABZ Incremental encoder (with TTL signal)	√	×	×	×
DDR motor + Inovance absolute encoder	√	√	√	√
Servo motor + ABZ incremental encoder (with TTL signal)	√	×	×	×
Servo motor + Inovance absolute encoder	√	√	√	√
Servo motor + Nikon absolute encoder	√	√	√	√
Servo motor + TAMAGAWA absolute encoder	√	√	√	√
Servo motor + SSI encoder	√	√	×	×

Note

When you set the H02.01 absolute value mode, refer to the preceding table. The E122.0 error will be reported in unsupported modes.

4.1.2 Related Parameters

Absolute encoder system settings

Set H00.00 to select the motor encoder to be used, and select the absolute position mode in H02.01.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H00.00	2000-01h	Motor code	20000: Linear motor - Pulse-type encoder 14202: Linear motor - Inovance communication-type 23-bit encoder 20001: DDR motor - Pulse-type encoder 14201: DDR motor - Inovance communication-type 23-bit encoder 20002: Rotary motor - Pulse-type encoder 14000: Rotary motor - Inovance communication-type 20-bit encoder 14101: Rotary motor - Inovance communication-type 23-bit encoder 14020: Rotary motor - Harmonic 20-bit encoder - 2.5 M baud rate 14021: Rotary motor - Harmonic 17-bit encoder - 2.5 M baud rate 14022: Rotary motor - Harmonic 17-bit encoder - 4 M baud rate 14120: Rotary motor - Nikon 20-bit encoder - 2.5 M baud rate 14121: Rotary motor - Nikon 17-bit encoder - 2.5 M baud rate 14122: Rotary motor - Nikon 17-bit encoder - 4 M baud rate 14130: Rotary motor - TAMAGAWA 17-bit encoder 14131: Rotary motor - TAMAGAWA 23-bit encoder	14101	-	At stop	"H00_en.00" on page 381
H00.08	2000-09h	Bus encoder type	0 to 65535	0	-	At stop	"H00_en.08" on page 383
H02.01	2002-02h	Absolute system selection	0: Incremental mode 1: Absolute position linear mode 2: Absolute position rotation mode 3: Absolute position linear mode (without encoder overflow alarm) 4: Absolute position single-turn mode	0	-	At stop	"H02_en.01" on page 390

Note

In the absolute position mode, the system detects the motor code automatically to check whether the motor used is configured with an absolute encoder. If not, E122.0 (Product mismatch in the absolute position mode) occurs.

Encoder feedback data

The encoder feedback data is divided into the number of revolutions and the single-turn position. For the incremental position mode and single-turn absolute position mode, the number of revolutions is not recorded.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0b.70	200b-47h	Number of the absolute encoder revolutions	-32768 to +32767	0	Rev	Read-only	"H0b_en.70" on page 545
H0b.71	200b-48h	Position of absolute encoder within one turn	0 to 2147483647	0	Encoder unit	Read-only	"H0b_en.71" on page 545
H0b.77	200b-4Eh	Encoder position (32 low-order bits)	0 to 4294967295	0	Encoder unit	Read-only	"H0b_en.77" on page 546
H0b.79	200b-50h	Encoder position (32 high-order bits)	-2147483648 to +2147483647	0	Encoder unit	Read-only	"H0b_en.79" on page 546

Absolute position linear mode

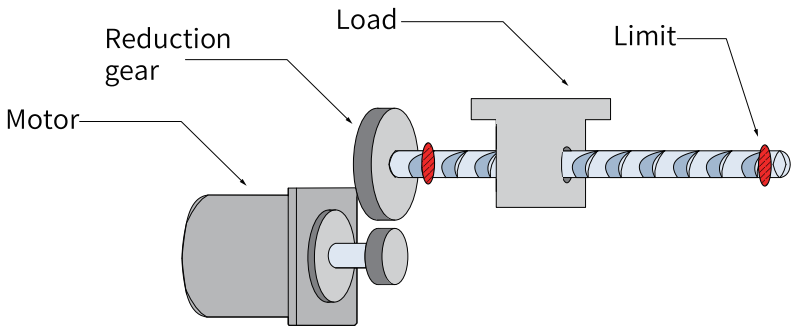


Figure 4-1 Application of the linear mode

If the electronic gear ratio is B ÷ A, the mechanical absolute position (H0b.58 and H0b.60) is P_M, then the following formula applies: H0b.07 (Absolute position counter) = $P_M \div (B \div A)$. H0b.07 indicates present mechanical absolute position (in reference unit).

The data range of the number of revolutions for the absolute encoder is -32768 to 32767. If data overflows, E735.0 (Encoder multi-turn counting overflow) occurs. In this case, set H0d.20 to 2 (Reset multi-turn data), and then perform homing again. In special occasions, you can set H0A.36 to 1 to mute E735.0 or use absolute position linear mode 2.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.36	2005-25h	Mechanical home offset	-2147483648 to +2147483647	0	Reference unit	Real time	"H05_en.36" on page 446
H05.46	2005-2Fh	DI selection of multi-turn frequency-division Z starting point	0: No selection 1: DI1 2: DI2 3: DI3 4: DI4 5: DI5 6: DI6 7: DI7 8: DI8	0	-	Real time	"H05_en.46" on page 450
H0b.07	200b-08h	Absolute position counter	-2147483648 to +2147483647	0	Reference unit	Read-only	"H0b_en.07" on page 533
H0b.58	200b-3Bh	Mechanical absolute position (32 low-order bits)	0 to 4294967295	0	Encoder unit	Read-only	"H0b_en.58" on page 543
H0b.60	200b-3Dh	Mechanical absolute position (32 high-order bits)	-2147483648 to +2147483647	0	Encoder unit	Read-only	"H0b_en.60" on page 544

Absolute position rotation mode

This mode is mainly applicable to the scenario where the load traveling range is not restricted and the number of unidirectional revolutions of the motor is smaller than 32767 upon power failure, as the rotating load shown in the following figure.



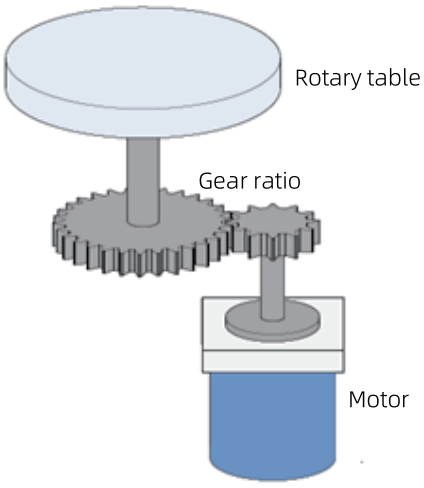


Figure 4-2 Application of the linear mode

The single-turn position range of the rotating load is 0 to (R_M -1) (R_M: Encoder pulses per load revolution). When the gear ratio is 1:1, the variation law of the target position and the single-turn position of the rotating load during forward running is shown as follows.

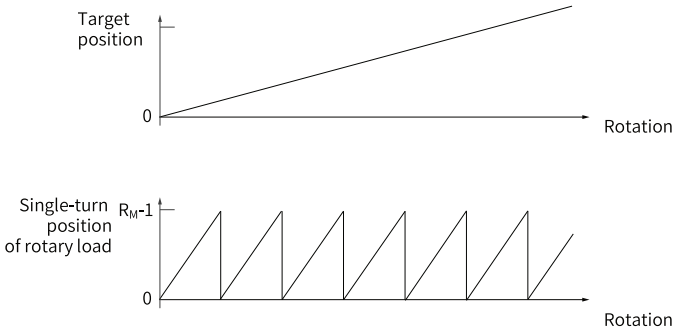

The variation law of the target position and the single-turn position of the rotating load during reverse operation is shown as follows.

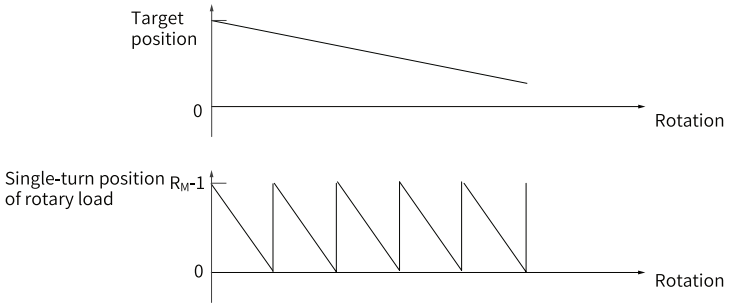

When the motor operates in absolute rotation mode and the drive operates in HM mode, the setting range of the home offset is 0 to (R_M – 1). If the home offset is set to a value outside this range, the drive reports EE09.1 (Home setting error).

The multi-turn data range is unlimited in absolute position rotation mode. Therefore, E735.0 (Encoder multi-turn counting overflow) is hidden automatically.

Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.50	2005-33h	Mechanical gear ratio in absolute position rotation mode (numerator)	1 to 65535	1	-	At stop	"H05_en.50" on page 451
H05.51	2005-34h	Mechanical gear ratio in absolute position rotation mode (denominator)	1 to 65535	1	-	At stop	"H05_en.51" on page 452

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.52	2005-35h	Pulses per revolution of the load in absolute position rotary mode (low-order 32 bits)	0 to 4294967295	0	Encoder unit	At stop	"H05_en.52" on page 452
H05.54	2005-37h	Pulses per revolution of the load in absolute position rotary mode (high-order 32 bits)	0 to 4294967295	0	Encoder unit	At stop	"H05_en.54" on page 452
H0b.81	200b-52h	Single-turn position of the rotating load (low-order 32 bits)	0 to 4294967295	0	Encoder unit	Read-only	"H0b_en.81" on page 546
H0b.83	200b-54h	Single-turn position of the rotating load (32 high-order bits)	-2147483648 to +2147483647	0	Encoder unit	Read-only	"H0b_en.83" on page 547
H0b.85	200b-56h	Single-turn position of the rotary load (reference unit)	0 to 4294967295	0	Reference unit	Read-only	"H0b_en.85" on page 547

Single-turn absolute mode


This mode applies to scenarios where the load travel range is within the single-turn range of the encoder. In this case, the absolute encoder does not need a battery because it only records the single-turn data.

- Target position input range
  If a 23-bit absolute encoder is used in the single-turn absolute mode, the drive operates in the position control mode and the electronic gear ratio is 1:1, then:


  When H05.36 (Mechanical home offset) is set to 0, the target position range is 0 to (2^{23} – 1).

  After homing is completed, the target position range is H05.36 to (2^{23} – 1 + H05.36).

- Example
  When the gear ratio is 1:1 and H05.36 is set to 0:

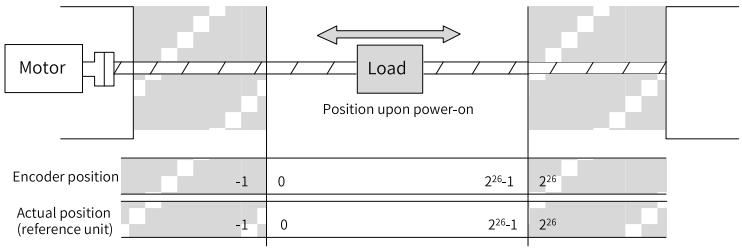

Gear ratio: 1:1; H05.36 = 10000:

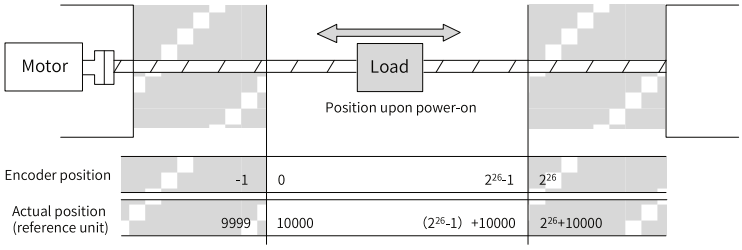

4.1.3 Precautions for Using the Battery Box

This section applies only to Inovance servo motors.

E731.0 (Encoder battery failure) will occur at initial power-on of the battery. Set H0d.20 (Absolute encoder reset function) to 1 to reset E731.0 before further operations.

When the battery voltage detected is lower than 3.0 V, E730.0 (Encoder battery warning) occurs.

In this case, replace the battery according to the following steps.

1. Power on the servo drive and make it remain in the non-operational state.
2. Replace the battery.
3. After the servo drive resets E730.0 automatically, if no other alarms occur, continue to operate the servo drive.

Note

- If you replace the battery after powering off the servo drive, E731.0 (Encoder battery failure) will occur at next power-on, leading to an abrupt change in the multi-turn data. In this case, set H0d.20 to 1 to reset the encoder fault. Then perform the homing operation again.
- Ensure the maximum motor speed does not exceed 6000 rpm upon power-down of the servo drive. This is to enable the encoder to record the position accurately.
- Keep the battery in environments within the required ambient temperature range and ensure the battery is in reliable contact and carries sufficient power capacity. Otherwise, encoder data loss may occur.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0d.20	200d-15h	Absolute encoder reset	0: No operation 1: Reset fault 2: Reset fault and multi-turn data 3: Reset Inovance secondary encoder fault 4: Reset Inovance secondary encoder fault and multi-turn data	0	-	At stop	"H0d_en.20" on page 555

Note

The absolute position recorded by the encoder changes abruptly after multi-turn data reset. In this case, perform mechanical homing.

4.2 Full Closed-loop

Note

For fully closed-loop functions, the safety speed and position-related functions only support safety speed and position monitoring on the internal encoder. Safety speed and position monitoring on external encoders are not supported.

4.2.1 Fully Closed-loop Parameter Settings

After setting the basic gain parameters, verify that the servo drive operates properly without overshoot and stops without generating unexpected noise. When the basic operating conditions are met, set the closed-loop parameters based on the following procedure.

1. **Set the external encoder feedback type**

   Set H0F.03 based on the external encoder type.

Note

- SV670P-INT supports one type of secondary encoder, which is the ABZ incremental encoder (TTL signal).
- After enabling fully closed-loop function, perform jogging to observe whether the value of H0F.20 (External position pulse feedback display) changes. In the case of improper wiring, the value of H0F.20 does not change and a fully closed-loop fault will be reported. In this case, rectify the fault and perform a power cycling until the value of H0F.20 changes without fault alarm.
- If the feedback type of the external encoder is the ABZ incremental encoder with TTL signals but without Z signals, set H0F.22 to 1 to disable detection on phase Z.

2. **Confirm the operating direction of the external encoder**

   Check whether the operating directions of the internal and external encoders are the same. If not, runaway can occur due to positive feedback.

   ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0F.01	200F-02h	External encoder usage mode	0: Standard operating direction 1: Reverse operating direction	0	-	Real time	"H0F_en.01" on page 564

The following describes how to confirm the operating direction of the external encoder.

Enter the JOG mode, and perform jogging at a low speed in one direction. Observe the value of H0F.18 (Feedback pulse counter of internal encoder) and H0F.20 (Feedback pulse counter of external). If these two values change in the same way (increase or decrease simultaneously), set H0F.01 to 0. Otherwise, set H0F.01 to 1.

Caution

- Perform necessary inspections before a motor trial run. For details, see "Pre-operation Inspection" in "Commissioning and Operation".
- Set H0F-01 to a proper value. If H0F-01 is set improperly, runaway accidents may occur.

3. **Determine the resolution of external encoder (external encoder pulses per revolution).**

Rotate the motor and observe the value of H0F.18 (Feedback pulse counter of internal encoder) to confirm that the motor has rotated for a full turn. Then, calculate the variation of H0F.20 (Feedback pulse counter of external encoder), and incorporate this value into H0F.04.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0F.04	200F-05h	External encoder pulses per revolution	1 to 2147483647	10000	-	At stop	"H0F_en.04" on page 565

Caution

- Suppose the values of H0F.18 and H0F.20 before the motor rotates are X_1 and Y_1 respectively, and their values change to X_2 and Y_2 after the motor rotates, then the following formula applies:

$$\text{H0F.04} = \text{Number of encoder pulses per revolution} \times \frac{Y_2-Y_1}{X_2-X_1}$$

- The calculation result must be a positive value. If it is a negative value, it indicates H0F.01 is set improperly. In this case, check the value of H0F.01 again.
- Set H0F.04 properly. If H0F.04 is set to a wrong value, EB02.0 (Position deviation too large in fully closed-loop mode) may occur when the drive is operating.

4. **Set the electronic gear ratio of the external encoder**

If H0F.00 is set to 1, set H05.07/H05.09. If H0F.00 is set to 2, set H05.07/H05.09 for the inner loop and H05.11/H05.13 for the outer loop.

See "3.2 Conversion Factors" on page 20 for how to set the electronic gear ratio. Assume that, for a fully closed-loop device, the external mechanical displacement corresponding to each X_1 pulse reference sent by the host controller is Y_1.

Then, perform the following operations:

a. Step 1: Set the electronic gear ratio to 1:1.

b. Step 2: Make the host controller send X_2 pulses. The external mechanical displacement measured is Y_2.

In this case, the electronic gear ratio fulfills the needs.

Note

- To set the fully closed-loop electronic gear ratio in internal/external closed-loop position switchover mode, set the electronic gear switchover switch (Gear_Sel) to the external closed-loop state.
- This method also applies to internal closed-loop mode. In the internal closed-loop mode, ensure the present state is internal closed-loop state.
- Set the electronic gear ratio correctly. Failure to comply will result in mechanical deviation.

5. **Set the alarm threshold**

Set H0F.08 and H0F.10 as follows:

- Set H0F.08 (Excessive deviation in compound control)

  Set H0F.08 (Excessive deviation in compound control) to define the position deviation threshold at which the servo drive detects fault EB02.0, indicating that the position deviation is excessive. The unit is one reference unit (same as one external encoder unit).

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0F.08	200F-09h	Excessive deviation threshold in compound control mode	0 to 2147483647	1000	-	Real time	"H0F_en.08" on page 566

  For example, if H0F.08 is set to 1000, EB02.0 (Excessive position deviation in fully closed-loop mode) will be output if the deviation between the mechanical displacement driven by the motor and the mechanical displacement (compound deviation) measured by the external encoder exceeds the displacement corresponding to 1000 external encoder pulses.

Note

- If it is set to 0, EB02.0 (Position deviation too large in fully closed loop) will not be output.
- H0F.08 must be set to a value (such as H0F.04 x H0F.10 x 50%) lower than H0F.04 x H0F.10. Otherwise, EB02.0 cannot be outputted.

- Set H0F.10 (Clear deviation in compound control)

  The value of H0F.10 indicates the revolutions to be run by the motor per deviation clear in compound control mode.

  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0F.10	200F-0Bh	Deviation clear in compound control	0 to 100	1	Rev	Real time	"H0F_en.10" on page 566

If H0F.10 is set to 0, the deviation in compound control will not be cleared.

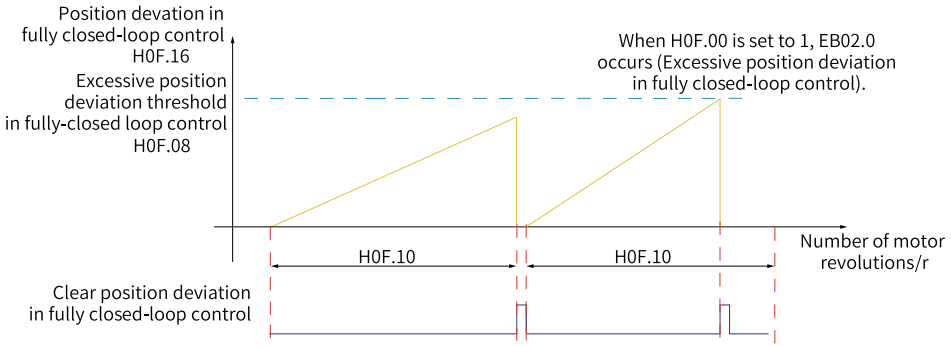


Figure 4-3 Position deviation cleared in fully closed-loop mode

The number of revolutions defined by H0F.10 is detected through internal encoder feedback pulses.

For example, if H0F.10 is set to 50, the servo drive detects whether the deviation in compound control exceeds the pulse unit defined by H0F.08 when the motor is in the process of rotating within 50 turns. If yes, a fault will be reported. If not, the servo drive clears the deviation after the motor rotates for more than 50 revolutions, and then starts monitoring again.

- Set the first-order low-pass filter for deviation in compound control.
  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0F.13	200F-0Eh	Compound vibration suppression filter time	0.0 to 6553.5	0.0	ms	At stop	"H0F_en.13" on page 566

The first-order filter time constant is used to filter vibration of the deviation in compound control, smoothening the speed in fully closed-loop mode.

- Source of touch probe Z signal in fully closed-loop mode
  ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0F.25	200F-1Ah	Source of touch probe Z signal in fully closed-loop mode	0: Motor Z signal 1: External feedback Z signal	0	-	Real time	"H0F_en.25" on page 568

H0F.25 (Source of touch probe Z signal in fully closed-loop mode) defines the source of the Z signal during homing in fully closed-loop mode. Setpoint 0 indicates that the Z signal of the inner loop is used as the source and setpoint 1 indicates that the Z signal of the outer loop is

used as the source. When the Z signal of the outer loop is used as the source, ensure that the Z signal is wired correctly. Otherwise, the Z signal may fail to be detected.



- Set H0F.10 properly for clearing deviation in compound control. Given the setpoint of H0F.08, if H0F.10 is set to an excessively low value, protection against excessive deviation in compound control can fail.
- Pay attention to encoder limit setting during use.
- Set this warning properly. Failure to comply may incur physical injuries due to runaway accident.

4.2.2 Enabling Fully Closed-loop Settings

After setting the preceding fully closed-loop parameters, observe the internal/external encoder feedback through H0F.18 and H0F.20, and check whether the fully closed-loop wiring and the application mode of the external encoder are proper. If yes, enable the fully closed-loop function.

Set the following parameters while enabling the fully closed-loop function:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.02	2003-03h	DI1 function selection	0: No assignment 1: Servo ON 2: Alarm reset signal 3: Gain switchover switch 4: Main/Auxiliary reference switchover 5: Multi-reference direction 6: Multi-reference switchover CMD1 7: Multi-reference switchover CMD2 8: Multi-reference switchover CMD3 9: Multi-reference switchover CMD4 10: Mode switchover M1-SEL 11: Mode switchover M2-SEL 12: Zero clamp enable signal 13: Position reference inhibited 14: Positive limit switch 15: Negative limit switch 16: Positive external torque limit 17: Negative external torque limit 18: Forward jog 19: Reverse jog 20: Step enable 21: Hand wheel override signal 1 22: Hand wheel override signal 2 23: Hand wheel enable signal 24: Electronic gear 25: Torque reference direction 26: Speed reference direction 27: Position reference direction 28: Multi-position reference enable (PoslnSen) 29: Interrupt positioning clear signal 31: Home switch 32: Homing enable 33: Interrupt positioning inhibited 34: Emergency stop 35: Position deviation clear 36: Internal speed limit source 37: Pulse reference inhibited 38: Touch probe 1 39: Touch probe 2 40: Multi-speed enable 41: Current position as home 42: Axis control command executed immediately 43: Axis control command not executed immediately 44: Positioning and command completion signal clear 45: Interrupt positioning enable	14	-	Real time	"H03_en.02" on page 402

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.02	2003-03h	DI1 function selection	46: Process segment enable 47: Process segment command switchover 1 48: Process segment command switchover 2 49: Process segment command switchover 3 50: Process segment command switchover 4 51: Event trigger process segment 1 52: Event trigger process segment 2 53: Event trigger process segment 3 54: Event trigger process segment 4 55: Process segment pause	14	-	Real time	
H0F.00	200F-01h	Encoder feedback mode	0: Internal encoder feedback 1: External encoder feedback 2: Inner/Outer loop switchover	0	-	Real time	"H0F_en.00" on page 563

Note

To switch between inner and outer loops, you need to set H0F.00 to 2, rather than changing it to 0 or 1 in realtime.

4.3 Software Limit

Function overview

Hardware position limit is implemented by inputting external encoder signals to CN1 of the servo drive.

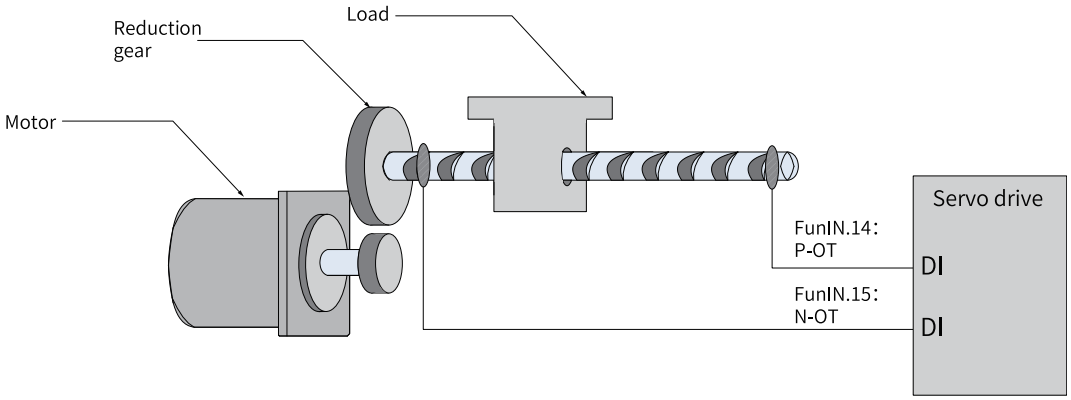


Figure 4-4 Installation of limit switches

The software limit is implemented through a comparison between the internal position feedback and the specified limit value. If the specified limit value is exceeded, the servo drive reports an alarm

and stops immediately. The software limit is available both in absolute position mode and incremental position mode. To use the software limit in incremental position mode, set H0A.01 (Software position limit) to 2 (Enabled after homing) first, and then perform homing upon power-on before applying the software limit.

Table 4–2 Comparison between the hardware limit and software limit

Hardware limit		Software limit	
1	Restricted to linear motion and single-turn rotational motion.	1	Applicable to both linear motion and rotational motion.
2	Requires an external mechanical limit switch.	2	Hardware wiring is not required, preventing malfunction due to poor cable connection.
3	Suffered from the risk of mechanical slip.	3	Internal position comparison can prevent malfunction due to mechanical slip.
4	Unable to sense or detect an overtravel fault after power-off.		

Related objects

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0A.01	200A-02h	Absolute position limit	0: Disable 1: Enable 2: Enable after homing	0	-	Real time	"H0A_en.01" on page 513
H0A.41	200A-2Ah	Positive software position limit	-2147483648 to +2147483647	2147483647	Encoder unit	At stop	"H0A_en.41" on page 521
H0A.43	200A-2Ch	Negative software position limit	-2147483648 to +2147483647	-2147483648	Encoder unit	At stop	"H0A_en.43" on page 522

Communication mode:

- When H0A.01 is set to 0 (Disable absolute position limit), the software limit is disabled.
- When H0A.01 is set to 1 (Enable absolute position limit), the software limit is enabled immediately upon power-on. 607D.01h (Minimum position limit) and 607D.02h (maximum position limit) are used by the function. Ensure the value of 607D.01h (Minimum position limit) is lower than or equal to 607D.02h (Maximum position limit). If 607D.01h (Minimum position limit) is set to a value larger than 607D.02h (Maximum position limit), EE09.0 (Software position limit setting error) is reported.
- If H0A.01 is set to 2 (Enable absolute position limit after homing), the software limit is not enabled after homing upon power-on. When the value of the absolute position counter is larger than the value of 607D.02h (Maximum position limit) after homing, E950.0 (Forward overtravel warning) occurs and the drive stops accordingly. When the value of the absolute position counter is smaller than the value of 607D.01h (Minimum position limit) after homing, E952.0 (Reverse overtravel warning) occurs and the drive stops accordingly.

Non-communication mode:

- When H0A.01 is set to 0 (Disable absolute position limit), the software limit is disabled.
- When H0A.01 is set to 1 (Enable absolute position limit), the software position limit is enabled immediately upon power-on. When the value of the absolute position counter (H0b.07) is higher than the value of H0A.41, E950.0 (Forward overtravel warning) occurs and the drive stops accordingly.
  When the value of the absolute position counter (H0b.07) is lower than the value of H0A.43, E952.0 (Reverse overtravel warning) occurs and the drive stops accordingly.
- If H0A.01 is set to 2 (Enable absolute position limit after homing), the software position limit is not enabled after homing upon power-on. When the value of the absolute position counter (H0b.07) is higher than the value of H0A.41 after homing, E950.0 (Forward overtravel warning) occurs and the drive stops accordingly. When the value of the absolute position counter (H0b.07) is lower than the value of H0A.43 after homing, E952.0 (Reverse overtravel warning) occurs and the drive stops accordingly.

Note

Ensure the value of 607Ch (Home offset) is within the software position limit. Otherwise, the servo drive reports EE09.1.

4.4 Software reset

Function overview

The software reset function applies when power cycling of the drive is not allowed on the application site.

Related objects

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0d.00	200d-01h	Software reset	0: No operation 1: Software reset	0	-	At stop	"H0d_en.00" on page 551

4.5 Motor Protection

Motor overload protection

The motor generates heat continuously due to thermal effect of the current after power-on. The heat is then dissipated to the surroundings. The servo drive provides motor overload protection to protect the motor against damage due to high temperature when the heat generated exceeds the heat released. To prevent such risks, the drive offers the motor overload protection function to prevent the motor from being damaged due to over-temperature.

The motor is compliant with NEC and CEC requirements and equipped with protective functions against overload and overtemperature.

Set the motor overload protection gain (H0A.04) to adjust the report time of fault E620.0. Use the default value of H0A.04 in general conditions. However, in the following situations, modify H0A.04 based on the actual heating condition.

- The motor works in environments with high temperature.
- The servo motor keeps cyclic running in scenarios of short time single cycle and frequent acceleration/deceleration.

You can also hide motor overload detection (H0A.26 = 1) when you are sure that the motor will not be damaged due to overtemperature.

Caution

Take caution when hiding the motor overload fault as it may damage the motor.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0A.04	200A-05h	Motor overload protection gain	50 to 300	100	-	Real time	"H0A_en.04" on page 514
H0A.26	200A-1Bh	Motor overload mask	0: Show motor overload alarm (E909.0) and fault (E620.0) 1: Hide motor overload alarm (E909.0) and fault (E620.0)	0	-	Real time	"H0A_en.26" on page 518

Locked rotor over-temperature protection

The servo drive provides over-temperature protection to protect the motor against damage due to high temperature caused by serious motor heating when the duration of rotor locked (the motor speed is almost 0 and the actual current is very large) exceeds the allowable time. The motor is capable of operating upon stall for an allowable period of time, exceeding of which can damage the motor due to overtemperature. To prevent such risks, the drive offers motor overtemperature protection to protect the motor from being damaged by overtemperature.

You can set the time for reporting E630.0 (Motor stall over-temperature fault) by setting the time threshold for motor overtemperature protection (H0A.32). The motor overtemperature protection function is enabled by default (H0A.33 = 1).

Caution

- To prevent damages to the motor, take caution when you use the motor stall over-temperature protection function.
- Use the dedicated motor for the drive. Failure to comply can result in short circuits caused by aging of insulation.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0A.32	200A-21h	Over-temperature protection time window upon stall	10 to 65535	200	ms	Real time	"H0A_en.32" on page 520
H0A.33	200A-22h	Over-temperature protection selection upon stall	0: Disable 1: Enable	1	-	Real time	"H0A_en.33" on page 520

Motor overspeed protection

An excessively high speed may cause damage to the motor or the machine. Motor overspeed protection is used to protect the motor in case of overspeed, preventing the motor or machine from being damaged due to overtemperature.

$$\text{Overspeed threshold} = \begin{cases} \text{Max. motor speed} \times 1.2 & \text{H0A.08} = 0 \text{ or H0A.08} > \text{Max. motor speed x 1.2} \\ \text{H0A.08} & \text{H0A.08} \neq 0 \text{ and H0A.08} < \text{Max. motor speed x 1.2} \end{cases}$$

Caution

- The servo drive also offers motor runaway protection to prevent motor stall caused by lose of control.
- In applications where the motor drives a vertical axis or is driven by load, set H0A.12 to 0 to hide runaway fault detection. Use this function with caution.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0A.08	200A-09h	Overspeed threshold	0 to 20000	0	rpm	Real time	"H0A_en.08" on page 514
H0A.12	200A-0Dh	Runaway protection	0: Disable 1: Enable runaway protection scheme 1 2: Enable runaway protection scheme 2	1	-	At stop	"H0A_en.12" on page 515

Besides runaway protection, the servo drive allows you to set the speed limit in speed control mode and torque control mode to protect the motor and machine.

4.6 DI Filter Time

Function overview

The drive provides eight physical DI terminals, in which DI1 to DI6 are normal DI terminals, and DI7 to DI8 are high-speed DI terminals. Assign the function of interrupt positioning to DI7 or DI8 to guarantee precision.

When regular functions (touch probe and interrupt position functions excluded) are assigned to DIs, the filter time of these DIs is set in H03.60 to H03.67. Ensure the effective level hold time of the DI assigned with regular function is above 0.5 ms. Otherwise, the DI function may not be responded to.

When a high-speed DI is assigned with the touch probe function, the filter time of this DI is defined by H0A.19 and H0A.20. When a high-speed DI is DI with the interrupt positioning function, the filter time of this DI is defined by H0A.19. Ensure the effective level hold time of the high-speed DI is longer than the filter time.

Related objects

The drive provides two high-speed DIs with input signal frequency up to 4 kHz. When the DI signal is being disturbed, set the filter time in H0A.19 and H0A.20.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.60	2003-3Dh	DI1 filter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.60" on page 422
H03.61	2003-3Eh	DI2 fitter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.61" on page 422
H03.62	2003-3Fh	DI3 filter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.62" on page 422
H03.63	2003-40h	DI4 fitter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.63" on page 423
H03.64	2003-41h	DI5 filter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.64" on page 423
H03.65	2003-42h	DI6 filter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.65" on page 423
H03.66	2003-43h	DI7 filter time	0.00 to 500.00	0.00	ms	Real time	"H03_en.66" on page 424

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H03.67	2003-44h	DI8 filter time	0.00 to 500.00	3.00	ms	Real time	"H03_en.67" on page 424
H0A.19	200A-14h	Filter time constant of touch probe 1	0.00 to 6.30	2.00	μs	Real time	"H0A_en.19" on page 517
H0A.20	200A-15h	Filter time constant of probe 2	0.00 to 6.30	2.00	μs	Real time	"H0A_en.20" on page 517

4.7 Communication-forced DO

Function overview

When CANopen switches to the operational (OP) status, the forced DO function is determined by 60FE.01h and 60FE-02h. In the non-operational (non-OP) status (including CAN network), the following two DO options are available by default:

- Status unchanged: The servo status switches to the non-OP status and the forced DO status stays unchanged.
- No output: No forced DO is generated when the servo drive is in the non-OP status.

Related objects

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H04.23	2004-18h	Communication-forced DO logic in non-operational state	bit0: DO1 0: Status unchanged 1: No output bit1: DO2 0: Status unchanged 1: No output bit2: DO3 0: Status unchanged 1: No output bit3: DO4 0: Status unchanged 1: No output bit4: DO5 0: Status unchanged 1: No output	0	-	Real time	"H04_en.23" on page 431

Setting method

1. Assign DO function 31 to the DO to be controlled forcibly by CiA402 protocol, and then set the bit of H04.23 as needed to select the forced DO status in the non-OP status.
2. Configure 60FE.01h/02h as RPDO, and operate on bit16 to bit20 to control the DO.

4.8 Position Comparison

Function overview

Position comparison works by comparing the instantaneous position feedback with the value pre-saved in the data array. When a match is found, it outputs a DO signal with pulse width settable or an ABZ/OCZ signal. Position comparison is applicable to high-speed motion axes because comparison actions are implemented by FPGA, removing the risk of software communication delay between processors.

Note

1. During position comparison, the position comparison function is executed again when any of the comparison start point, stop point, and comparison mode are modified.
2. When you use the position comparison output function, it is recommended to set the logic of position comparison DO to 0-Normally Open (NO).

- Set the DO logic to 0-NO (the corresponding DO optocoupler switches from OFF to ON upon position comparison traversal) to achieve a response of 10 μs.
- Set the DO logic to 1-Normally Closed (NC) (the corresponding DO optocoupler switches from ON to OFF upon position comparison traversal) to achieve a response within 300 μs.

The following table describes the specifications of position comparison output.

Specifications of position comparison output		Function overview
Trigger output	Output port	DO or ABZ/OCZ signals.
	Logic	The effective level of DO is defined by the DO logic in group H04.
		The effective level of ABZ/OCZ output is defined by H18.06.
	Pulse width	The pulse output width is defined by H18.05.
	Delay compensation	Defined by H18.14 and used to compensate for hardware output delay.
Comparison source	Motor encoder feedback	Supported
	Pulse feedback fully closed-loop (ABZ)	Supported
	Communication-type fully closed-loop	Supported
Comparison value	Number of comparison points	40 points, signed 32-bit integer
Comparison attribute	Attribute of comparison point	Defines the attribute of the comparison point.
		Defines the output terminal for comparison.

Related objects

When position comparison is enabled, you can assign FunOUT.25 (Position comparison) to any one of the two DOs. The DO you select will be used to output the position comparison output signal. You can also use the ABZ/OCZ signal as the position comparison output terminal by setting H18.16.

Position comparison output parameters:

Parameter	Name	Description
H18: Position comparison output		
H18.00	Position comparison switch	0: Inactive 1: Enable (active at the rising edge)
H18.01	Position comparison output feedback source	0: Motor encoder feedback 1: Fully closed-loop position feedback
H18.02	Position comparison resolution[1]	Defines the number of pulses per revolution. For example, if H18.02 is set to 1, the number of pulses per revolution is 2^{23}. 0: 24-bit 1: 23-bit 2: 22-bit 3: 21-bit 4: 20-bit 5: 19-bit 6: 18-bit 7: 17-bit
H18.03	Position comparison mode	0: Single-shot compare mode 1: Cyclic compare mode 2: Fixed cyclic comparison
H18.04	Current position as zero	0: Inactive 1: Enable (active at the rising edge) Note: This function needs to be used when the comparison state is inactive. Otherwise, the comparison logic may malfunction.
H18.05	Position comparison pulse output width	Defines the active pulse width of the DO when the comparison point is reached. The value range is 0.1 to 204.7 (in ms).
H18.06	Position comparison output ABZ polarity	bit0: OCZ output polarity bit1: Z output polarity bit2: A/B output polarity 0: Positive; 1: Negative
H18.07	Start point of position comparison	Activated when H18.00 is set to 1 again.
H18.08	End point of position comparison	Activated when H18.00 is set to 1 again.
H18.09	Current status of position comparison	0: No comparison; n: Waiting for the comparison point N
H18.10	Real-time position of position comparison	Displays the current comparison position value. Value range: -2^{31} to $(2^{31} - 1)$.
H18.12	Zero offset of position comparison	Defines the offset value after current position is taken as the zero point. Value range: -2^{31} to $2^{31} - 1$.
H18.14	Position comparison output delay compensation	Comparison delay compensation time: -12 μs to +12 μs.
H18.15	Fixed value mode cycle count	1–65535

Parameter	Name	Description
H18: Position comparison output		
H18.16	ABZ output function setting	bit 0: OCZ function bit1: Z function bit2: A/B (0: Frequency-division output; 1: Position comparison)
H18.17	Fixed value mode completion count	Value range: 0 to 65535

Note

[1]: When the source of position comparison is full closed-loop feedback, it is only effective for Inovance encoders.

Parameter	Name	Description
H19: Target position parameters		
H19.00	Target value of position comparison 1	Defines the target value of position comparison 1. Value range: -2^{31} to $2^{31}-1$.
H19.02	Attribute value of position comparison 1	Defines the attribute value of position comparison 1. bit0: 1: Output DO active signal if current position changes from "less than" to "more than" the comparison point; 0: Skip this point bit1: 1: Output DO active signal if current position changes from "more than" to "less than" the comparison point; 0: Skip this point bit2 to bit6: N/A. Bit7 to bit11: DO1 to DO5. bit12: Frequency-division A output bit13: Frequency-division B output bit14: Frequency-division Z output bit15: Frequency-division OCZ output
H19.03	Target value of position comparison 2	Defines the target value of position comparison 2. Value range: -2^{31} to $2^{31}-1$.
H19.05	Attribute value of position comparison 2	Defines the attribute value of position comparison 2. Value range: Same as above.
...	...	...
H19.117	Target value of position comparison 40	Defines the target value of position comparison 40. Value range: -2^{31} to $2^{31}-1$.
H19.119	Attribute value of position comparison 40	Defines the attribute value of position comparison 40. Value range: Same as above.

How it works

1. How it works

   Position comparison works by comparing the instantaneous position feedback with the value pre-saved in the data array and, once available, outputting a DO signal with pulse width settable for future use in subsequent motion control. Position comparison is applicable to high-speed motion axes as comparison actions are implemented by FPGA, removing the risk of software communication delay between processors.

   - Position comparison switch

When the value of H18.00 (Position comparison switch) changes from 0 to 1, position comparison starts and the value of H18.09 (Current state of position comparison) is updated to the start point of position comparison. When the value of H18.00 changes to 0, position comparison stops and the current comparison state will be cleared.

- Position comparison resolution
  The comparison resolution defines the number of pulses per revolution. Given the maximum and minimum limits on the target position (defined by group H19), you can reset the resolution when data overflow occurs on the comparison value. For example, when H18.02 is set to 7, the maximum value of the target position is $2^{31} \div 1$, and the motor rotates $(2^{31} - 1) \div 2^{17}$ turns. For SV670-INT servo drives, H18.02 (Position comparison output resolution) is invalid in the position comparison function when a DDL motor is used.

Note

The target position in group H19 is only related to the set resolution.

- Single-shot comparison mode
  In single-shot comparison mode, when comparison of the end point is completed, the comparison function is automatically switched off and the current comparison value is cleared. The comparison function can be enabled again only when the position comparison switch is switched on again.

  The real-time position feedback in the single-shot compare mode is an absolute value, which means it is an accumulative value based on the preceding compare point. Such value will not be automatically cleared.

- Cyclic comparison mode
  In cyclic comparison mode, position comparison will not be switched off when the comparison end point is reached, and current position comparison value will be reset as the start point for position comparison. After comparison of each point is completed, the real-time position feedback (H18.10) will be cleared and counted again for cyclic comparison. In cyclic comparison mode, the target position is a relative (incremental) value. Each time a comparison point is reached, the real-time position feedback is cleared and counted again for comparison with the new target.

- Fixed cyclic comparison mode
  In fixed cyclic comparison mode, the comparison process works in the same way as the cyclic comparison mode. The number of cycles is defined by H18.15. After the set number of cycles are done executing, comparison will be disabled automatically.

- Position comparison output width
  When the position comparison conditions are fulfilled, the servo drive outputs DO active level signal. The width of the active level signal can be set in H18.05 (value range: 1 to 2047 × 0.1 ms).

  When the DO output is active, the compare logic is suspended and no compare will be performed. In this case, ensure the operating time between two target points is higher than the DO output width.

- Target value of position comparison

There are 40 target values for position comparison. The target value and attribute value of position comparison must be updated to parameters in group H19 in advance.

Note

Set the target position properly. overflow comparison (H18.10) is not supported in the position comparison mode.


- Start point for comparison
  The start point indicates the position of the first compare point. For example, if the start point is set to 5, position compare starts from the 5th target position.
- End point for comparison
  The end point indicates the position of the last compare point. For example, if the end point is set to 7, the compare stops or restarts from the start point after the 7th target position is done comparing.
- Zero offset of position comparison
  The value of H18.10 (Real-time position feedback) will be changed to the offset value defined by H18.12 (Zero offset of position comparison) at the rising edge (0 → 1) of H18.04 (Present position as zero).

Note

Check whether zero offset needs to be set before enabling position comparison output. Otherwise, comparison error may occur.

2. How it works

- When the position feedback of the encoder passes the target position comparison points, the output width of the output terminal is defined by H18.05 (Position comparison output width).

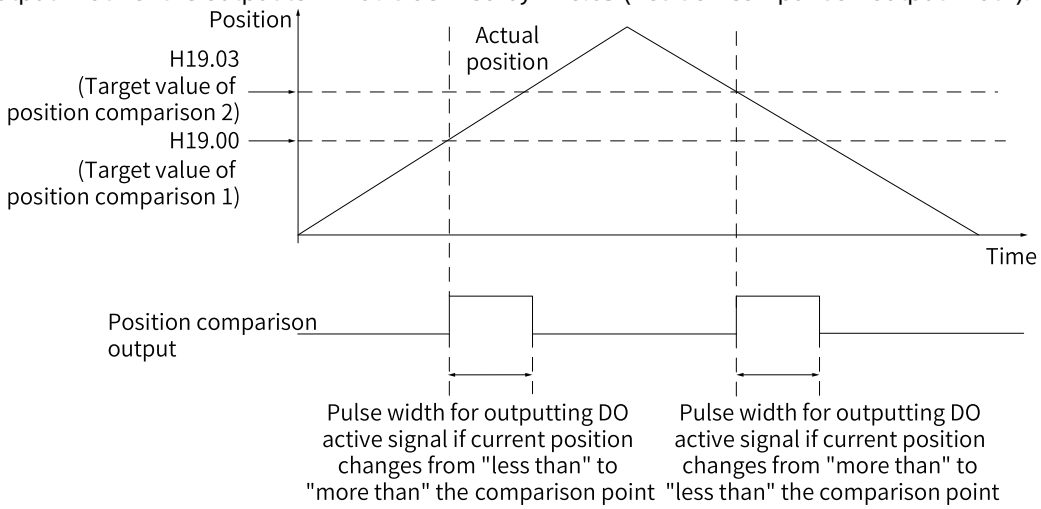


When the attribute of the comparison point is set to "bit0 = 1" (Output DO active signal if current position changes from "less than" to "more than" the comparison point), the DO outputs the position comparison signal when the axis passes the target position comparison point with position changing from "less than" to "more than" the comparison point position.


When the attribute of the comparison point is set to "bit1 = 1" (Output DO active signal if current position changing from "more than" to "less than" the comparison point), the DO outputs the position comparison signal when the axis passes the target position comparison point with position changing from "more than" to "less than" the comparison point position.

When the attribute of the comparison point is set to "bit0/bit1 = 1" (Output DO active signal in both situations), the DO outputs the position comparison signal when the position feedback passes the target position comparison point.

- When multiple position comparison values are set, no comparison will be performed once the position comparison output terminal is active. Therefore, ensure the operating time between two position comparison points is larger than the pulse output width.
  As shown in the following figure, comparison is not performed when the position changing from "more than" to "less than" the comparison point position. This is because the operating time between the two comparison points is lower than the pulse output width.

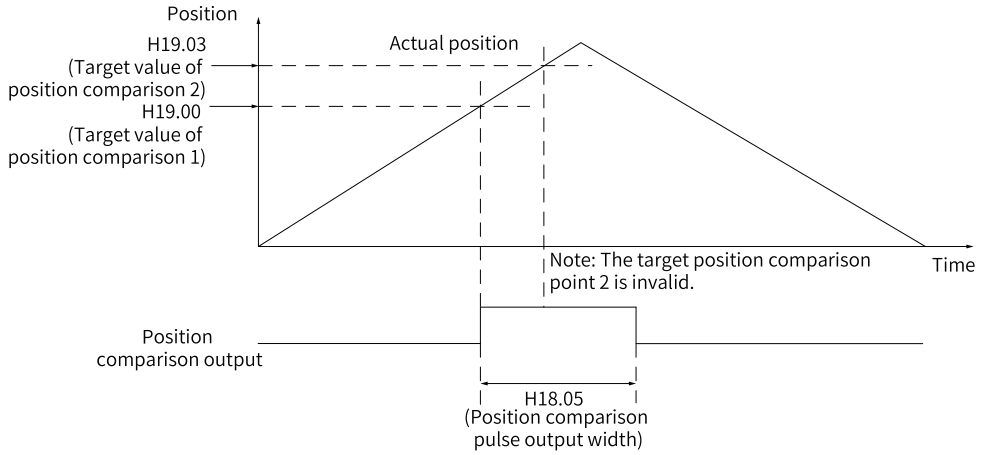


- Only one pulse will be outputted when the stop position is the same with the target value of position comparison, as shown below.

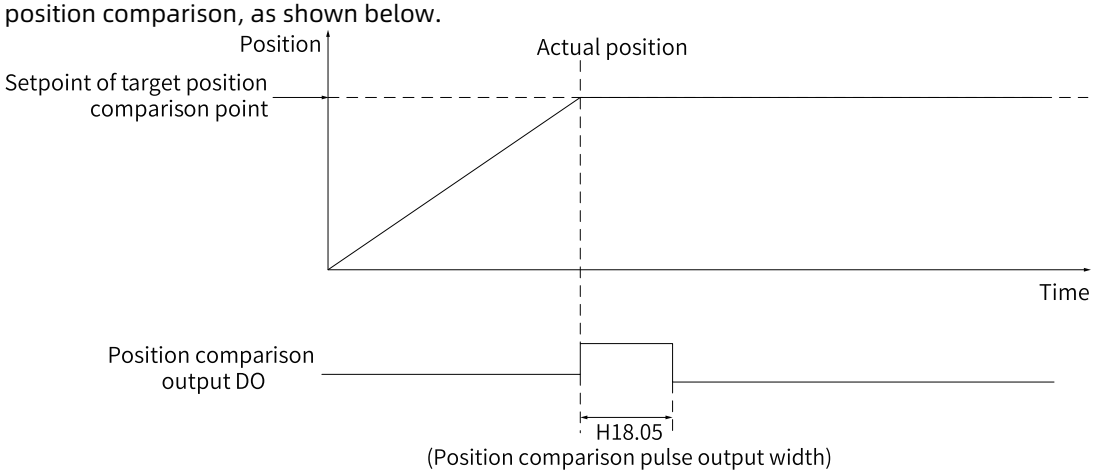

3. Interface of the software tool


- Single-shot comparison mode

  a. Set "Position comparison mode selection" to 0 (Single position comparison mode).

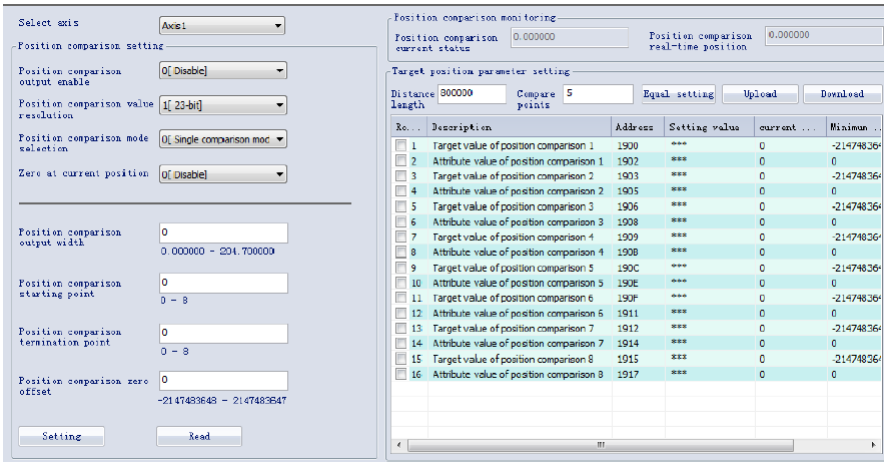

b. Target position parameter setting: Set "Distance length" (total operating distance) and "Compare points".


c. After clicking "Equal setting", the target value of the first point is updated to "Distance length × 1 ÷ Comparison points", the target value of the second point is updated to "Distance length × 2 ÷ Comparison points", and the target value of the Nth point is updated to "Distance length × N ÷ Comparison points".

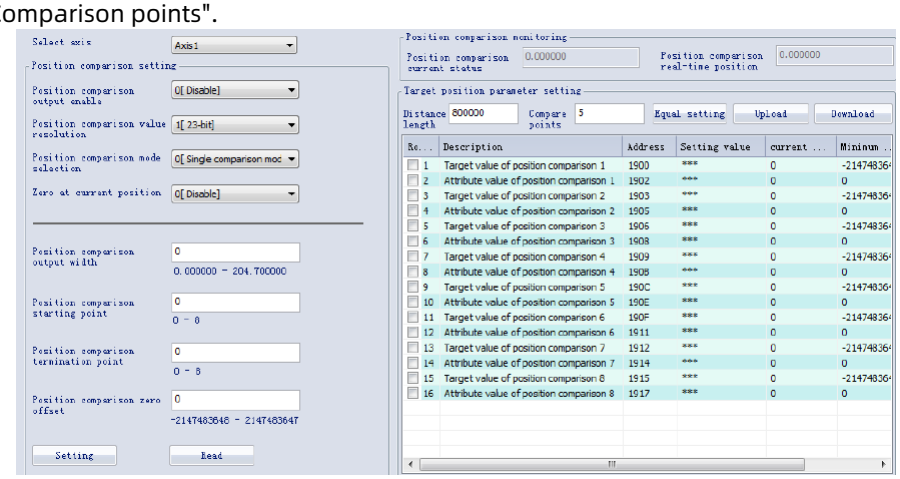

When H18.00 (Position comparison output selection) changes from 0 to 1 (Enable (rising edge-triggered)), H18.09 (Current state of position comparison) changes from 0 to 1 and the first target position value will be compared. When H18.10 (Real-time position feedback) reaches the value of the first target position, H18.09 changes from 1 to 2, and so on.


- Cyclic comparison mode/Fixed cyclic comparison mode

a. Set "Position comparison mode selection" to 1 (Cyclic comparison mode) or 2 (Fixed cyclic comparison mode).

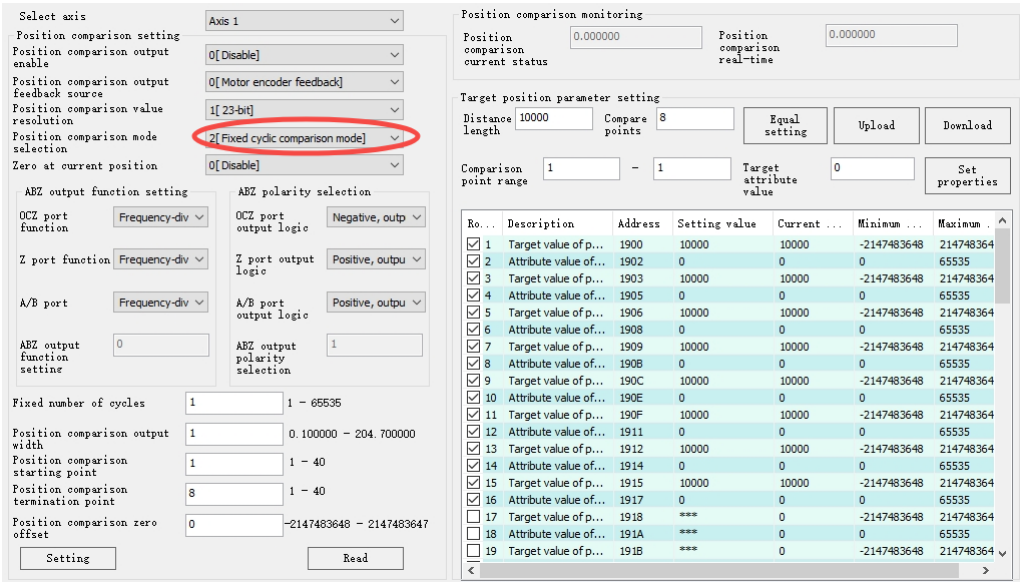

b. Target position parameter setting: Set "Distance length" (distance between two adjacent points) and "Compare points" (points to be compared cyclically)

c. After clicking "Equal setting", the target values of the 1st point to the Nth point are updated to equal interval distance values.

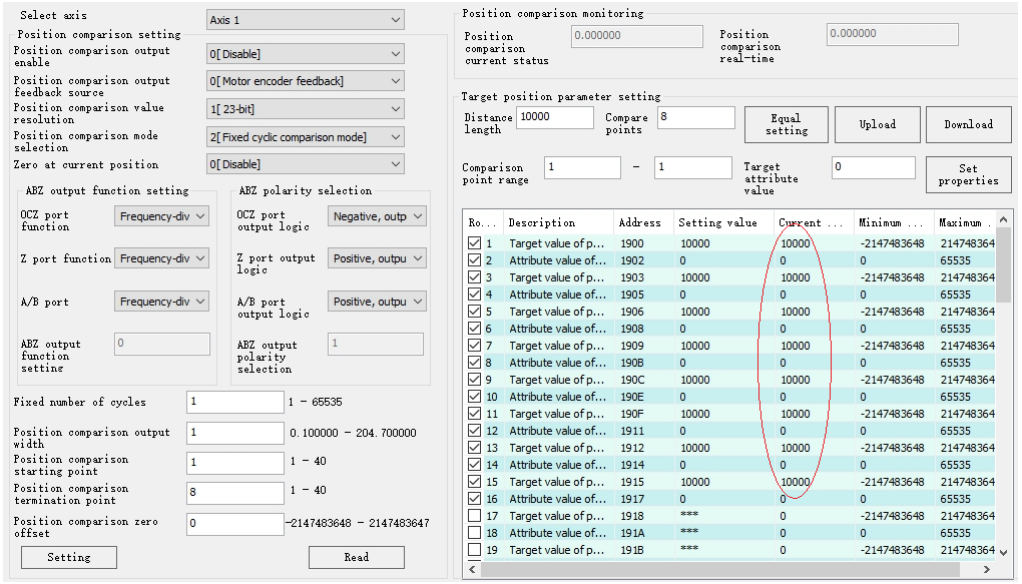

When H18.00 (Position comparison output selection) changes from 0 to 1 (Enable (rising edge-triggered)), H18.09 (Current state of position comparison) changes from 0 to 1 and the first target position value will be compared. When H18.10 (Real-time position feedback) reaches the value of the first target position, H18.09 changes from 1 to 2, and so on.

4.9 Black Box


Function overview

The black box function is used to capture and save the data generated upon occurrence of faults or under designated conditions. Such data can be read and uploaded by users through the software


tool to facilitate troubleshooting. You can set H32.45 to configure the black box channel, facilitating root cause analysis for different types of issues. Assume that the real-time target speed (60FF)/ electrical angle channel is used. When H32.45 is set to 0, the real-time target absolute position (607A) is collected. When H32.45 is set to 1, the electrical angle is collected.

The black box function is enabled by default. It is triggered upon occurrence of a fault or a sampling frequency of 16k. The black box function will be automatically turned off after it is being triggered, and automatically turned on upon fault reset or power cycling.


Triggering the black box

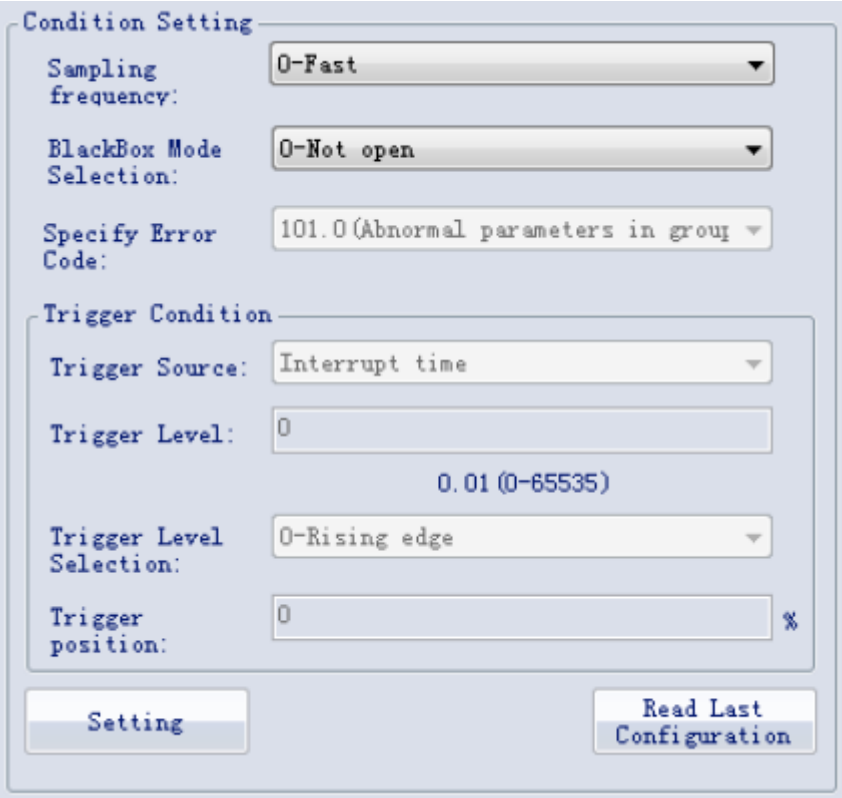


1. Sampling frequency: including three sampling frequencies, namely 16k (fast), 8k (medium), and 1k (slow).

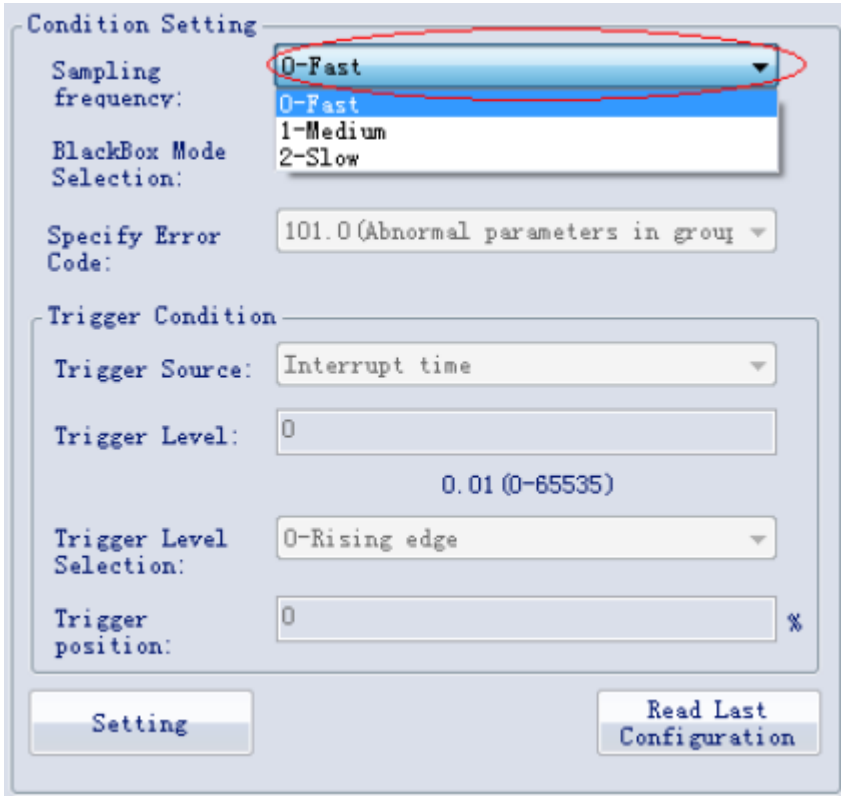

2. Black box modes: Arbitrary fault, Specified fault, and Triggered based on designated condition.

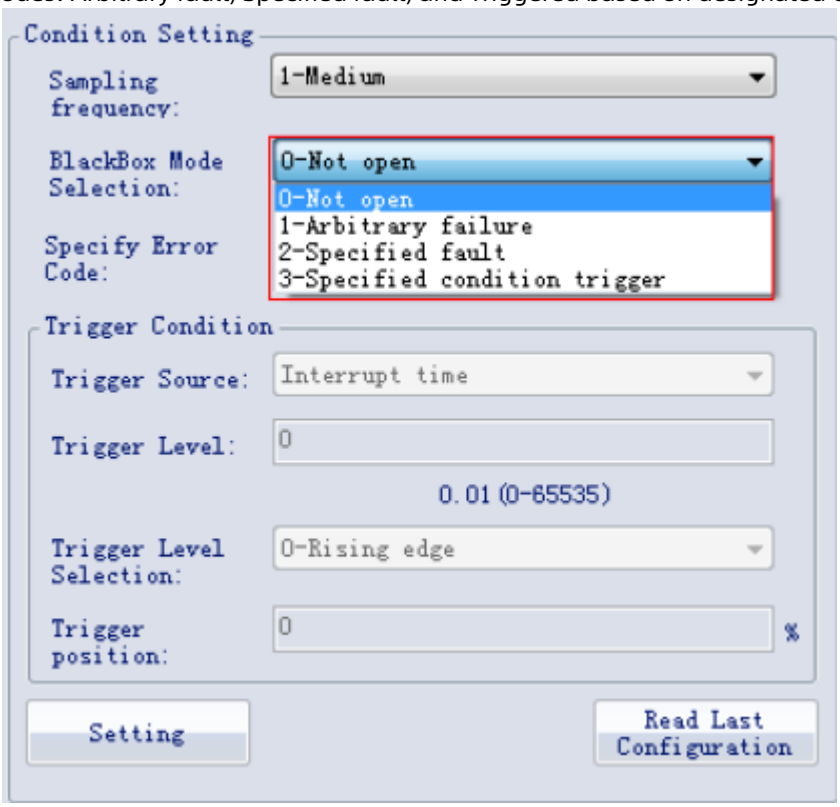

3. Select a fault from the drop-down list, as shown below.

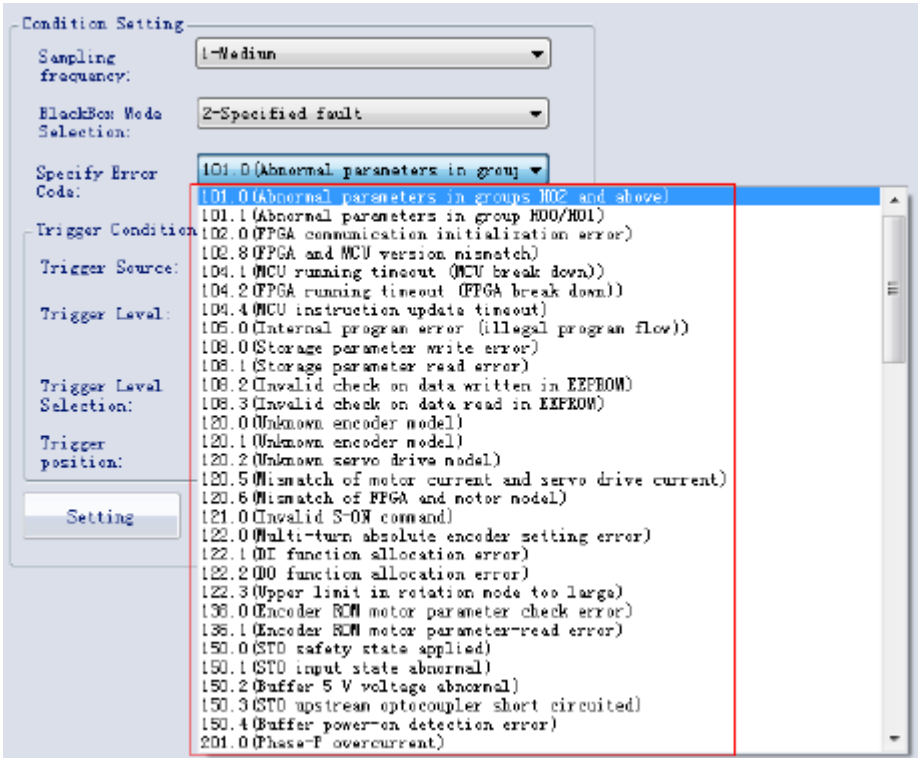


4. The Trigger Condition includes Trigger Source, Trigger Level, and Trigger Level Selection, as shown below.



5. Trigger position is used to set the position of the trigger time in the total sampling time, which is set to 75% by default.
6. After the black box is set, click "Setting" to download configuration parameters to the servo drive.

Reading data from the black box

You can select the black box channels (4 channels at most) by clicking >> or <<, or read data of all the channels by clicking "Read all", and then click "Save" to save the waveform files.

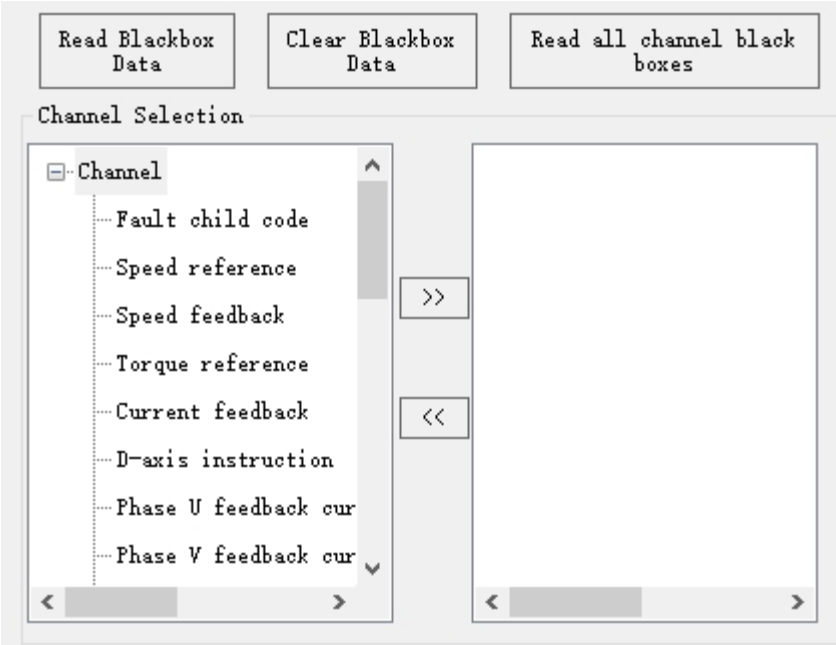

4.10 Touch probe

Function overview

The touch probe function is the same as the position latch function. Position feedback sources include motor position and full closed-loop feedback. This feature latches the position information (reference unit) when an DI signal or Z signal changes.

The SV670-INT series servo drive offers two touch probes to record position values corresponding to the rising edge and falling edge of each touch probe signal, which means four position values can be latched simultaneously.

When a DI is used to trigger the touch probe, the relationship between the DI logic and the touch probe edge is shown in the following table. The touch probe is supported only by high-speed DIs.

Table 4–3 Description of bit3 of H0A.40

bit3 of H0A.40	Touch probe edge	DI logic	DI switch
0	Rising edge	Normally open (NO)	OFF→ON
		Normally closed (NC)	ON→OFF
	Falling edge	Normally open (NO)	ON→OFF
		Normally closed (NC)	OFF→ON
1	Rising edge	NO/NC	OFF→ON
	Falling edge	NO/NC	ON→OFF

When a DI is used to trigger the touch probe, you can set the filter window of the touch probe signal in H0A.19 and H0A.20.

The DI touch probe supports hardware action delay compensation to compensate for the precision loss incurred by ON/OFF delay of the DI. Related parameters are shown in the following table.

Parameter		Description
H0A.40	bit1	Touch probe rising edge compensation: 1: Enabled, 0: Disabled
	bit2	Touch probe falling edge compensation: 1: Enabled, 0: Disabled
H0A.53		DI probe DI ON compensation time (DI OFF→ON)
H0A.54		DI probe DI OFF compensation time (DI ON→OFF)

To shorten the hardware delay to about 7 μs, it is recommended to set the touch probe latch through the ON-edge of the DI.

There are three Z touch probe triggers: motor Z signal, frequency-division output Z signal, and fully closed-loop Z signal, as shown in the following table.

Feedback source	Parameter	Description
Motor encoder	H05.41.bit2 = 0, motor Z signal	The Z touch probe is triggered by the motor Z signal.
	H05.41.bit2 = 1, frequency-division output Z signal	The Z touch probe is triggered by the frequency-division output Z signal, including the multi-turn Z signal.
Fully closed-loop feedback	H0F.25 = 0, motor Z signal	When there is no Z signal input in the pulse-type fully closed-loop mode, you can trigger the touch probe through the motor Z signal to latch external position feedback.
	H0F.25 = 1, fully closed-loop Z signal	When there is Z signal input in the pulse-type fully closed-loop mode, you can trigger the touch probe latch function through the fully closed-loop Z signal.

Related objects

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
60B8h	60B8h	Touch probe mode	0x0 to 0xFFFF	0x0	-	Real time	"60B8h" on page 813
60B9h	60B9h	Probe status	0x0 to 0xFFFF	0x0	-	Read-only	"60B9h" on page 814
60BAh	60BAh	Position value at probe 1 rising edge	-2147483648 to +2147483647	0	Reference unit	Read-only	"60BAh" on page 815
60BBh	60BBh	Position value at probe 1 falling edge	-2147483648 to +2147483647	0	Reference unit	Read-only	"60BBh" on page 815
60BCh	60BCh	Position value of probe 2 rising edge	-2147483648 to +2147483647	0	Reference unit	Read-only	"60BCh" on page 815
60BDh	60BDh	Position value of probe 2 falling edge	-2147483648 to +2147483647	0	Reference unit	Read-only	"60BDh" on page 816
60D5h	60D5h	Touch probe 1 rising edge counter	0x0 to 0xFFFF	0x0	-	Read-only	"60D5h" on page 817

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
60D6h	60D6h	Touch probe 1 falling edge counter	0x0 to 0xFFFF	0x0	-	Read-only	"60D6h" on page 817
60D7h	60D7h	Touch probe 2 rising edge counter	0x0 to 0xFFFF	0x0	-	Read-only	"60D7h" on page 818
60D8h	60D8h	Touch probe 2 falling edge counter	0x0 to 0xFFFF	0x0	-	Read-only	"60D8h" on page 818

Procedure

Example:

Use DI5 to trigger the touch probe. Background: touch probe 1 rising edge, continuous latching

Perform the following steps:

1. Set the function of DI5 (H03.10 = 38). Set the DI5 logic to NO (H03.11 = 0).
2. Set the touch probe function in 60B8h.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
60B8h	60B8h	Touch probe mode	0x0 to 0xFFFF	0x0	-	Real time	"60B8h" on page 813

Assignment of each bit of the touch probe function (60B8h) is shown in the following table.

Bit	Name	Description
0	Touch probe 1 enable: 0: Disable 1: Enable	bit 0 to bit 5: settings related to touch probe 1 When a DI is used to trigger the touch probe function, the DI source cannot be changed once the touch probe function is enabled. For absolute encoders, Z signal refers to the zero point of the single-turn motor position feedback.
1	Touch probe 1 trigger mode 0: Single trigger mode (Latches the position at the first trigger event.) 1: Continuous trigger mode	
2	Touch probe 1 trigger signal selection 0: DI signal 1: Z signal	
3	N/A	
4	Touch probe 1 rising edge 0: Latching at rising edge disabled 1: Latching at rising edge enabled	
5	Touch probe 1 falling edge 0: Latching at falling edge disabled 1: Latching at falling edge enabled	
6 to 7	N/A	-

Bit	Name	Description
8	Touch probe 2 enable: 0: Disable 1: Enable	bit 8 to bit 13: settings related to touch probe 2
9	Touch probe 2 trigger mode 0: Single trigger mode (Latches the position at the first trigger event.) 1: Continuous trigger mode	
10	Touch probe 2 trigger signal selection 0: DI signal 1: Z signal	
11	N/A	
12	Touch probe 2 rising edge 0: Latching at rising edge disabled 1: Latching at rising edge enabled	
13	Touch probe 2 falling edge 0: Latching at falling edge disabled 1: Latching at falling edge enabled	
14 to 15	N/A	-

In this example, 60B8h is set to 0x0013.

3. Read the touch probe status in 60B9h.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
60B9h	60B9h	Probe status	0x0 to 0xFFFF	0x0	-	Read-only	"60B9h" on page 814

Assignment of each bit of 60B9h is shown in the following table.

Bit	Name	Description
0	Touch probe 1 enable: 0: Disable 1: Enable	bit 0 to bit 2: status of touch probe 1.
1	Touch probe 1 latching on a rising edge 0: No rising edge value latched 1: Rising edge value latched	
2	Touch probe 1 latching on a falling edge 0: No falling edge value latched 1: Falling edge value latched	
3 to 5	N/A	-
6 to 7	Number of touch probe trigger events when touch probe 1 is set for continuous sampling	The total number of times (0 to 3) that the touch probe is triggered when the function of touch probe 1 is set for continuous sampling.

Bit	Name	Description
8	Touch probe 2 enable: 0: Disable 1: Enable	bit 8 to bit 10: status of touch probe 2.
9	Touch probe 2 latching on a rising edge 0: No rising edge value latched 1: Rising edge value latched	
10	Touch probe 2 latching on a falling edge 0: No falling edge value latched 1: Falling edge value latched	
11 to 13	N/A	-
14 to 15	Number of touch probe trigger events when touch probe 2 is set for continuous sampling	Trigger count (0 to 3) of the probe when the function of probe 2 is set to continuous sampling

In this example, you can read bit1 of 60B9h to check whether the touch probe 1 rising edge value is latched.

4. Read the latch position of the touch probe

The four position values of the touch probe are recorded in 60BAh to 60BDh.

In this example, if the function of the position latch at the positive edge of touch probe 1 is executed, you can read the position value in 60Bah (Touch probe 1 positive edge, reference unit). The latching count can be read in 60D5h.

Illustration

The following figure shows touch probe function settings and status feedback sequence when DI5 is used as the trigger signal in case of latching at rising edge and continuous triggering.

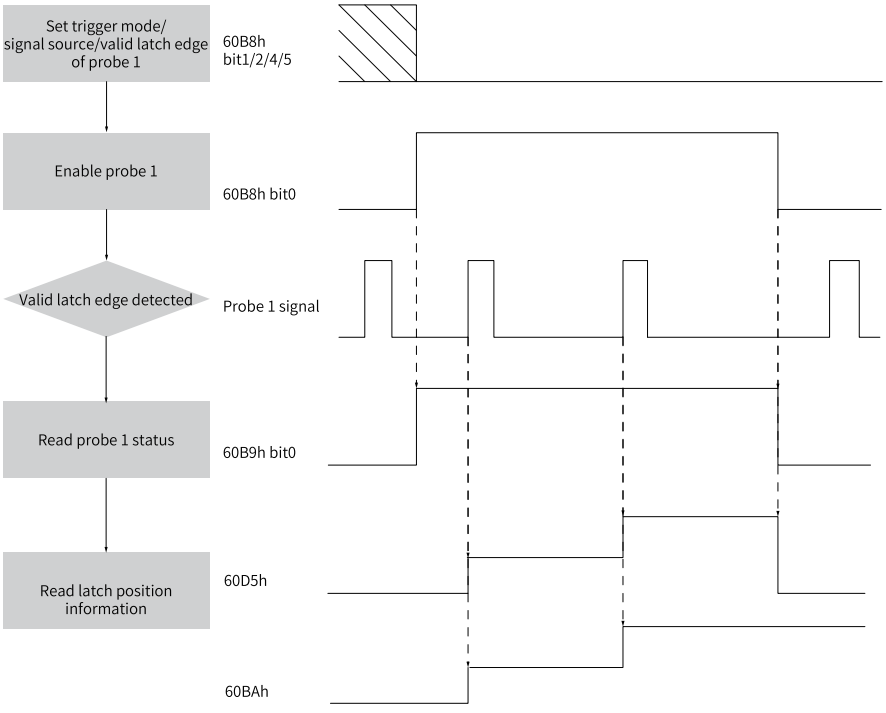


Figure 4-5 Procedure for using the touch probe

4.11 SEMI F47 voltage drop

Function overview


When the DC voltage of the main circuit of the drive is lower than the undervoltage threshold due to instantaneous power failure or temporary low power supply voltage of the main circuit, the E971.0 alarm is reported and the output current is limited. The E971.0 alarm can be muted by setting bit1 of H0A.88.

With combination of this function and H0A.84 (instantaneous power outage holding time), the drive can continue to run when the power supply voltage decreases, and it will not stop because of alarm.

Function description

This function can be executed by the instruction issued by the host controller or the servo drive. You can choose through H0A.81 (enable voltage drop protection).

- **When executed by the host controller (H0A.81 = 1)**
  After receiving the alarm of undervoltage E971.0, the host controller limits the torque, and removes torque limit after receiving E971.0 alarm release signal.

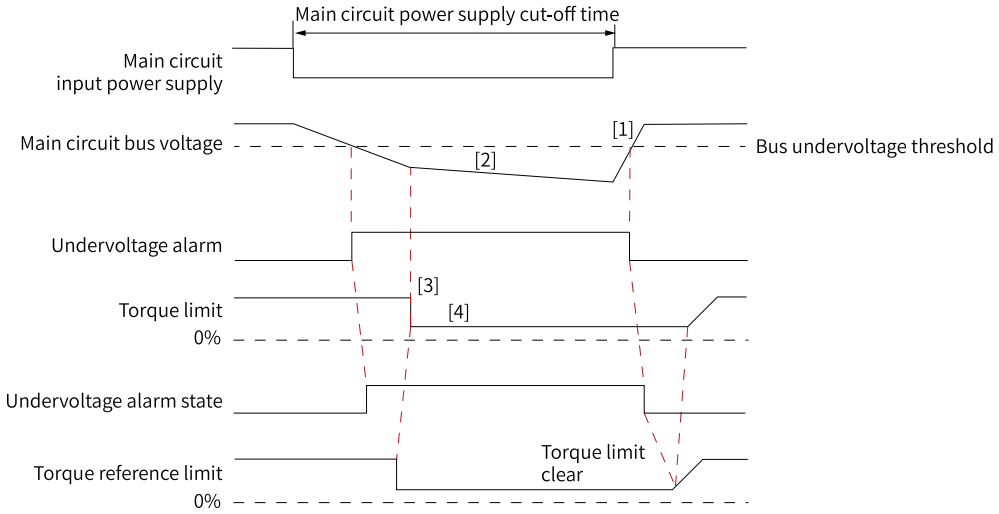

Note

- [1]: After the main circuit power supply is restored, the bus voltage of the main circuit rises.
- [2]: By limiting the output torque, you can reduce the bus voltage of the main circuit gently.
- [3]: Torque limiting starts.
- [4]: Limit torque after an undervoltage warning is received.


  - When H07.07 = 0:
    The forward torque limit is H07.09 and the negative torque limit is H07.10.
  - When H07.07 is set to 1, the torque reference limit is determined by the logic of the external DI signal.
    The positive torque limit is selected between H07.09 (Positive internal torque limit) and H07.11 (Positive external torque limit). The negative torque limit is selected between H07.10 (Negative internal torque limit) and H07.12 (Negative external torque limit).

- When H07.07 = 2, select AI1 or AI2 as the torque limit input source for T-LMT through H07.08.
- When H07.07 = 3:
  DI-PCL (Forward External Torque Limit) is inactive, and the forward limit is determined by AI input. DI-PCL (Forward External Torque Limit) is active, and the forward limit is determined by the smaller one between H07.11 and the torque corresponding to AI input voltage.

  DI-NCL (Reverse External Torque Limit) is inactive, and the reverse limit is determined by AI input. DI-NCL (Reverse External Torque Limit) is active, and the reverse limit is determined by the smaller one between H07.12 and the torque corresponding to AI input voltage.
- When H07.07 = 4:
  DI-PCL (Forward External Torque Limit) is inactive, and the forward limit is determined by H07.09. DI-PCL (Forward External Torque Limit) is active, and the forward limit is determined by AI input voltage;

  DI-PCL (Reverse external torque limit) is inactive, and the reverse limit is determined by H07.10; DI-PCL (Forward external torque limit) is active, and the reverse limit is determined by AI input voltage.

- **When executed by the drive (H0A.81 = 2)**
  According to the undervoltage E971.0 alarm, apply the torque limit inside the servo drive. After receiving the undervoltage alarm clear signal, the torque limit value is controlled in the servo drive according to the set time.

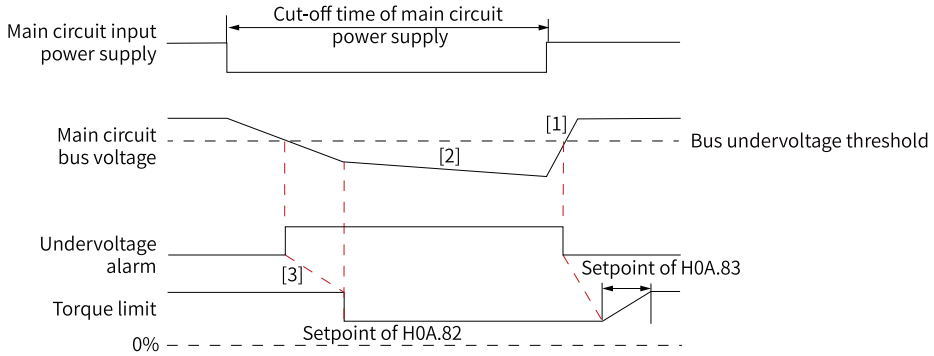

Note

- [1]: After the main circuit power supply is restored, the bus voltage of the main circuit rises.
- [2]: By limiting the output torque, you can reduce the bus voltage of the main circuit gently.
- [3]: Torque limiting starts.

- **The E971.0 undervoltage alarm is not detected (H0A.81 = 0)**
  Voltage drop does not trigger the E971. 0 alarm, but the E410.0 alarm.

Related parameters

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H0A.81	200 A-52h	Voltage drop protection enable	0: No operation 1: Host controller executes torque limit 2: Servo executes torque limit	0	-	At stop	"H0A_en.81" on page 529
H0A.82	200 A-53h	Voltage drop torque limit	0.0 to 100.0	50.0	%	Real time	"H0A_en.82" on page 529
H0A.83	200 A-54h	Torque limit cancellation time	0 to 1000	100	ms	Real time	"H0A_en.83" on page 529
H0A.84	200 A-55h	Hold time of instantaneous power failure	20 to 50000	1000	ms	Real time	"H0A_en.84" on page 530

Note

- This function is suitable for instantaneous power outage with the voltage and time specified by SEMI F47. If the voltage and time beyond this range, a standby power supply is needed.
- When the power supply of the main circuit is restored, use the torque limit of the host controller or servo drive to set the torque, so as to avoid the output torque being greater than the commanded acceleration torque.
- When used on vertical axes, do not limit the torque below the holding torque.
- This function is to limit the torque within the capacity of the powered off servo drive, and is not applicable to all load conditions or operating conditions. The parameter to be set may vary with the actual device.
- After you set H0A.84, the time from disconnecting the power supply to stopping the motor power will become longer. You can power off the motor immediately through the input and output of servo ON input signal.

4.12 Quadrant Friction Compensation

Function overview

The quadrant friction compensation function is designed to compensate the large delay in motor speed feedback due to large static friction of the mechanical system when the motor changes its direction. In actual machining (such as circular machining), the system friction during motor direction change will cause quadrant protrusion, resulting in quadrant marks on the workpiece surface.


Note

Quadrant friction compensation is effective only in position mode.

Related parameters

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H15.00	2015-01h	Forward friction compensation torque	0.0 to 50.0	0.0	%	Real time	"H15_en.00" on page 612
H15.01	2015-02h	Negative friction compensation torque	0.0 to 50.0	0.0	%	Real time	"H15_en.01" on page 613
H15.02	2015-03h	Forward friction torque filter time constant	0.10 to 100.00	0.10	ms	Real time	"H15_en.02" on page 613
H15.03	2015-04h	Negative friction torque filter time constant	0.10 to 100.00	0.10	ms	Real time	"H15_en.03" on page 613
H15.04	2015-05h	Friction torque compensation speed reference source	0: Speed reference 1: Model speed 2: Speed feedback 3: Observation speed 4: Speed reference	0x2	-	Real time	"H15_en.04" on page 613
H15.05	2015-06h	Friction torque compensation delay time	0.00 to 300.00	0.00	ms	Real time	"H15_en.05" on page 614
H15.06	2015-07h	Friction torque compensation effective speed threshold	0.0 to 20.0	0.1	rpm	Real time	"H15_en.06" on page 614

How it works

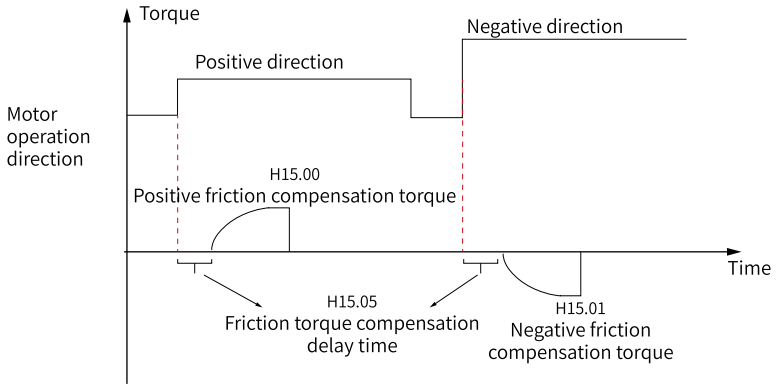

Parameter settings:

H15.00 and H15.01 are used to set the friction compensation torque in the positive and negative directions.

H15.02 and H15.03 are used to set the filter time of the positive/negative friction compensation torque. The smaller the parameter value, the faster the friction compensation torque reaches the set friction torque.

H15.04 is used to set the position or speed signal for detecting motor direction change. H15.06 is used to set the minimum speed threshold when the speed signal is used as the signal source for detecting direction change. When H15.04 is set to 0x00 (Position reference), H15.06 can be skipped.

H15.05 is used to set the delay time between the time when motor detects the direction change and the start time of friction compensation torque output.

4.13 Backlash Compensation

Function overview

The backlash compensation function is used to compensate poor positioning performance after the motor direction is reversed when the mechanic is loose or experiences backlash.

Note


Backlash compensation is effective only in position mode.

Related parameters

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H15.15	2015-10h	Backlash compensation enable	0: Disable 1: Ramp	0	-	Real time	"H15_en.15" on page 614
H15.16	2015-11h	Backlash compensation speed reference source	0: Speed reference 1: Model speed 2: Speed feedback 3: Observation speed 4: Speed reference	0x4	-	Real time	"H15_en.16" on page 614
H15.17	2015-12h	Minimum speed threshold of backlash compensation	0.0 to 20.0	2.0	rpm	Real time	"H15_en.17" on page 615
H15.18	2015-13h	Number of pulses of backlash compensation	0 to 65535	0	p	Real time	"H15_en.18" on page 615
H15.19	2015-14h	Backlash delay	0.0 to 300.0	0.0	ms	Real time	"H15_en.19" on page 615
H15.21	2015-16h	Forward backlash compensation time	0.1 to 300.0	0.1	ms	Real time	"H15_en.21" on page 615

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H15.23	2015-18h	Reverse backlash compensation time	0.1 to 300.0	0.1	ms	Real time	"H15_en.23" on page 616
H15.25	2015-1Ah	Filter time constant of average backlash compensation value	0.0 to 50.0	0.0	ms	At stop	"H15_en.25" on page 616

How it works

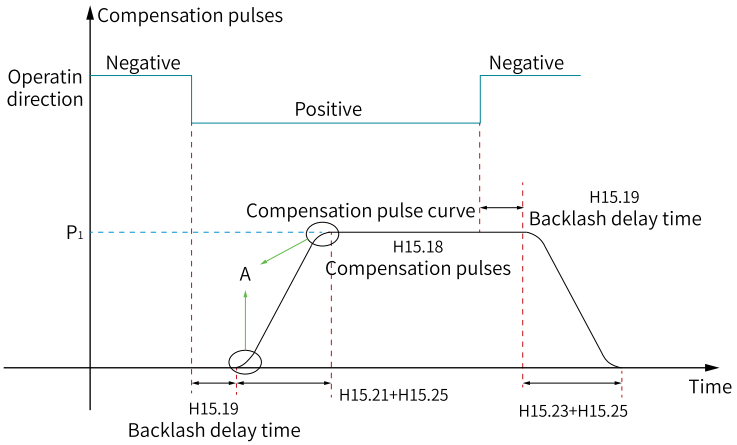

Parameter settings:

1. Set H15.15 to 1 to enable backlash compensation.
2. Set H15.16 and H15.17 to select the position or speed signal used to detect motor direction reverse and the minimum speed threshold for detecting direction reverse.
   Note: If H15.16 is set to 0x00 (Position reference), H15.17 can be skipped. Otherwise, H15.17 must be set.
3. Settings of H15.18, H15.19, H15.21, H15.23, and H15.25 are shown in the preceding figure. Where:

   H15.18 is used to set the number of backlash compensation pulses. Set the parameter according to the actual backlash.

   H15.19 is used to set the delay time between the time when direction reverse is detected by the servo and the start time of backlash compensation.

   H15.21 and H15.23 are used to set the time between the start time of backlash compensation in the positive and negative directions and the time when backlash compensation reaches the set number of pulses. The smaller the parameter value, the faster the backlash compensation speed.

   H15.25 is used to smooth the backlash compensation curve. For details, see the section marked by A in the preceding figure.

5 STO Integration

5.1 Overview

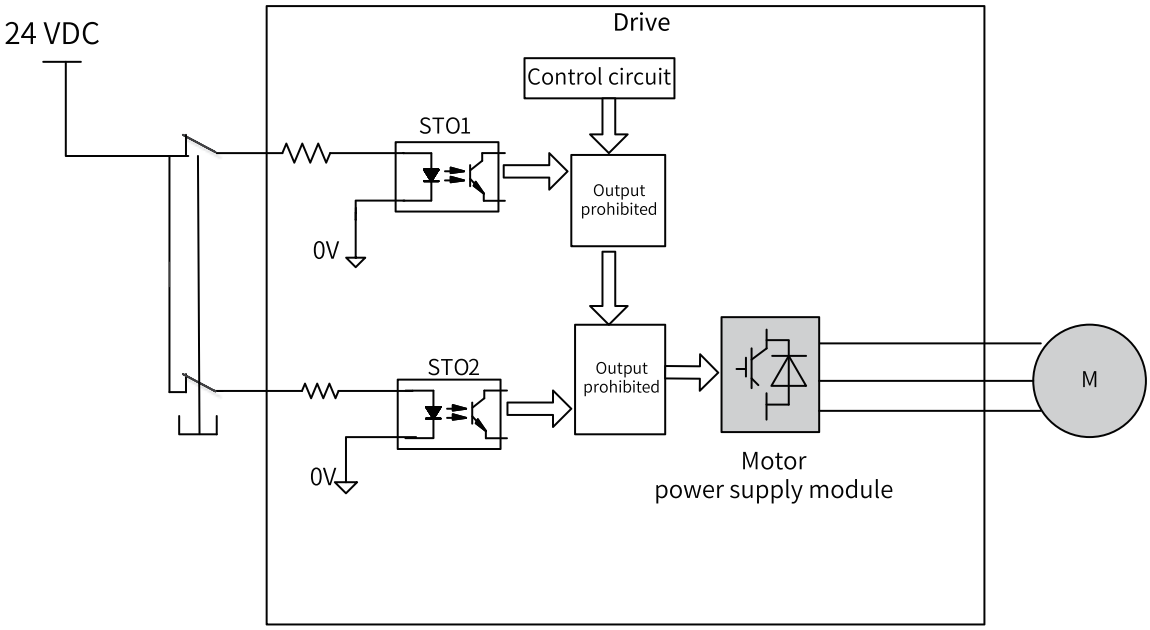


Figure 5-1 Schematics of the STO function

Safe Torque Off (STO) is a safety function that complies with IEC 61800-5-2:2016. It is built into Inovance SV670-INT series servo drives.

Power cycle the drive every three months or trigger STO by disconnecting the 24 V input of CN6, so that STO can be reset regularly.

The STO function inhibits the control signal of the power semiconductors on the drive output end, preventing the drive from generating torque at the motor shaft end.

The STO function prevents movement of the motor by two redundant external hardware signals (STO1 and STO2) that block the PWM signals from being outputted to the power layer of the servo drive. STO1 and STO2 input signals must be both active to allow the servo drive to operate normally.

The STO function table is shown below.

STO1 input	STO2 input	PWM signal
H	H	Normal
L	H	Inhibit
H	L	Inhibit
L	L	Inhibit

STO (safe torque off)	
Definition	Cuts off the power of the motor.
Description	The safe torque off (STO) function brings the machine safely into a no-torque state and prevents it from unexpected start. When the STO function is enabled, the servo stops according to the stop mode (H02.08).

STO (safe torque off)	
Safety state	Disables the PWM gating signal of the drive.
Operation mode	High demand mode or continuous mode.

5.2 Functions and Monitoring

Functions

The keypad displays the STO function state and fault information. The following table describes the fault codes, causes, and solutions related to the STO function. Contact Inovance technical support if the fault persists after corrective actions listed in the following table are taken.

Fault code	Fault message	Fault mechanism	Cause	Solution
E150.0	STO safety state applied	The STO input protection applies (safety state).	One or two 24 V inputs are disconnected simultaneously, triggering the STO function.	There is no need to take any corrective actions. After the STO terminal is back to normal, clear the fault by using the fault reset function. Check whether the 24 V power supply for the STO is stable. Tighten the cables that are loose or disconnected. Replace the servo drive.
E150.1	STO input state abnormal	The single-channel input of STO is ineffective.	1. The STO input power supply is abnormal.	Check whether the 24 V power supply for the STO is stable. Tighten the cables that are loose or disconnected.
			2. The STO input resistor is abnormal.	Replace the servo drive.
			3. The STO fails.	Replace the servo drive.
E150.2	Buffer 5 V voltage detection exception	The MCU monitors the 5 V power supply of the PWM Buffer to detect whether overvoltage or undervoltage occurs. If the voltage is abnormal, this fault code will be displayed.	The 5 V voltage supplied to the STOBuffer is abnormal due to undervoltage or overvoltage.	Replace the servo drive.
E150.3	STO input circuit hardware diagnosis failure	Short circuit occurs in the optocoupler in the upstream hardware circuit of STO. The drive displays E150.3.	Direct connection occurs on the upstream optocoupler of STO1 or STO2.	Replace the servo drive.

Fault code	Fault message	Fault mechanism	Cause	Solution
E150.4	STO activated	An error occurs on the PWM buffer integrated circuit during initialization detection upon power-on (the PWM signal cannot be blocked). The drive displays E150.4.	STOBuffer power-on detection error	Replace the servo drive.
E150.5	STO input signal interference	The STO signal is being disturbed, and the noise filtering condition defined by H0A.73 is not met.	The STO terminal is in poor contact or the external 24 V input voltage is unstable, which may lead to malfunction of STO.	Replace the 24 V power supply to ensure the STO terminal input voltage is stable.

Note

- For a motor with brake, if either STO1 or STO2 closes, the drive will be disabled within 30 ms (STO response time).
- For a motor without brake, if either STO1 or STO2 closes, the drive will be disabled within 5 ms (STO response time).

EDM signal DO output

When the 24 V voltage of STO1 and STO2 is cut off, the EDM DO signal is active. Otherwise, the EDM DO signal is inactive.

In this case, both STO1 and STO2 are filtered signals. When EDM is active, the PWM signal is blocked by the servo drive.


Signal name	Symbol	Optocoupler logic			
Safety input	STO1	ON	ON	OFF	OFF
	STO2	ON	OFF	ON	OFF
EDM output	EDM	OFF	OFF	OFF	ON

Note

The DO output of this EDM is only a monitoring signal to detect whether a safety function is triggered, not a safety signal output.

The EDM state of the integrated STO can only be output through the non-safe DO output of the drive, not through the DO output on the safety module.

Example

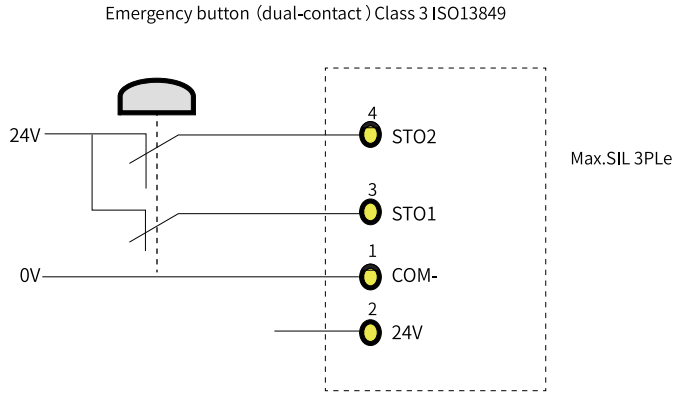

5.3 Fault Reset

Fault reset means the normal operation can be recovered when the following conditions are met from the STO state to the ready state.

- The PWM buffer is disabled as the enable terminal is pulled up during power-on, so the PWM signal is inhibited.
- The PWM buffer is disabled as the enable terminal is pulled up during initialization of the MCU, so the PWM signal is inhibited. Such condition is cleared and servo drive works normally after initialization is done.
- When all of the following conditions are met, the servo system that enters the safe state through the STO function can be back to normal with the safe state cleared after auto-reset of the drive.
  - The input state of the STO request must be "high".
  - The servo ON or servo RUN command must be inactive.
  - No hazardous faults exist.

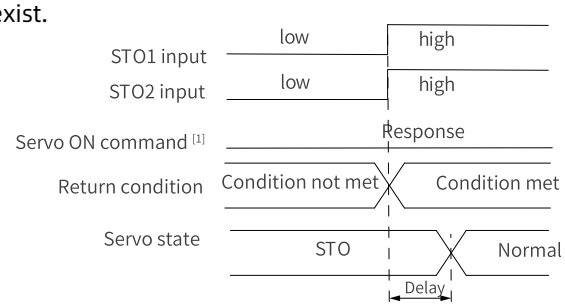


Figure 5-2 Return condition of external STO request state

Note

[1]: The servo ON command is a servo-enabled command, not an internal servo-enabled state.

- When STO_IN (STO1 or STO2 input) is restored to 24 V, the EDM and servo ready signals are immediately reset to 0. When both STO1 and STO2 are restored to 24 V at the same time, the servo ready output signal and the servo operation signal are activated after 400 ms. When the drive operates, the PWM drive signal is outputted.


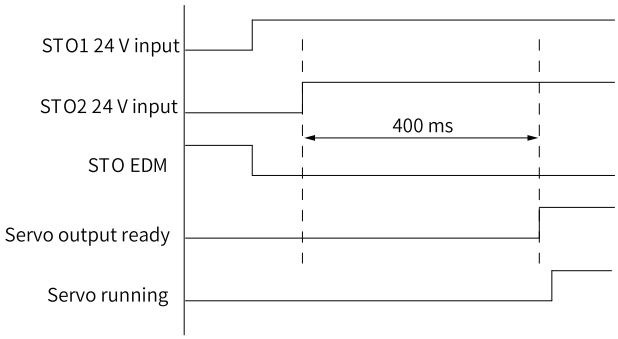


Figure 5-3 Servo drive reset sequence diagram

5.4 Safety Function Response Time

The STO function prevents movement of the motor by two redundant external hardware signals (STO1 and STO2) that block the PWM signals from being outputted to the power layer of the servo drive. STO1 and STO2 input signals must be both active to allow the servo drive to operate normally.

If either or both of them are at low level simultaneously, the PWM signal will be blocked in the next 30 ms [1].

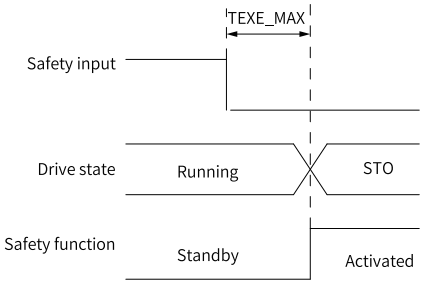

Note

[1]: The typical response time is 30 ms. The maximum response time is 100 ms, given the discrete type of the electronic device.

5.5 Acceptance and Verification

Basic requirements

- Technicians must be trained to understand the requirements and principles of safety-related system design and commissioning.
- Maintenance personnel must be trained to understand the requirements and principles of safety-related system design and operation.
- Operators must be trained to understand the requirements and principles of safety-related system design and operation.
- The safety-related circuit on the control board that fails to operate must be replaced with a new one because the circuit is not repairable.

Commissioning checklist

- Start-up test and validation
  IEC 61508, EN/IEC 62061, and EN ISO 13849 require the final assembler of the equipment to verify the operation of the safety function through acceptance testing.

  The acceptance test must be performed at the following stages:

  - The initial start-up of the safety function.
  - After any changes related to the safety function, such as wiring, components, and settings.
  - After any maintenance work related to the safety function.

  The acceptance test of the safety function must be performed by an authorized person with expertise and knowledge of the safety function. The test must be documented and signed by the tester.

  Signed acceptance test reports must be stored in the logbook of the machine. The report shall include documentations of start-up activities and test results, fault reports, and troubleshooting. Any new acceptance tests that are performed due to changes or maintenance shall be recorded in the logbook.

- STO checklist

No.	Check item	Result
1	Ensure that the drive runs and stops freely during commissioning.	☐
2	Stop the drive (if running), switch off the input power supply and isolate the drive from the power line by using a circuit breaker.	☐
3	Check the STO circuit connections based on the circuit diagram.	☐
4	Check whether the shield of the STO input cable is grounded to the drive frame.	☐
5	Turn off the circuit breaker and switch on the power supply.	☐
5.1	Test the STO signal #1 when the motor stops: Set STO1 and STO2 to H. Send a stop command to the drive (if running) and wait until the motor shaft reaches a standstill. Awake the STO function by de-energizing (low state or open-circuit) the STO input signal #1 and send a start command to the drive. Ensure that the motor stays at a standstill and the keypad of the drive displays E150.1.	☐
5.2	Set STO1 to H and disable the ON/RUN command of the drive. Then, reset the drive automatically and enable the ON/RUN command of the drive. Finally, check whether the motor runs normally.	☐
5.3	Test the STO signal #2 when the motor stops: Set STO1 and STO2 to H. Send a stop command to the drive (if running) and wait until the motor shaft reaches a standstill. Awake the STO function by de-energizing (low Level or open-circuit) the STO input signal 2 and send a start command to the drive. Ensure that the motor stays at a standstill and the keypad of the drive displays E150.1.	☐
5.4	Set STO2 to H and disable the ON/RUN command of the drive. Then, reset the drive automatically and enable the ON/RUN command of the drive. Finally, check whether the motor runs normally.	☐

No.	Check item	Result
6.1	Test the STO channel 1 #1 when the motor is running: Set STO1 and STO2 to H. Start the drive and ensure the motor is running. Awake the STO function by de-energizing (low state or open-circuit) the STO input signal #1. Ensure that the motor stops and the drive trips. Reset the fault and try to start the drive. Ensure that the motor stays at a standstill and the keypad of the drive displays "E150.1".	□
6.2	Set STO1 to H and disable the ON/RUN command of the drive. Then, reset the drive automatically and enable the ON/RUN command of the drive. Finally, check whether the motor runs normally.	□
6.3	Test the STO channel 2 #1 when the motor is running: Set STO1 and STO2 to H. Start the drive and ensure the motor is running. Awake the STO function by de-energizing (low state or open-circuit) the STO input signal #2. Ensure that the motor stops and the drive trips. Reset the fault and try to start the drive. Ensure that the motor stays at a standstill and the keypad of the drive displays "E150.1".	□
6.4	Set STO2 to H and disable the ON/RUN command of the drive. Then, reset the drive automatically and enable the ON/RUN command of the drive. Finally, check whether the motor runs normally.	□
7	Sign and document the acceptance test report which verifies that the safety function is safe and acceptable for operation.	□

Special requirements

You must conduct STO diagnosis every three month by powering off and powering on the drive once or running the STO function once.

Note

There are two ways to perform STO diagnosis:

- Power off and restart;
- Trigger and then cancel STO.

You can use either of them.

6 Communication

6.1 Modbus RTU Communication

6.1.1 Communication Overview

6.1.1.1 Communication Specifications

Item		Specification
Modbus RTU slave device performance	Link layer protocol	RS485
	Application layer protocol	Modbus RTU, GBT 19582.2-2008, using custom command area
	Baud rate	115200 bps
	Duplex mode	Half-duplex
	Data format	8-N-1 (8 data bits, no parity check, 1 stop bit)

6.1.1.2 Protocol Description

Modbus RTU protocol is a common language applied to electronic controllers. Based on this protocol, controllers can communicate with each other and with other devices. It has become a general industry standard. Based on the Modbus RTU protocol, control devices produced by different manufacturers can be connected to form an industrial network for centralized monitoring.

6.1.2 Hardware Configuration

6.1.2.1 Terminal Layout

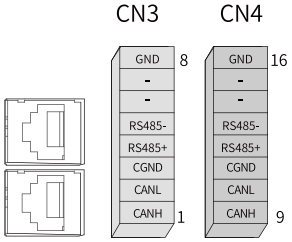


Figure 6-1 Communication terminal pin layout of the servo drive

Table 6–1 Description of communication terminal pins

Pin No.	Assignment	Description
1 and 9	CANH	CAN communication port
2 and 10	CANL	
3 and 11	CGND	CAN communication ground
4 and 12	RS485+	Modbus RTU communication port
5 and 13	RS485–	
6 and 14	-	-
7 and 15	-	-
8 and 16	GND	Signal reference ground
Enclosure	PE	Shield

6.1.2.2 Wiring example of RS485 communication

RS485 communication connection with PLC

The following figure shows the cable connection between the servo drive and the PLC during RS485 communication networking.




Figure 6-2 Diagram of the drive-to-PLC communication cable

Use a three-conductor shielded cable to connect the RS485 bus, with three conductors connected to 485+, 485-, and GND, respectively. GND represents non-isolated RS485 signal reference ground. Connect the twisted pairs to the RS485+ and RS485– terminals. Connect the third cable to the RS485 reference ground (GND). Connect the shield to the device ground (PE). Connect 120 Ω termination resistors only at the head and tail ends of the bus to prevent RS485 signal reflection.

Table 6–2 Pin connections of the cable used for CAN communication between the servo drive and PLC

RJ45 on the drive (A)			PLC side (B)		
Communication type	Pin No.	Definition	Communication type	Pin No.	Definition
RS485	4	485+	RS485	4	485+
	5	485-		5	485-
	8	GND		8	GND
-	Housing	PE (shield)	-	Housing	PE (shield)

RS485 communication for multiple drives installed in parallel

The following figure shows the cable connection between multiple servo drives during RS485 communication networking.

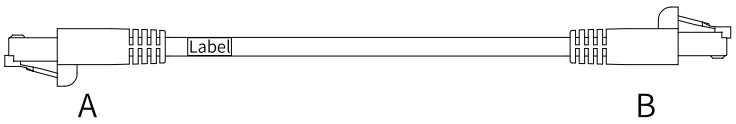


Figure 6-3 Diagram of the multi-drive communication cable

Table 6–3 Pin connections of the cable used for multi-drive RS485 communication (pins in 485 group used only)

RJ45 on the drive (A)			RJ45 on drive side (B)		
Communication type	Pin No.	Definition	Communication type	Pin No.	Definition
RS485	4	485+	RS485	4	485+
	5	485-		5	485-
	8	GND		8	GND
-	Housing	PE (shield)	-	Housing	PE (shield)

In case of a large number of nodes, connect the RS485 communication using the daisy chain mode. Connect the RS485 signal reference grounds of all the nodes (up to 128 nodes) together.

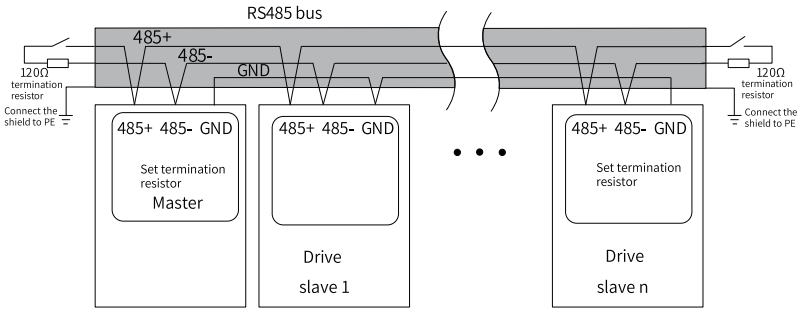


Figure 6-4 RS485 bus topology

Caution

- Set the termination resistor: Insert S6-L-T03-0.0 into the RJ45 connector.
- Do not connect the CGND terminal of the host controller to the GND terminal of the servo drive. Failure to comply will damage the machine.

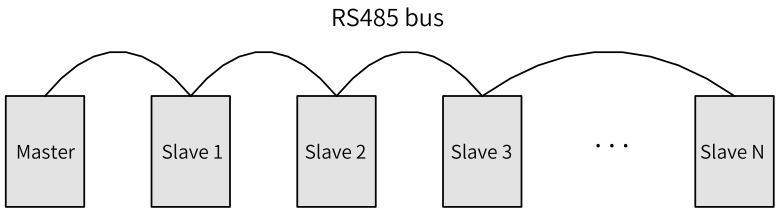


Figure 6-5 Daisy chain mode


The following table lists the maximum number of nodes and transmission distance supported by the Inovance standard RS485 circuit at different transmission rates.

Table 6-4 Transmission distance and number of nodes

No.	Transmission rate (kbps)	Transmission distance (m)	Number of nodes	Cable size (AWG)
1	115.2	100	128	26
2	19.2	1000	128	26

6.1.3 Communication Transmission Mode

In an RS485 communication network, data is transmitted in asynchronous serial and half-duplex transmission mode. Data is sent frame by frame in the message format specified by the Modbus-RTU protocol. The idle time longer than 2-byte transmission time marks the start of a new communication frame.

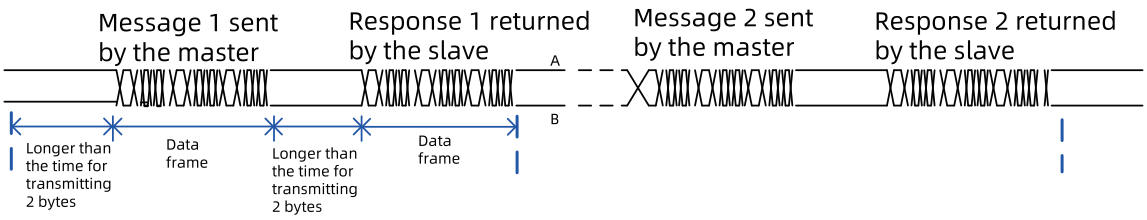

The built-in communication protocol of the drive is the Modbus RTU slave communication protocol, which allows the AC drive to respond to the query command from the master or execute the action according to query command from the master and respond with communication data.

The master can be a personal computer (PC), an industrial control device, or a programmable logic controller (PLC). It can communicate with a slave separately, or send broadcast messages to all slaves. When the master sends a query command to a single slave, the slave is required to return a response frame. For a broadcast message sent by the master, no response from the slaves is required.

6.1.4 Communication Data Frame Structure

Parameters of the SV670P-INT series servo drive are classified into 16-bit and 32-bit parameters based on the data length. Data read/write for the parameters is implemented based on the Modbus RTU protocol.

The command codes for reading/writing parameters vary with the data length.

Operation	Command code
Reading 16-bit/32-bit parameters	0x03
Writing 16-bit parameters	0x06
Write 32-bit parameters	0x10

Command code for reading parameter: 0x03

Based on the Modbus RTU protocol, command code 0x03 is used to read both 16-bit and 32-bit parameters.

Request frame format:

Value	Description
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address: 1 to 127 **Note: 1 to 127 are decimal values which need to be converted into hexadecimal equivalents.**
CMD	Command code: 0x03
DATA[0]	Register start address (high 8 bits): parameter group number of the start register. For example, for parameter H06.11, where 06 is the group number, DATA[0] is 0x06. **Note: In this example, 06 is a hexadecimal value and needs no conversion.**
DATA [1]	Register start address (low 8 bits): offset within the parameter group of the start register For example, for parameter H06.11, where 11 is the offset within the parameter group, DATA[1] is 0x0B. **Note: In this example, 11 is a decimal value and needs to be converted to its hexadecimal equivalent 0x0B.**

Value	Description
DATA [2]	High 8 bits of the number of parameters to be read (hexadecimal), N(H)
DATA [3]	Low 8 bits of the number of parameters to be read (hexadecimal), N(L)
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Response frame format:

Value	Description
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address, hexadecimal
CMD	Command code: 0x03
DATALENGTH	Number of parameter bytes, equal to twice the number of parameters to be read, that is, N × 2.
DATA[0]	Data of the first register parameter (high 8 bits)
DATA [1]	Data of the first register parameter (low 8 bits)
DATA[...]	...
DATA[N × 2 – 2]	Data of the Nth register parameter (high 8 bits)
DATA[N × 2 – 1]	Data of the Nth register parameter (low 8 bits)
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Based on the Modbus RTU protocol, command code 0x06 is used to write 16-bit parameters. Command code 0x10 is used to write 32-bit parameters.

Communication example

- To read two-word data with H02.02 as the start register from the drive whose servo axis address is 01:

  The master sends the following request frame:

01	03	02	02	00	02	CRCL	CRCH

  The slave returns the response frame:

01	03	04	00	01	00	00	CRCL	CRCH

  The response frame means that the slave returns data of 2 word length (4 bytes), and the data content is 0x0001, 0x0000.

  If the slave response frame is:

01	83	02	CRCL	CRCH

  The response frame indicates that a communication error occurs and the error code is 0x02. (0x83 indicates an error).

- To read parameter H05.07 (32-bit) from the drive whose servo axis address is 01:

  The master sends the following request frame:

01	03	05	07	00	02	CRCL	CRCH

  The slave returns the response frame:

01	03	04	00	01	00	00	CRCL	CRCH

  The response frame indicates that the value of parameter H05.07 is 0x00000001.

Command code for writing 16-bit parameters: 0x06



Do not write 32-bit parameters with 0x06. Failure to comply can result in unexpected error.

Request frame format:

Value	Description
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address 1 to 127. **Note: 1 to 127 are decimal values which need to be converted into hexadecimal equivalents.**
CMD	Command code: 0x06
DATA[0]	Register start address (high 8 bits): parameter group number of the start register. For example, to write data to parameter H06.11, where 06 is the group number, DATA[0] is 0x06. **Note: In this example, 06 is a hexadecimal value and needs no conversion.**
DATA [1]	Register start address (low 8 bits): offset within the parameter group of the start register For example, to write data to parameter H06.11, where 11 is the offset within the parameter group, DATA[1] is 0x0B. **Note: In this example, 11 is a decimal value and needs to be converted to its hexadecimal equivalent 0x0B.**
DATA [2]	Write the 8 high bits of register data (hexadecimal).
DATA [3]	Write the 8 low bits of register data (hexadecimal).
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Response frame format:

Value	Description
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address, hexadecimal
CMD	Command code: 0x06
DATA[0]	Register start address (high 8 bits): parameter group number of the start register. For example, to write data to parameter H06.11, where 06 is the group number, DATA[0] is 0x06. **Note: In this example, 06 is a hexadecimal value and needs no conversion.**
DATA [1]	Register start address (low 8 bits): offset within the parameter group of the start register For example, to write data to parameter H06.11, where 11 is the offset within the parameter group, DATA[1] is 0x0B. **Note: In this example, 11 is a decimal value and needs to be converted to its hexadecimal equivalent 0x0B.**
DATA [2]	Write the 8 high bits of register data (hexadecimal).
DATA [3]	Write the 8 low bits of register data (hexadecimal).

Value	Description
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Communication example

To write data 0x0001 to parameter H02.02 in the drive whose servo axis address is 01:

The master sends the following request frame:

01	06	02	02	00	01	CRCL	CRCH

The slave returns the response frame:

01	06	02	02	00	01	CRCL	CRCH

The response frame indicates that data 0x0001 has been written to parameter H02.02 in the drive whose servo axis address is 01.

If the slave response frame is:

01	86	02	CRCL	CRCH

The response frame indicates that a communication error occurs, and the error code is 0x02. In this example, 0x86 indicates an error.

Command code for writing 32-bit parameters: 0x10



Do not write 16-bit parameters with 0x10. Failure to comply can result in unexpected error.

Request frame format:

Value	Description
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address 1 to 127. **Note: 1 to 127 are decimal values which need to be converted into hexadecimal equivalents.**
CMD	Command code: 0x10
DATA[0]	Register start address (high 8 bits): parameter group number of the start register. For example, to write data to parameter H11.12, where 11 is the group number, DATA[0] is 0x11. **Note: In this example, "11" is a hexadecimal value that does not need to be converted.**
DATA [1]	Register start address (low 8 bits): offset within the parameter group of the start register For example, to write data to parameter H11.12, where **12 is the offset within the parameter group**, DATA[1] is 0x0C. **Note: In this example, 12 is a decimal value and needs to be converted to its hexadecimal equivalent 0x0C.**

Value	Description
DATA [2]	High 8 bits of the number of parameters to which data will be written (hexadecimal), M(H) For example, to write data to parameter H05.07 alone, DATA[2] is 00, DATA[3] is 02, and M is H0002. **One 32-bit parameter is counted as two words.**
DATA [3]	Low 8 bits of the number of parameters to which data will be written (hexadecimal), M(L)
DATA [4]	Number of bytes corresponding to data to be written to the register, that is, M × 2. For example, to write data to parameter H05.07 alone, DATA[4] is H04.
DATA [5]	Write the eight high bits of the start register data (hexadecimal).
DATA [6]	Write the eight low bits of the start register data (hexadecimal).
DATA [7]	Write the eight high bits of the start register address +1 (hexadecimal).
DATA [8]	Write the eight low bits of the start register address +1 (hexadecimal).
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Response frame format:

Value	Description
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address, hexadecimal.
CMD	Command code: 0x10
DATA[0]	Register start address (high 8 bits): offset within the parameter group of the start register For example, to write data to parameter H11.12, DATA[0] is 0x11.
DATA [1]	Register start address (low 8 bits): offset within the parameter group of the start register For example, to write data to parameter H11.12, DATA[1] is 0x0C.
DATA [2]	High 8 bits of the number of parameters to which data will be written (hexadecimal), M(H)
DATA [3]	Low 8 bits of the number of parameters to which data will be written (hexadecimal), M(L)
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Error response frame

Error frame response format:

Value	
START	Equal to or larger than 2-character idle time, indicating the start of a frame.
ADDR	Servo axis address, hexadecimal
CMD	Command code: 0x80
DATA[0] to DATA[3]	DATA error code
CRCL	CRC valid byte (low 8 bits).
CRCH	CRC valid byte (high 8 bits).
END	Equal to or larger than 2-character idle time, indicating the end of a frame.

Error codes:

Error code	Description
0x0001	Invalid command code
0x0002	Invalid data address
0x0003	Invalid data
0x0004	Slave device fault

32-bit parameter addressing

When Modbus RTU commands are used to read/write 32-bit parameters, the communication address is determined by the address of the parameter with the smaller offset number. Two parameters are operated per operation. See the following examples.

Note

In the following examples, the servo axis address is 01 by default.

- The Modbus RTU command for reading parameter H11.12 (1st displacement) is as follows.

01	03	11	0C	00	02	CRCL	CRCH

If the "1st displacement" is 0x40000000 (decimal equivalent: 1073741824), then the following response frames apply:

- When H0E.84 is set to 1 (Low 16 bits before high 16 bits), the response frame is as follows.

01	03	04	00	00	40	00	CRCL	CRCH

- H0E.84 = 0 (High 16 bits before low 16 bits), then the response frame is:

01	03	04	40	00	00	00	CRCL	CRCH

- The Modbus RTU command for writing 0x12345678 to parameter H11.12 (1st displacement) is as follows.

- If H0E.84 = 1 (Low 16 bits before high 16 bits):

01	10	11	0C	00	02	04	56	78	12	34	CRCL	CRCH

- If H0E.84 = 0 (High 16 bits before low 16 bits):

01	10	11	0C	00	02	04	12	34	56	78	CRCL	CRCH

CRC check

The host controller and the servo drive must use the same CRC algorithm during communication. Otherwise, a CRC error will occur. The SV670P-INT series servo drive adopts 16-bit CRC with low bytes before high bytes. The polynomial used for CRC is $X^{16} + X^{15} + X^{2} + 1$ (0xA001).

```
Uint16 COMM_CrcValueCalc(const Uint8 *data, Uint16 length)
{
  Uint16 crcValue = 0xffff;
  int16 i;
  while (length--)
  {
    crcValue ^= *data++;
    for (i = 0; i < 8; i++)
    {
      if (crcValue & 0x0001)
      {
        crcValue = (crcValue >> 1) ^ 0xA001;
      }
      else
      {
        crcValue = crcValue >> 1;
      }
    }
  }
  return (crcValue);
}
```

6.1.5 Communication Parameters

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H0E.00	200E-01h	Node address	1 to 127	1	-	At stop	"H0E_en.00" on page 556
H0E.80	200E-51h	Modbus baud rate	0: 300 bps 1: 600 bps 2: 1200 bps 3: 2400 bps 4: 4800 bps 5: 9600 bps 6: 19200 bps 7: 38400 bps 8: 57600 bps 9: 115200 bps	9	-	Real time	"H0E_en.80" on page 561
H0E.81	200E-52h	Modbus data format	0: No parity, 2 stop bits (N-2) 1: Even parity, 1 stop bit (E-1) 2: Odd parity, 1 stop bit (O-1) 3: No parity, 1 stop bit (N-1)	3	-	Real time	"H0E_en.81" on page 561
H0E.84	200E-55h	Modbus communication data sequence	0: High-order bits are followed by low-order bits. 1: Low-order bits are followed by high-order bits.	1	-	Real time	"H0E_en.84" on page 562

6.2 CANlink Communication

6.2.1 Communication Overview

6.2.1.1 CANlink Communication Specifications

Item		Specification
CANlink Basic per-for-mance of slave	Communication protocol	CANlink Protocol
	Link layer protocol	CAN bus.
	CAN-ID type	29bit-CAN2.0B.
	Baud rate	500 kbit/s (default). 1 Mbit/s, 250 Kbit/s, 125 Kbit/s, 100 Kbit/s, 50 Kbit/s, 20 Kbit/s
	Maximum number of stations	62
	CAN frame length	Standard frame: 44 to 108 bits + 23 bits = 67 to 131 bits. Extended frame: 64 to 128 bits + 28 bits = 92 to 156 bits.
	CANlink frame type	Remote frame, management frame, command frame, configuration frame, heartbeat frame, and data frame. • The remote frame is used for the master to scan CANlink devices to obtain device information. • Command frames and configuration frames are used to manage and configure the network. • The monitoring frame is used to monitor the status of the CANlink network. • Data frames are used for high-speed data exchange between different devices.
	Termination resistor	120 Ω

Specifications:

1. Supports drive disconnection protection.
   Heartbeat protection (ED03.0)
2. Supports slave conflict detection (E994.0).
3. Hot swap of slaves is supported.

6.2.1.2 Protocol Description

CANlink is a communication protocol developed by Inovance for embedded systems used in automation. CANlink implements layers including the network layer in the OSI model. The underlying protocol implementing the data link layer and the physical layer is typically Controller Area Network (CAN).

CANlink communication supports network management, device monitoring, and node communication. CANlink supports the master/slave mode (one master to multiple slaves). The address of master/slave node must be unique ranging from 1 to 62.

SV670P-INT only supports the slave mode only.

6.2.2 Hardware Configuration

6.2.2.1 Terminal Arrangement

For details, see *"6.1.2.1 Terminal Layout" on page 237*.

6.2.2.2 CAN Communication Connection Examples

CAN communication with PLC

The following figure shows the cable used for the communication between the servo drive and PLC in CAN communication networking.




Figure 6-6 Diagram of the drive-to-PLC communication cable

Use a three-conductor shielded cable to connect the CAN bus, with the three conductors connected to CANH, CANL, and CGND (CGND represents isolated RS485 circuit signal reference ground) respectively. Connect the twisted pairs to the CANH and CANL terminals. Connect the CGND terminal to the CAN reference ground. Connect the shield to the device ground. Connect 120 Ω termination resistors only at the head and tail ends of the bus to prevent CAN signal reflection.

Table 6–5 Pin connections of the cable used for CAN communication between the servo drive and PLC

RJ45 on the drive (A)			PLC side (B)		
Communication type	Pin No.	Definition	Communication type	Pin No.	Definition
CAN	1	CANH	CAN	1	CANH
	2	CANL		2	CANL
	3	CGND		3	CGND
-	Housing	PE (shield)	-	Housing	PE (shield)

CAN communication for multiple drives installed in parallel

The following figure shows the cable used for multi-drive CAN communication.

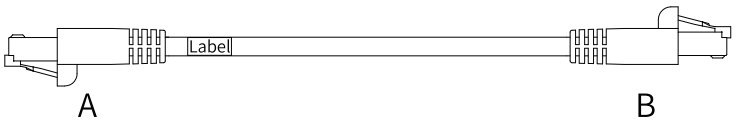


Figure 6-7 Diagram of the multi-drive communication cable

Table 6–6 Connection of pins of the multi-drive communication cable (only CAN pins used)

RJ45 on the drive (A)			RJ45 on drive side (B)		
Communication type	Pin No.	Definition	Communication type	Pin No.	Definition
CAN	1	CANH	CAN	1	CANH
	2	CANL		2	CANL
	3	CGND		3	CGND
-	Housing	PE (shield)	-	Housing	PE (shield)

Use the daisy chain mode for CAN bus, as shown in the following figure.

- Shielded twisted pair cables are recommended for connecting the CAN bus. Twisted pairs are recommended for connecting CANH and CANL.
- Connect 120 Ω termination resistors only at both ends of the bus to prevent signal reflection.
- Connect the CAN signal reference grounds of all the nodes together.
- Up to 127 nodes can be connected.

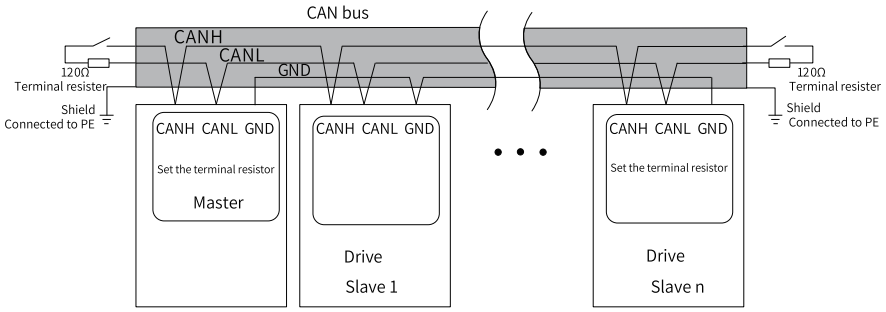



Figure 6-8 CAN bus topology

Caution

Do not connect the CGND terminal of the host controller to the GND terminal of the servo drive. Otherwise, the servo drive may be damaged.

6.2.3 Communication Transmission Mode

The CANlink protocol is a CAN bus protocol for the application layer developed by Inovance. In the CAN communication network, the CAN controller determines the bus level based on the potential difference on the bus, which is the dominant level and the recessive level. When the bus is idle, all nodes can send data to the bus. When two devices send messages at the same time, the bus level is arbitrated. The data on the CAN bus is transmitted in the asynchronous and half-duplex transmission mode The data is transmitted in the CAN data frame structure. When the bus is idle, the bus level is the recessive level (logic 1). When the bus level is dominant, it indicates the start of frame (logic 0). CANlink is only applicable to the CAN extended frame structure and the 29-bit arbitration ID is used. Other types of frames are not specified. The maximum CANlink frame length is 64 to128 + 28 = 92 to 156 bits:

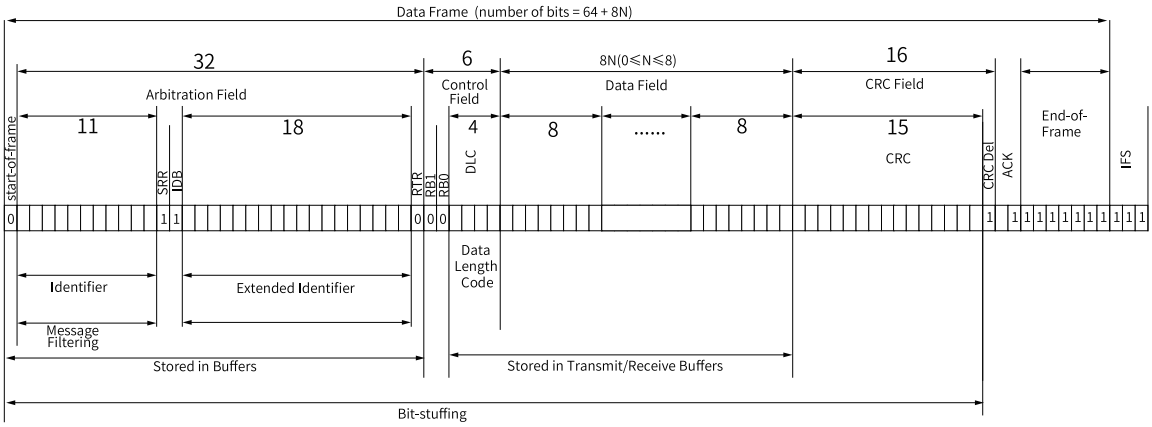

The built-in communication protocol of the drive is the CANlink slave communication protocol, which allows the drive to respond to the query command from the master or execute the action according to query command from the master and respond with communication data. The master can be an Inovance PLC, such as H2U, H3U, or AM600. The slave determines whether to process this data frame on the bus based on the target drive address specified in the data. The slave can communicate with the slave, and the master can communicate with a slave separately or broadcast messages to all the slaves. When the master sends a query command to a slave, the slave needs to return a response frame. For a broadcast message sent by the master, the slaves do not need to return a response to the master.

6.2.4 Communication Data Frame Structure

The CANlink protocol can be used to read data from and write data to 16- and 32-bit registers using command frames. Command frames operate in query and response mode. Responses from the slave nodes are required upon receipt except for broadcasts (with a receiver address of 0). The data structure of the command frame is shown in the following table.

CAN ID (29-bit)					4 bytes/8 bytes			
bit28 to 25	bit24	bit23 to 16	bit15 to 8	bit7 to 0	Dbyte 1	Dbyte 2	Dbyte 3	Dbyte 4
Frame ID	Query and response	Command code	Target node	Source node	-	-	-	-
1000B	1: query	xxH	xxH	yyH	xx	xx	xx	xx
1000B	0: response	xxH	yyH	xxH	xx	xx	xx	xx
4-bit	1-bit	8-bit	8-bit	8-bit	16-bit	16-bit	16-bit	16-bit

- Frame ID: Fixed to 1000B, indicating the command frame.
- Query and response: "1" for commands and "0" for responses.
- Command code: Specify different commands.
- Target node: The address of the node receiving the command frame. The receiving address is written to "0", indicating a broadcast message. In this case, every node on the network receives and processes the message and is not allowed to send a response back.
- Source node: The address of the node sending the command frame.
- Data: Different commands correspond to different data length.

Command code:

- Read and write to registers

The command that reads 16-bit registers (command code 04H) does not support broadcast address. The address and data are 16-bit. The frame structure is shown in the following table.

CAN ID (29-bit)					4 bytes/8 bytes			
bit28 to 25	bit24	bit23 to 16	bit15 to 8	bit7 to 0	Dbyte 1	Dbyte 2	Dbyte 3	Dbyte 4
Frame ID	Query and response	Command code	Target node	Source node	-	-	-	-
1000B	1: query	04H	xxH	yyH	1	Register address 1	1	Register address 2
1000B	0: response	04H	yyH	xxH	Data 1	Register address 1	Data 2	Register address 2
4-bit	1-bit	8-bit	8-bit	8-bit	16-bit	16-bit	16-bit	16-bit

The command that writes data to 16-bit registers (command code 05H) supports broadcast addresses:

CAN ID (29-bit)					4 bytes/8 bytes			
bit28 to 25	bit24	bit23 to 16	bit15 to 8	bit7 to 0	Dbyte 1	Dbyte 2	Dbyte 3	Dbyte 4
Frame ID	Query and response	Command code	Target node	Source node	-	-	-	-
1000B	1: query	05H	xxH	yyH	Data 1	Register address 1	Data 2	Register address 2
1000B	0: response	05H	yyH	xxH	-	-	-	-
4-bit	1-bit	8-bit	8-bit	8-bit	16-bit	16-bit	16-bit	16-bit

Read and write commands can operate only one register, including address 1 and data 1. The corresponding data length is 4 bytes.

- Read and write to 32-bit registers

  The command that reads 32-bit registers (command code 14H) does not support broadcast addresses. The address and data are 32-bit. The frame structure is shown in the following table.

CAN ID (29-bit)					0 bytes/8 bytes	
bit28 to 25	bit24	bit23 to 16	bit15 to 8	bit7 to 0	Qbyte 1	Qbyte 2
Frame ID	Query and response	Command code	Target node	Source node	-	-
1000B	1: query	14H	xxH	yyH	Address	-
1000B	0: response	14H	yyH	xxH	Address	Data
4-bit	1-bit	8-bit	8-bit	8-bit	32-bit	32-bit

The command that writes data to 32-bit registers (command code 15H) supports broadcast addresses:

CAN ID (29-bit)					4 bytes/8 bytes	
bit28 to 25	bit24	bit23 to 16	bit15 to 8	bit7 to 0	Qbyte 1	Qbyte 2
Frame ID	Query and response	Command code	Target node	Source node	-	-
1000B	1: query	15H	xxH	yyH	Register address	Data
1000B	0: response	15H	yyH	xxH	-	-
4-bit	1-bit	8-bit	8-bit	8-bit	32-bit	32-bit

6.2.5 Communication Parameters

To use the CANlink function of the SV670P-INT series servo drive, set the following parameters.

Table 6–7 Parameters for CANlink system setting

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H0E.00	200E-01h	Node address	1 to 127	1	-	At stop	"H0E_en.00" on page 556
H0E.10	200E-0Bh	CAN selection	0: Pulse/Axis control command 1: Enhanced axis control command 2: CANopen	0	-	At stop	"H0E_en.10" on page 558
H0E.11	200E-0Ch	CAN baud rate	0: 20 kbps 1: 50 kbps 2: 100 kbps 3: 125 kbps 4: 250 kbps 5: 500 kbps 6: 1 Mbps 7: 1 Mbps - non-standard	5	-	At stop	"H0E_en.11" on page 558

Note

- To use the function of axis control commands, set H0E.10 to 0.
- To use the function of enhanced axis control commands, set H0E.10 to 1 and H11.00 to 5.
- To use the function of CiA402 motion control in CANopen, set H0E.10 to 2 and H02.00 to 8.
- To execute local control functions through CANopen communication, set H0E.10 to 2 and H02.00 to a value other than 8.

6.3 CANopen Communication

6.3.1 Communication Overview

6.3.1.1 Communication specifications

Specification	System specification	Description
Functions supported by parameters	Setting node address	The node address is set manually, with a maximum of 127. It cannot be assigned automatically
	Setting baud rate	The baud rate is set manually and cannot be assigned automatically.
	Switchover between CANopen and CANlink	CAN communication mode is set manually.
State machine description	Communication layer status description/display	Initializing, Pre-Operational, Operational, and Stopped
	Emergency error code description/display	Time-Out, State-Switch-Err, and PDO-Length-Err

Specification	System specification	Description
Error frame logging	Logs error frames.	Counts the number of NMT frames with an incorrect length.
		Counts the number of NMT frames with invalid commands.
		Count the number of heartbeat frames/node protection frames with an incorrect length.
Synchronization deviation detection	Multi-phase synchronization deviation detection	Deviation of 1/4 cycles
		Deviation of 1/2 cycles
		Deviation of 3/4 cycles
		Deviation of 1 cycle
		Deviation of 2 cycles
Baud rate	20 K-1 M baud rate	20 kbps, 50 kbps, 100 kbps, 125 kbps, 250 kbps, 500 kbps, and 1 Mbps
SYNC	SYNC producer	The SYNC producer.
	SYNC consumer	The SYNC consumer.
SDO	Enable domain upload/ download	Transmits data smaller than or equal to 4 bytes.
	SDO abort error	The SDO error code is reported according to different conditions.
PDO	Synchronous TPDO/RPDO	The synchronization number ranges from 1 to 240. The total TPDO/RPDO quantity is 4 by default, which is configurable.
	Asynchronous TPDO/RPDO	Time triggered. The total TPDO/RPDO quantity is 4 by default, which is configurable.
EMCY	Emergency message	Heartbeat timeout, PDO length error, node state switchover error, and application layer error.
NMT	Bootup service	Supports online message transmission.
NMTErrCtl	Life guard	Optional node protection (not used with heartbeat production).
	Heartbeat consumer	Supports node heartbeat consumption.
	Heartbeat producer	Supports node heartbeat production.
Expert mode	Configure the PDO communication parameters and their mappings in parameters.	Manually configure PDO communication parameters and their mappings.

6.3.1.2 Protocol Description

CANopen is a protocol for the application layer of the network transmission system based on CAN serial bus. It complies with the ISO/OSI standard model. Different devices in the network exchange data through the object dictionary or objects. The master node obtains or modifies data in the object dictionary of other nodes through PDO or SDO. The CANopen device model is shown in the following figure.

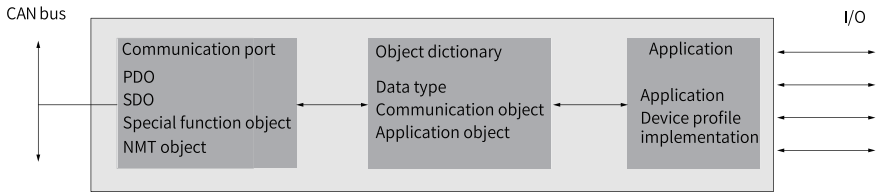


Figure 6-9 CANopen device model

6.3.2 Hardware Configuration

For terminal layout, see *"6.1.2.1 Terminal Layout" on page 237*. For communication wiring examples, see *"6.2.2.2 CAN Communication Connection Examples" on page 249*.

6.3.3 Communication Transmission Mode

CANopen provides multiple communication objects, each of which has different characteristics and applies to different applications. The predefined COB-ID is used. Specific rules are as follows:

- Network management (NMT) object: 0x000
- Synchronization (SYNC) object: 0x080
- SDO object:
  - Transmit SDO: 0x600+Node-Id
  - Receive SDO: 0x580+Node-Id
- PDO object:
  - RPDO1: 0x200+Node-Id
  - RPDO2: 0x300+Node-Id
  - RPDO3: 0x400+Node-Id
  - RPDO4: 0x500+Node-Id
  - TPDO1: 0x180+Node-Id
  - TPDO2: 0x280+Node-Id
  - TPDO3: 0x380+Node-Id
  - TPDO4: 0x480+Node-Id
- EMCY object: 0x80+Node-Id

Communication objects are defined as follows:

- Network management (NMT) object
  The NMT object includes Boot-up messages, Heartbeat protocol, and NMT messages. Based on the master-slave mode, an NMT is used to manage and monitor nodes in the network and implements three functions: node status control, error control, and node activation.
- Service data object (SDO)
  By using index and subindex, SDO enables the client to access entries in the device object dictionary. SDO is implemented via CMS objects of the multi-element domain in CAL, allowing data of any length to be transmitted (split into multiple messages if exceeding 4 bytes). The protocol is an acknowledged service type and generates a response for each message. SDO request and response messages always contain 8 bytes.

- Process data object (PDO)
  PDO is used to transmit real-time data from a single producer to one or more consumers. Data transmission is limited to one to eight bytes. Each CANopen device has eight default PDO channels, that is, four TPDOs and four RPDOs. PDO supports synchronous transmission and asynchronous transmission, determined by the PDO communication parameters. The content in a PDO message is predefined as determined by the PDO mapping parameters.
- Synchronous (SYNC) object
  A SYNC object is a message periodically broadcast by the CANopen master to the CAN bus. It is used to provide basic network clock signals. Each device determines whether to perform synchronous communication with other network devices using the event based on its configuration.

6.3.4 Communication Data Frame Structure

6.3.4.1 Network Management (NMT) System

The NMT system initializes, starts, and stops the network and devices in the network. It belongs to the master-slave system. A CANopen network includes only one NMT master. The CANopen network, including the master itself, can be configured.

NMT service

CANopen works according to the state machine specified by the protocol. Some states are converted automatically and some must be converted through NMT messages transmitted by the NMT master, as shown below.

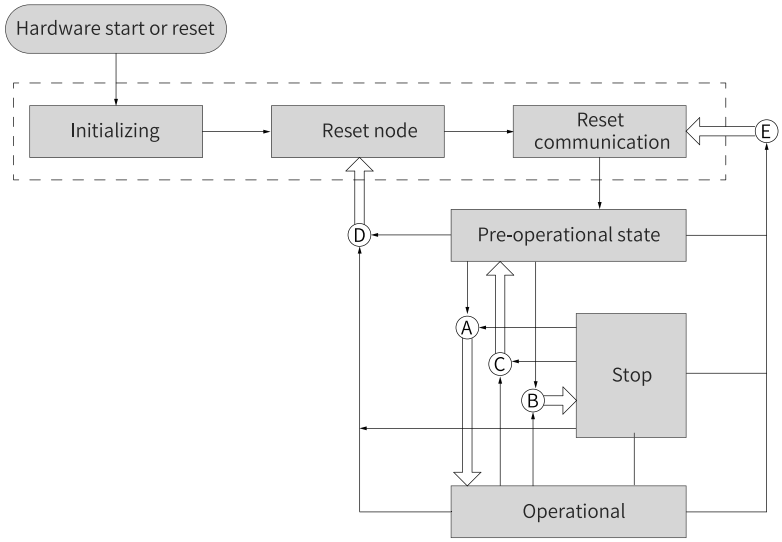


Figure 6-10 Execution process of the NMT state machine

In the figure above, conversion marked with a letter is implemented through NMT messages. Only the NMT master can transmit NMT control messages. The message format is shown in *"Table 6-8" on page 257*.

Table 6–8 NMT message format

COB-ID	RTR	Data/Byte	
		0	1
0x000	0	Command word	Node_ID

The COB-ID of an NMT message is always "0x000".

The data segment contains two bytes. The first byte is a command word indicating that this frame is for control purpose. See *"Table 6-9" on page 257* for details.

The second byte (Node_ID) is the CANopen node address. The byte value 0 indicates that it is a broadcast message to all the slaves in the network.

Table 6–9 NMT message command

Command word	Conversion code	Description
0x01	A	Instruction for starting a remote node
0x02	B	Instruction for stopping a remote node
0x80	C	Instruction for entering the pre-operational status
0x81	D	Instruction for resetting a node
0x82	E	Instruction for resetting communication

1. After power-on, the device automatically enters the initialization state, including initializing, node reset, and communication reset. During initializing, parameters of each mode are loaded. During node reset, the manufacturer-defined area and profile area of the object dictionary are restored to values saved last time. During communication reset, communication parameters in the object dictionary are restored to values saved last time.
2. Next, the device sends Boot-up and enters the pre-operational state, which is the main configuration node state.
3. After configuration is done, the node device can enter the operational state only after the NMT master sends the NMT message. The operational state means that the CANopen is working properly, with every module working properly.
4. When the NMT master sends a node stop message, the device enters the stop state and only the NMT module is working in CANopen communication.

The following table lists CANopen services available in different NMT states.

Table 6–10 Services supported in different NMT states

Service	Pre-operational	Operation	Stop
Process data object (PDO)	No	Yes	No
Service data object (SDO)	Yes	Yes	No
Synchronization (SYNC) object	Yes	Yes	No
Emergency (EMCY) message	Yes	Yes	No
Network Management System (NMT)	Yes	Yes	Yes
Error control	Yes	Yes	Yes

NMT error control

NMT error control is used to detect whether devices in the network are online and device status, including node guarding, life guarding, and heartbeat.

Note

- Life guard and heartbeat cannot be used at the same time.
- Do not set the node guarding, life guarding, and heartbeat time to small values to prevent excessive network load.

- **Node/life guarding**

  In node guarding, the NMT master periodically checks the status of an NMT slave through remote frames. In life guarding, a slave indirectly monitors the status of the master based on the interval of remote frames the slave receives for slave monitoring. Node guarding complies with the master/slave model. Every remote frame must be responded.

  Objects related to node/life guarding include the protection time 100Ch and life factor 100Dh. The value of 100Ch is the remote frame interval (ms) of node guarding under normal conditions. The product of 100Ch multiplied by 100Dh determines the latest time of master query. Node guarding is available normally. When 100Ch and 100Dh of a node are non-zero values and a node guarding request frame is received, life guarding will be activated.

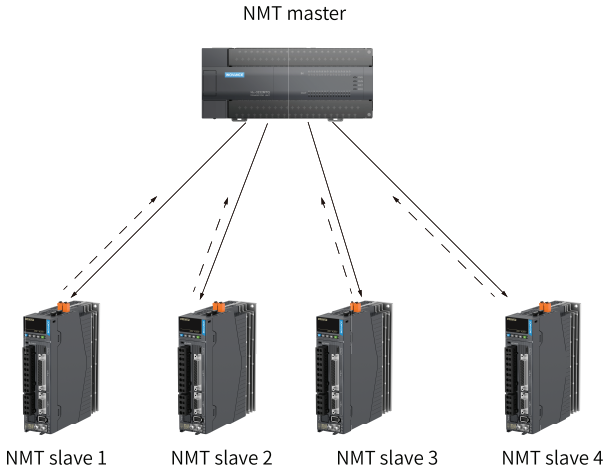


Figure 6-11 Description of node guarding

As shown in the figure above, the master sends a node guarding remote frame at the interval defined by 100Ch, and the slave must respond to the remote frame. Otherwise, the slave is considered to be offline.

If the slave does not receive any node guarding remote frame within the time defined by 100Ch × 100Dh, the master is considered to be offline.

The following table describes the remote frame sent by the NMT master.

Table 6–11 Node guarding remote frame message

COB-ID	RTR
0x700+Node_ID	1

The following table describes the response message returned by the NMT slave. The data segment is a status word consisting of one byte.

Table 6–12 Node guarding response message

COB-ID	RTR	Data
0x700 + Node-ID	0	Status word

Table 6–13 Description of response message state

Data bit	Description
bit7	Set to 0 or 1 alternatively
bit6 to bit0	4: Stopped 5: Operational 127: Pre-operational

Caution

It is recommended that the protection time 100Ch be longer than 10 ms, and the life factor be greater than or equal to 2.

- **Heartbeat**

  The heartbeat mode adopts the producer-consumer model. CANopen devices can send heartbeat messages based on the cycle (ms) defined by the producer heartbeat interval object (1017h). The network bus includes a node configured with the consumer heartbeat function. Such a node monitors the producer based on the consumer time defined by object 1016h. If the node does not receive any producer heartbeat within the consumer heartbeat time, the corresponding producer is considered to be faulty.

  After the producer heartbeat interval (1017h) is configured, the node heartbeat function is activated and a heartbeat message is generated. After a valid sub-index is configured for consumer heartbeat (1016h) and a heartbeat frame is received from the corresponding node, monitoring starts.

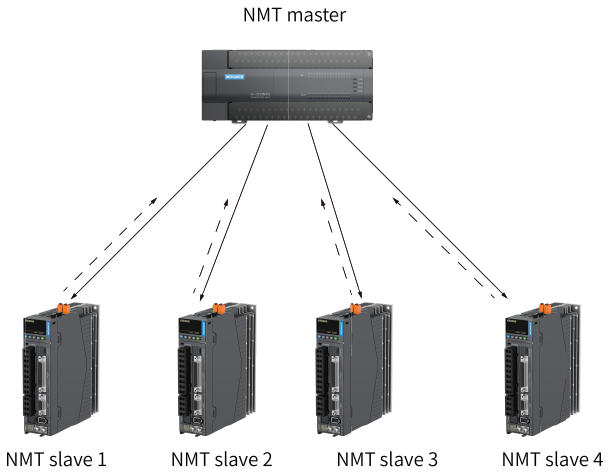


Figure 6-12 Heartbeat diagram

The master sends heartbeat messages based on the producer time. If the slave that monitors the master does not receive any heartbeat message within the time defined by the sub-index of 1016h, the master is considered to be offline. The time of the sub-index of 1016h must be longer than or equal to the master producer time multiplied by 1.8. Otherwise, a false report indicating the master is offline may occur.

The slave sends a heartbeat message at the interval defined by 1017h. If the master (or another slave) that monitors the slave does not receive the heartbeat message within the consumer time, the slave is considered to be offline. If 1017h multiplied by 1.5 is smaller than or equal to the consumer time of the master (or another slave) that monitors the slave, a false report indicating the slave is disconnected may be reported.

The following table describes the format of a heartbeat message. The data segment contains only one byte. The most significant bit is permanently set to 0 and other bits are consistent with the response message status of node guarding, as shown in the following table.

Table 6–14 Heartbeat message

COB-ID	RTR	Data
0x700 + Node-ID	0	Status word

The SV670P-INT servo drive is both a heartbeat producer and a heartbeat consumer. It can serve as the heartbeat consumer of up to five different nodes. It is recommended that the heartbeat producer time be set to a value not lower than 20 ms and the consumer heartbeat time be set to a value not lower than 40 ms (Consumer heartbeat time > 1.5 x Producer heartbeat time).


6.3.4.2 Service Data Object (SDO)

The service data object (SDO) is associated with the object dictionary through object index and sub-index. Based on the SDO, you can read the object content in the object dictionary or modify the object data if allowed.

6.3.4.3 Process Data Object (PDO)

The PDO is used to transmit real-time data, which is the major data transmission mode in CANopen. PDO transmission features high speed as no response is required and the PDO may consist of fewer than eight bytes.

The following figure shows the PDO mapping configuration process.

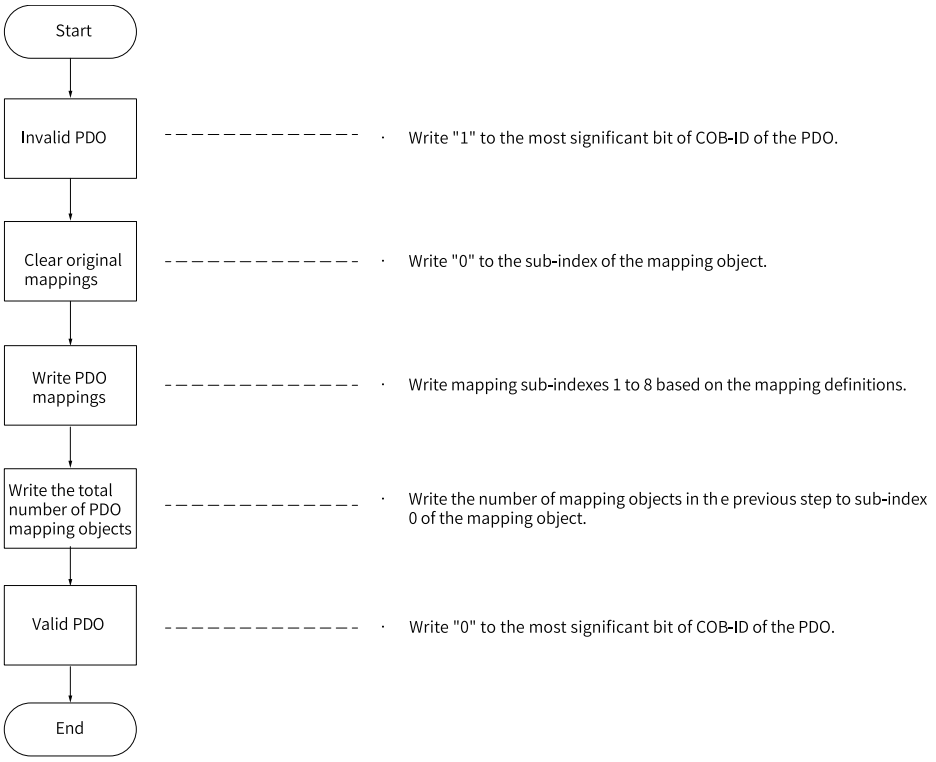

PDO transmission framework

PDO transmission complies with the producer- consumer model. In the CAN bus network, the TPDO generated by a producer may be received by one or multiple consumer RPDOs in the network based on the COB-ID. The transmission model is shown in the following figure.

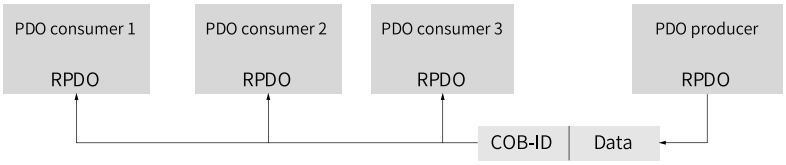


Figure 6-13 PDO transmission model

CANopen communication in SV670P-INT series servo drives only supports point-to-point PDO transmission.

PDOs

PDOs can be divided into RPDOs and TPDOs. The final PDO transmission mode and content are determined by communication parameters and mapping parameters. The SV670P-INT series servo drive uses four RPDOs and four TPDOs to transmit the PDO. The following table lists the related objects.

Table 6–15 PDOs of SV670P-INT servo drives

Name		COB-ID	Communication object	Mapping object
RPDO	1	200h+Node_ID	1400h	1600h
	2	300h+Node_ID	1401h	1601h
	3	400h+Node_ID	1402h	1602h
	4	500h+Node_ID	1403h	1603h
TPDO	1	180h+Node_ID	1800h	1A00h
	2	280h+Node_ID	1801h	1A01h
	3	380h+Node_ID	1802h	1A02h
	4	480h+Node_ID	1803h	1A03h

PDO communication parameters

- **CAN identifiers of PDOs**

  The CAN identifier of a PDO, namely COB-ID of a PDO, includes a control bit and identifier data. It determines the bus priority of the PDO.

  The COB-ID is indicated in sub-index 01 of communication parameters (RPDO: 1400h to 1403h; TPDO: 1800h to 1803h). Its most significant bit decides whether the PDO is valid.

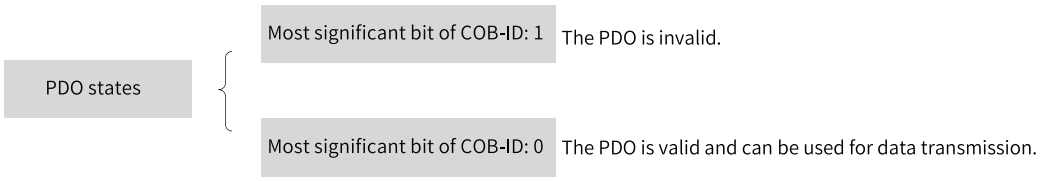


Figure 6-14 Description of PDO states

The SV670P-INT servo drive only supports point-to-point PDO transmission. Therefore, the less significant seven bits of the COB-ID must be the station address of the node.

Example:

For the node whose station No. is 4, when TPDO3 is invalid, its COB-ID is 80000384h. When 384h is written to the COB-ID, it indicates that the PDO is activated.

- **PDO transmission types**

  The PDO transmission type is indicated in sub-index 02h of communication parameters (RPDO: 1400h to 1403h, TPDO: 1800h to 1803h). It determines the mode in which the PDO is transmitted.

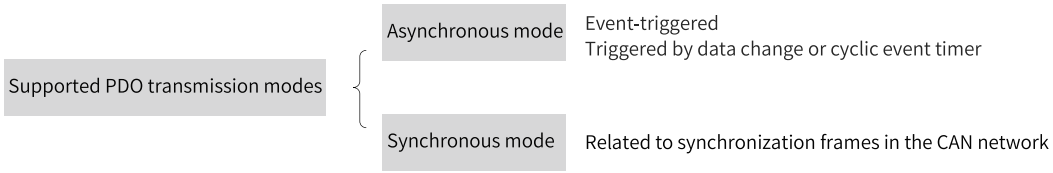


Figure 6-15 Supported PDO transmission modes

Different values of sub-index 02 of communication parameters (RPDO: 1400h to 1403h, TPDO: 1800h to 1803h) stand for different transmission types. This sub-index defines the method of triggering TPDO transmission or processing received RPDOs. The following table lists the specific relationships.

Table 6–16 Methods of triggering TPDOs and RPDOs

Value of communication type	Synchronous		Asynchronous
	Cycle	Acyclic	
0	-	√	-
1 to 240	√	-	-
241 to 253	-		
254, 255	-	-	√

- In TPDO transmission type 0, the TPDO is transmitted when the mapping data changes and a synchronization frame is received.
- In TPDO transmission types 1 to 240, the TPDO is transmitted when a specified number of synchronization frames are received.
- In TPDO transmission type 254 or 255, the TPDO is transmitted when the mapping data changes or when the event timer expires.
- In RPDO transmission types 0 to 240, the latest data of the RPDO is updated to the application once a synchronization frame is received. In RPDO transmission type 254 or 255, the received data is directly updated to the application.

- **Inhibit time**

  The inhibit time is set for TPDOs and is saved to sub-index 03h of communication parameters (1800h to 1803h) to prevent the CAN network from being continuously occupied by PDOs with lower priorities. After the parameter (unit: 100 us) is set, the transmission interval of one TPDO must be longer than or equal to the time corresponding to this parameter.

  Example: If the inhibit time of TPDO2 is 300 × 100 μs, the transmission interval of TPDOs must not be shorter than 300 × 100 μs.

- **Event timer**

  For TPDO transmitted in asynchronous mode (transmission types 254 or 255), the event timer is defined in sub-index 05 of communication parameters (1800h–1803h). The event timer can be considered as a trigger event. It also triggers corresponding TPDO transmission. If another event, for example, data change, occurs in the operation cycle of the event timer, the TPDO is triggered and the event timer is reset immediately.

PDO mapping parameters

PDO mapping parameters include the indicators of process data for PDOs, including indexes, sub-indexes, and the mapping object length. The length of each PDO data can be up to eight bytes and one or multiple objects can be mapped. Sub-index 00 records the number of objects mapped by the PDO and sub-indexes 01 to 08 are the mapping content.

The following description takes 1600h as an example.

Table 6–17 Description of PDO mappings

Index	Sub-index	Description
1600h	00	Number of mapping objects
	01	Content of mapping parameter
	...	
	08	

Table 6–18 Definition of PDO mapping parameters

bit	31	...	16	15	...	8	7	...	0
Definition	Index			Sub-index			Object length		

The index and sub-index together define the position of an object in the object dictionary. The object length indicates the bit length of the object in hexadecimal, as shown below.

Table 6–19 Relation between object length and object bit length

Object length	Bit length
08h	8-bit
10h	16-bit
20h	32-bit

Example: The mapping parameter of the 16-bit command word 6040.00h is 60400010h.

The following example describes the PDO mappings.

Example:

RPDO1 maps the following three parameters.

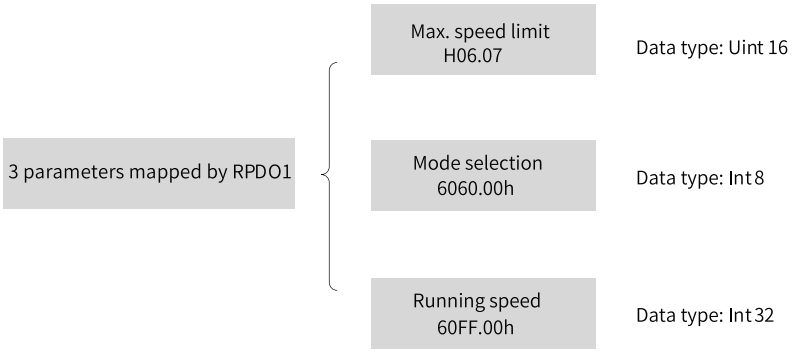


Figure 6-16 Example of PDO1 mappings

Then, the mapping length is seven bytes (2 + 1 + 4), namely there are seven bytes in the data segment of RPDO1 during transmission. The mapping relation is shown in the following figure.

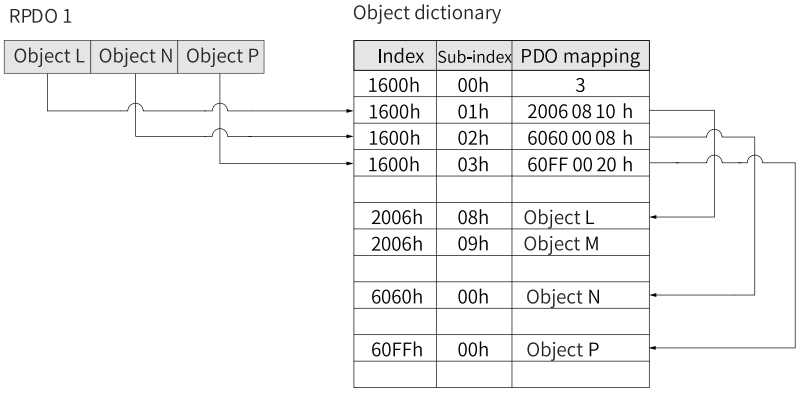


Figure 6-17 Example of RPDO mapping relation

The mapping mode of TPDO is the same as that of RPDO, but in the opposite direction. The RPDO decodes the input based on the mappings. The TPDO encodes the output based on the mappings.

Example:

TPDO2 maps the following two parameters.

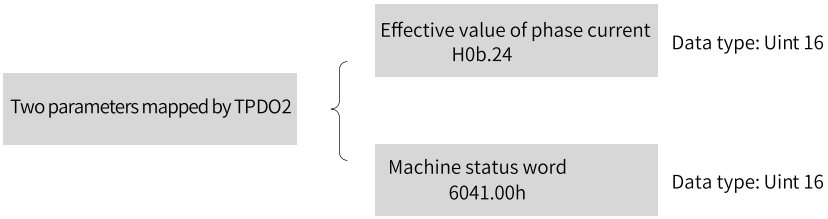


Figure 6-18 Example of TPDO2 mappings

Then, the mapping length is four bytes (2 + 2), namely there are four bytes in the data segment of TPDO2 during transmission. The mapping relation is shown in the following figure.

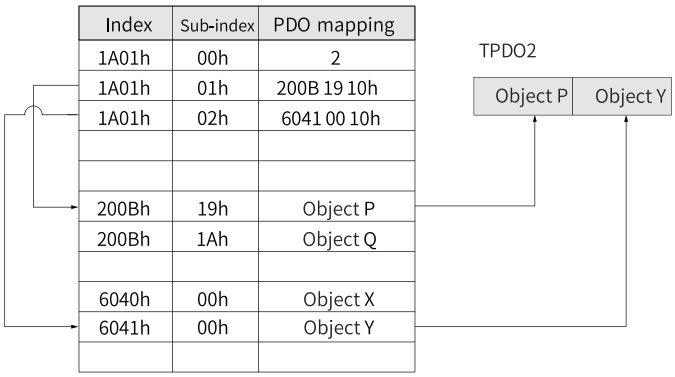


Figure 6-19 Example of TPDO mappings

6.3.4.4 Synchronization (SYNC) Object

The SYNC object is a special mechanism that controls harmony and synchronization between transmission and reception of multiple nodes. It is used for synchronous transmission of the PDO.

The following figure shows the process of configuring the SYNC generator.

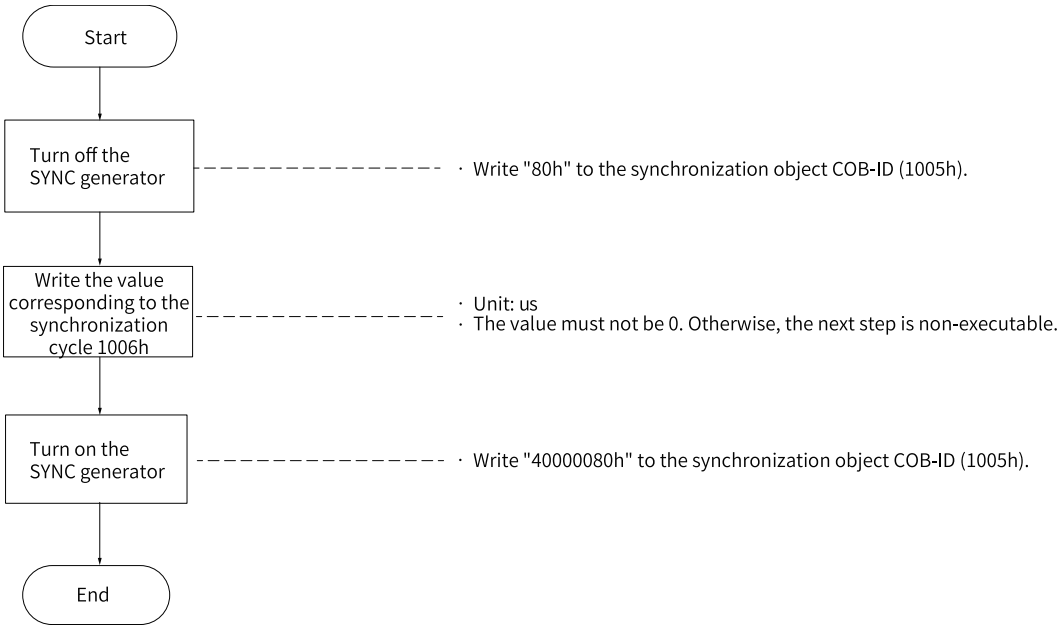


Figure 6-20 SYNC generator configuration process

Note

The SV670P-INT servo drive does not support the synchronization generator whose cycle is shorter than 500 μs. It is recommended that the cycle 1 ms is not used.

SYNC generator

The SV670P-INT servo drive is both a synchronization consumer and a synchronization producer. The objects related to synchronization are synchronization object COB-ID (1005h) and synchronization cycle (1006h).

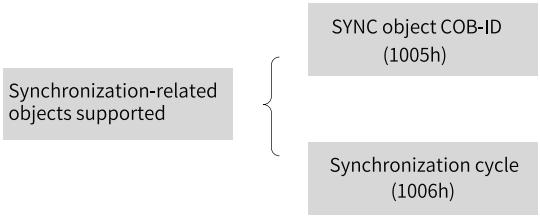


Figure 6-21 Description of synchronization-related objects supported

The second most significant bit of the synchronization object COB-ID determines whether to activate the SYNC generator.

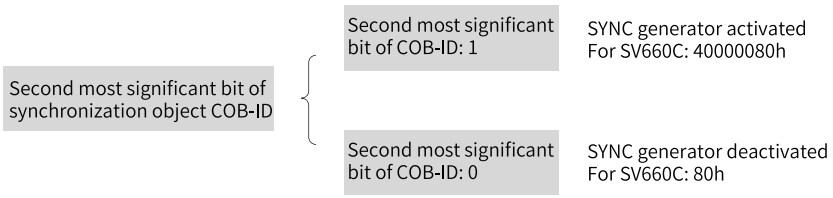


Figure 6-22 Activating the SYNC generator

The SYNC cycle (unit: μs) is used for the SYNC generator only. It indicates the interval at which a node generates synchronization objects.

SYNC object transmission framework

Similar to PDO transmission, SYNC objects are transmitted based on the producer-consumer model. The SYNC producer sends a SYNC frame, and other nodes in the CAN network receive the frame as consumers, without providing any feedback. Only one SYNC generator can be activated in one CAN network. The following figure shows the framework of SYNC object transmission.

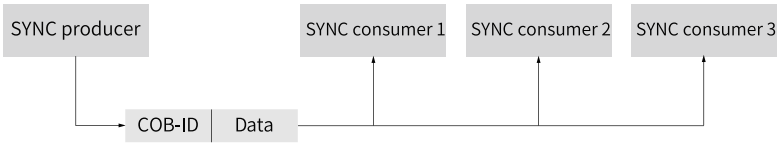


Figure 6-23 Synchronization transmission framework

Transmission of synchronization PDOs is closely related to synchronization frames.

- For a synchronization RPDO, the received PDO, once received, will be updated to the application in the next synchronization.
- A synchronization TPDO can be transmitted in the cyclic/acyclic synchronization mode.

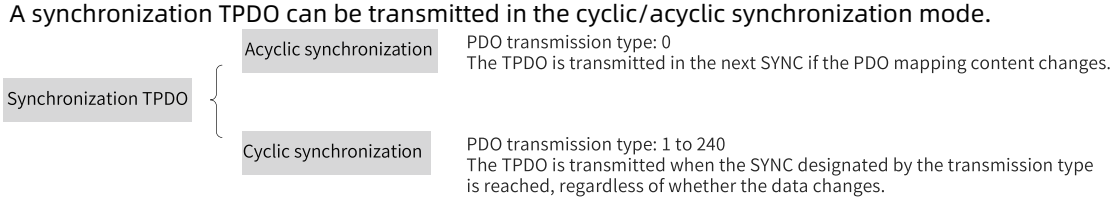


Figure 6-24 Description of synchronization TPDO

The following figure shows the synchronous transmission model.

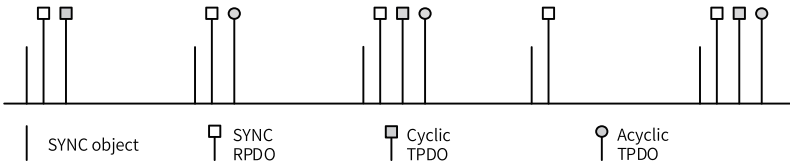


Figure 6-25 Synchronous transmission model

Example:

The transmission type of RPDO1 is 0; the transmission type of RPDO2 is 5; the transmission type of TPDO1 is 0; the transmission type of TPDO2 is 20. Once RPDO1 and RPDO2 receive a PDO, the latest PDO data will be updated to the corresponding application in the next synchronization. In contrast, TPDO1 will be sent in the next synchronization only if the mapping data of TPDO1 changes. PDOs will be sent after TPDO2 experiences 20 SYNCs, regardless of whether the data changes.

6.3.4.5 Emergency (EMCY) Object Service

When an error occurs on a CANopen node, the node sends an EMCY message according to the standard mechanism. The EMCY message complies with the producer-consumer model. After the node fault is sent, other nodes in the CAN network may handle the fault. As the emergency packet producer, the SV670P-INT servo drive does not process emergency packets of other nodes.

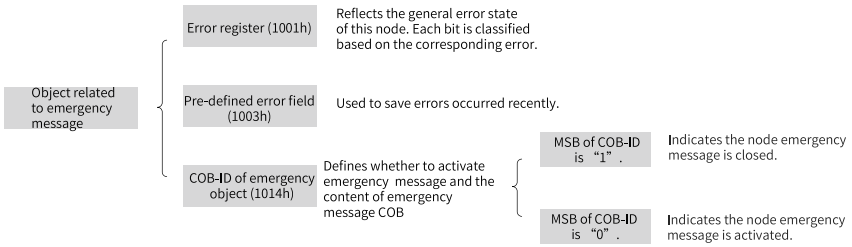


Figure 6-26 Description of objects related to EMCY messages

When a fault occurs on the node, the error register and the pre-defined error field must be updated regardless of whether the EMCY object is activated. The content of the EMCY message follows the following specifications.

Table 6–20 Specifications of the content of an EMCY message

COB-ID	0	1	2	3	4	5	6	7
80h+Node_ID	Error code		Error register	Reserved	Auxiliary byte			

- The error register is always consistent with 1001h.
- When a communication error occurs, the error code is consistent with DS301 requirements and the auxiliary byte is 0.
- When an error specified by the user occurs on the servo drive, the error code is 0xFF00 and the auxiliary byte shows the error code specified by the user.

6.3.4.6 SDO Transmission Message

The SDO can be transmitted using data with no more than four bytes or data with more than four bytes. For the former, the expedited SDO transmission mode is adopted. For the latter, the segmented or block transmission mode is adopted.

The SV670P-INT servo drive supports only accelerated SDO transmission and segmented transmission.

An SDO transmission message consists of a COB-ID and a data segment. As shown in the following table, the COB-ID of T_SDO is different from that of R_SDO.

The data segment adopts the little endian mode (low bits before high bits). Every data segment of an SDO message must consist of eight bytes. The following table describes the format of SDO transmission messages.

Table 6–21 Format of an SDO transmission message

COB-ID	Data (Data segment)							
580h+Node_ID	0	1	2	3	4	5	6	7
600h+Node_ID	Command code	Index		Sub-index	Data			

The command code specifies the transmission type and transmission data length of the SDO. The index and sub-index indicate the position of the object in the list. The data indicates the value of the object.

Write message in expedited SDO mode

Expedited SDO transmission is used for reading/writing object data with no more than four bytes. The transmission message varies the read/write mode and data length. The following table describes the write message in the expedited SDO mode.

Table 6–22 Write message in expedited SDO mode

<table>
<tr><th colspan="2"></th><th>COB-ID</th><th>0</th><th>1</th><th>2</th><th>3</th><th>4</th><th>5</th><th>6</th><th>7</th></tr>
<tr><td colspan="2" rowspan="4">Client→</td><td rowspan="4">600h+Node_ID</td><td>23h</td><td colspan="2" rowspan="4">Index</td><td rowspan="4">Sub-index</td><td colspan="4">Data</td></tr>
<tr><td>27h</td><td colspan="3">Data</td><td>-</td></tr>
<tr><td>2bh</td><td colspan="2">Data</td><td>-</td><td>-</td></tr>
<tr><td>2fh</td><td>Data</td><td>-</td><td>-</td><td>-</td></tr>
<tr><td rowspan="2">←Server</td><td>Normal</td><td rowspan="2">580h+Node_ID</td><td>60h</td><td colspan="2" rowspan="2">Index</td><td rowspan="2">Sub-index</td><td>-</td><td>-</td><td>-</td><td>-</td></tr>
<tr><td>Error</td><td>80h</td><td colspan="4">Abort code</td></tr>
</table>

Note

"-" indicates data exists but is not considered. It is recommended that 0 is written.

Example:

Assume that the slave station No. is 4. To use the SDO mode to write a value 1000 (namely 0x3E8) to parameter 60FF.00h (target velocity in the speed control mode), the master sends a message as shown in the following table. All values are in hexadecimal.

Table 6–23 Example of a message sent by the master

COB-ID	0	1	2	3	4	5	6	7
604	23	FF	60	00	E8	03	00	00

If the write operation succeeds, the servo drive returns the following message.

Table 6–24 Example of a message returned by the servo drive upon successful write operation

COB-ID	0	1	2	3	4	5	6	7
584	60	FF	60	00	00	00	00	00

If the type of the data written does not match, the fault code 0x06070010 is returned. The message is as follows.

Table 6–25 Example of a message returned upon mismatch of the written data type

COB-ID	0	1	2	3	4	5	6	7
584	80	FF	60	00	10	00	07	06

Read message in expedited SDO mode

The expedited mode is used for reading object data with no more than four bytes. The following table describes the read message in expedited SDO mode.

Table 6–26 Structure of the start message in SDO transmission

		COB-ID	0	1	2	3	4	5	6	7
Client→		600h+Node_ID	40h	Index		Sub-index	-	-	-	-
←Server	Normal	580h+Node_ID	41h	Index		Sub-index	Data length			
	Error		80h				Abort code			

During transmission, the trigger bit (bit6) of the command code sends 0 or 1 alternatively. This rule must be maintained so that the slave can respond to the message. The message structure during transmission is shown in the following table.

Table 6–27 Structure of a message during SDO transmission

		COB-ID	0	1	2	3	4	5	6	7
Client→		600h+Node_ID	60h	-	-	-	-	-	-	-
←Server	Normal	580h+Node_ID	00h	Data length						
	Error		80h	Index		Sub-index	Abort code			
Client→		600h+Node_ID	70h	-	-	-	-	-	-	-
←Server	Normal	580h+Node_ID	10h	Data length						
	Error		80h	Index		Sub-index	Abort code			

The response packet for the end frame transmitted in the segmented mode includes the identifier and valid data length of the end frame. The transmission message structure is shown in the following table.

Table 6–28 Structure of the end frame in SDO segmented transmission

		COB-ID	0	1	2	3	4	5	6	7
Client→		600h+Node_ID	60h/70h	Index		Sub-index	-	-	-	-
←Server	Normal	580h+Node_ID	01h/11h	Data						
			03h/13h	Data						-
			05h/15h	Data					-	-
			07h/17h	Data				-	-	-
			09h/19h	Data			-	-	-	-
			0Bh/1Bh	Data		-	-	-	-	-
			0Dh/1Dh	Data	-	-	-	-	-	-
	Error		80h	Index		Sub-index	Abort code			

6.3.4.7 SDO Transmission Framework

SDO transmission complies with the client-server mode, that is, one initiates a request and the other responds to the request. An SDO client in the CAN bus network initiates a request and the SDO server responds to the request. Therefore, data exchange between SDOs requires at least two CAN messages and the CAN identifiers of the two CAN messages must be different. The SDO transmission model is shown in the following figure.

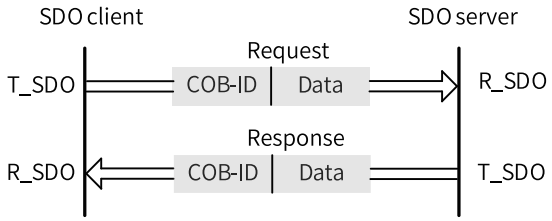


Figure 6-27 An SDO client reading/writing object words from/to an SDO server

6.3.5 Communication Parameters

To connect the SV670P-INT series servo drive to the CANopen fieldbus network, set related parameters of the servo drive properly.

CANopen parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H02.00	2002-01h	Control mode selection	0: Speed control mode 1: Position control mode 2: Torque control mode 3: Torque/Speed control mode 4: Speed/Position control mode 5: Torque/Position control mode 6: Torque/Speed/Position compound mode 7: Process segment 8: CANopen mode	1	-	At stop	"H02_en.00" on page 389
H0E.00	200E-01h	Node address	1 to 127	1	-	At stop	"H0E_en.00" on page 556
H0E.01	200E-02h	Save data written through communication to EEPROM	0: Not save 1: Save parameters 2: Save object dictionaries 3: Save parameters and object dictionaries 4: Save object dictionaries written before communication (OP) 255: Determined by H0E.03 and H0E.04	1	-	Real time	"H0E_en.01" on page 556
H0E.10	200E-0Bh	CAN selection	0: Pulse/Axis control command 1: Enhanced axis control command 2: CANopen	0	-	At stop	"H0E_en.10" on page 558
H0E.11	200E-0Ch	CAN baud rate	0: 20 kbps 1: 50 kbps 2: 100 kbps 3: 125 kbps 4: 250 kbps 5: 500 kbps 6: 1 Mbps 7: 1 Mbps - non-standard	5	-	At stop	"H0E_en.11" on page 558

6.4 Communication Configuration Examples

6.4.1 Modbus RTU Communication Configuration Example

6.4.1.1 Communication Overview

The following describes the Modbus RTU communication connection between Inovance H5U and SV670P-INT series servo drive. The connection can be implemented through the configuration table or programming. The following case takes H06.03 (Write speed) and H0b.00 (Read speed) as examples.

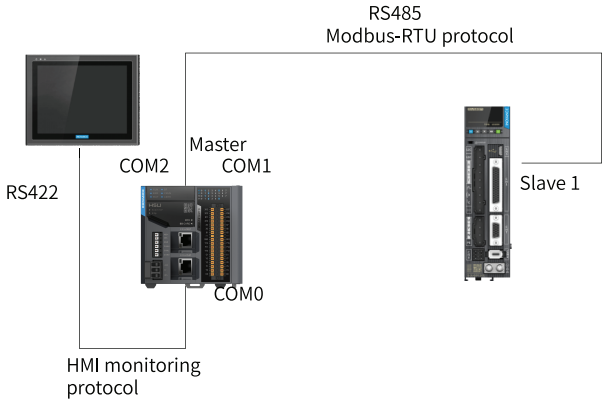


Figure 6-28 Schematic and wiring diagram

6.4.1.2 Wiring of Modbus RTU Communication Between SV670P-INT and Third-Party PLCs

Inovance H5U and SV670P-INT

Product name	Model	Quantity	Remarks
PLC	H5U-1614MTD	1 piece	-
Inovance SV670P-INT series servo drive and applicable motor	SV670PT012I-INT MS1H3-*******	1 set	-

COM1 terminal layout on PLC side		CN3/CN4 terminal layout on drive side	
Signal name	Pin No.	Signal name	Pin No.
RS485+	1	RS485+	4
RS485-	2	RS485-	5
-	-	PE (shield)	Housing

Siemens PLC and SV670P-INT

Siemens S7200 PLC		CN3/CN4 terminal layout on drive side	
PLC PORT0-RS485	Pin No.	Signal name	Pin No.
Data+	3	RS485+	4
Data–	8	RS485-	5
PE (shield)	Housing	PE (shield)	Housing

Mitsubishi FX3U and SV670P-INT

Mitsubishi FX3U PLC		CN3/CN4 terminal layout on drive side	
FX3U-485-BD	Pin No.	Signal name	Pin No.
SDA	Shorted	RS485+	4
RDA			
SDB	Shorted	RS485-	5
RDB			
SG	Housing	PE (shield)	Housing

Setting communication parameters through GX PLC software (initialization of communication port 1)

1. Communication port 1 parameter setting (RS485, 19200, 7, N, 1)
2. LD M8002
3. Initial ON
4. MOV H0C91 D8120
5. Communication port 1 setting
6. SET M8161
7. Communication format: 8-bit

Using two major commands (See the user guide for FX3U communication.)

- RS D100 K8 D120 K8
  - D100: station No. being "?"
  - D120: start address for data receiving (8 bytes)
- CRC D100 D106 K6
  - D100: station No. being "?"
  - D106: CRC checked address

Omron PLC and SV670P-INT

Omron CP1L		CN3/CN4 terminal layout on drive side	
PLC PORT0-RS485	Pin No.	Signal name	Pin No.
SDB+	-	RS485+	4
SDA–	-	RS485–	5
PE (shield)	Housing	PE (shield)	Housing

Note


Set 2, 3, 5, and 6 on the DIP switch to ON, and others to OFF. The DIP switch is on the back of PLC communication card.

6.4.1.3 Configuring servo parameters


Parameter	Value	Description	Remarks
H0E.00	1	Drive axis address	-
H0E.80	5	Modbus RTU baud rate	5: 9600 bps
H0E.84	1	Modbus RTU communication data sequence	0: High 16 bits before low 16 bits 1: Low 16 bits before high 16 bits

6.4.1.4 PLC Program Examples

Communication connection implemented through program

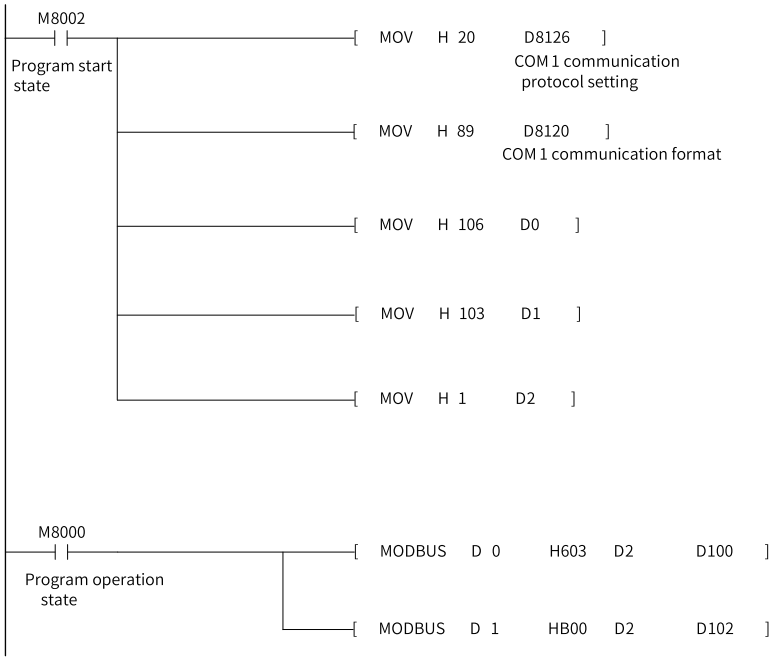

Communication connection implemented through configuration table

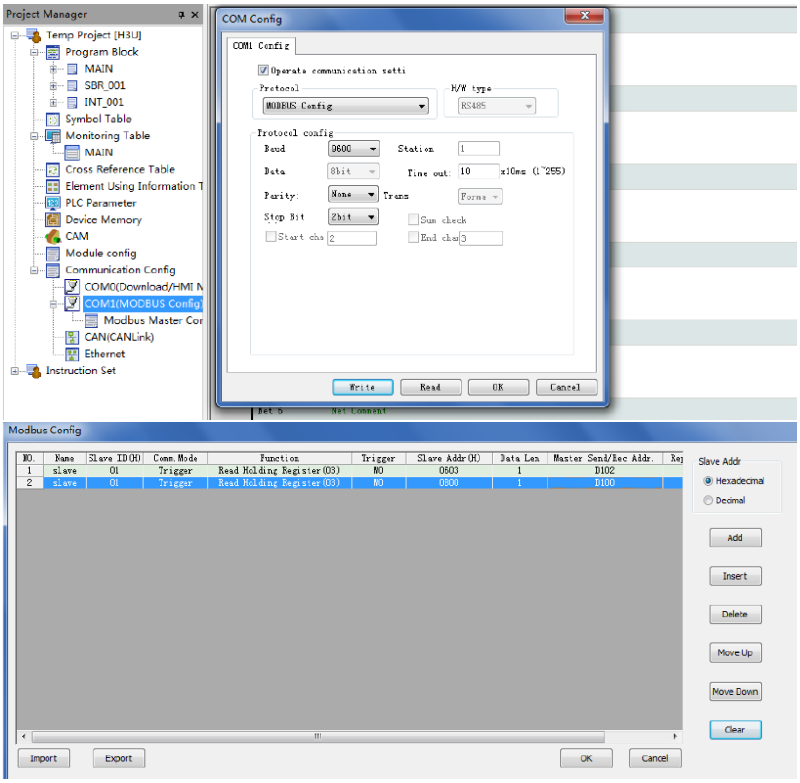

6.4.2 CANlink Communication Configuration Examples

6.4.2.1 Typical Positioning Control Project in Bus Mode

The following case describes how to implement positioning control and jog control on the servo drive through H3U series PLC in the CANlink 3.0 bus mode.

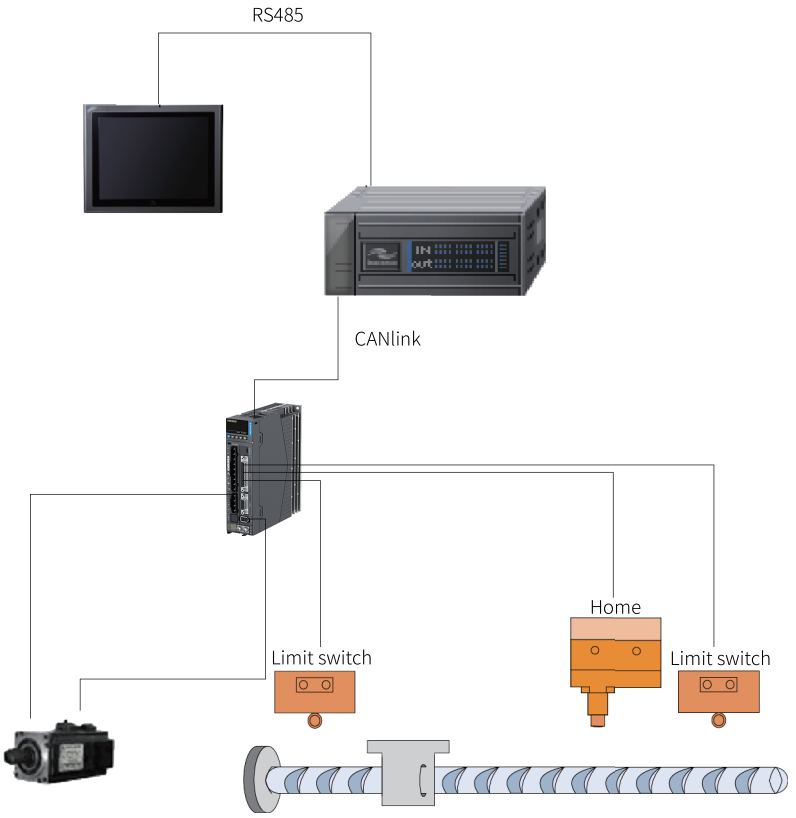


Figure 6-29 Schematic diagram

6.4.2.2 Product Model Selection and Wiring

Product name	Model	Quantity	Remarks
HMI	IT5070T	1 piece	-
PLC	H3U-3232MT	1 piece	-
Inovance SV670P-INT series servo drive and applicable motor	SV670PS2R8I-INT ISMH1-40B30CB	16 sets	-

CN3/CN4 terminal layout on drive side		CAN card terminal layout on PLC side	
Signal name	Pin No.	Signal name	Pin No.
CANH	1	CANH	2
CANL	2	CANL	4
CGND	3	CGND	5
PE (shield)	Housing	PE	3

Note

When the PLC station No. is 63, set the DIP switch to 00111111.

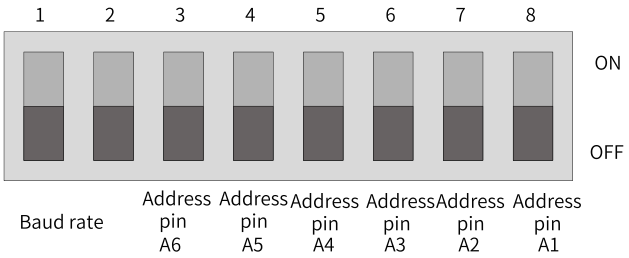


Figure 6-30 DIP switch of H3U

No.	Signal	Description
1	Baud rate combination bit 1	00: 500 kbps
		01: 100 kbps
2	Baud rate combination bit 0	10: 1 Mbps
		11: 50 kbps
3	Address pin A5	The DIP switches are grouped to form a 6-bit binary value used to indicate the local station number. You can set the station number through the D register in the case of PLC master module. ON indicates 1, and OFF indicates 0. A5 is a high bit and A0 is a low bit. They can be combined in the following order: A5A4A3A2A1A0. Example: If A0 is ON, other bits are OFF, and the binary address is 000001, the address is K01 in decimal and 0x01 in hexadecimal. If A3 and A4 are ON, other bits are OFF, and the binary address is 011000, the address is K24 in decimal and 0x18 in hexadecimal.
4	Address pin A4	
5	Address pin A3	
6	Address pin A2	
7	Address pin A1	
8	Address pin A0	

Note

The baud rate and address are not activated immediately after a DIP switch change. To activate newly set parameters, a power cycling or STOP → RUN cycle is required.

6.4.2.3 Configuring servo parameters

Parameter	Value	Description	Remarks
H02.00	1	Position control mode	-
H03.10	0	DI5 terminal function: 0	-
H05.00	2	Position reference source: Multi-position reference	-
H05.02	10000	Pulses per revolution	Set as needed.
H05.30	1	Homing is enabled (and can be activated by the HomingStart signal).	Set as needed.
H05.31	1	Reverse homing is selected, and the home switch acts as the deceleration point and the home.	Set as needed.
H11.00	5	The multi-position operation mode is set to 5: axis-controlled continuous operation.	-
H11.01	1	Number of end segments of displacement references	-

Parameter	Value	Description	Remarks
H11.04	1	0: Relative displacement reference 1: Absolute displacement reference	-
H17.00	1	VDI1 function: S-ON signal	H17-01 is set to 0 by default, indicating that the S-ON becomes active when value "1" is written.
H17.02	18	VDI2 function: Forward jog	-
H17.04	19	VDI3 function: Reverse jog	-
H17.06	28	VDI4 function: Multi-position reference enable	-
H17.08	32	HomingStart: Homing enable	-
H17.10	34	Emergency stop	-
H0E.00	1	Drive axis address	1
H0E.11	5	CAN communication rate: 5-500 kbps	-
H17.90	1	VDI enable	-
H0E.10	0	0: Pulse/Axis control command 1: Enhanced axis control command	-
H0E.01	0	Write parameters through communication to EEPROM: No	-

6.4.2.4 PLC Program Configuration

When creating a new project in AutoShop, set the PLC type to H3U-R. This enables CANlink configuration to be generated automatically after programming and compiling are done, removing the need for manual configuration.

Commands in H3U bus positioning

Name	Description
AXISENAB	Enable axis
AXISSTOP	Axis stop positioning
AXISESTOP	Axis emergency stop
AXISALMRST	Axis alarm reset
AXISDRVA	Axis absolute positioning
AXISZRN	Axis homing
AXISJOG	The axis jogs if energy flow is active and stops if energy flow is inactive

Instruction description

1. **AXISENAB: Axis enabling**

- Overview

  The AXISENAB instruction enables axes based on CANlink.

AXISENAB S1		Enable axis	Applicable model: H3U
S1	Axis number	Servo station number, in the range 1 to 16	16-bit instruction (3 steps) AXISENAB: Continuous execution


- Operand

Operand	Bit soft element							Word soft element															
	System·User							System·User					Bit designation					Indexed address			Constant		Real number
S1	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E

Note: This instruction can be executed only once for every axis.

- Description of instruction parameters
  The servo that corresponds to a designated station or axis number is enabled when the flow is active. The servo can be kept enabled during normal use. The axis number must be an immediate value.

- Example:
  Servo 1 is disabled when M0 = 0, and enabled when M0 = 1.

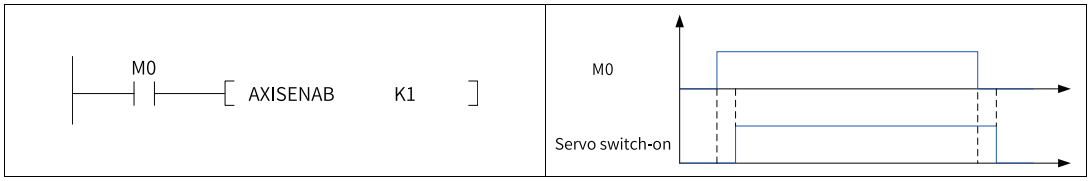

2. **AXISSTOP: Axis positioning stop**

- Overview
  The AXISSTOP instruction stops servo positioning based on CANlink.

AXISSTOP S1		Axis stop positioning	Applicable model: H3U
S1	Axis number	Servo station number, in the range 1 to 16	16-bit instruction (3 steps) AXISSTOP: Continuous execution

- Operand


Operand	Bit soft element							Word soft element															
	System·User							System·User					Bit designation					Indexed address			Constant		Real number
S1	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E

Note: This instruction can be executed only once for every axis.

- Description of instruction parameters
  The servo that corresponds to a designated station or axis number stops positioning based on the acceleration or deceleration time during positioning. This instruction can be executed when an exception occurs during positioning. The axis number must be an immediate value.

- Example:

When M1 = 1, servo 1 stops positioning. (The internal multi-segment enabling function of the servo is disabled.)

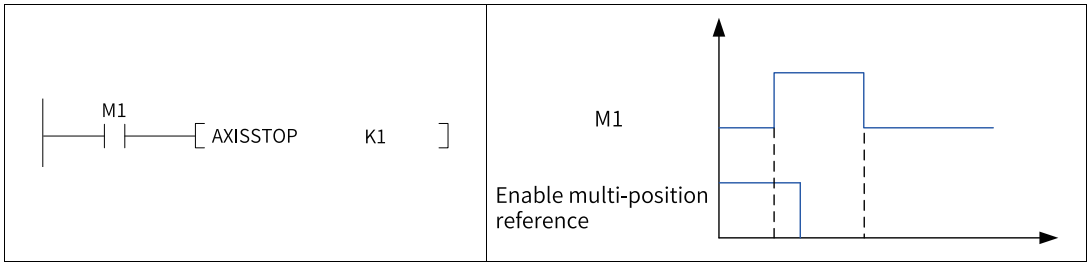

3. **AXISESTOP: Axis emergency stop (used for stopping the servo in case of exceptions)**

- Overview

  The AXISENAB instruction implements an emergency stop based on CANlink.

AXISESTOP S1		Axis emergency stop	Applicable model: H3U
S1	Axis number	Servo station number, in the range 1 to 16	16-bit instruction (3 steps) AXISESTOP: Continuous execution

- Operand

Operand	Bit soft element							Word soft element															
	System·User							System·User					Bit designation					Indexed address			Constant		Real number
S1	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E

Note: This instruction can be executed only once for every axis.


- Description of instruction parameters

  The servo that corresponds to a designated station or axis number implements an emergency stop. This instruction can be executed when an exception occurs during positioning. The axis number must be an immediate value.

  The stop mode must be set on the servo driver.

- Example:

  When M2 = 0, servo 1 disables emergency stop. When M2 = 1, servo 1 enables emergency stop (The internal emergency stop bit of the servo is enabled).

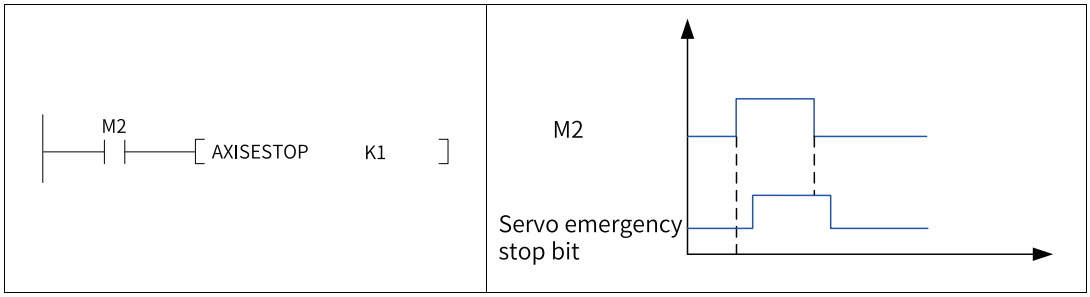

4. **AXISALMRST: Axis alarm reset**

- Overview

  The AXISALMRST instruction resets axis alarms based on CANlink.

AXISALMRST S1		Axis alarm reset	Applicable model: H3U
S1	Axis number	Servo station number, in the range 1 to 16	16-bit instruction (3 steps) AXISALMRST: Continuous execution

- Operand


Operand	Bit soft element							Word soft element															
	System·User							System·User					Bit designation					Indexed address			Constant		Real number
S1	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E

Note: This instruction can be executed only once for every axis.

- Description of instruction parameters

  The alarm of the servo corresponding to a designated station or axis number will be reset. Some servo alarms cannot be reset by this instruction. Use this instruction to reset an alarm after the corresponding fault is rectified. The axis number must be an immediate value.

- Example:

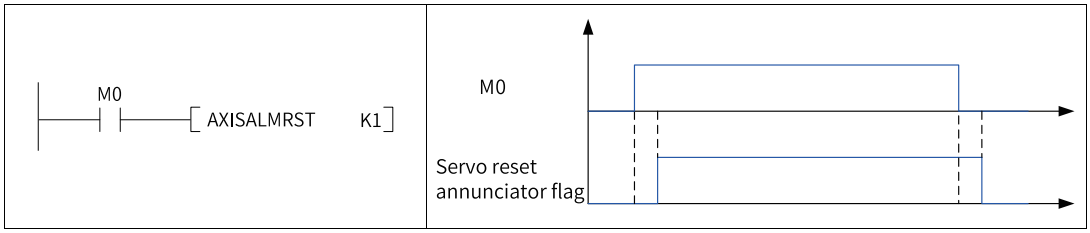

When M0 = 1, alarm reset is enabled for servo 1. When M0 = 0, alarm reset is disabled for servo 1.

5. **AXISDRVA: Absolute axis positioning**

- Overview

  The AXISDRVA instruction implements absolute axis positioning based on CANlink.

AXISDRVA S1 S2 S3 S4 S5 S6		Axis absolute positioning	Applicable model: H3U
S1	Axis number	Servo station number, in the range 1 to 16	16-bit instruction (3 steps) AXISDRVA: Continuous execution
S2	Position	Absolute position (which occupies two elements)	
S3	Velocity	Positioning speed (which occupies four soft elements and cannot be the same for different instructions)	
S4	Acceleration/ Deceleration time	Acceleration/Deceleration time during positioning	
S5	Completion flag	Positioning completion flag	
S6	Error flag	Instruction error flag	

- Operand

Operand	Bit soft element							Word soft element														
	System·User							System·User					Bit designation					Indexed address			Constant		Real number
S1	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S2	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S3	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S4	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S5	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S6	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E

Note: The instruction can be called multiple times for the same axis, but the soft element that stores the speed parameter cannot be the same during each call.

- Description of instruction parameters

Axis number: The value ranges from K1 to K16. A maximum of 16 axes are supported. The servo station number must be set to the corresponding axis number. The axis number must be an immediate value.

Position: In the actual condition, the pulse equivalent is sent to the servo when parameters are in integer or floating-point number format (which format to use is determined by the SM400 flag).

When SM400 = OFF, the parameter value is an integer and specifies the pulse unit. If the position parameter is set to 1000, it indicates 1000 pulses.

When SM400 = ON, the parameter value is a floating-point number and specifies the mechanical unit.

When specifying the mechanical unit, you need to set the proportional relationship between mechanical displacement and pulse unit, as well as between mechanical speed and servo rotational speed. If your mechanical structure is 1 mm feed per 1000 pulses, this instruction only requires a 1.00 mm floating-point number, which indicates 1000 pulses. For details about the factor of proportionality, see the special register table. Position data can be monitored at any time during running.

Speed: in integer or floating-point number format. For details about the units and conversion, see the preceding description. This operand occupies four consecutive word elements, two for the parameter and the other for the instruction state machine. If the speed is set to 0, the default value 200 is written.

When SM400 = OFF, the input speed is an integer and the speed unit is RPM.

When SM400 = ON, the input speed is a floating-point number. In this case, you need to set the proportional relationship between mechanical displacement and pulse unit, as well as between mechanical speed and servo rotational speed.

Assume that the servo speed conversion coefficient (rpm) corresponding to the mechanical speed (1 mm/s or 1 deg/s) per unit is 10. In this case, when 200.00 mm/s is input, the servo speed is set to 2000 rpm.

Positioning acceleration/deceleration time: 16-bit integer (0–32767) in ms.


Completion flag: Check this element after startup to determine whether positioning is completed. In normal cases, the positioning instructions with the same station number can be executed after positioning.


Error flag: It is set when an error occurs in the following conditions:

a. The drive is not enabled. (The AXISENAB instruction is not in the conducting state.)
b. The speed or position is not written successfully.
c. The drive generates an alarm.
d. Instructions conflict with each other. (The positioning, jog, positioning stop, and emergency stop instructions cannot be triggered at the same time.)

The completion flag and error flag are reset after the interrupt function is enabled.

- Example:

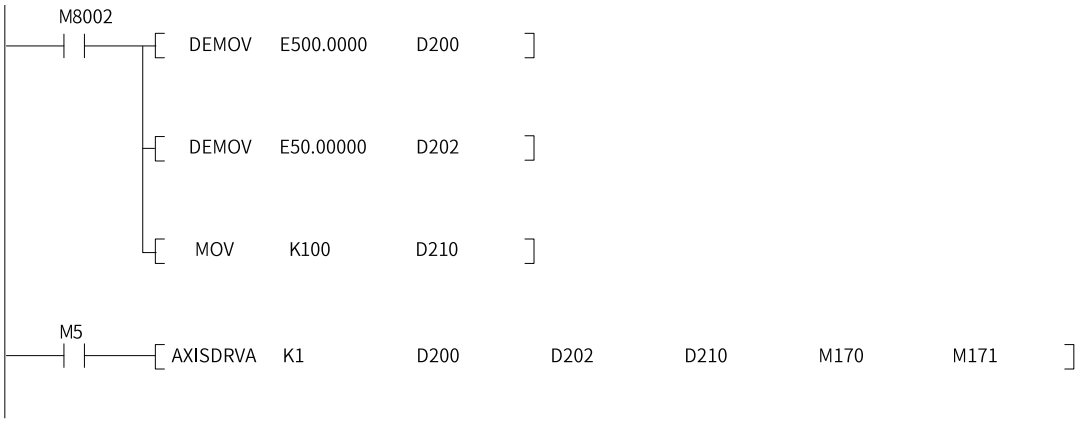

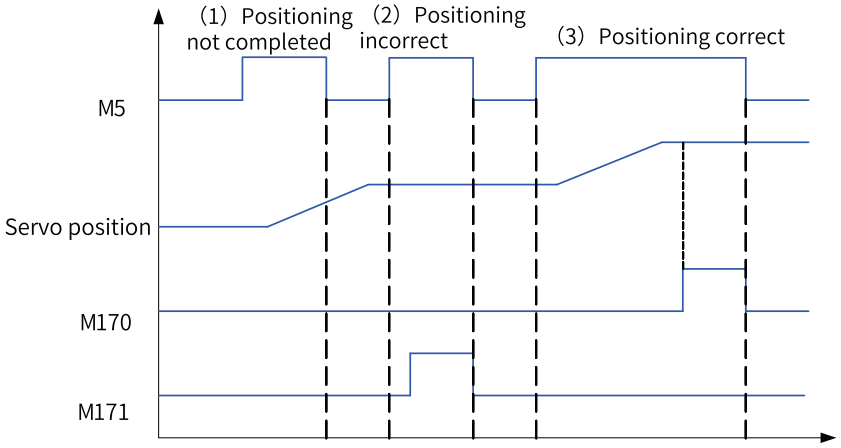

K1: Site number

D200: Position

D202: Speed

D210: Acceleration/Deceleration time

M170: Positioning completed

M171: Positioning incorrect

a. If M5 is opened during positioning, the servo continues movement toward a destination, but the completion flag M170 is not set.

b. If a servo data write error occurs when the instruction is executed, the servo stops movement and the error flag M171 is set. M171 is reset after M5 is opened.

c. M170 is set after positioning is completed. It is reset when M5 is opened.

6. **AXISZRN: Axis homing**

- Overview

  The AXISZRN instruction returns axes to the home based on CANlink.

AXISZRN S1 S2 S3 S4		Absolute positioning	Applicable model: H3U
S1	Axis number	Servo station number, in the range 1 to 16	16-bit instruction (3 steps) AXISZRN: Continuous execution
S2	Position offset	Home position offset (which occupies four soft elements and cannot be the same for different instructions)	
S3	Comple-tion flag	Homing completed	
S4	Error flag	Instruction error flag	

- Operand

Operand	Bit soft element							Word soft element															
	System·User							System·User					Bit designation					Indexed address			Constant		Real number
S1	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S2	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S3	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E
S4	X	Y	M	T	C	S	SM	D	R	T	C	SD	KnX	KnY	KnM	KnS	KnSM	V	Z	Modification	K	H	E

Note: This instruction can be executed only once for every axis.

- Description of instruction parameters

Axis number: Number of the axis that needs to return to the home, in the range of K1 to K16.

Home offset: It can be set when necessary. It is typically set to 0 and stored in a D or R element. It is an integer or a float. For details about the units and conversion, see "AXISDRVA: Absolute axis positioning". This operand occupies four consecutive word elements, two for the parameter and the other for the instruction state machine.

Completion flag: indicates that homing is completed. It is stored in an S or M element.


Error flag: It is set when an error occurs in the following conditions:


a. The drive is not enabled. (The AXISENAB instruction is not in the conducting state.)
b. The position offset is not written successfully.
c. The drive generates an alarm.

d. Instructions conflict with each other. (The positioning, jog, positioning stop, and emergency stop instructions cannot be triggered at the same time.)

The completion flag and error flag are reset after the interrupt function is enabled.

- Example:

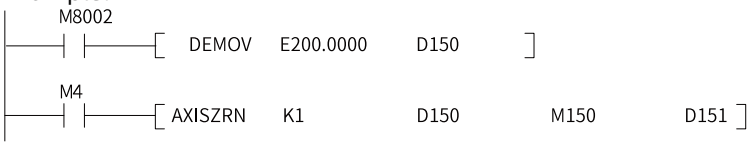

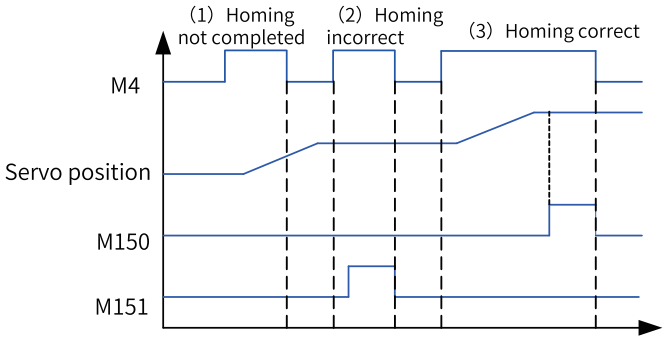

K1: Site number

D150: Servo home offset, which is converted to the parameter number H05-36

M150: Positioning completed

M151: Positioning incorrect

When M4 = 0, homing is disabled for servo 1. When M4 = 1, homing is enabled for servo 1.

a. If M4 is opened during positioning, the servo continues movement toward a destination, but the complete flag M150 is not set.
b. If a servo data write error occurs when the instruction is executed, the servo stops movement and the error flag M151 is set. M151 is reset after M4 is opened.
c. M150 is set after positioning is completed. It is reset when M5 is opened.

7. **AXISJOG (Jog)**

Instruction	Parameter			Energy flow
	No.	Meaning	Type	
AXISJOG	1	Axis number	Constant	0: Positioning
	2	Velocity	32-bit D or R element	
	3	Forward jog	Boolean	1: Jog
	4	Jog in the reverse direction	Boolean	

- Description of instruction parameters

Axis number: Site or axis number of the servo that requires jog control.

Speed: D or R element, after which two D elements are occupied for internal operations.

Forward jog: It is stored in an M or S element. When the instruction is enabled and this bit is ON, the servo starts jogging in the forward direction. When this bit is changed to OFF, the servo stops jogging in the forward direction.

Reverse jog: It is stored in an M or S element. When the instruction is enabled and this bit is ON, the servo starts jog in the reverse direction. When this bit is changed to OFF, the servo stops jog in the reverse direction.

Caution

- An alarm will be reported if an M or S element is occupied after reverse jogging.
- No action will be triggered if both forward jog and reverse jog are enabled. In addition, do not keep ASIXJOG (Jog), AXISDRVA (Absolute positioning), or AXISZRN (Homing) commands all enabled, failure to comply will result in unexpected consequences as all these three commands will act once enabled.

- Example:



- Resources occupied by the instruction:
  (D30,D31) Jogging speed, (D32, D33) internal operation, (M30) forward jog, (M31) reverse jog, and (M32) error alarm.

Note

- Do not keep AXISJOG (Jog), AXISDRVA (Absolute positioning) and AXISZRN (Homing) commands all enabled.
- Users can enable and stop the servo drive, and perform jog and positioning control on the servo drive through preceding six commands.

CANlink configuration is generated in the software tool.

The CANlink configuration table is automatically generated after instruction compilation is completed in AutoShop.

The following table lists the servo parameters corresponding to the automatically added CANlink configuration table.

No.	Trigger mode	Trigger condition	Data transmission register	Data receiving register	Number of registers	Function
Master						
1	Event	S1 + 0	S2 + 0	H05.24	2	Mechanical home offset
2	Event	S1 + 1	S2 + 2	H06.04	1	Jog speed
3	Event	S1 + 2	S2 + 3	H11.0E	2	Speed setting
			S2 + 4	H11.0F		Acceleration/ Deceleration time
4	Event	S1 + 3	S2 + 5	H11.0C	2	Position setting, 32 bits

No.	Trigger mode	Trigger condition	Data transmission register	Data receiving register	Number of registers	Function
Master						
5	Time	20	S2 + 7	H31.00	1	VDI for servo status control
Slave						
1	Time	50	H0b.00	S2 + 8	1	Current velocity
2	Time	10	H0b.07	S2 + 9	2	Current position
	Event	1	H05.24	S2 + 11	2	Current mechanical offset check
3	Event	1	H30.01	S2 + 13	2	VD01
			H30.02	S2 + 14		VD02
4	Event	1	H06.04	S2 + 15	1	Jog speed check
5	Event	1	H11.0C	S2 + 16	4	Position setting check, 32 bits
			H11.0E	S2 + 18		Speed setting check
			H11.0F	S2 + 19		Acceleration/ Deceleration time check

Note

S1 = M7200

S2 = D7200

Each station occupies four M soft elements and 20 D elements, which are sorted in sequence in the downward direction.

6.4.3 CANopen Communication Configuration Examples

6.4.3.1 Connecting SV670P-INT Servo Drive to Schneider 3S Master

The following takes the position mode as an example. For details about the position mode, see *" Position control mode" on page 83*.

In position control mode, objects used as PDOs are allocated as follows.

Table 6–29 PDO mapping allocation


PDO	Object	Definition	Bit length
RPDO1	6040.00h	Control word	Uint16
	6060.00h	Mode selection	Int8
RPDO2	6081.00h	Profile velocity	Uint32
	607A.00h	Target position	Int32
TPDO1	6041.00h	Status word	Uint16
	6061.00h	Operation mode display	Int8

PDO	Object	Definition	Bit length
TPDO2	606C.00h	Speed feedback	Int32
	6064.00h	Position feedback	Int32
TPDO3	H0b.26	Phase current feedback	Uint16


SDOs are used to write 6083h (acceleration), 6084h (deceleration), and 605Ah (emergency stop).

SoMachine is Schneider 3S series master node background software. This section describes how to connect the SV670P-INT servo drive to the Schneider M238 master node.


1. Start SoMachine and click "Create new machine" based on a standard project. Select a master device, for example, TM238LFDC24DT, modify the device name, and click "Create Project", as shown below.

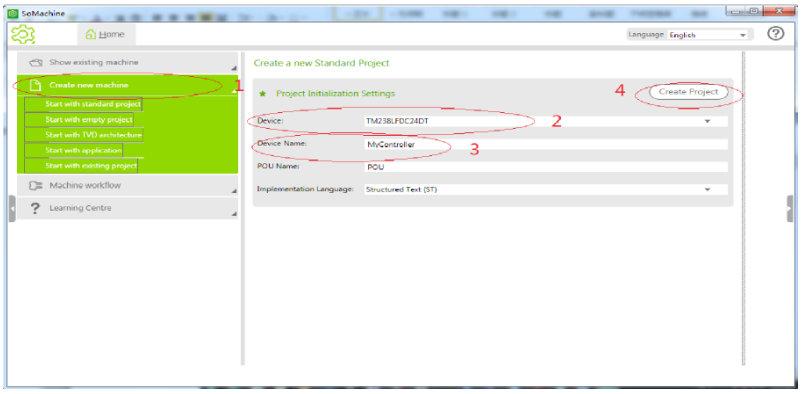


2. In the "Save Project As" dialog box, enter a file name and click "Save".

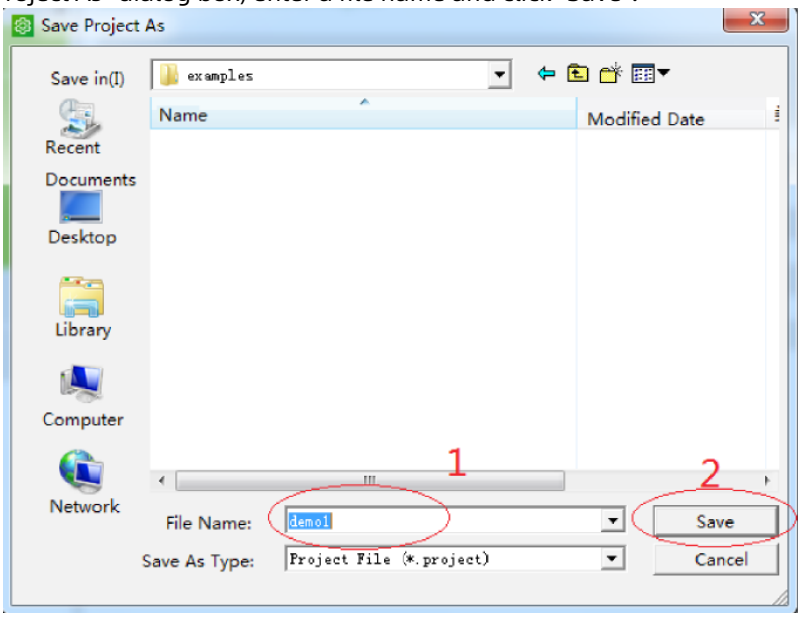


3. The following interface appears.

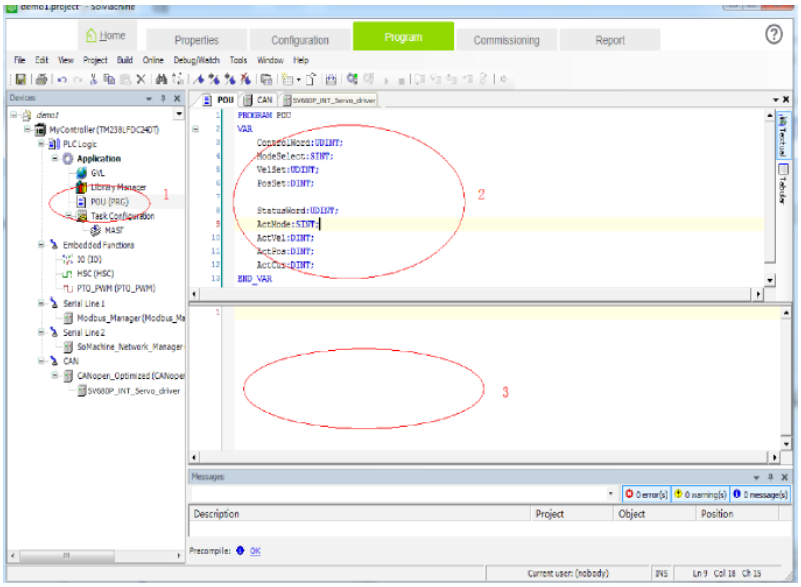


4. Select "Tool" > "Device Repository" to display the following dialog box. (If the EDS file is imported, skip steps 4 to 6.)

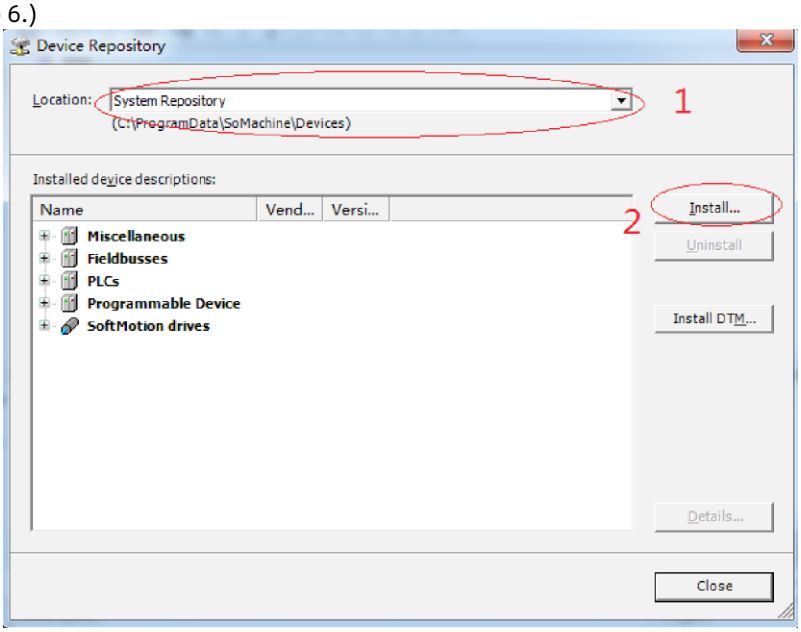


5. In the "Location" field, select "System Repository" and click "Install". In the window displayed, select the directory where the target EDS file is stored.

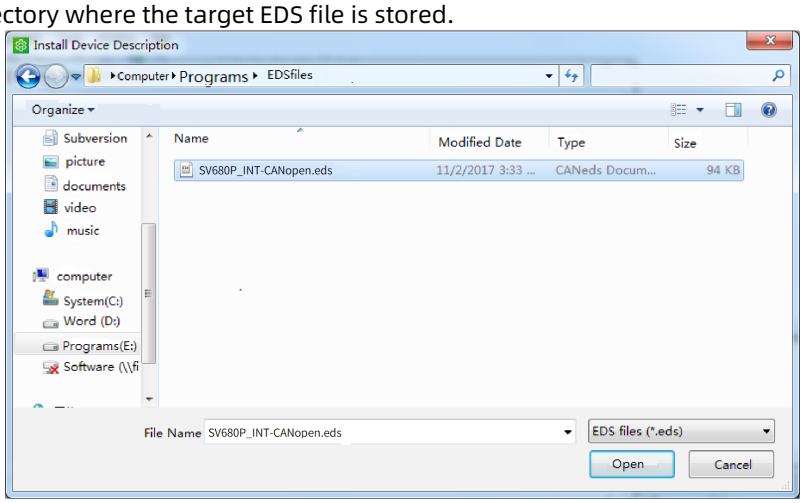


6. Click "Open" and the EDS file of the SV670P-INT servo drive is imported to SoMachine. In the "Device Repository" dialog box, you can choose "Fieldbusses" > "CANopen" > "Remote Device" to view devices.

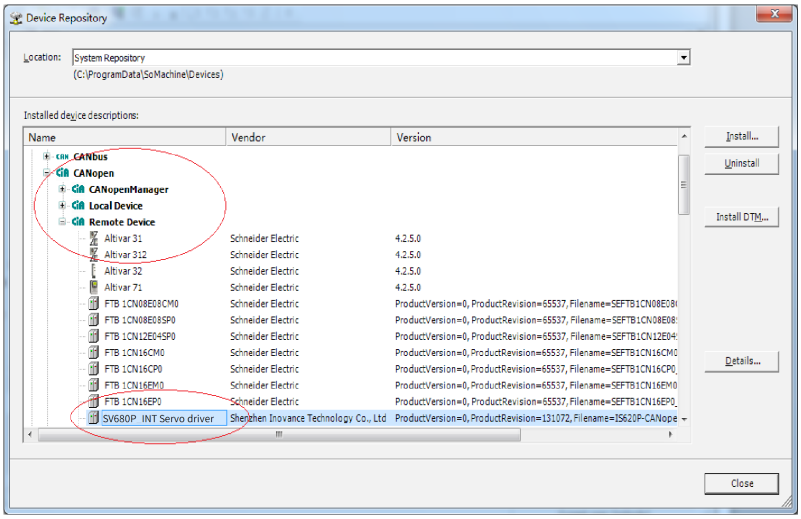


7. Close the "Device Repository" dialog box. Click "Configuration". In the interface displayed, only the M238 master is available. Click "CAN" on the master station.

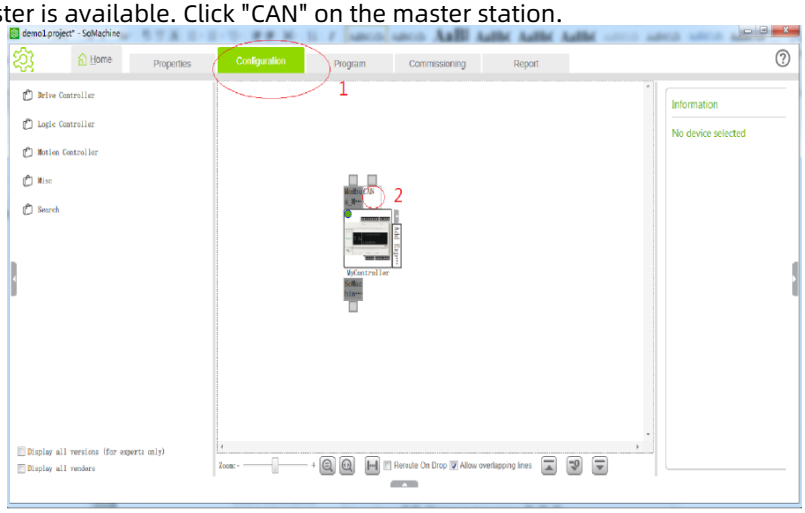


8. The "Add device" dialog box is displayed. Add a CANopen gateway. For this purpose, set "Vendor" to "Schneider Electric", select "CANopen Optimized", and click "Add and close".

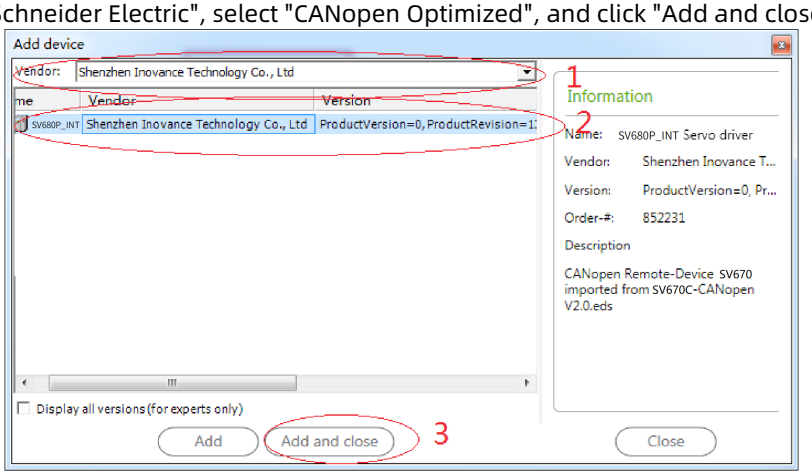


9. Now, the CANopen gateway appears in the interface. Click the position indicated by mark 2.

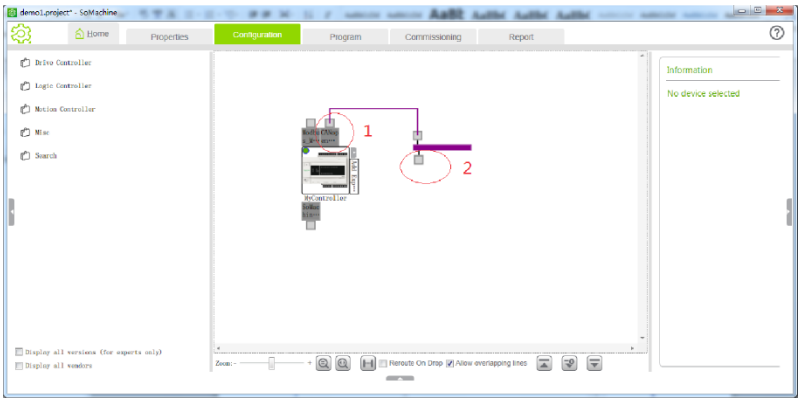


10. The "Add device" dialog box appears again. Select Inovance as the vendor and SV670P-INT as the device, and then click "Add and close".

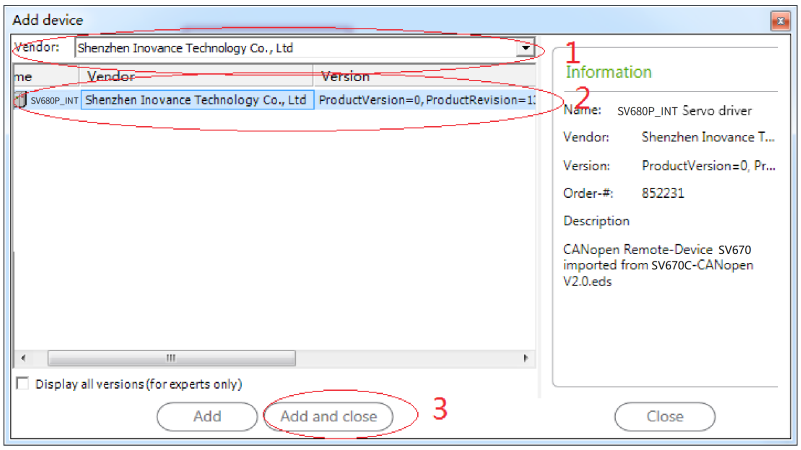


11. Now, the SV670P-INT servo drive appears in the interface.

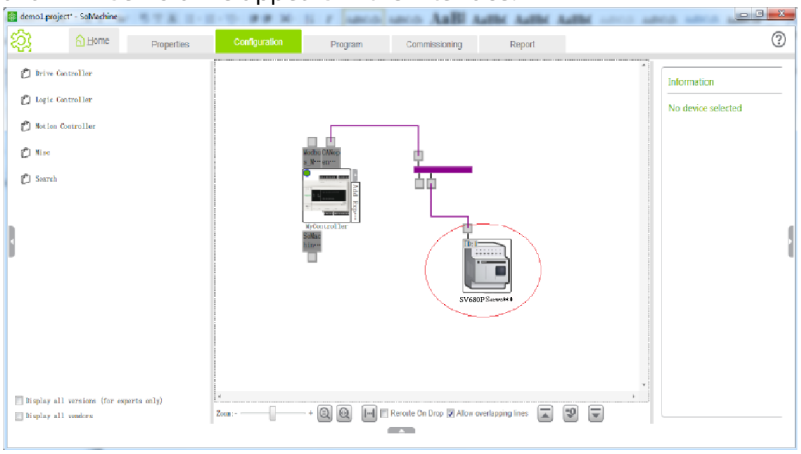


12. Click "Program". Double-click "CAN" on the left, and set the baud rate to an appropriate value (500 kbps in this example).

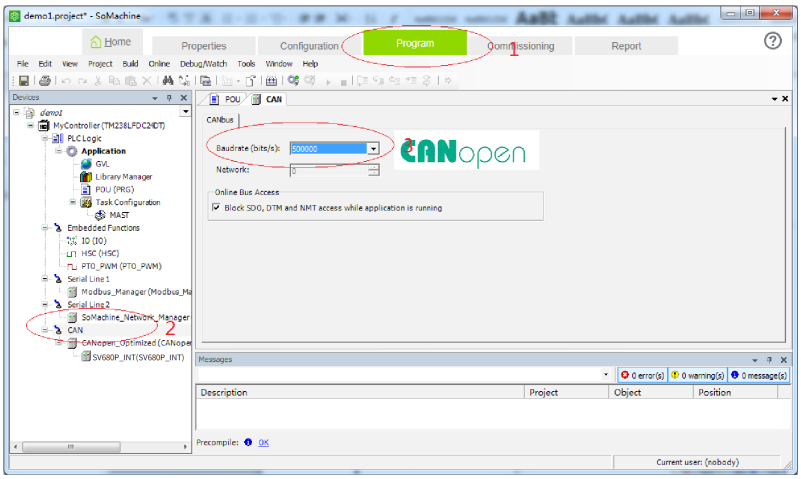


13. Double-click "SV670_Servo_Driver" on the left. The node ID can be modified. Select "Enable Expert Settings".

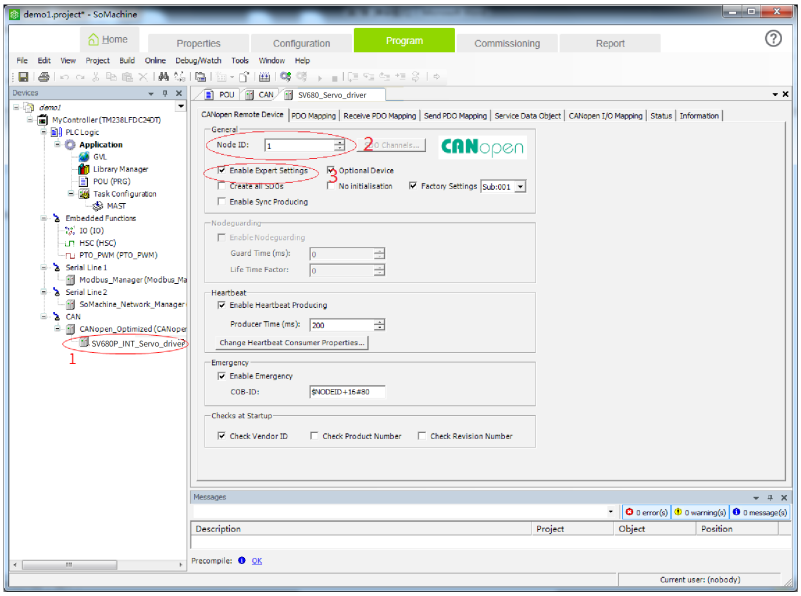


14. Click "PDO Mapping" and select two RPDOs and three TPDOs.

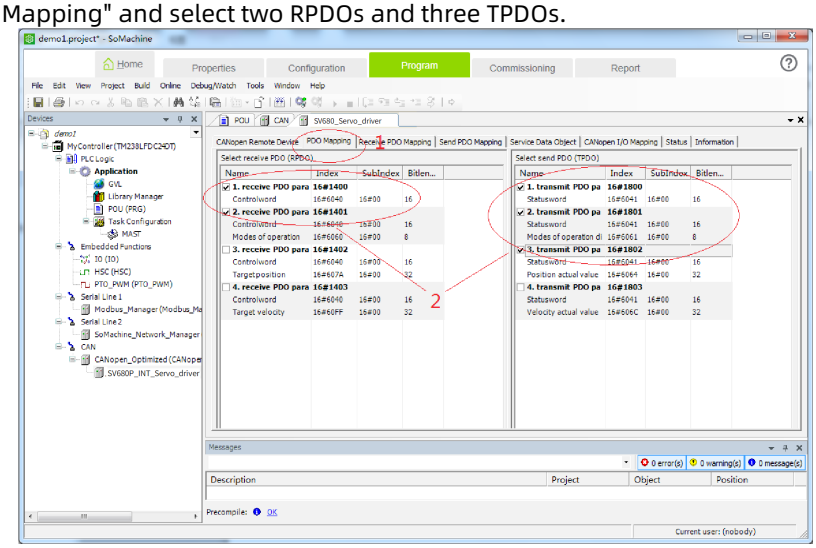


15. Double-click "RPDO1" to open the "PDO Properties" dialog box and set "Transmission Type" to "Type 255". Repeat this operation for other PDOs.

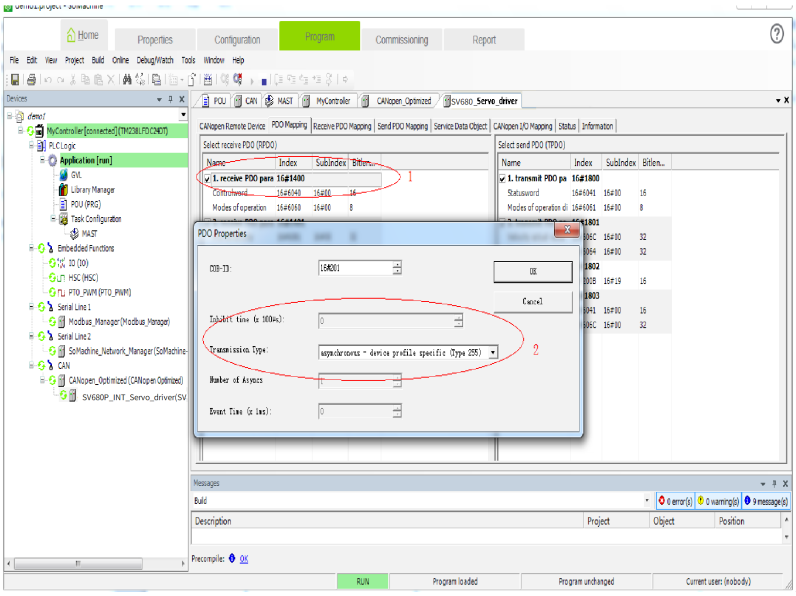


16. Select "Receive PDO Mapping", click "receive PDO parameter", and click "Add Mapping" or select a mapping and click "Edit".

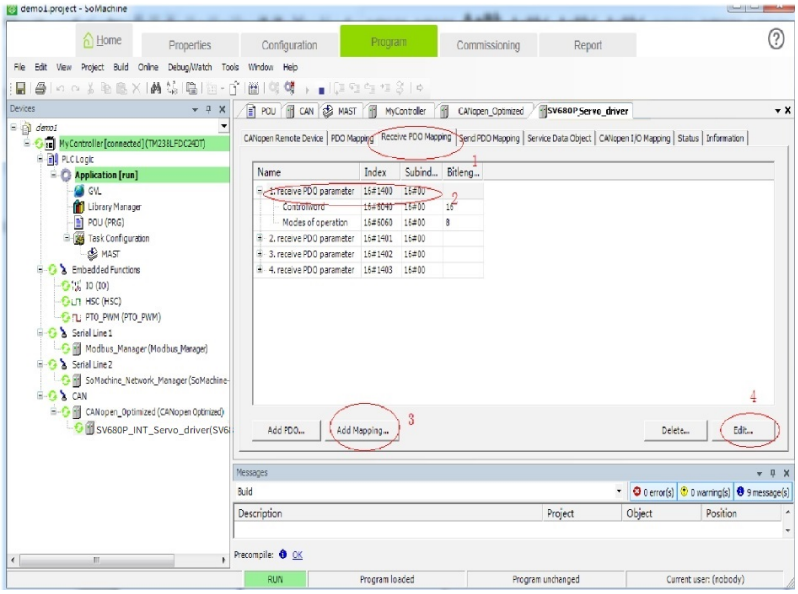


17. In the dialog box displayed, select a proper mapping object according to *"Table 6-29" on page 287*.

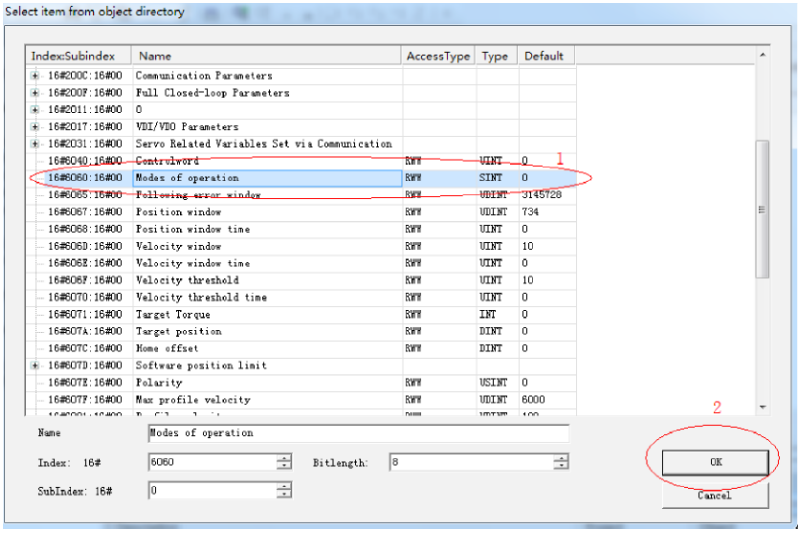


18. After the mapping object is added, the RPDO mapping is shown as below.

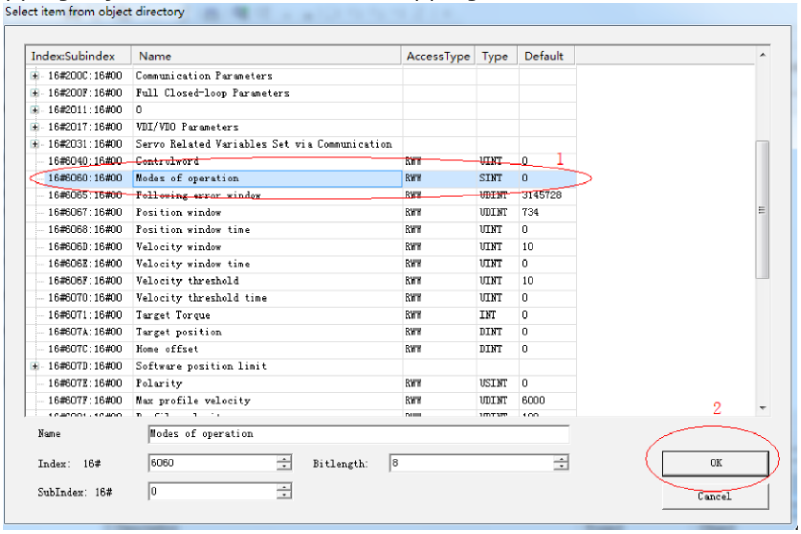


19. Similarly, select "Send PDO Mapping" and configure PDOs according to *"Table 6-29" on page 287*, as shown below.

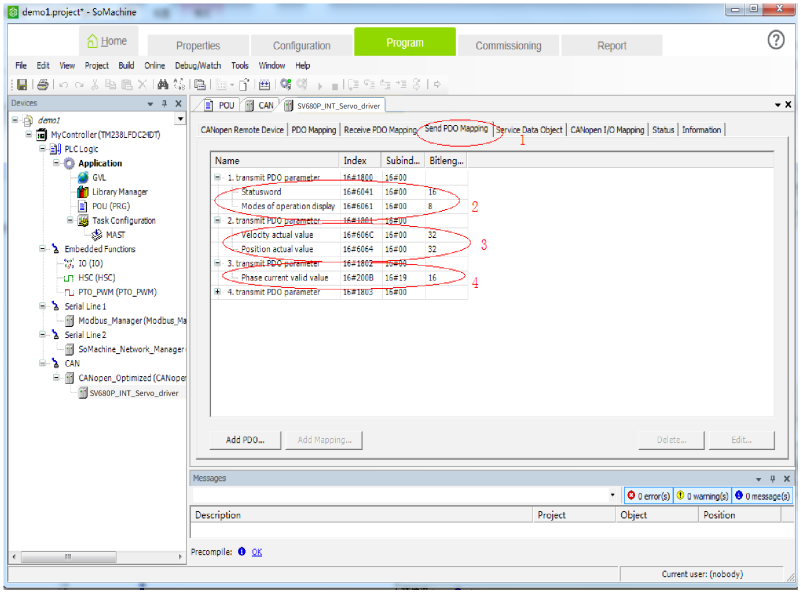


20. Click "Service Data Object", and then click "New" to add the SDO needed. If default values are used, skip steps 20 to 22 (optional).

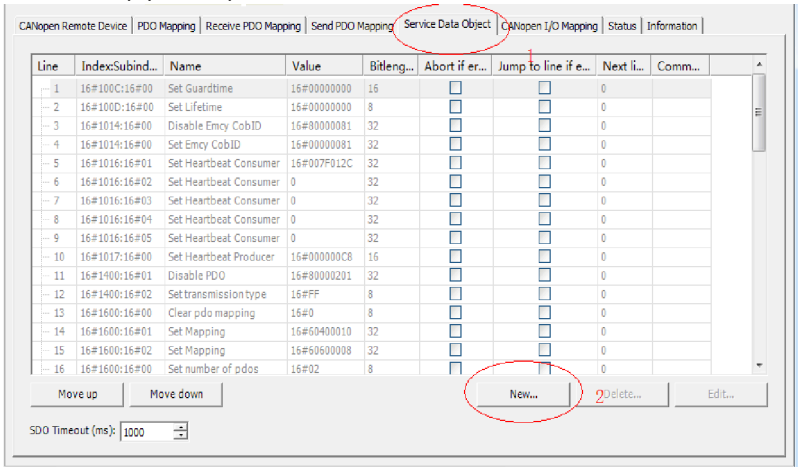


21. In the list displayed, select the target SDO, modify the value as needed, and click "OK". This step is optional.

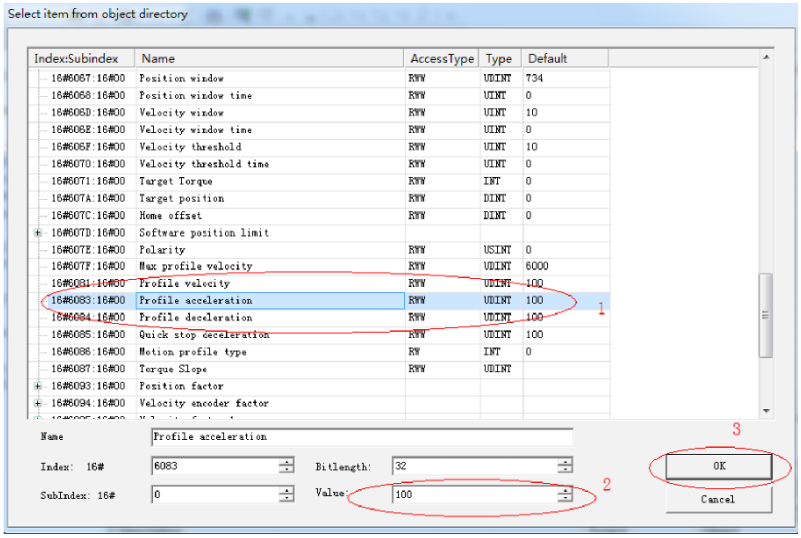


22. The newly added SDO is shown as below. This step is optional.

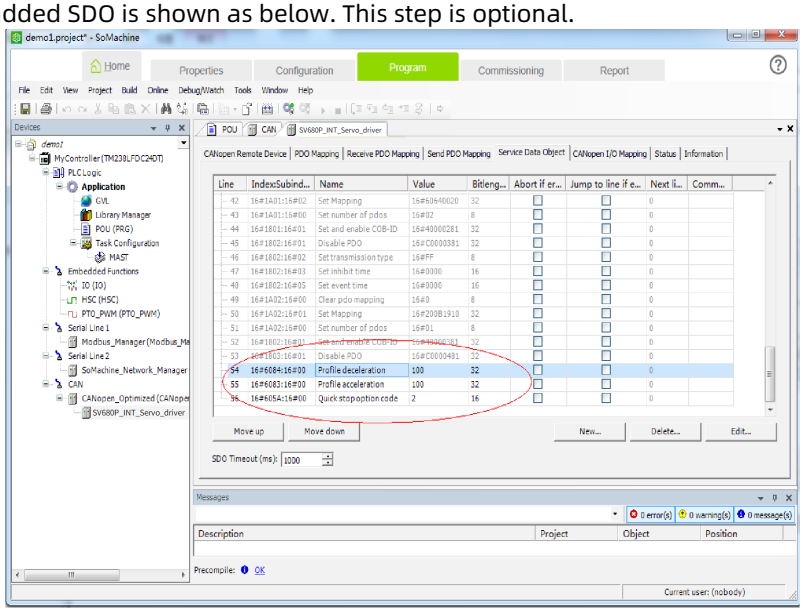


23. Double-click "POU" on the left. You can add variable definitions in the section indicated by mark 2 and add PLC program logic in the section indicated by mark 3. Then, click "Edit" or press F11. If no error occurs, proceed with the next step.

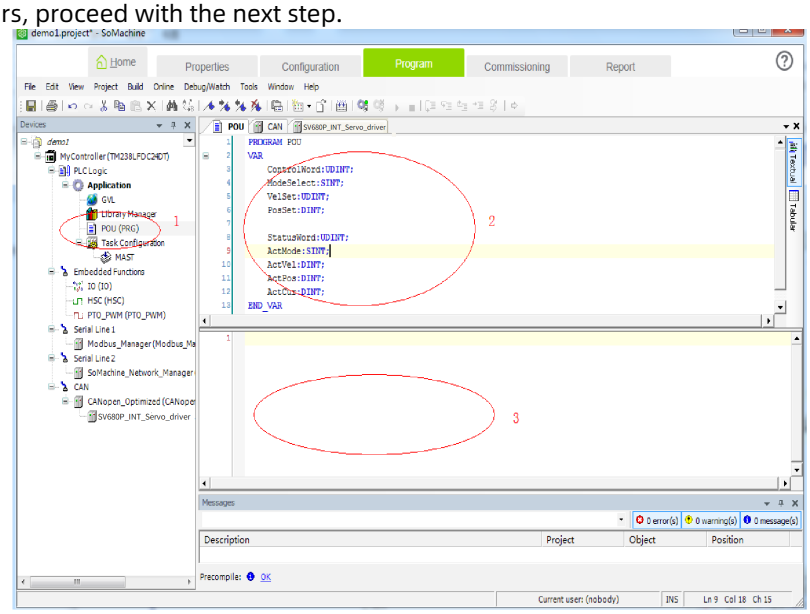


24. Double-click "MAST" to add POU. You can also set the program cycle interval on this page.

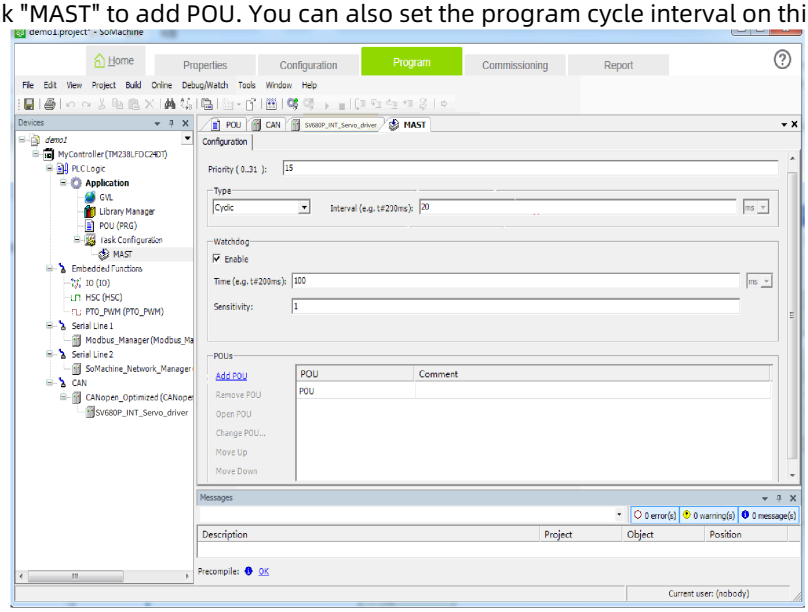


25. Select the POU to be added and click "OK".

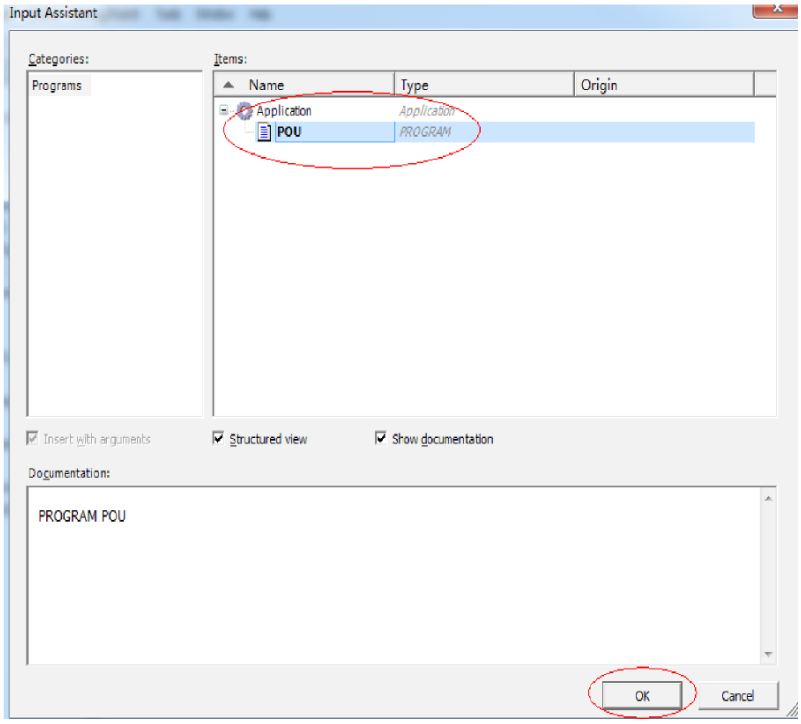


26. Choose "SV670P_IN..." > "CANopen I/O Mapping". Double-click the target variable to show the "..." button, and then click the "..." button.

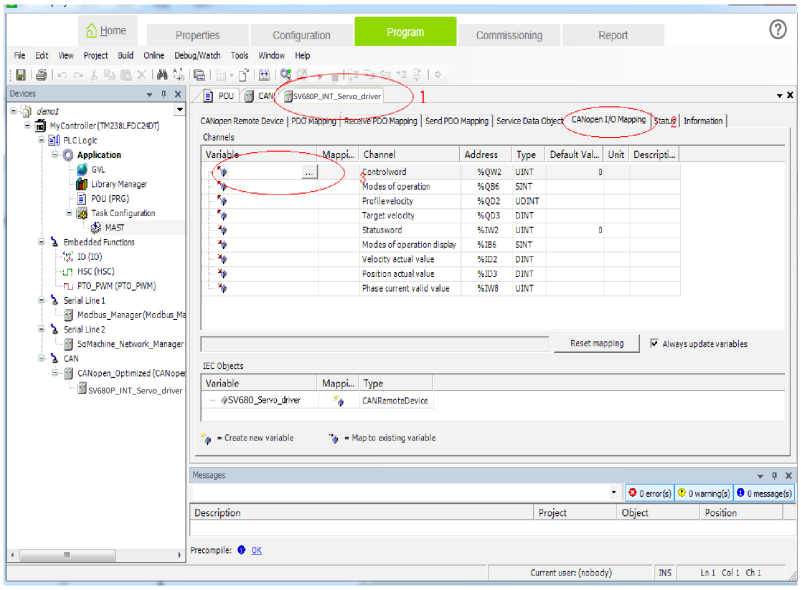


27. Select the PLC-defined variable according to the following steps.

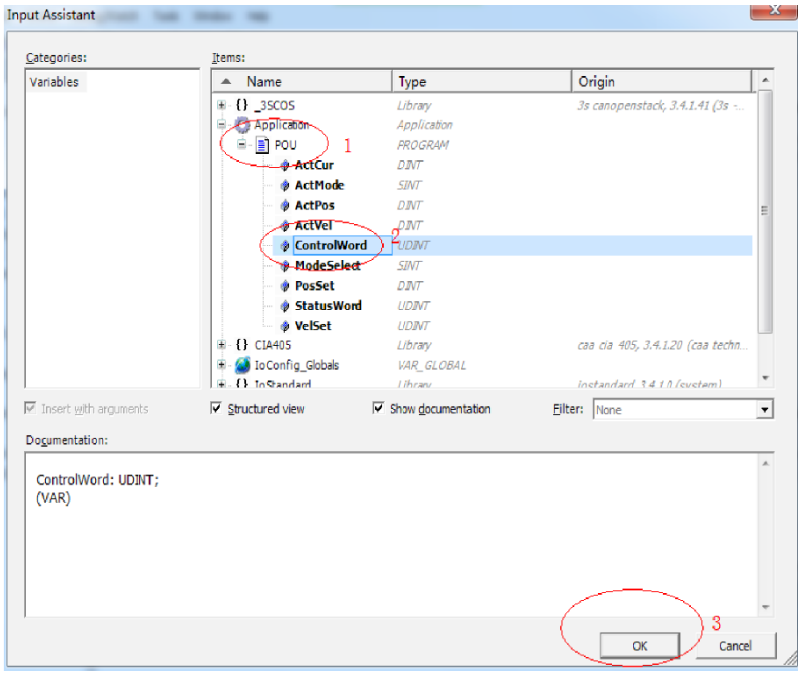


28. Add other variables in the similar way. Finally, the mapping is shown as below.

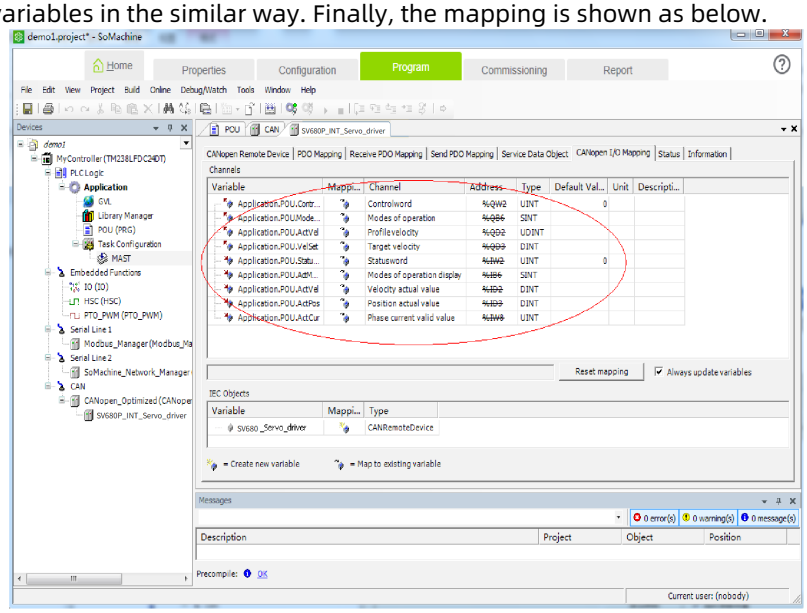


29. Double-click the master name on the left. Select "MyController" and click "Set active path" on the right.

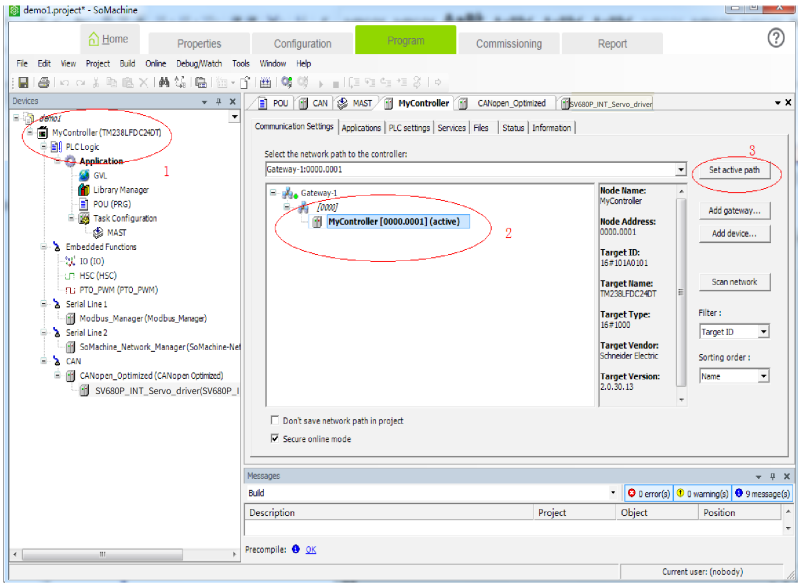


30. The following warning is displayed. Press Alt+F according to the instructions.

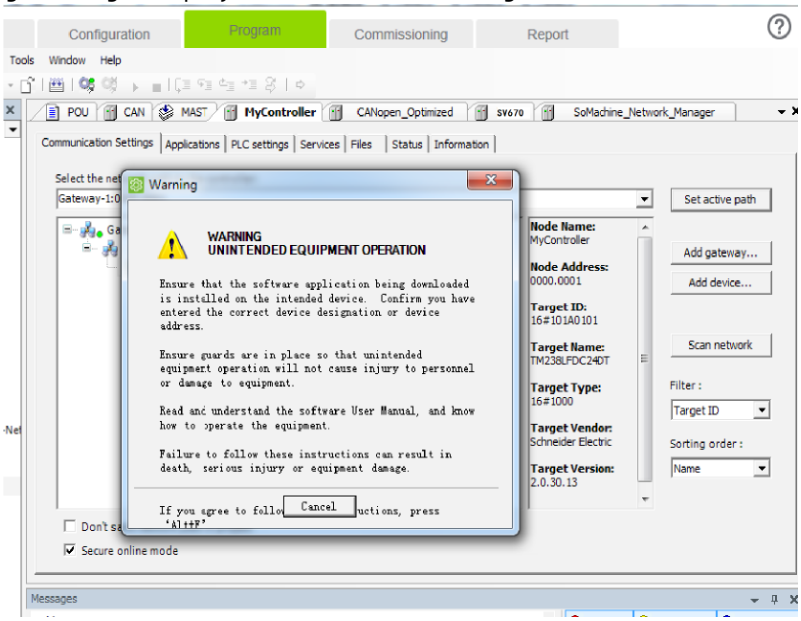


31. Click the icon circled in the following figure, and choose "Online" > "Login" or press Alt+F8.

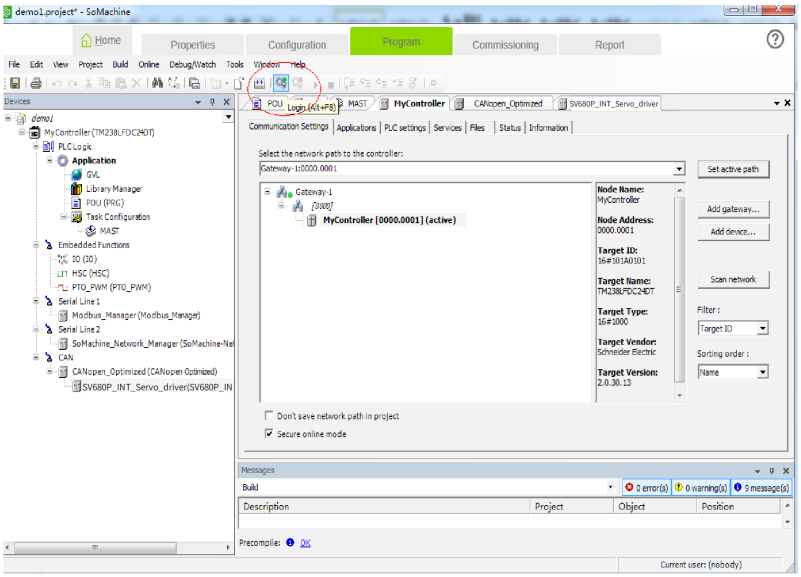

32. Click "Yes" in the dialog box displayed.

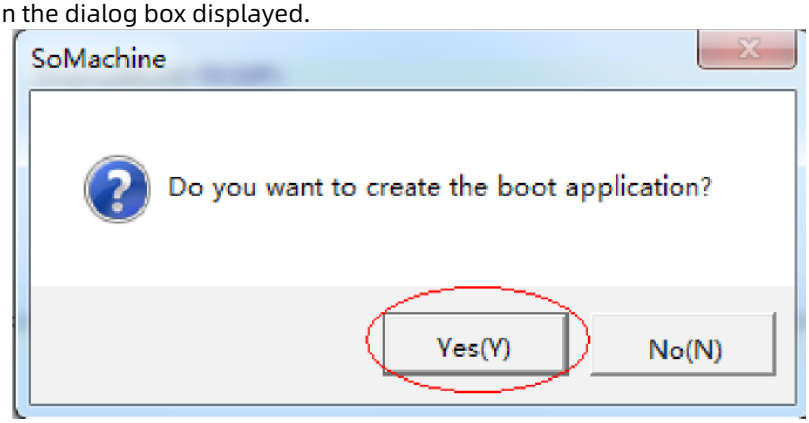


33. After download is done, click the circled ▶ icon, choose "Online" > "Start", or press F5 to start the PLC program written by the user. In this case, the motor operates in the mode defined by the user.

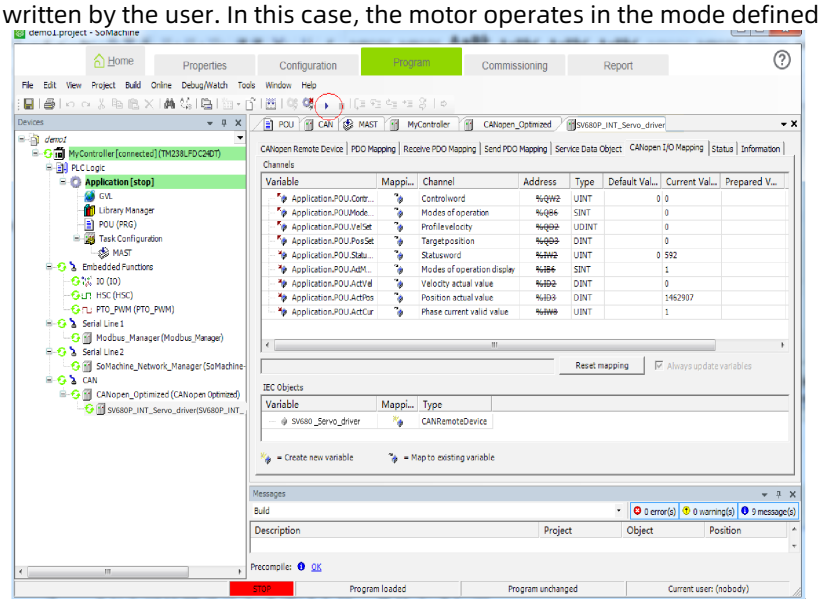

34. You can also perform motor commissioning manually according to the following steps. Select "CANopen I/O Mapping" under "SV670P-INT..." and enter the value needed in the "Prepared V..." column. Next, choose "Debug/Watch" > "Forced Value" or press F7 to modify the variable manually.


35. Write 1 to 6060h, 100 to 6081h, and 83886080 (10 revolutions) to 607Ah. Write 6 (0x06), 7 (0x07), 47 (0x2f), and 63 (0x3f) to 6040h in sequence to make the motor run.

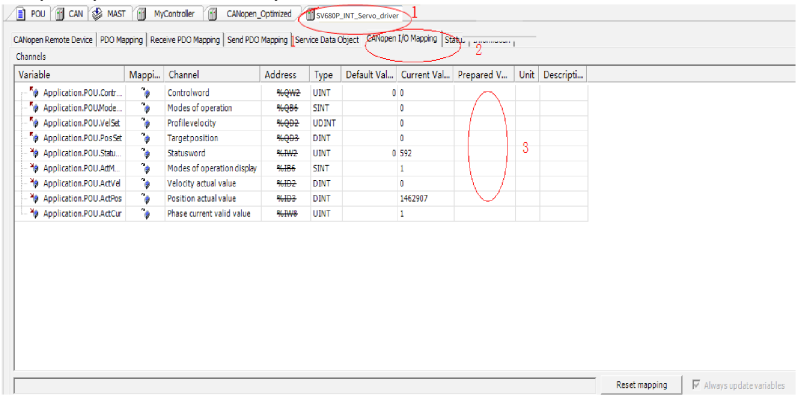

Note

- When writing multiple values for one variable, execute the "Forced value" command every time a value is written. When writing values for multiple variables, you can execute the "Forced value" command once for all after all values are written.
- When a new position or speed reference is required, write the new reference and set 6040h to 47(0x2f) and 63 (0x3f) in turn. The motor runs to the position according to the new reference regardless of whether the previous reference is executed.
- To stop the motor, set 6040h to 0.
- To terminate manual writing of values, go to the toolbar and choose "Debug/Watch" > "Release Values" or press Alt + F7. Then, variables will be executed according to the PLC program logic instead of manually written values.

36. To stop the PLC program, click the button indicated by mark 1 and choose "Online" > "Stop" in the toolbar or press Shift+F8. To exit from the online function, click the button indicated by mark 2 and choose "Online" > "Exit" or press Ctrl+F8.

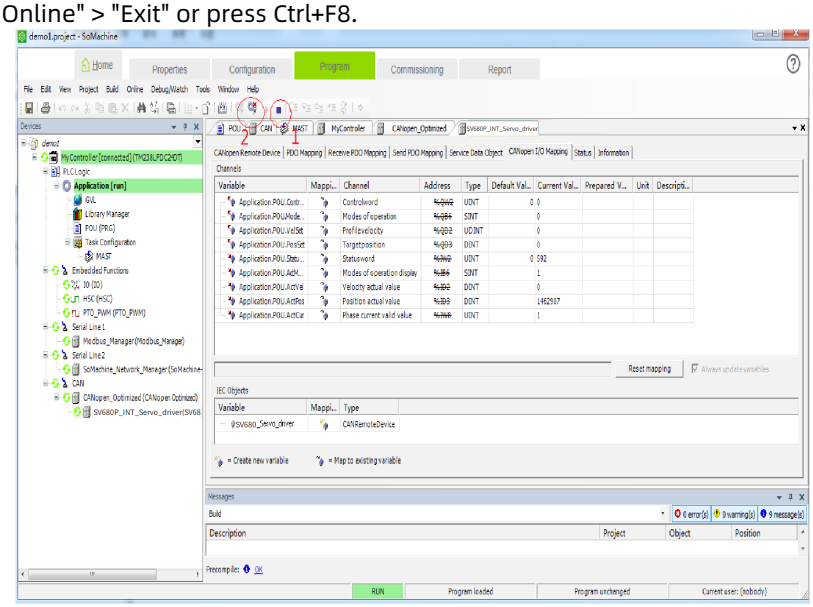

6.4.3.2 Connecting SV670P-INT to Beckhoff CANopen Master


This section also takes the position control mode as example. Allocate PDOs according to *"Table 6-30" on page 302*.

1. Manually configure the PDO mappings before connecting to the network. You can change the mappings by modifying parameters based on the following table. The parameters to be modified are as follows.


Table 6–30 Example of PDO mapping of Beckhoff master

Parameter	Object	Mapping object	Input
H2d.32	1600.00h	Number of RPDO1 mapping objects	2
H2d.33	1600.01h	6040.00h	60400010h
H2d.35	1600.02h	6060.00h	60600008h
H2d.49	1601.00h	Number of RPDO2 mapping objects	2
H2d.50	1601.01h	6081.00h	60810020h
H2d.52	1601.02h	607A.00h	607A0020h
H2E.20	1A00.00h	Number of TPDO1 mapping objects	2
H2E.21	1A00.01h	6041.00h	60410010h
H2E.23	1A00.02h	6061.00h	60610008h
H2E.37	1A01.00h	Number of TPDO2 mapping objects	2
H2E.38	1A01.01h	606C.00h	606C0020h
H2E.40	1A01.02h	6064.00h	60640020h
H2E.54	1A02.00h	Number of TPDO3 mapping objects	1
H2E.55	1A02.01h	200B.19h	200B1910h
H2E.57	1A02.02h	-	0


2. Connect Beckhoff CX9020, as a master node, to the CANopen module of EL6751 and perform the test. Ensure that the IP address of CX9020 is in the same network segment as the IP address of the PC and the first four bytes of AMS Net (Properties > AMS Router > AMS Net) of Beckhoff TwinCAT software are the same as the IP address of the PC.
3. Open TwinCAT System Manager and create an empty project. Click "SYSTEM" on the left and click "Choose Target..." on the right.

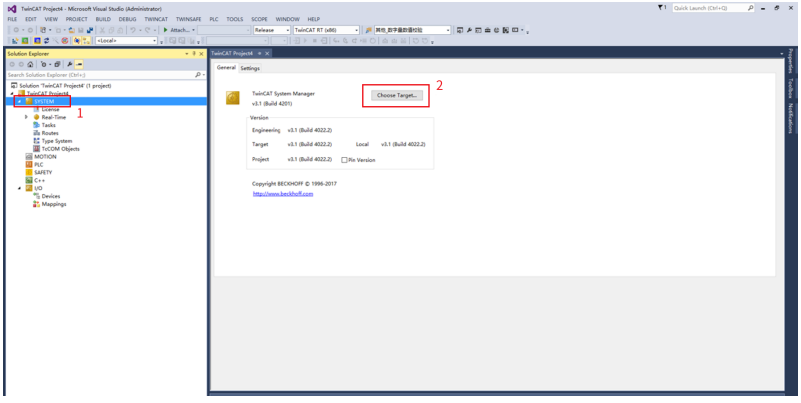


4. In the dialog box displayed, select "...Local..." and click "Search (Ethernet)".

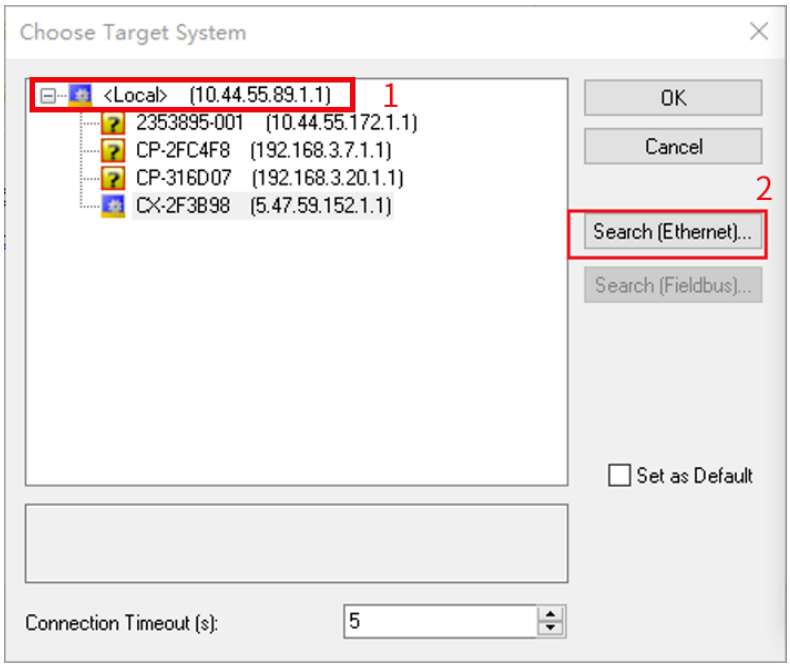


5. In the dialog box displayed, select "IP Address" as indicated by mark 1 and click "Broadcast Search".

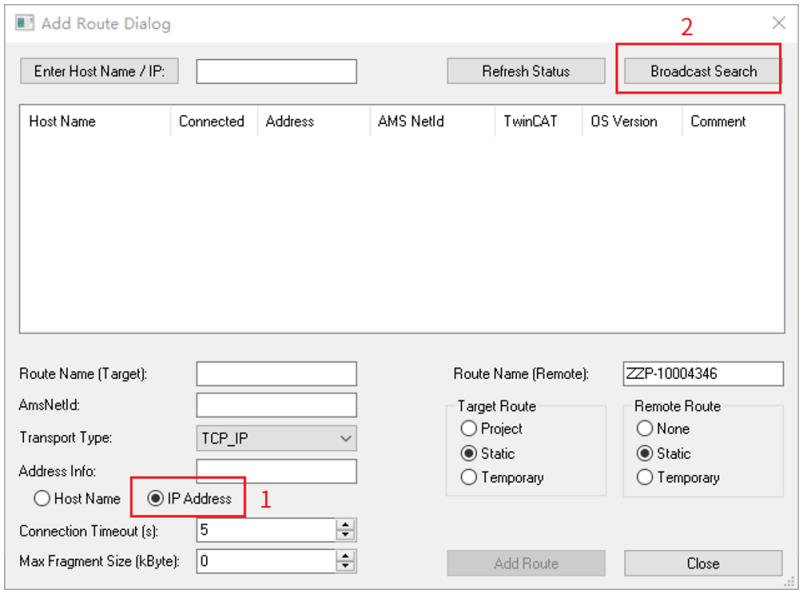


6. The master is displayed. Select the master and click "Add Route".

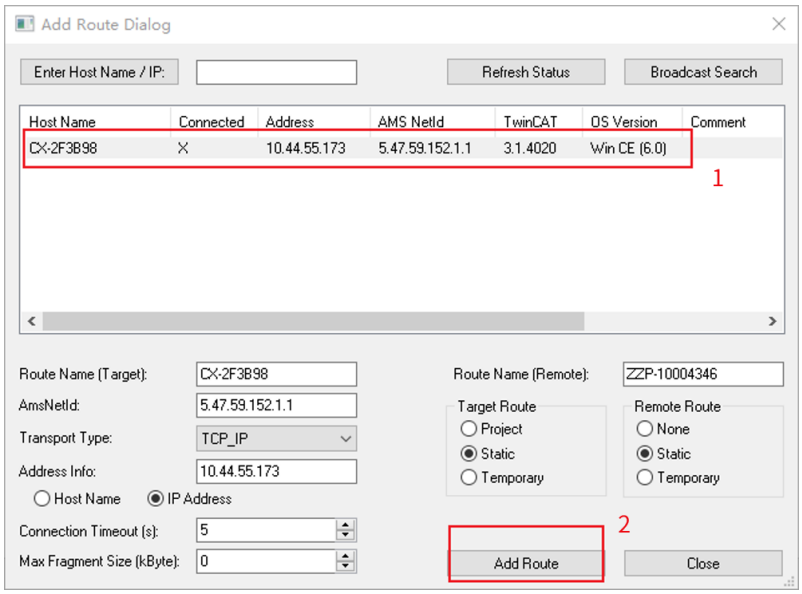


7. In the dialog box displayed, enter the username, which is the host name of the master, leave the "Password" field blank, and click "OK".

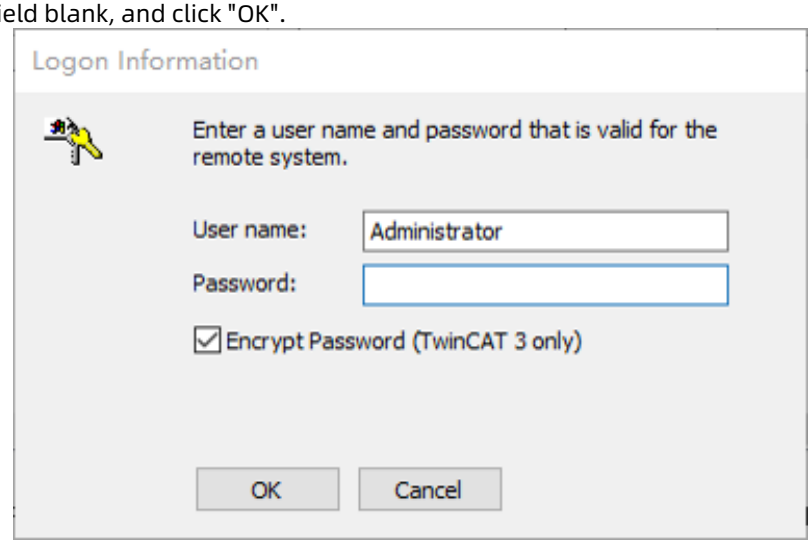


8. Click "Close" on the interface shown in Step 6. In the "Choose Target System" dialog box, click "+" to unfold the list and select the master. Then, click "OK".

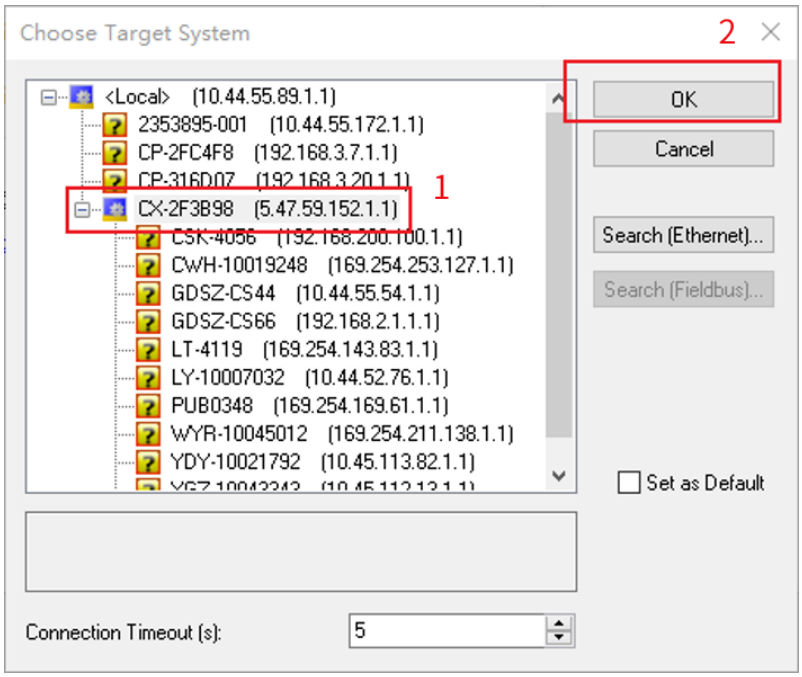


9. Check the master configuration status marked by "1". If the master is in the Run mode, click the icon marked by "2" to switch to the configuration mode. Click the icon marked by "3" or "I/O", right-click "Devices", and then select "Scan Devices" to scan for devices.

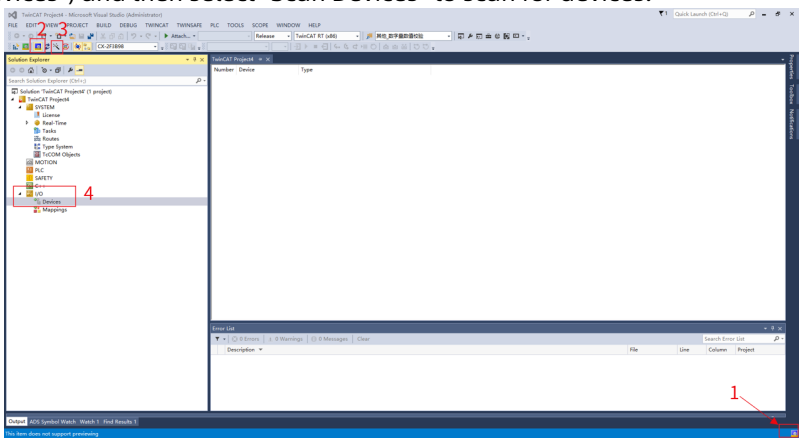


10. Click "OK" in the alarm dialog box displayed.

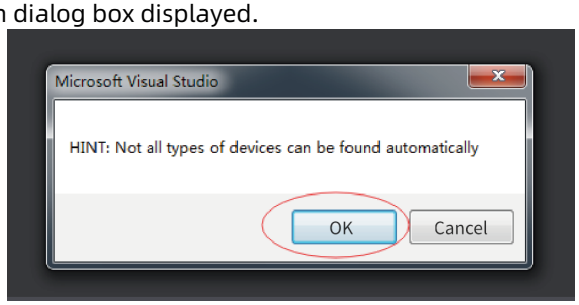


11. Select "Device 1 (EtherCAT)" and click "OK" in the dialog box displayed.

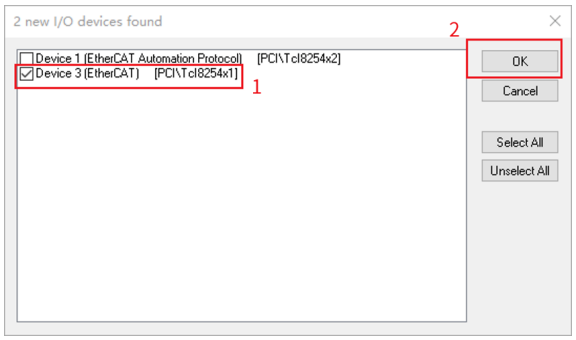


12. Click "Yes" in the dialog box asking whether to scan for boxes.

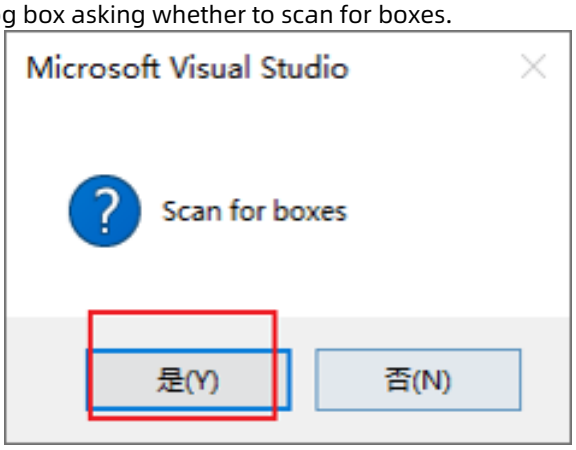


13. Click "Yes" in the dialog box asking whether to create EL6751 master.

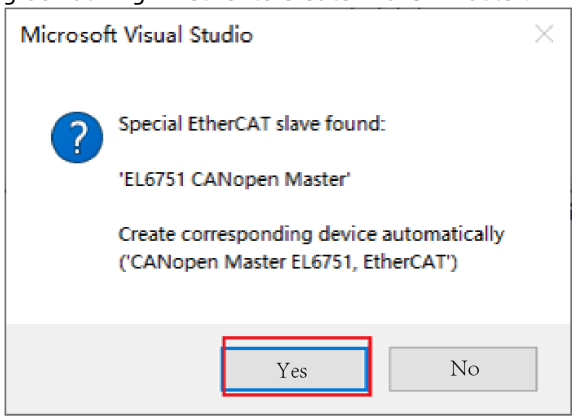


14. Select the baud rate (defaulted to 500 Kbps) and click "OK". The master starts device searching, which may take a while.

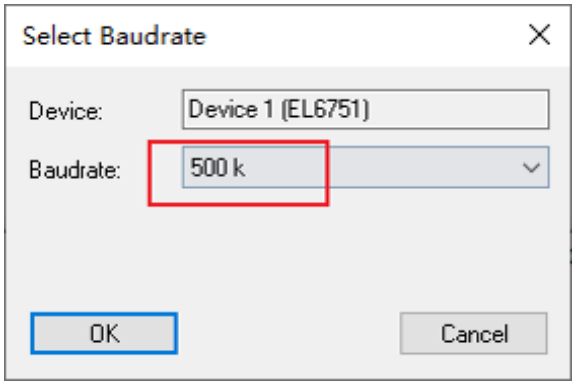

15. Click "Yes" in the dialog box asking whether to activate free run.

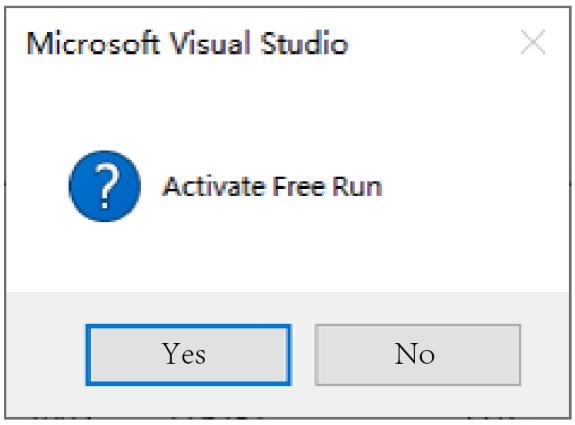


16. The Box of SV670P-INT series servo drive is now displayed on the left. Right-click to insert three TPDOs and 2 RPDOs. Right click Disabled to uncheck it.

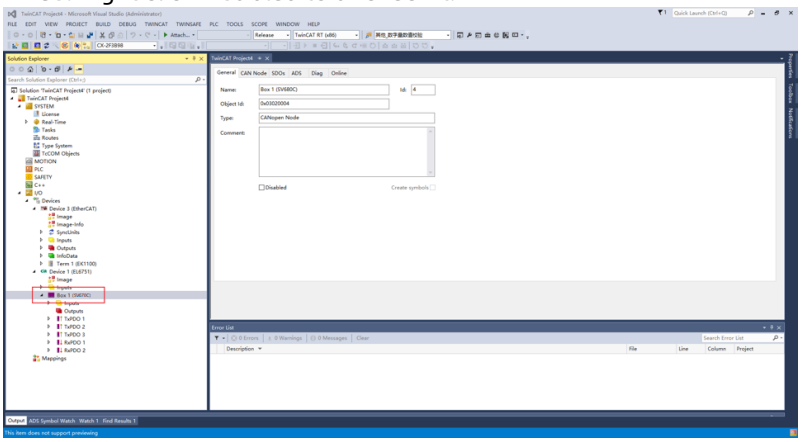

Note


- Only servo drives equipped with termination resistors can be scanned by the master.
- This product supports CANopen communication, and the device name in the description file is SV670P-INT. For specific models of SV670P-INT, see section "Model description".

17. The following figure shows the result after the previous operation is complete. Choose "TPDO1" > "Inputs", right-click, and choose "Insert Variable".

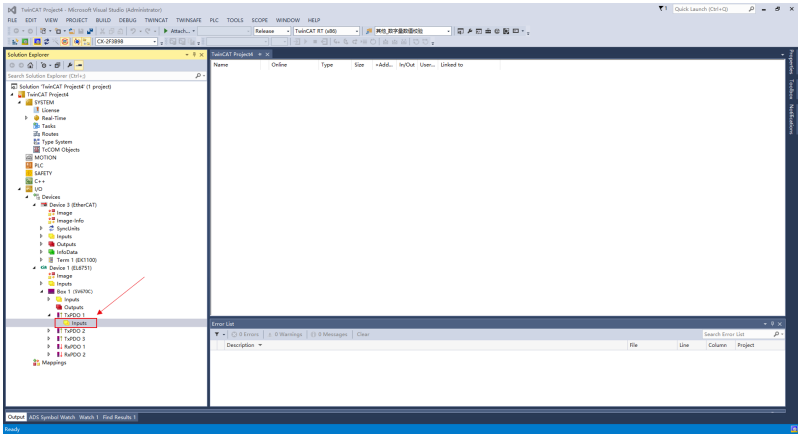


18. Map each PDO to different variables according to *"Table 6-30 Example of PDO mapping of Beckhoff master" on page 302*. Map TPDO1 to 6041.00h and 6061.00h. To insert the first variable


6041h, select "UINT" in the "Variable Type" section, enter a proper name in the "Name" field, and click "OK".

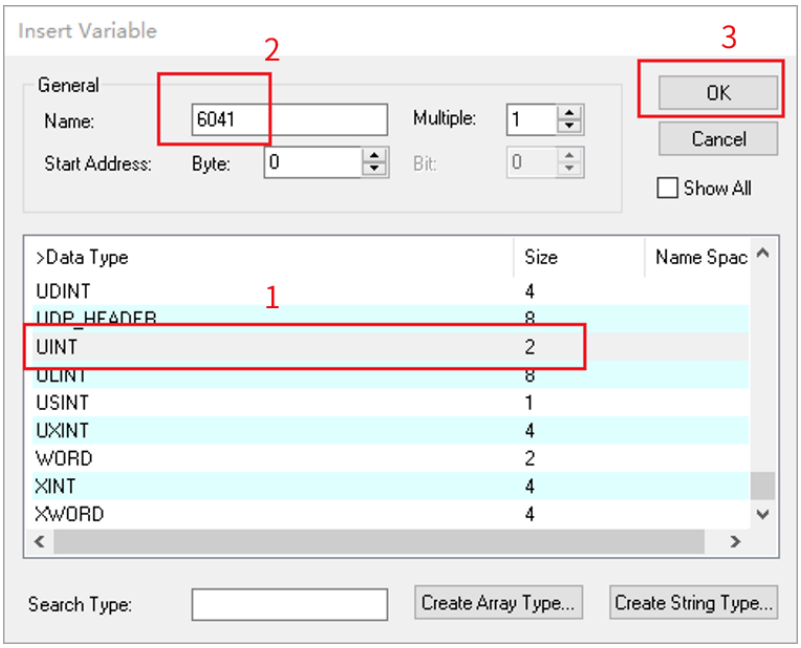


19. Now, 6041h is added to TPDO1. Similarly, right-click "Inputs", and choose "Insert Variable" to insert the second variable.

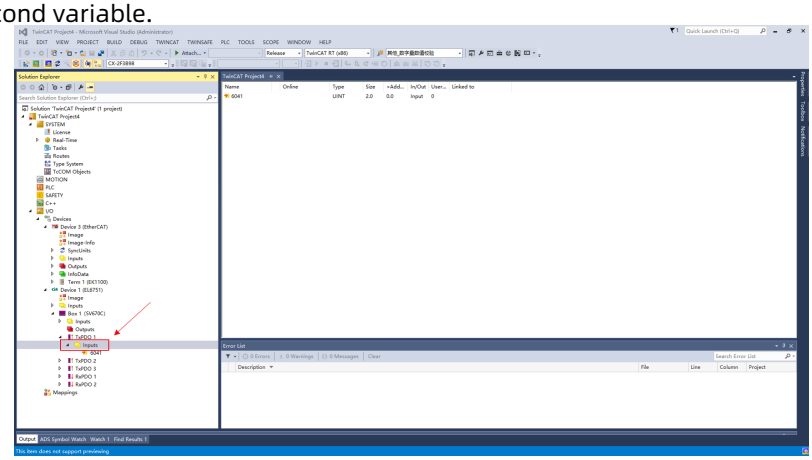


20. For the inserted variable 6061h, select "INT8" (the object dictionary can be queried) for "Variable Type", enter a large value in "Start Address" > "Byte" to prevent 6061h from being inserted in front of 6041h, enter a proper name, and then Click "OK".

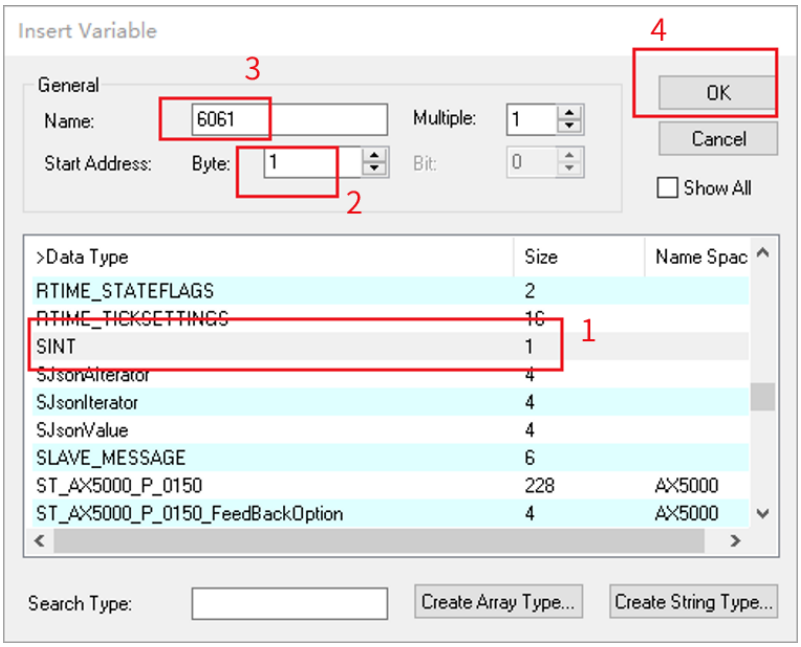


21. You can see that two objects are added to TPDO1. Note that the sequence of the two variables must be the same as that in *"Table 6-30 Example of PDO mapping of Beckhoff master" on page 302*. Otherwise, the second variable must be deleted and inserted again and a large value must be entered in 2 marked in the figure in Step 20.
    After making sure that the variable sequence is correct, choose "TxPDO1" > "Inputs", right-click "Inputs", and choose "Recalc Address" to allocate addresses. This step must be performed. Otherwise, address chaos may occur.

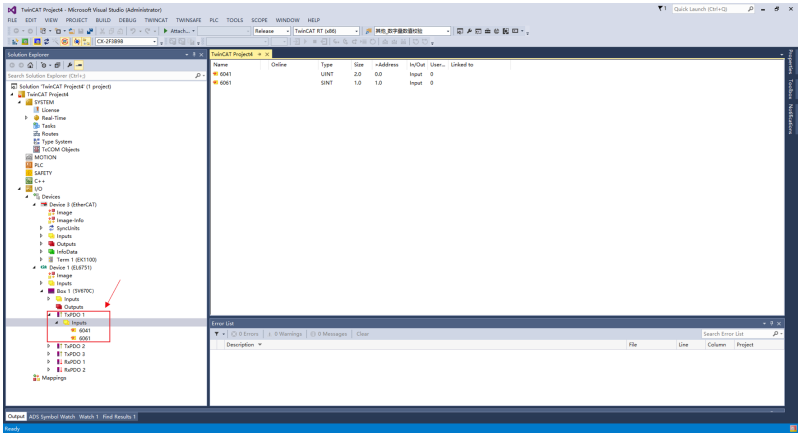


22. Repeat steps 17 to 21 for other PDOs. Add corresponding mapping variables according to *"Table 6-30 Example of PDO mapping of Beckhoff master" on page 302*. The interface after variables are added is shown below.

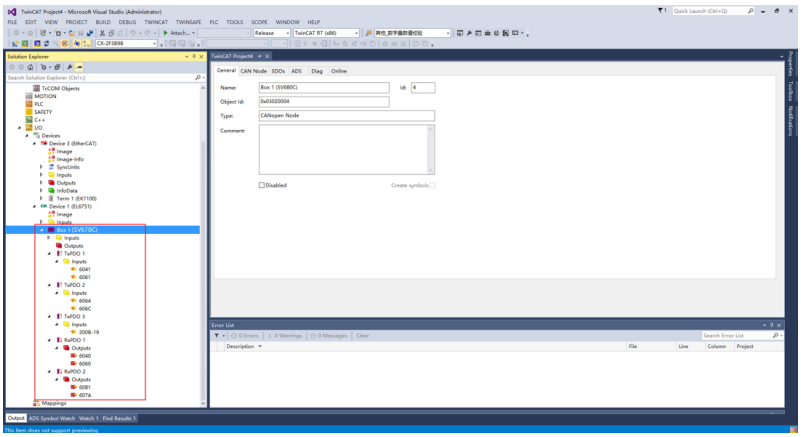


23. Click the Configuration Mode icon.

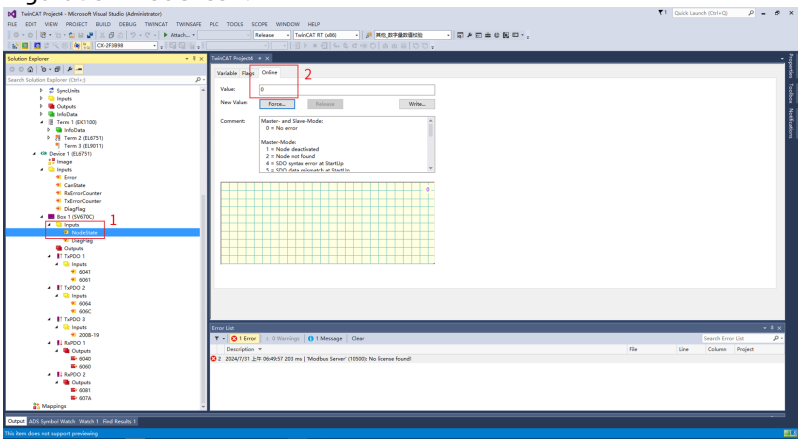


24. Select the Box of SV670P-INT and select "Inputs" > "NodeState". The node state in Online is 0, indicating the node is in a normal state.

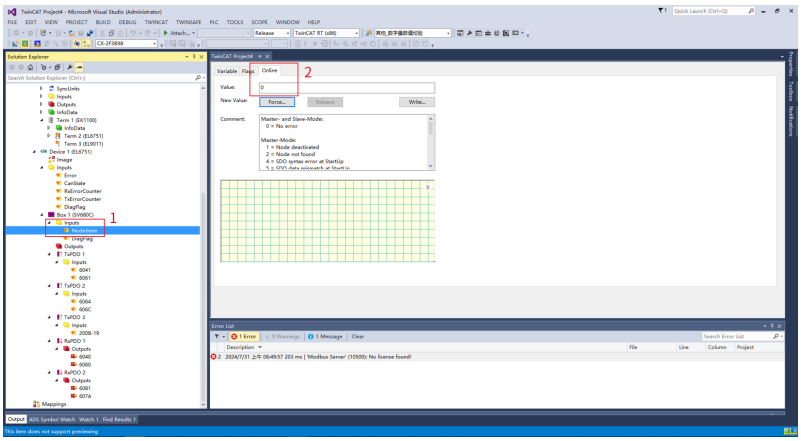


25. Create a PLC project.

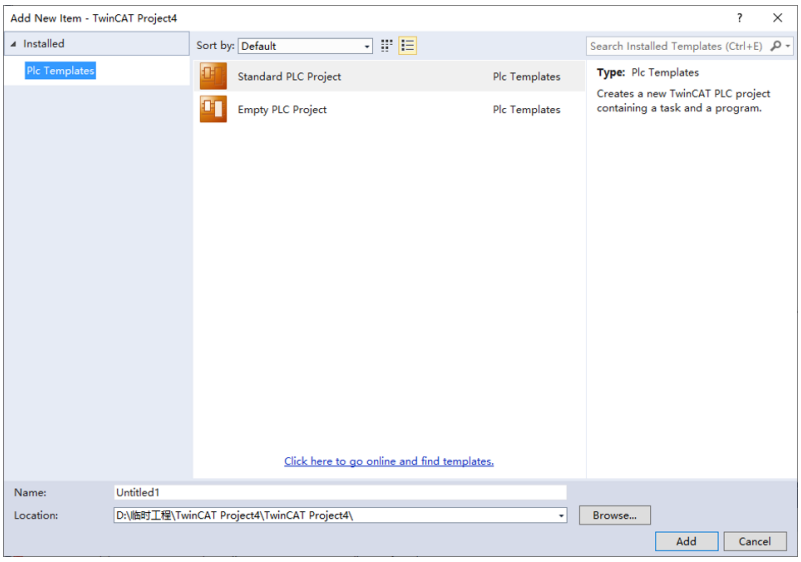


26. Enter corresponding variable definition and the PLC logic.

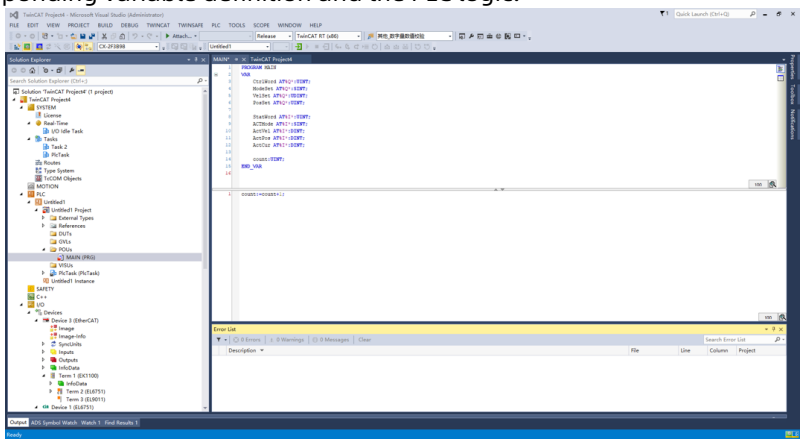


27. Right-click the created project and select "Build" to compile the project.

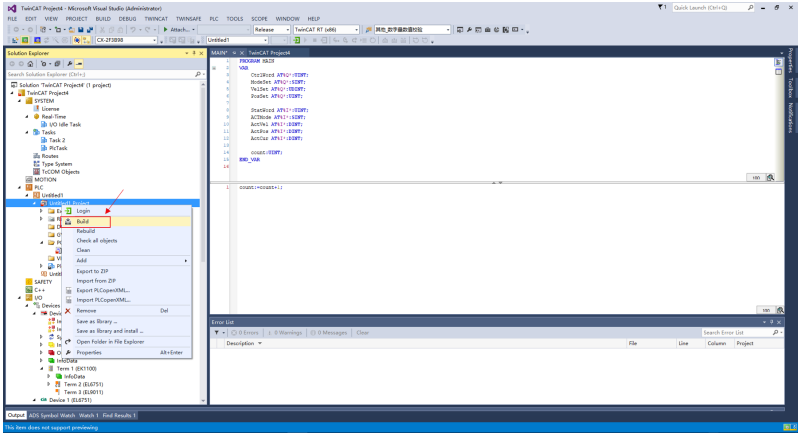

28. After the PLC program is added, select the PDO variable and click "Linked to" or double-click the variable to link the variable to the PLC program.

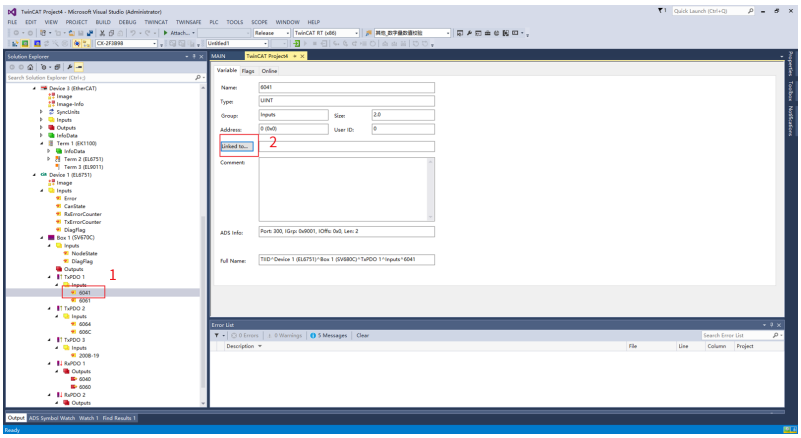


29. Select the corresponding PLC variable and click "OK".

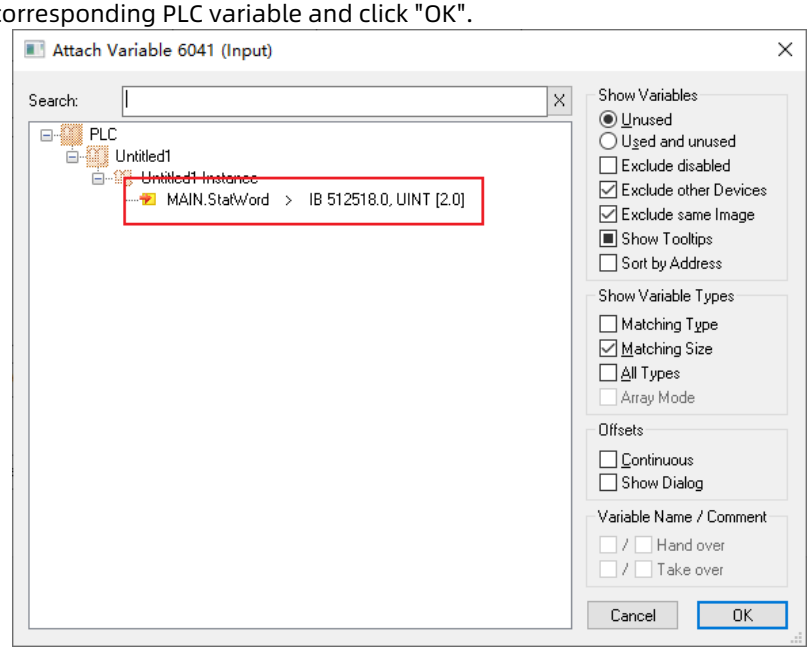


30. After the variable is linked, a small right arrow appears next to the variable name icon.




31. Click "Activate Configuration".

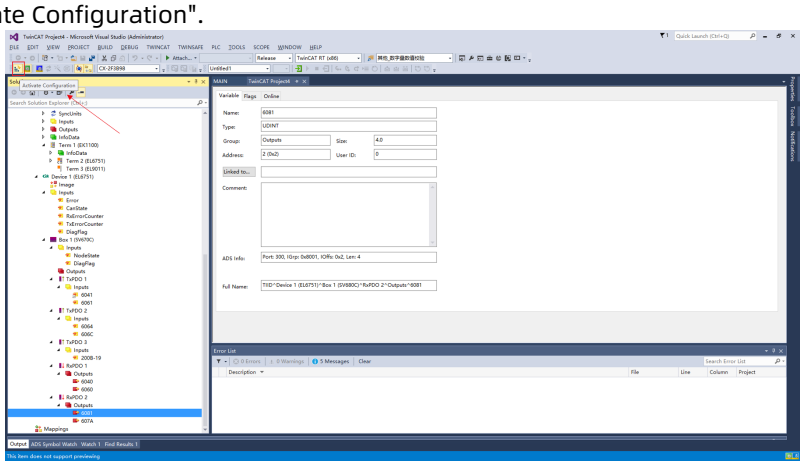


32. Click "OK" in the dialog box to activate the configuration.

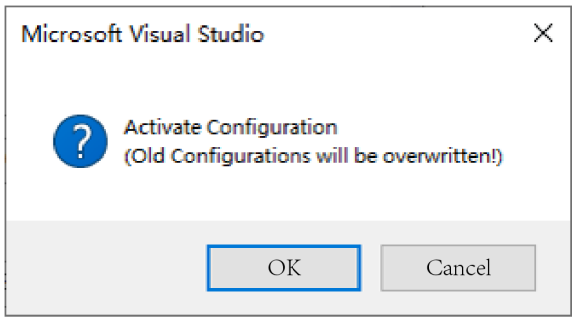


33. Click "OK" to restart the TwinCAT system in the Run mode.

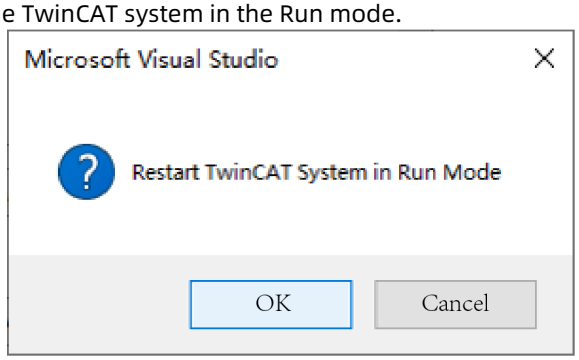


34. Open the project previously created in TwinCAT PLC Control, and choose "Online" > "Login". A dialog box appears, asking whether you want to download the new program.

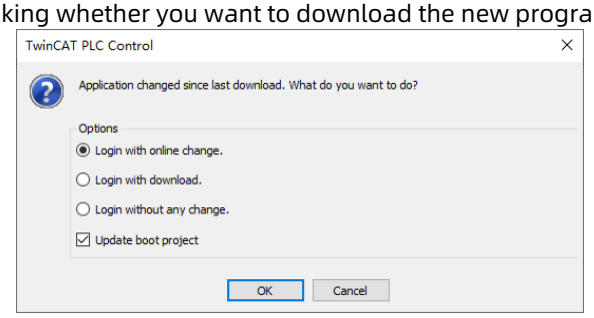

35. Click the Run icon to run the PLC program.

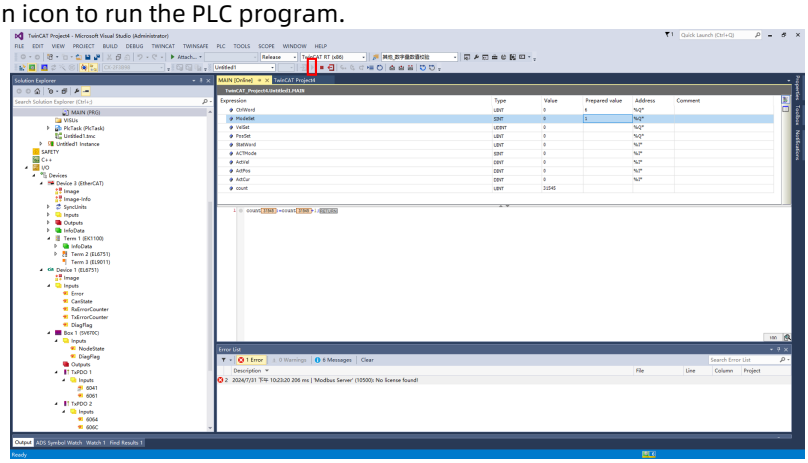

36. You can perform write commissioning in forcible or manual mode. If the data written in manual mode does not take effect, switch to the forcible mode to write the data.

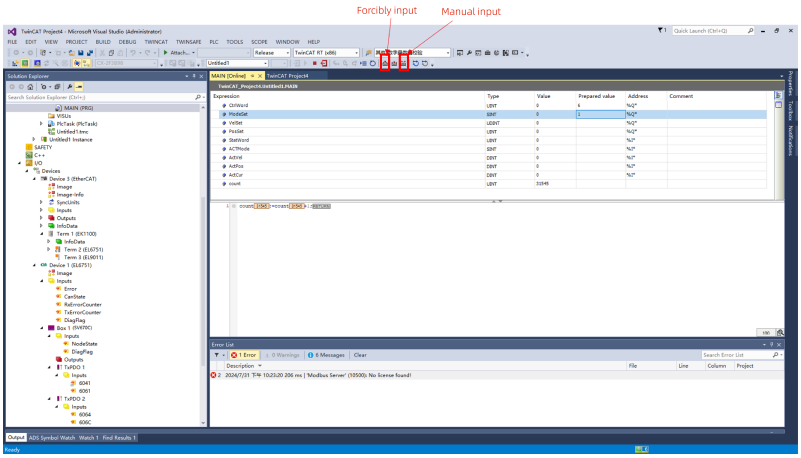

37. Enter a value and click "OK".

    The value entered is displayed in the square brackets behind the original variable. Click "Online" > "Forced Values" to write the value forcibly.

    Write 1 to 6060h, 100 to 6081h, and 10485760 (10 revolutions) to 607Ah. Write 6 (0x06), 7 (0x07), 47 (0x2f), and 63 (0x3f) to 6040h in sequence to make the motor run.


Note

- When writing multiple values for one variable, execute the "Forced value" command every time a value is written. When writing values for multiple variables, you can execute the "Forced value" command once for all after all values are written.
- When a new position or speed reference is required, write the new reference and set 6040h to 47(0x2f) and 63 (0x3f) in turn. The motor runs to the position according to the new reference regardless of whether the previous reference is executed.
- To stop the motor, set 6040h to 0.
- Do not enable manual value writing again. In the toolbar, choose "Online" > "Release Force" to terminate manual writing of values. The PLC program logic applies.


38. To stop executing the PLC program, choose "Online" > "Stop" in the toolbar. To continue editing the PLC program or exit, choose "Online" > "Logout".

6.4.3.3 Connecting SV670P-INT Servo Drive to Inovance H3U CANopen Master

1. Open AutoShop, go to "Communication Port" on the project management interface, and double-click "CAN" or right-click "CAN" and choose "Open". The "CAN Config" window is displayed. Set "Protocol" to "CANopen". Set "Station No." and "Baud Rate".

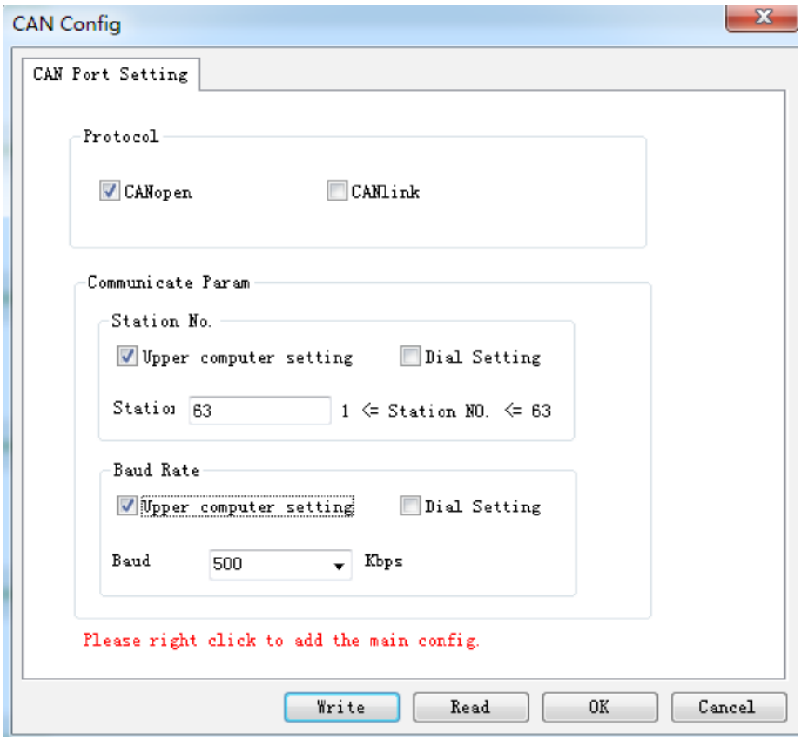


2. Right-click "CAN (CANopen)" and choose "Add CAN Config".

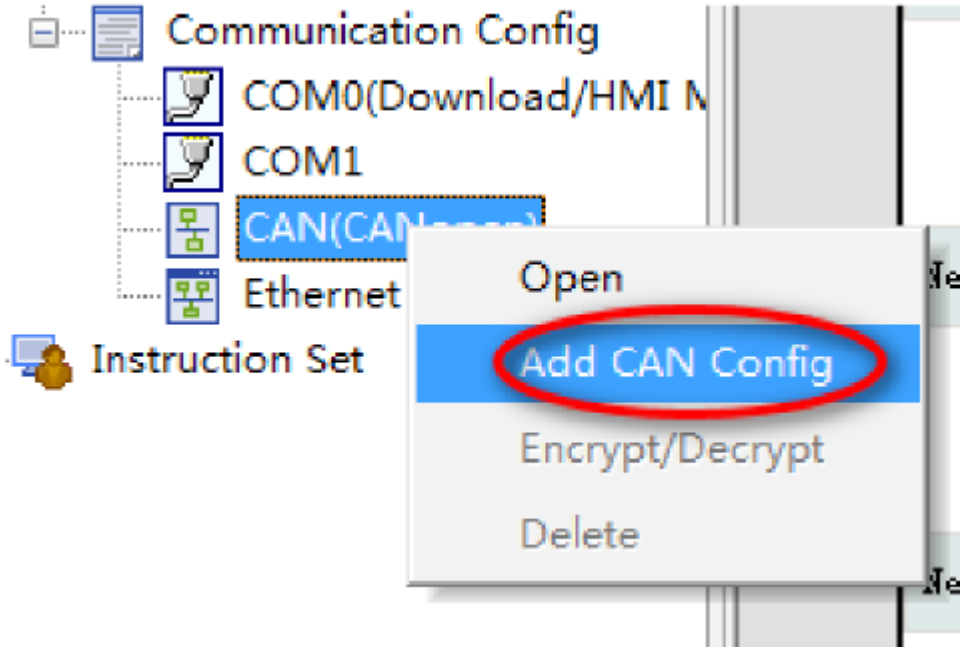

3. Double-click "CANopen configuration".


   The "CANopen configuration" window includes an H3U icon. Double-click the icon to open the master configuration interface and set parameters such as synchronization and heartbeat.

   H3U axis control commands control the servo drive through PDO communication. The PDO adopts the synchronous mode by default when the SV670P-INT series servo drive is working with an H3U master. Therefore, select "Enable Synchronous Production" on the master configuration interface and set the synchronization cycle as needed (typically 15 ms for 8-axis models). For other servo drive models, select this option if the PDO also adopts the synchronous mode.

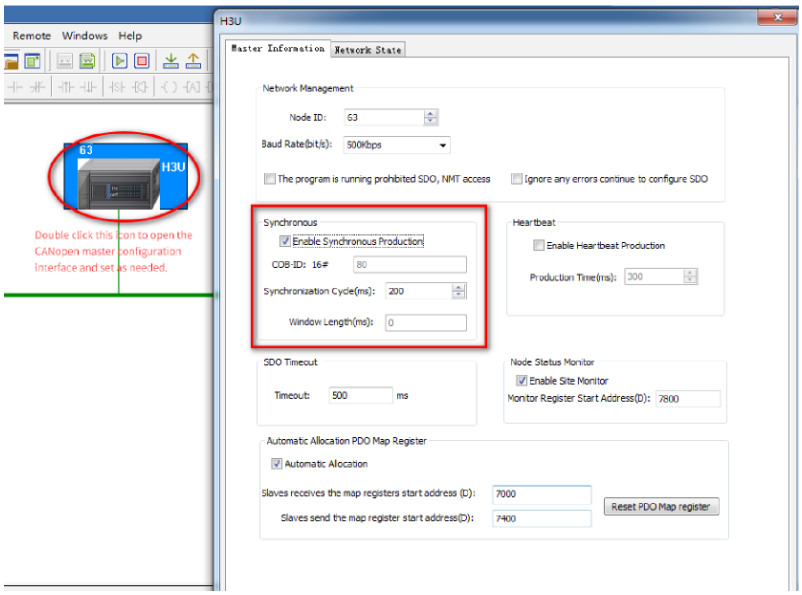


4. If the EDS file needed is not in the CANopen device list, add the device EDS file.

   a. Right-click "CANopen device list". On the short-cut menu displayed, choose "Import EDS".

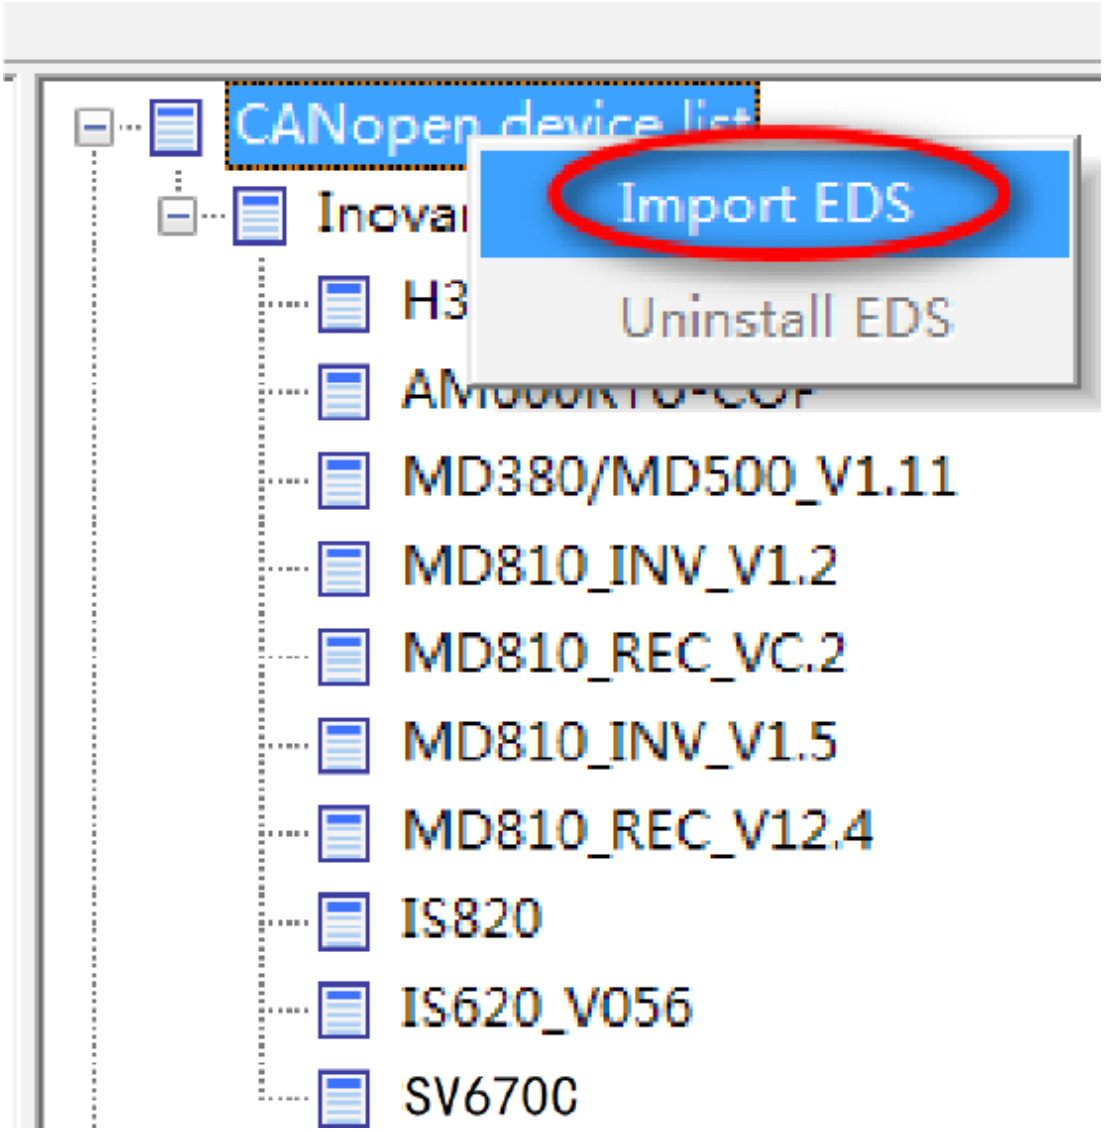


b. In the dialog box displayed, select the EDS file needed and click "Open".

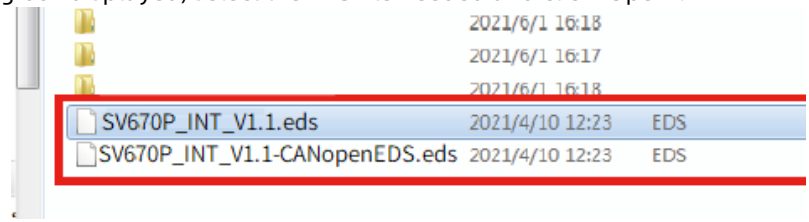


c. The device added is displayed in the CANopen device list on the right.

5. In the CANopen device list, double-click "SV670P-INT" to add CANopen slaves. In the configuration window displayed, double-click the SV670P-INT icon to open the slave configuration parameter list.

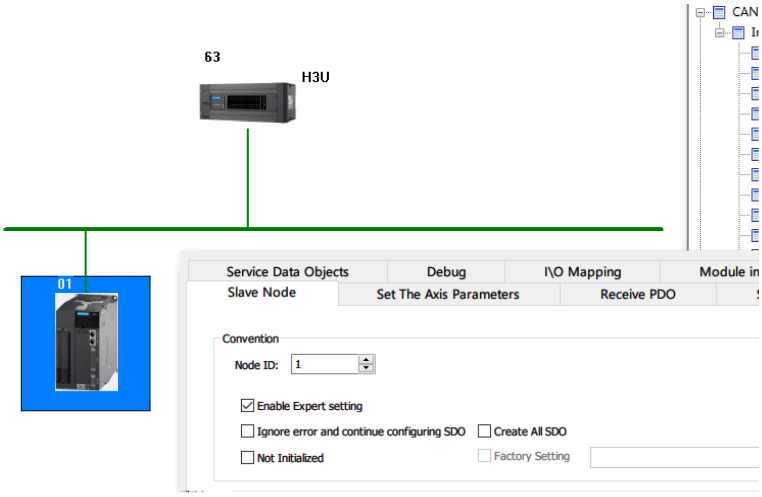

6. As shown in the following figure, the "Set The Axis Parameters" interface includes the "Axis Parameter Settings" and "Axis Zero Parameter Settings" tabs.


Configuring axis parameters

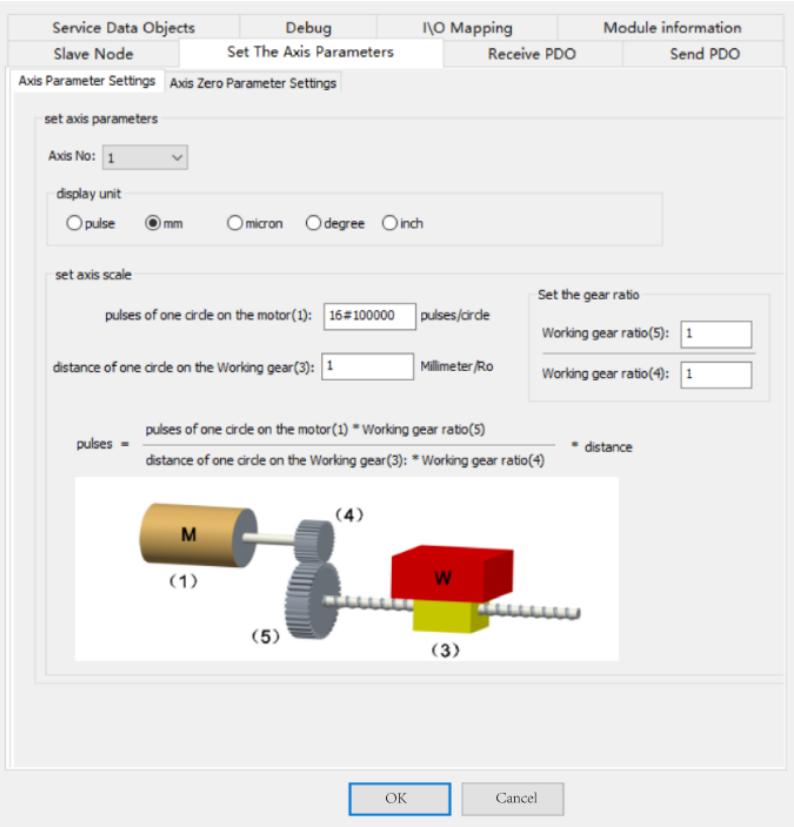

- For devices without reducers, set the gear ratio to 1:1. Set the pulses per motor revolution and distance per motor revolution correctly. The calculation formula is as follows.

$$\text{Number of pulses} = \frac{\text{Number of reference pulses per motor revolution}}{\text{Distance per motor revolution (3)}} \times \text{Travel distance (displayed unit)}$$

- Applications with reducers are shown as follows.

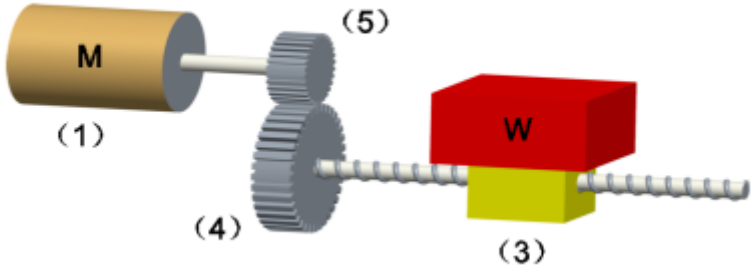


The calculation formula for devices with reducers is as follows.

$$\text{Number of pulses} = \frac{\text{Number of reference pulses per motor revolution (1)} \times \text{Motor gear ratio (5)}}{\text{Travel distance per motor revolution (3)} \times \text{Operating gear ratio (4)}} \times \text{Travel distance (displayed unit)}$$

Setting axis homing parameters

In the CANopen device list, double-click "SV670P-INT" to add CANopen slaves. In the configuration window displayed, double-click the SV670P-INT icon to open the slave configuration parameter list.

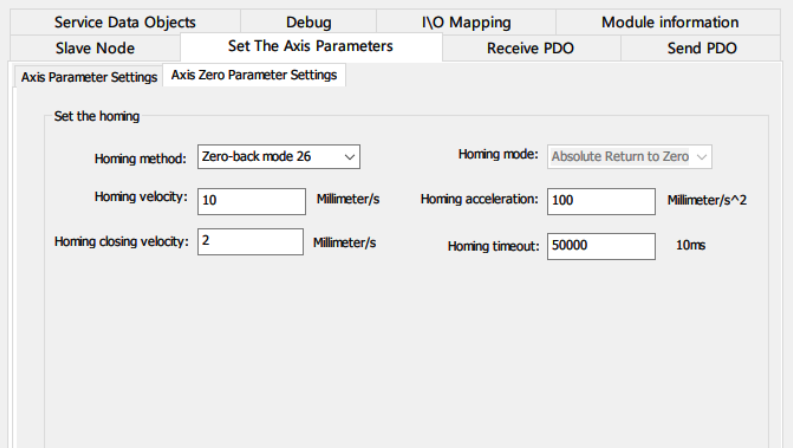

The range of the homing method is 1 to 35. The calculation formula for parameters and object dictionaries of the homing speed, homing acceleration, and homing proximity speed is shown as follows.

$$\text{Value of object dictionary} = \frac{\text{Number of reference pulses per motor revolution (1) x Motor gear ratio (5)}}{\text{Travel distance per motor revolution (3) x Operating gear ratio (4)}} \times \text{Setpoint in the software tool (displayed unit)}$$

The relationship between the preceding parameters and object dictionary items is summarized in the following table.

Index	Sub-index	Data type	Description	Unit
6098h	00	SINT	Homing method	-
6099h	01	UDINT	Speed during search for deceleration point signal	Reference unit/s
6099h	02	UDINT	Speed during search for zero	Reference unit/s
609Ah	00	UDINT	Homing acceleration	Reference unit/s ^{2}
60E6h	00	USINT	Homing method	-


7. In CANopen CiA402 motion control, the object dictionary items that need to be operated in commands interact with the slave through PDO. These items include 6040h (control word), 6041h (status word), 6060h (operation mode selection), 6061h (current operation mode), 6081h (profile position mode target velocity), 607Ah (profile position mode target position), 60FFh (velocity mode target velocity), 6064h (current position), and 606Ch (current velocity). The preceding parameters must be configured as required below. Otherwise, axis configuration failure may occur during calling axis control commands.

Note

It is recommended to configure the PDO communication to synchronous mode to prevent frame loss caused by interference during communication. The synchronous mode requires synchronous production to be enabled in the master configuration. To ensure communication stability, the network load rate must be lower than 70%.

$$\text{Network load rate} = \frac{328 \times \text{Number of axes} + 79}{\text{Baud rate} \times \text{Sync cycle}} \times 100\%$$

RPDO configuration

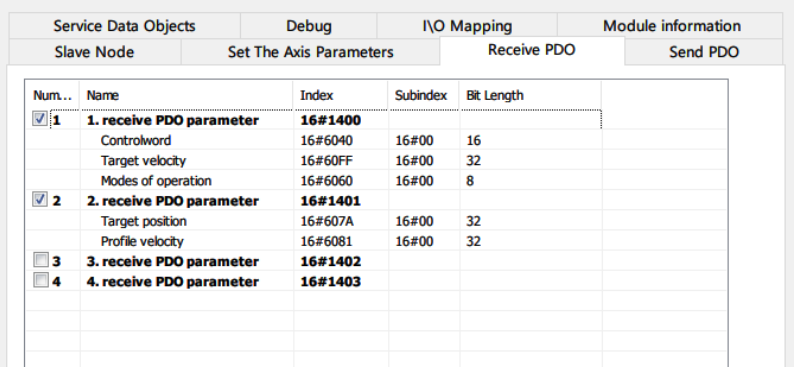


Configure RPDOs in the following sequence.

Index	Sub-index	Name
6040h	00	Control word
60FFh [1]	00	Target velocity
6060h	00	Modes of operation
607Ah	00	Target position
6081h	00	Profile velocity

Note

[1]: The object dictionary can be replaced by other object dictionaries with a length of 0x20.

It is recommended to use the synchronous mode for PDO communication. Follow the procedure below to set synchronous PDO communication for the slave.

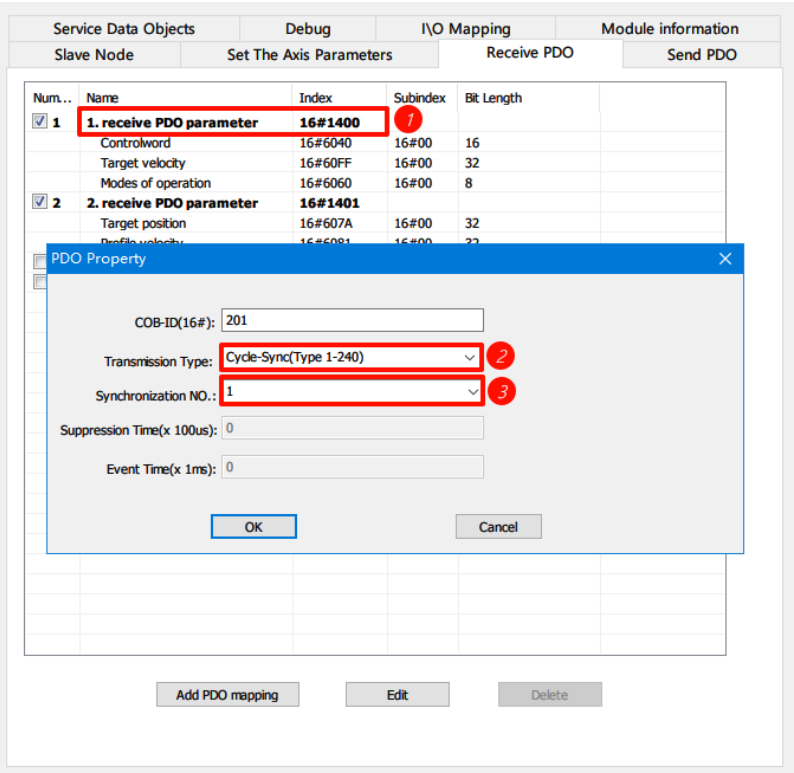

Note

When MCMOVVEL and MCJOG are not in use, this object dictionary can be replaced by other object dictionaries with a length of 0x20.

Where:

- 1. Double-click the group No. and a dialog box appears.
- 2. Set "Transmission Type" to "Type1-240".
- 3. Set "Synchronization NO." to "1".

Configuring TPDOs:

Configure TPDOs in the following sequence.

Index	Sub-index	Name
6041h	00	Status word
60FDh [1]	00	Digital inputs
6061h	00	Modes of operation
6064h	00	Position actual value
606Ch	00	Velocity actual value

Note


[1]: The object dictionary can be replaced by other object dictionaries with a length of 0x20.


The procedure for setting the synchronous mode of TPDO is similar to that for RPDO.

Caution


The EDS is configured based on the preceding sequence by default. Pay attention to the preceding configuration sequence when adding new objects. A wrong sequence will cause failure of H3U axis control commands. When using a PLC from any other manufacturer, you are not necessary to follow the sequence.

8. Download the CANopen configuration to H3U. The H3U starts to configure the slave based on the preceding configurations. The configuration is performed based on the object dictionary items listed on the "Servo Data Objects" interface. To view the list, select "Enable Expert Settings" on the "Slave Node" interface first.

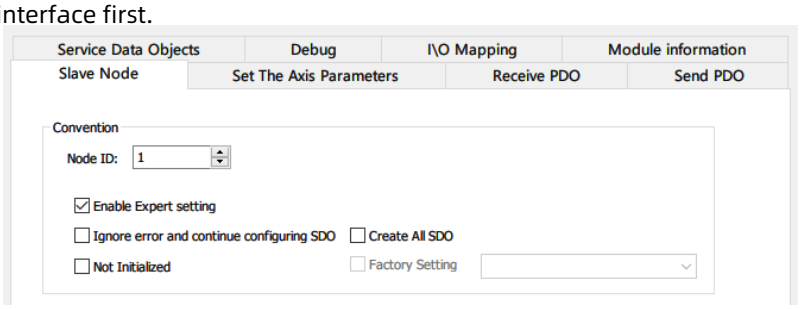

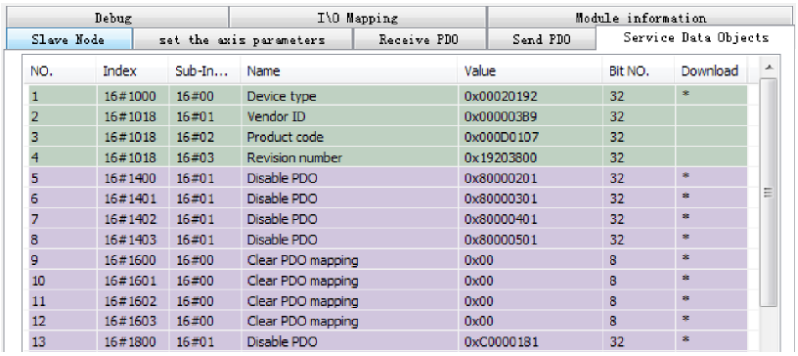

During commissioning, you can monitor the device status online and read/write the object dictionary of the slave through H3U, as shown below.

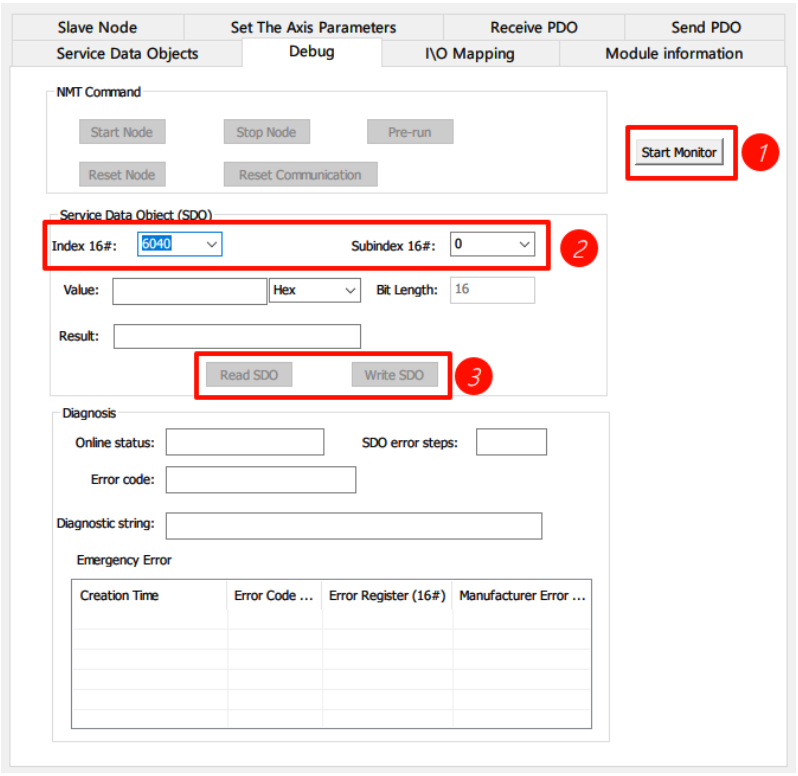

Where:

- 1. Click "Start Monitor".
- 2. Enter the index of the target object dictionary in "Index16#" and the sub-index in "Subindex16#".
- 3. Click "Read SDO" or "Write SDO" as needed.

7 Tuning

7.1 Overview

The servo drive must drive the motor as quick and accurate as possible to follow the commands from the host controller or internal setting. To meet such requirements, gain tuning is required.

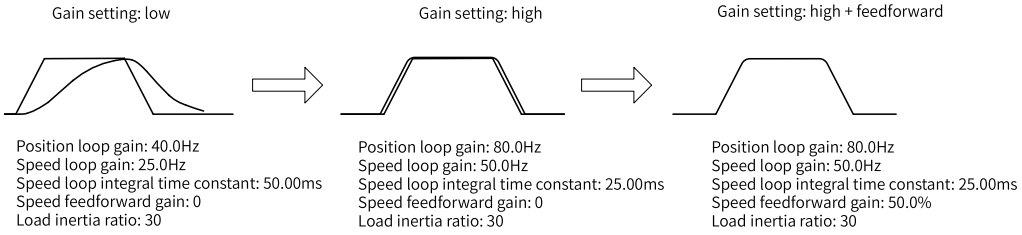


Figure 7-1 Examples of gain tuning

The gain is defined by a combination of multiple parameters that affect each other. Such parameters include the position loop gain, speed loop gain, filter, and load moment of inertia ratio. The values of these parameters must be balanced against each other during gain tuning.

Note

Before gain tuning, perform jogging and ensure that the motor can run normally.

The following figure shows the general flowchart for gain tuning.

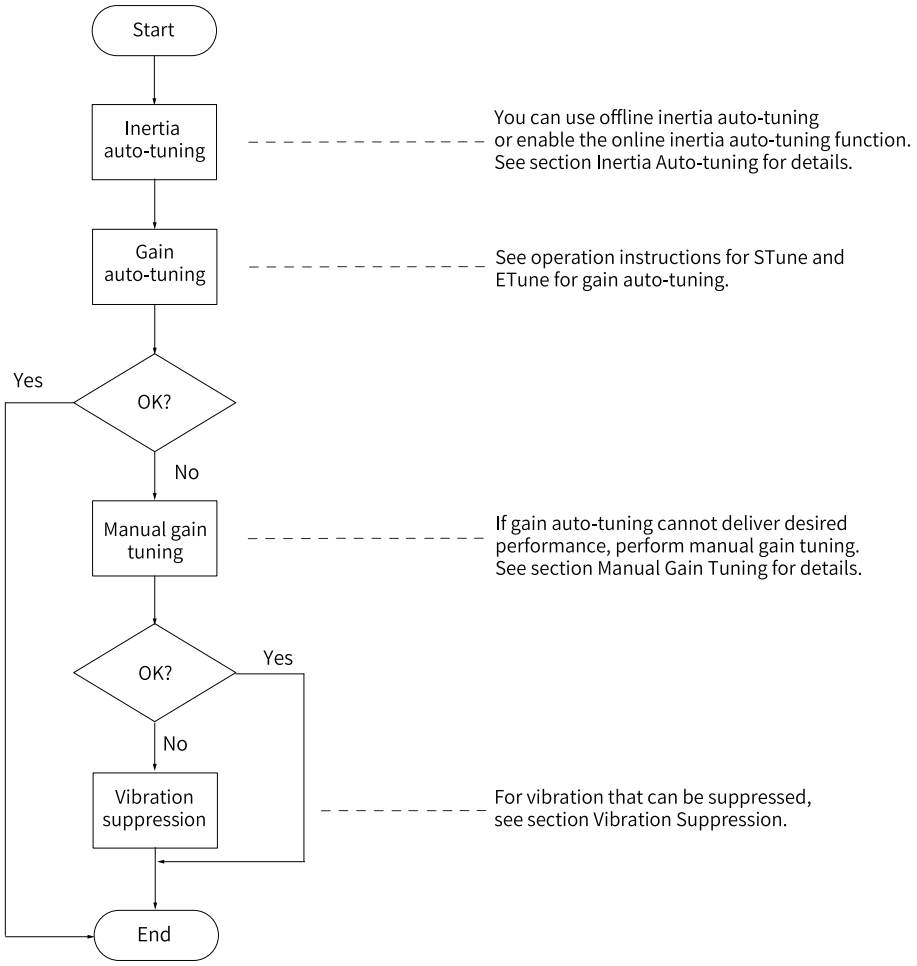


Figure 7-2 Gain tuning process


7.2 Current Loop Tuning

Current loop parameter tuning

As the innermost loop of a servo control system, the response and stability of the current loop play a vital role in the performance of the system.

The software tool provides current loop tuning control to facilitate commissioning of current loop gain parameters.

This module integrates the current loop tuning window and trigger setting observation window. The window functions are related to each other. After you select the commissioning mode and click the "Start Commissioning" button, the drive performs related tests and the trigger setting window also collects related waveforms simultaneously.

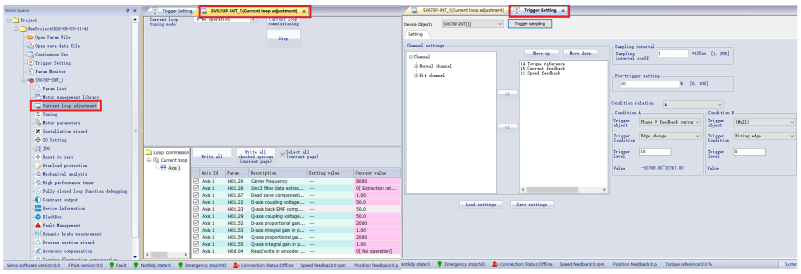


Three current loop tuning modes are available, as described below.

1. **Current loop auto-tuning**

   This mode provides a static auto-tuning method for the current loop. After this mode is enabled, the drive executes gain parameter tuning for the current loop automatically.

   You can set the response level. The higher the response level, the higher the responsiveness and bandwidth of the current loop.

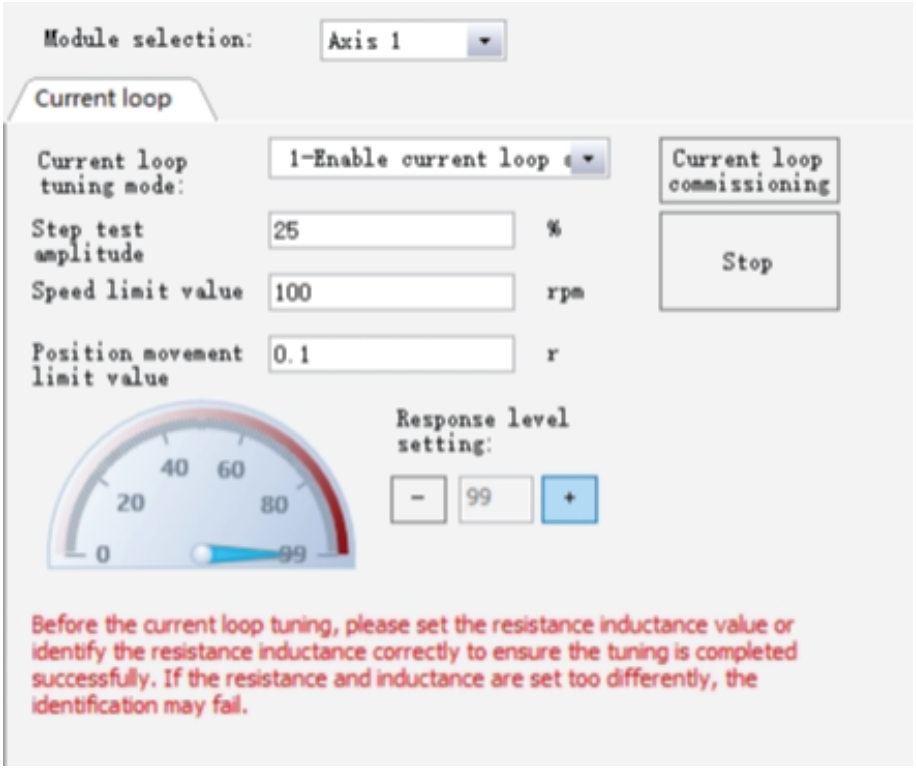


Note

Over-high current loop response may also excite current loop control noise. In actual use,you should set the response level as needed to obtain the balance between current loop responsiveness and noise.

Related parameters	Description
Auto-tuning step test amplitude	Excitation signal amplitude during auto-tuning
Speed limit	Maximum speed that the current excitation can reach to maintain stability
Displacement limit	Maximum distance that the current excitation can act to maintain stability
Response level setting	Expected current loop response level

2. **Static step test of current loop**

This mode provides a static current loop step response observation mode. You can perform manual tuning on current loop gain parameters in this mode and verify the current loop response.

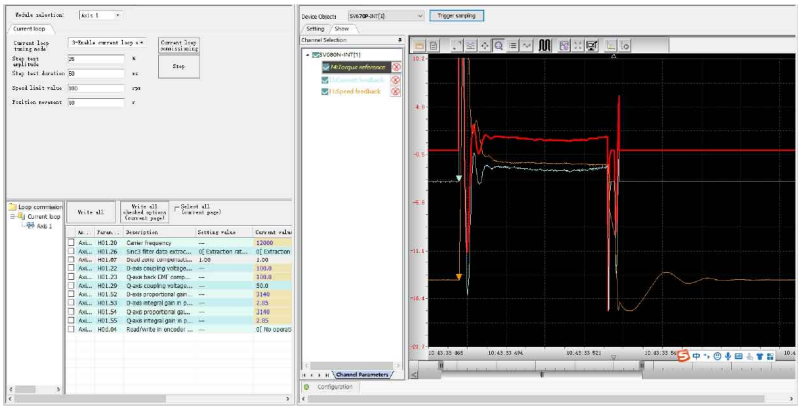

Related parameters	Description
Static step test amplitude	Step excitation signal amplitude
Step test duration	Step excitation signal duration
Speed limit	Maximum speed that the current excitation can reach to maintain stability
Displacement limit	Maximum distance that the current excitation can act to maintain stability

3. **Current loop step test**

   This mode provides a dynamic method for observing the current loop step response. Its parameter settings are the same as static step test. Users can manually adjust the current loop gain parameters to observe and verify the current loop response.

Note

In this mode, the motor will move a certain distance. You can restrict the movement by setting the speed limit value and the position movement limit value.


Current loop gain switchover

The current loop gain switchover is an advanced mode for current loop commissioning, which is used as a supplement to current loop parameter commissioning. The mode allows you to make necessary adjustment to cope with low response level or instability of the current loop due to differences in motor inductance saturation characteristics.

When inductance saturation is present in the normal operation range of the controlled motor, the current loop response may be affected due to excessive difference in inductance saturation as current loop gains are usually matched based on the calculated inductance parameter values. In this case, you can make necessary adjustment through current loop gain switchover.

The SV670-INT series servo drive provides 32 groups of current loop gain switchover coefficients for use, which are not enabled by default. You can use them as needed.

- Theoretically, gain switchover coefficient under different loads can be obtained directly through inductance saturation characteristic curve provided by the motor manufacturer.
- In actual applications, you can also adjust the gain coefficient manually based on the actual conditions under different load rates.

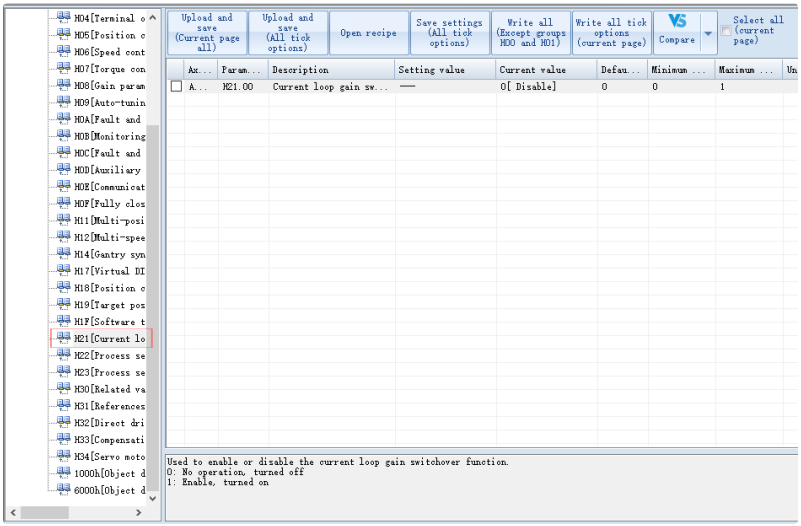

7.3 Inertia Auto-tuning

Definition of the load inertia ratio (H08.15):

$$\text{Load inertia ratio} = \frac{\text{Total moment of inertia of mechanical load}}{\text{Moment of inertia of the motor}}$$

The inertia ratio is an important parameter of the servo system, and quick commissioning can be implemented with the correct setting of this parameter.

You can set the load inertia ratio manually or obtain the inertia ratio through inertia auto-tuning.

The following two inertia auto-tuning modes are available:

- Offline Inertia Auto-Tuning
  To enable offline inertia auto-tuning, use H0d.02 (Offline inertia auto-tuning) and make the motor rotate and execute inertia auto-tuning through the keypad. Offline inertia auto-tuning does not involve the host controller
- Online Inertia Auto-tuning
  Send a command from the host controller to the servo drive to make the motor act accordingly to finish inertia auto-tuning. Online inertia auto-tuning involves the host controller.

Note

The following requirements must be met to ensure correct calculation of the inertia ratio:

- The actual maximum speed of the motor is higher than 150 rpm.
- The acceleration rate during acceleration/deceleration of the motor is higher than 3000 rpm/s.
- The load torque is stable without dramatic changes.
- The actual inertia ratio does not exceed 120.
- Inertia auto-tuning may fail in case of a large backlash of the transmission mechanism.

7.3.1 Offline inertia auto-tuning

Check the following items before performing offline inertia auto-tuning:

The motor must meet the following requirements:

- A travel distance of more than one revolution in the forward/reverse direction is available between the mechanical limit switches.

Danger

Ensure limit switches are installed to the machine and a travel distance as described above is reserved to prevent overtravel during inertia auto-tuning.

- The required number of revolutions (H09.09) is fulfilled.
  View H09.06, H09.07, and H09.09. Make sure that the travel distance available for the motor in the stop position is larger than H09.09. If not, decrease H09.06 or H09.07 until the requirements are met.

Offline inertia auto-tuning procedure:

1. Switch off the S-ON signal.
2. In parameter display mode, switch to H0d.02 and press SET to enable offline inertia auto-tuning.
3. Press UP/DOWN to perform offline auto-tuning.
4. To make the motor stop at zero speed, release the UP/DOWN key. Pressing the UP/DOWN key again starts a new inertia auto-tuning. The initial direction of operation is determined by the UP/DOWN key. For applications allowing unidirectional operations only, set H09.05 to 1.
5. Wait until the value displayed on the keypad is stabilized.
6. Hold the SET key down until the keypad displays "SAVE".
7. Press the MODE key to exit.

For applications requiring large load inertia, set H08.15 (Initial value of load moment of inertia) to the approximate value, preventing intense system vibration caused by a low initial inertia.

The following figure shows the general flowchart for offline inertia auto-tuning.

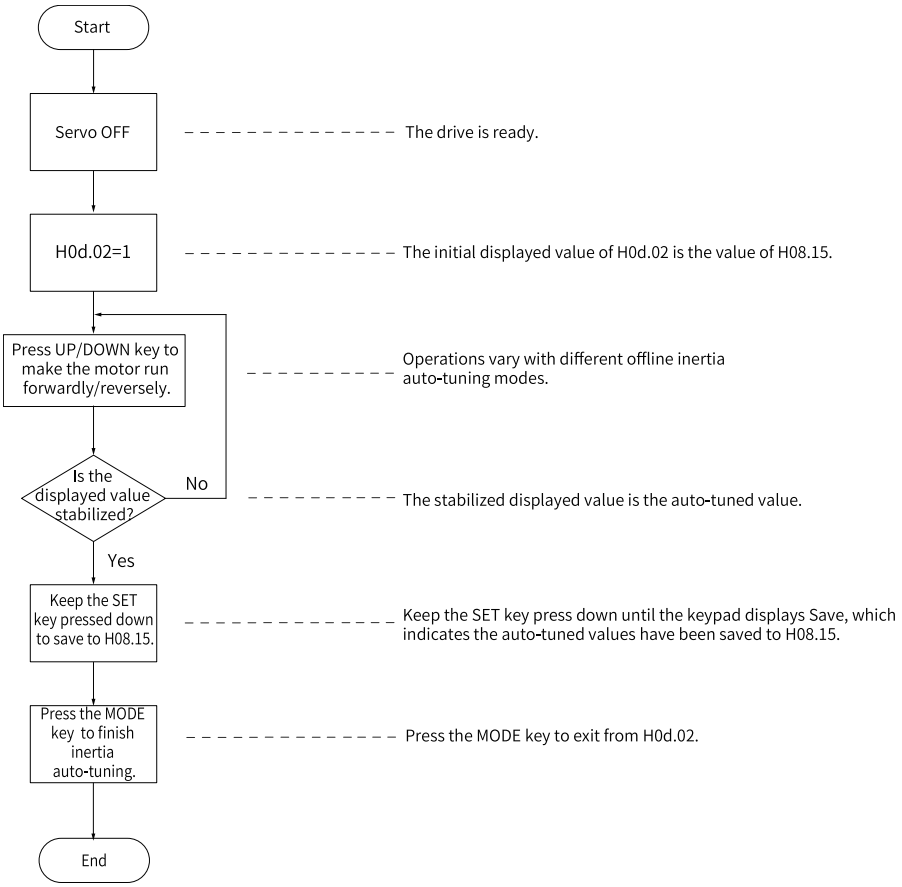


Figure 7-3 Offline inertia auto-tuning flowchart

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.05	2009-06h	Offline inertia auto-tuning mode	0: Bidirectional 1: Unidirectional	0	-	At stop	"H09_en.05" on page 496
H09.06	2009-07h	Maximum speed of inertia auto-tuning	100 to 1000	500	rpm	At stop	"H09_en.06" on page 497
H09.07	2009-08h	Time constant for accelerating to maximum speed during inertia auto-tuning	10 to 5000	125	ms	At stop	"H09_en.07" on page 497
H09.08	2009-09h	Interval time upon completion of inertia auto-tuning	50 to 10000	800	ms	At stop	"H09_en.08" on page 497

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.09	2009-0Ah	Motor movement distance per inertia auto-tuning	0.00 to 100.00	1.00	-	Real time	"H09_en.09" on page 497
H0d.02	200d-03h	Inertia auto-tuning	0 to 65	0	-	Real time	"H0d_en.02" on page 552

7.3.2 Online inertia auto-tuning

The servo drive supports online inertia auto-tuning. The online inertia auto-tuning flowchart is shown as follows.

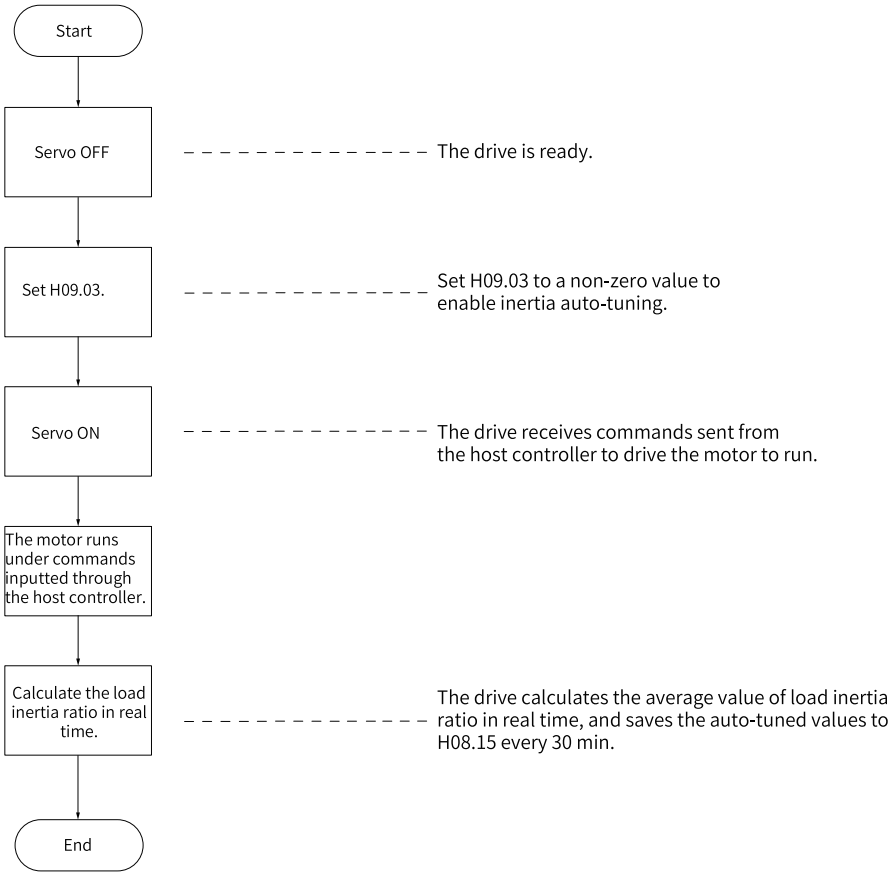


Figure 7-4 Online inertia auto-tuning flowchart

Note

H09.03 defines the real-time updating speed of the load inertia ratio (H08.15).

- H09.03 = 1: Applicable to cases where the actual load inertia ratio rarely changes, such as the machine tool and wood carving machine.
- H09.03 = 2: Applicable to cases where the load inertia ratio changes slowly.
- H09.03 = 3: Applicable to cases where the actual inertia ratio changes rapidly, such as handling manipulators.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.03	2009-04h	Online inertia auto-tuning mode	0: Disabled 1: Enabled, changing slowly 2: Enabled, changing normally 3: Enabled, changing quickly	0	-	Real time	"H09_en.03" on page 496

7.4 Automatic Gain Tuning

7.4.1 STune

Overview

STune performs automatic gain tuning based on the set stiffness level to fulfill the needs for rapidity and stability.

STune (mode 4) is turned on by default and will be turned off automatically after the drive operates as commanded for 5 min.

STune is intended to be used in scenarios featuring slight load inertia changes. For scenarios featuring dramatic inertia changes or where inertia auto-tuning is unavailable due to a low operating speed or low acceleration rate, turn off STune after initial power-on.

Note

In STune modes 3, 4, 5, 6, 8 and 9, you need to perform load inertia auto-tuning through online inertia auto-tuning and ensure the following conditions are met:

- The load inertia changes quickly.
- The load torque changes quickly.
- Low-speed operation (less than 100 rpm for ROT, less than 20 rpm for DDR, and less than 20 mm/s for DDL).
- Acceleration/Deceleration is slow (lower than 1000 rpm per second).
- The acceleration/deceleration torque is lower than the unbalanced load/viscous friction torque.

If the conditions for online inertia auto-tuning cannot be fulfilled, manually set the correct inertia ratio.

Procedure

- **Procedure flowchart**

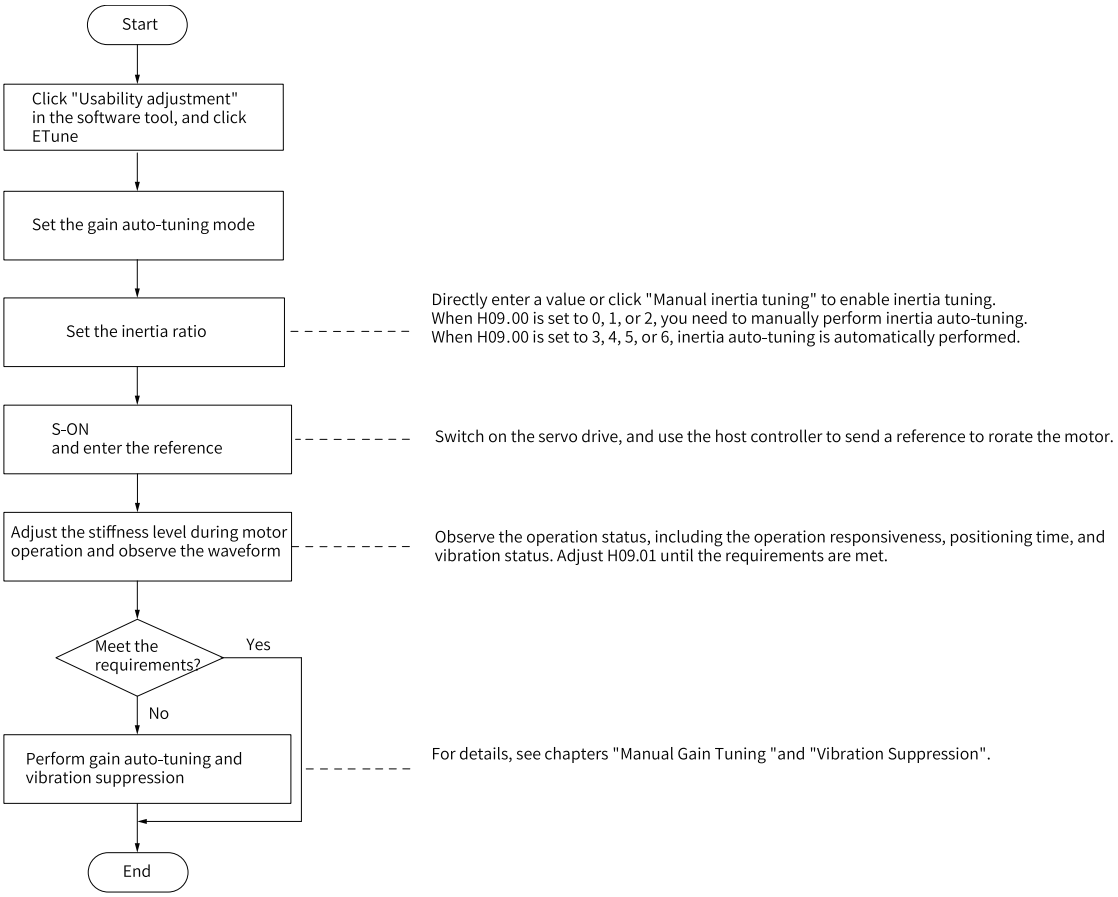


Figure 7-5 Procedure flowchart

- **Description**

  You can set the automatic gain tuning mode through the keypad or the software tool.

  1. Select the automatic gain tuning mode.

     - In modes 0, 1, and 2 shown in the following table, you need to set the inertia ratio before stiffness tuning. If the inertia is unknown, manually adjust the inertia. If vibration occurs on the machine, decrease the stiffness level before manually adjusting the inertia.
     - In modes 3, 4, 5, 6, 8, and 9, you can perform tuning through the wizard-type interface directly, without the need for setting an inertia ratio.

Mode	Name	Function
0	Inactive	The gains need to be manually tuned.
1	Standard stiffness meter mode	The gain is automatically tuned based on the stiffness setting.
2	Positioning mode	The gain is automatically tuned based on the stiffness setting. This mode is applicable to scenarios requiring quick positioning.
3	Interpolation mode+Inertia auto-tuning	The gain is automatically tuned based on the stiffness setting. In this mode, inertia is auto-tuned and vibration is automatically suppressed. This mode is applicable to multi-axis interpolation.
4	Normal mode + Inertia auto-tuning	The gain is automatically tuned based on the stiffness setting. The inertia is auto-tuned and vibration is automatically suppressed.

Mode	Name	Function
5	STune mode 5	The gain is automatically tuned based on the stiffness setting. This mode applies to applications where linear motors are used.
6	Quick positioning mode + Inertia auto-tuning	The gain is automatically tuned based on the stiffness setting. Inertia is auto-tuned and vibration is automatically suppressed. This mode is applicable to occasions requiring quick positioning.
8	New model tracking mode +Inertia auto-tuning	The gain is automatically tuned based on the stiffness setting. This mode applies to applications requiring quick positioning.
9	Model tracking B+ Inertia auto-tuning + Friction compensation	The gain is automatically tuned based on the stiffness setting. This mode applies to applications requiring quick positioning.


2. Gradually adjust the stiffness level during operation of the load. The present stiffness level value will be automatically written to the drive. Keep monitoring the operating waveform after increasing the stiffness level (increase by one level at a time) until desired performance is achieved.
3. In STune modes 3, 4, 5, 6, 8, and 9, when the speed keeps higher than 100 r/min for more than 5 min, H09.00 returns to 0 automatically. In this case, the drive will exit the STune mode.

   After tuning, you can set H09.00 to 0 to exit the STune mode.

   To modify the STune time, set H09.37.
4. In STune modes 3, 4, 5, 6, 8, and 9, resonance will be suppressed automatically. If the performance of automatic resonance suppression is inadequate, set H09.58 to 1 to clear resonance suppression parameters, reduce the stiffness level, and perform STune again.
5. In multi-axis trajectories, perform single-axis commissioning first to determine the highest response of each axis and modify the response of each axis manually to ensure position responses of different axes are consistent.

   In STune modes 3, 4, and 5, determine the minimum value of H08.02 [Position loop gain]. Then set H09.00 of each axis to 0 and set H08.02 of each axis to the same value.

   In STune mode 6, 8, and 9, determine the minimum value of H08.43 [Model gain]. Then set H09.00 of each axis to 0, and set H08.43 of each axis to the same value.

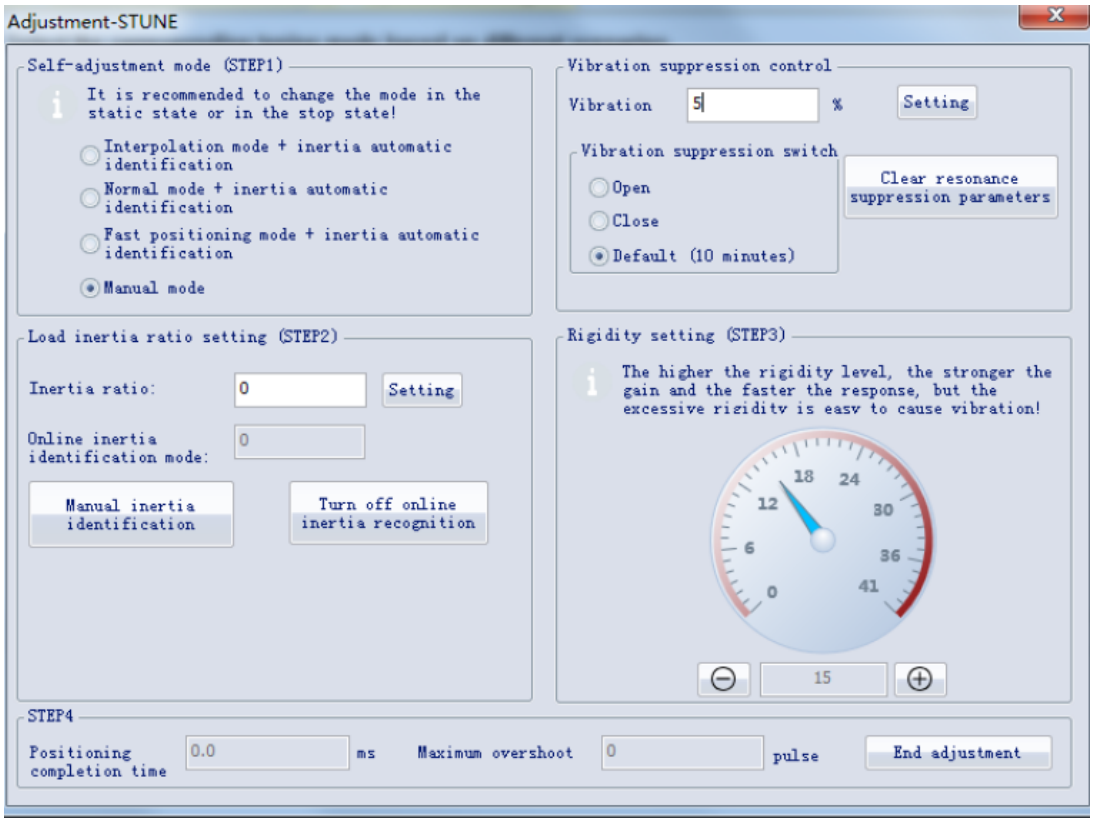

Note

To ensure a stable operation of STune modes 3, 4, 5, 6, 8 and 9, gain parameters will be adjusted along with the inertia ratio when the inertia ratio is higher than 13. In multi-axis trajectories, responses may be inconsistent under the same stiffness level.

Additional information

Load inertia ratio range

- In scenarios requiring high response, the inertia ratio must be lower than 500% and should not exceed 1000%.
  - For belt pulley or gear rack not requiring high stiffness and accuracy, the inertia ratio should not exceed 1000%.
  - For lead screw or cardan shaft requiring high stiffness and accuracy, the inertia ratio should not exceed 500%.
  - In scenarios where high positioning accuracy or response is required, the inertia ratio should not exceed 200%.
- In scenarios requiring a certain accuracy and dynamic response, the inertia ratio should not exceed 3000%.
- When the inertia ratio exceeds 3000%, it is difficult to adjust and trajectory control cannot be performed. It is only applicable to mechanisms for point-to-point control and rotary motion but the acceleration/deceleration time should be large.

Stiffness meter setting

The value range of H09.01 (Stiffness level) is 0 to 41. Level 0 indicates the weakest stiffness and lowest gain and level 41 indicates the strongest stiffness and highest gain.

The following table lists the stiffness levels for different load types for your reference.

Table 7–1 Stiffness levels

Recommended stiffness level	Load mechanism
Level 8 to level 12	Large-scale machinery
Level 12 to level 18	Scenarios with low stiffness such as the conveyors
Above level 18	Scenarios with high stiffness such as the ball screws and direct-connected motors

The following seven gain auto-tuning modes are available.

- Standard stiffness meter mode (H09.00 set to 1)
  The 1st gain parameters (H08.00 to H08.02 and H07.05) are automatically updated and saved based on the rigidity level set in H09.01.

  Table 7–2 Parameters updated automatically in standard stiffness meter mode

Parameter	Name
H08.00	Speed loop gain
H08.01	Speed loop integral time constant
H08.02	Position loop gain
H07.05	Filter time constant of torque reference

- Positioning mode (H09.00 is set to 2)
  Based on *"Table 7-2" on page 335*, the 2nd gain parameters (H08.03 to H08.05 and H07.06) are also automatically updated and saved based on the rigidity level set in H09.01. In addition, the position loop gain in the 2nd gain set is two stiffness levels higher than the 1st gain set.

  Table 7–3 Parameters updated automatically in positioning mode

Parameter	Name	Description
H08.03	2nd speed loop gain	-
H08.04	2nd speed loop integral time constant	If H08.04 is set to remain at 512.00 ms, the 2nd speed loop integral action is invalid and only proportional control is used in the speed loop.
H08.05	2nd position loop gain	-
H07.06	2nd torque reference filter time constant	-

  Speed feedforward parameters are assigned default values. You can change the values.

  Table 7–4 Parameters with fixed values in positioning mode

Parameter	Name
H08.19	Speed feedforward gain
H08.18	Speed feedforward filter time constant

  Gain switchover parameters are assigned default values. You can change the values.

  Gain switchover is automatically activated in positioning mode.

Parameter	Name	Parameter value	Description
H08.08	2nd gain mode setting	1	Switchover between the 1st gain set (H08.00 to H08.02, H07.05) and 2nd gain set (H08.03 to H08.05, H07.06) is active in positioning mode. In other modes, the original setting is used.
H08.09	Gain switchover condition selection	10	In positioning mode, the gain switchover condition is that H08.09 is set to 10. In other modes, the original setting is used.
H08.10	Gain switchover delay	5.0 ms	In positioning mode, the gain switchover delay is 5.0 ms. In other modes, the original setting is used.
H08.11	Gain switchover level	50	In positioning mode, the gain switchover level is 50. In other modes, the original setting is used.
H08.12	Gain switchover time lag	30	In positioning mode, the gain switchover dead time is 30. In other modes, the original setting is used.

Note

In gain auto-tuning mode, parameters updated automatically along with H09.01 and parameters with fixed values cannot be changes manually. To modify such parameters, set H09.00 to 0 to exit the auto-tuning mode.

- In STune mode 3, 4, 5, 6, 8, and 9,
  resonance suppression is automatically performed. When the load changes or the mechanical structure is re-installed, the system resonance frequency changes accordingly. Set H09.58 to 1 (Enable) and enable the STune mode again after clearing resonance suppression parameters.

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.37	2008-26h	Phase modulation for medium-frequency jitter suppression 2	-90 to +90	0	°	Real time	"H08_en.37" on page 488
H08.38	2008-27h	Frequency for medium-frequency jitter suppression 2	0 to 1000	0	Hz	Real time	"H08_en.38" on page 488
H08.39	2008-28h	Compensation gain for medium-frequency jitter suppression 2	0 to 300	0	%	Real time	"H08_en.39" on page 489
H09.18	2009-13h	Frequency of the 3rd notch	50 to 8000	8000	Hz	Real time	"H09_en.18" on page 499
H09.19	2009-14h	Bandwidth level of the 3rd notch	0 to 20	2	-	Real time	"H09_en.19" on page 500
H09.20	2009-15h	Depth level of the 3rd notch	0 to 99	0	-	Real time	"H09_en.20" on page 500
H09.21	2009-16h	Frequency of the 4th notch	50 to 8000	8000	Hz	Real time	"H09_en.21" on page 500

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.22	2009-17h	Bandwidth level of the 4th notch	0 to 20	2	-	Real time	"H09_en.22" on page 500
H09.23	2009-18h	Depth level of the 4th notch	0 to 99	0	-	Real time	"H09_en.23" on page 501
H09.58	2009-3Bh	STune resonance suppression reset selection	0: Disable 1: Enable	0	-	Real time	"H09_en.58" on page 506

Note

- If H09.00 is set to 3, 4, 5, 6, 8, or 9, the drive will suppress the vibration and perform inertia auto-tuning automatically within 10 min after power-on or stiffness level setting. After vibration suppression and inertia auto-tuning are done, the drive exits auto-tuning state. The time can be adjusted by the vibration suppression switch (H09.37). If the inertia auto-tuning function is deactivated automatically, switching to modes 3, 4, 5, 6, 8, or 9 will not activate inertia auto-tuning again.
- Do not set H09.00 to 3, 4, 5, or 6 in applications with slow acceleration/deceleration, excessive vibration, and unstable mechanical couplings.
- In applications where the inertia does not change, set H09.03 (Online inertia auto-tuning mode) to 1 (Enabled, changing slowly). In applications where the inertia changes quickly, set H09.03 to 3 (Enabled, changing quickly).

Solutions to common faults

E661.0: STune failure.

Gain drop during STune tuning reaching the lower limit: Position loop gain < 5; Speed loop gain < 5; Model loop gain < 10.

- Manually set the notch when vibration cannot be automatically suppressed.
- Modify the electronic gear ratio to improve the command resolution, and increase the command filter time constant in the parameter configuration interface.
- Increase the value of H09.11 as appropriate.
- Check whether the current of the machine fluctuates periodically.

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.37	2008-26h	Phase modulation for medium-frequency jitter suppression 2	-90 to +90	0	°	Real time	"H08_en.37" on page 488
H08.38	2008-27h	Frequency for medium-frequency jitter suppression 2	0 to 1000	0	Hz	Real time	"H08_en.38" on page 488

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.39	2008-28h	Compensation gain for medium-frequency jitter suppression 2	0 to 300	0	%	Real time	"H08_en.39" on page 489
H09.58	2009-3Bh	STune resonance suppression reset selection	0: Disable 1: Enable	0	-	Real time	"H09_en.58" on page 506

7.4.2 ETune

Overview

ETune is a wizard-type auto-tuning function used to guide users to set corresponding curve trajectories and response parameters. After the curve trajectories and response parameters are set, the servo drive automatically performs auto-tuning to generate the optimal gain parameters. The auto-tuned parameters can be saved and exported as a recipe for use in other devices of the same model.

The STune function is intended to be used in applications featuring slight load inertia change.

Procedure

- **Procedure flowchart**


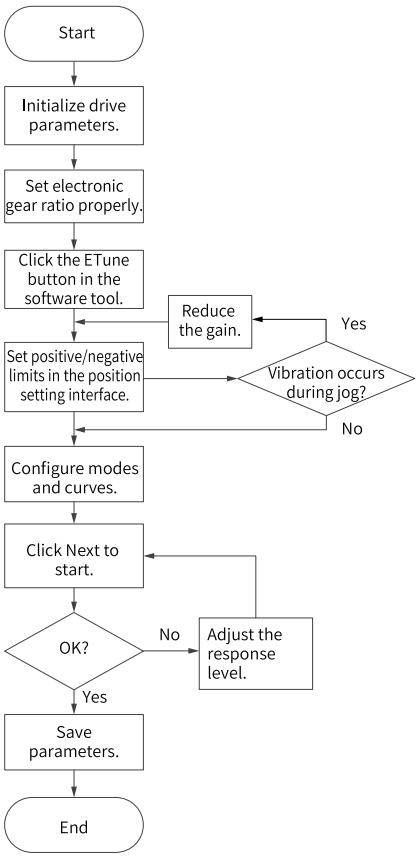


Figure 7-6 Procedure flowchart


- **Description**

1. Click "Tuning" in the software tool, and then click "ETune".

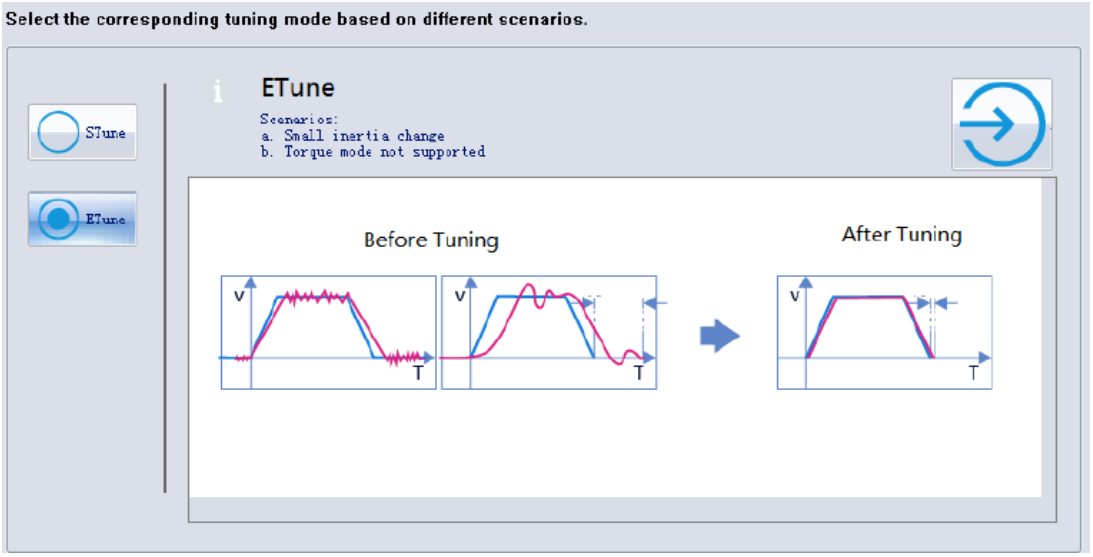

2. Select any of the following three operation modes based on the operating direction allowed by the machine.

   - In "Reciprocating positive and negative" mode, the motor keeps reciprocating within the positive and negative position limits.
   - In "One-way forward" mode, the motor takes the difference between the positive and negative position limits as the maximum distance per action and keeps running in the forward direction.
   - In "One-way reversal" mode, the motor takes the difference between the positive and negative position limits as the maximum distance per action and keeps running in the reverse direction.

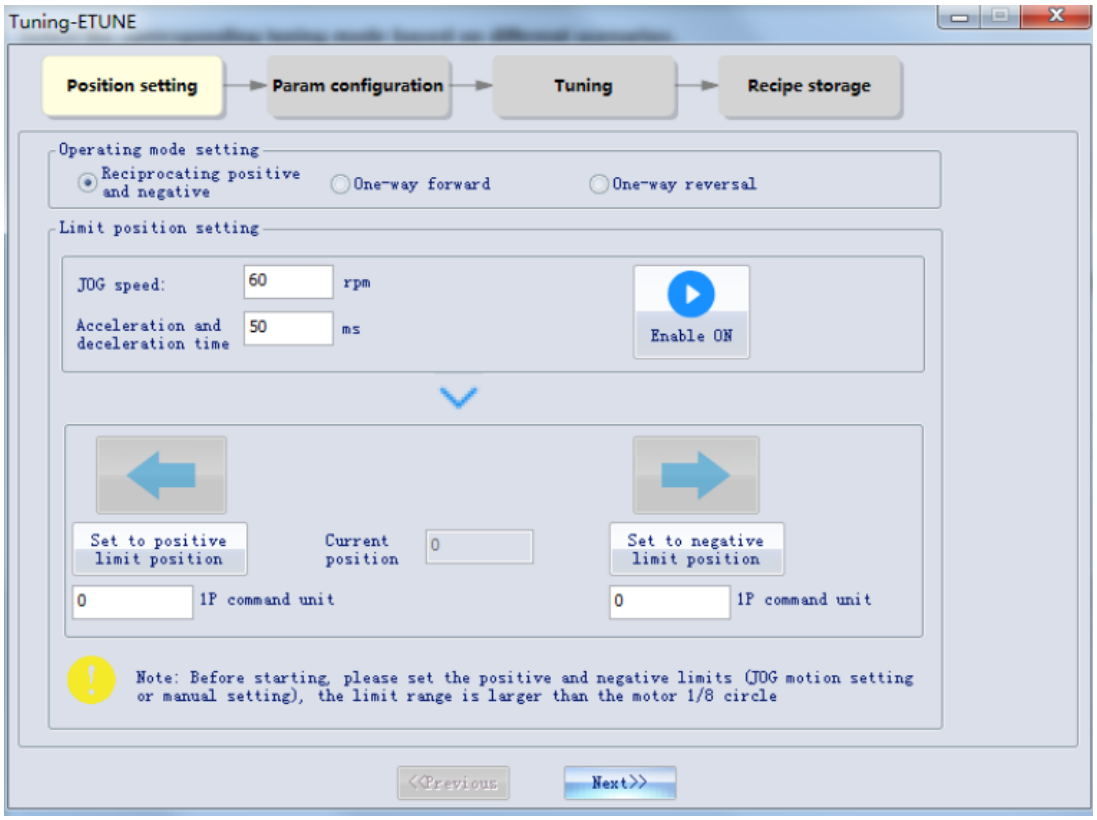


3. Specify the positive and negative limit positions allowed by the motor. The difference between the positive and negative limits defines the position reference pulses for the motor, which is also the value before multiplication/division by the electronic gear ratio.

   You can set the positive and negative position limits through the following two methods.

   - Method 1: Click "Enable ON", and then click ⬅ to make the motor move to the positive position limit. Next, click "Set to positive limit position". Follow the same procedure for setting the negative position limit, and click "Enable OFF" (the "Enable ON" button turns to "Enable OFF" after a click).
   - Method 2: Directly enter the positive and negative limits.

Note


The difference between the positive and negative position limits must be larger than 1/8 of one revolution. The larger the value of the limit position, the better the adaptability of the auto-tuned parameters, but the longer will ETune adjustment take.

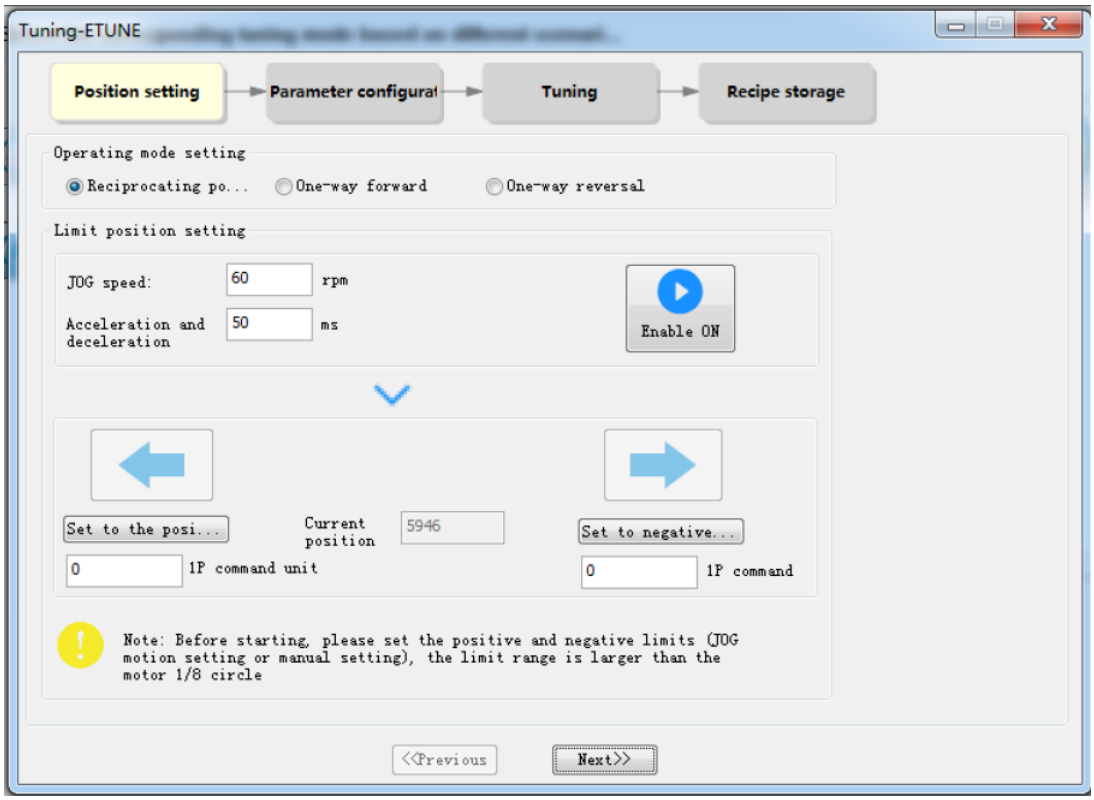

4. Click "Next to switch" to go to the mode parameter setting step.


   The tuning mode is divided into Positioning mode and Track mode.

   Inertia auto-tuning is optional. If you choose not to perform inertia auto-tuning, set a correct inertia ratio (the value of the inertia ratio can be modified directly). You can adjust the response level and position filter time constant based on the required responsiveness and the position reference noise generated during operation. Then, configure the motion profile by setting the maximum speed, acceleration/deceleration time, and interval time for auto-tuning.

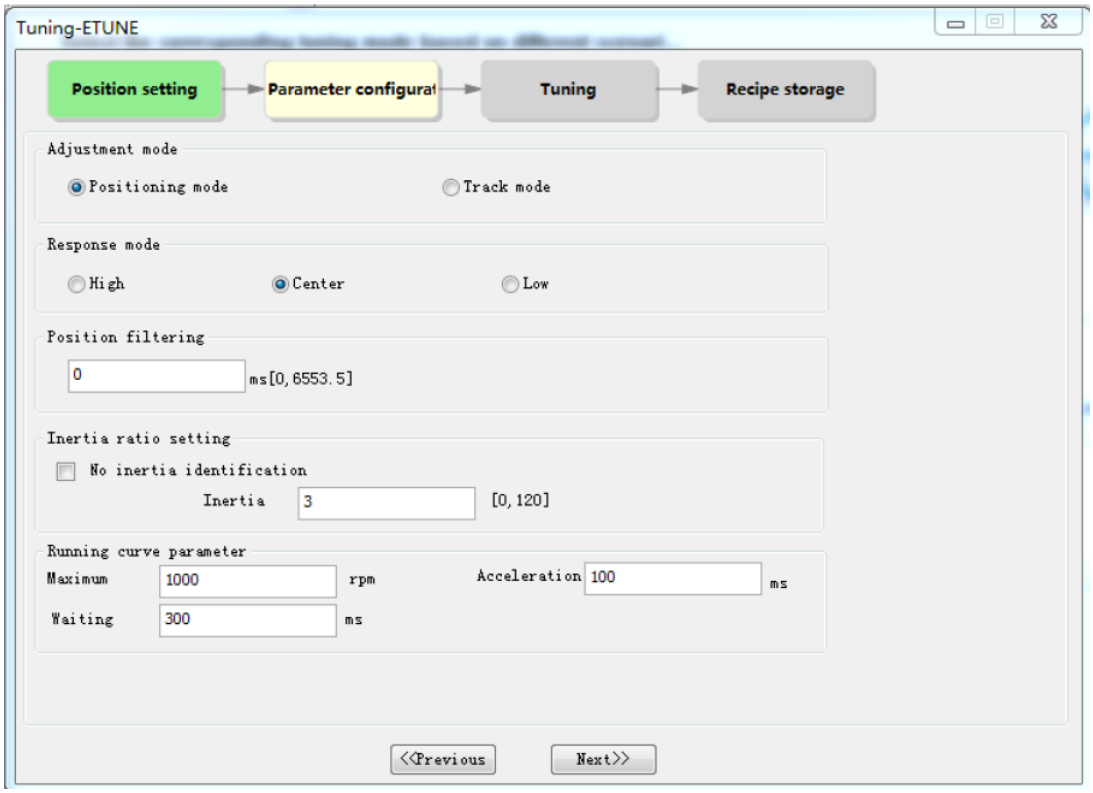


5. Click **" Next "** to start auto-tuning.

- If you choose to perform inertia auto-tuning, the drive starts inertia auto-tuning based on the set motion profile. After inertia auto-tuning is done, the drive starts gain auto-tuning.
- If you choose not to perform inertia auto-tuning on the start page, the drive starts automatic gain tuning directly after startup.

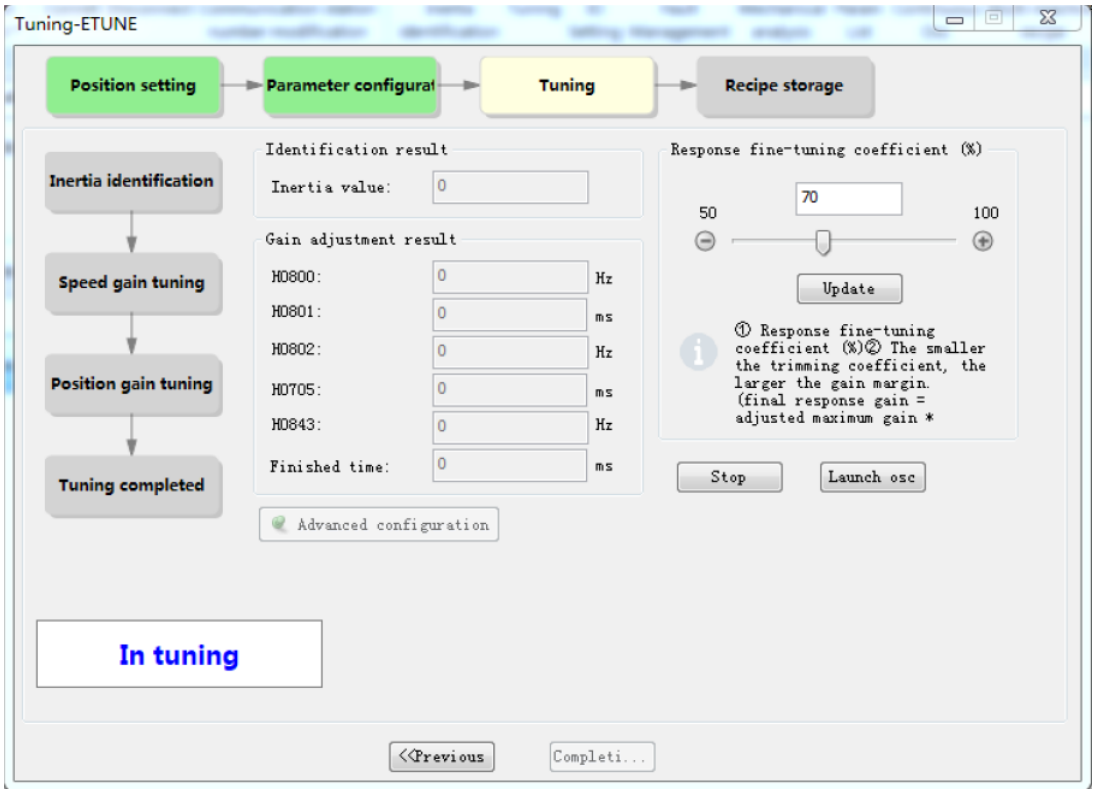

6. During automatic gain tuning, if you modify the response fine-tuning coefficient and click **" Update "** , automatic gain tuning will be continued based on the fine-tuning coefficient entered. After automatic gain tuning is complete, you can click **" Done "** to save the parameters to EEPROM and export the parameters as a recipe file.

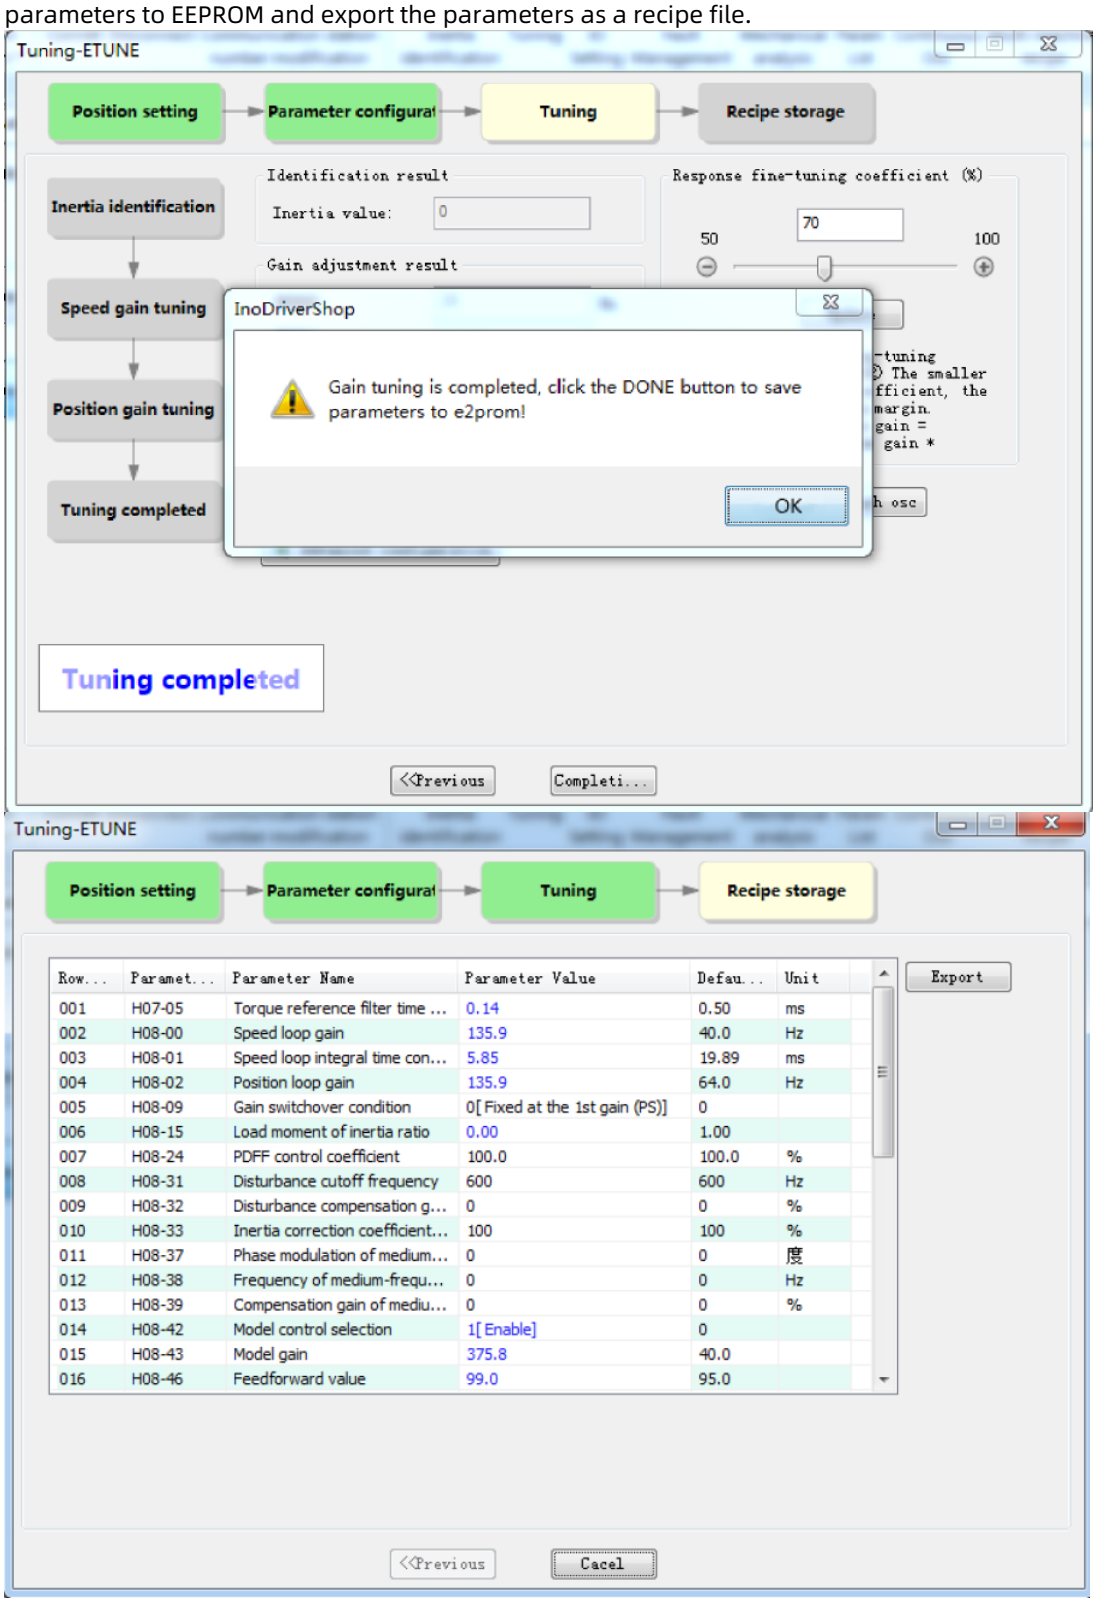

Precaution

- You can adjust the maximum speed and acceleration/deceleration time of the motion profile based on actual conditions. The acceleration/deceleration time can be increased properly because positioning will be accelerated after auto-tuning.
- If the acceleration/deceleration time is too short, overload may occur. In this case, increase the acceleration/deceleration time properly.
- For vertical axes, take anti-drop measures beforehand and set the stop mode upon fault to "Stop at zero speed".
- For lead screw transmission, shorten the travel distance if the tuning duration is excessively long.
- Set the response mode to "High" for high-stiffness devices or scenarios with high response requirements. Set the response mode to "Medium" for medium-stiffness devices or scenarios with medium response requirements. Set the response mode to "Low" for low-stiffness devices.
- If the fault is reported due to resonance during tuning, perform tuning again after switching to a lower response level.

Solutions to common faults

Fault symptom	Cause	Solution
E662.0: ETune failure	Check whether resonance during ETune operation can be suppressed.	• Set the notch manually when vibration cannot be suppressed automatically. • Modify the electronic gear ratio to improve the command resolution, or increase the command filter time constant in the parameter configuration interface. • Increase the value of H09.11 as appropriate. • Check whether the current of the machine fluctuates periodically. • Check whether the positioning threshold is too low. Increase the reference acceleration/deceleration time.
E600.0: Inertia auto-tuning failure	• Continuous vibration occurs during auto-tuning. • The auto-tuned values fluctuate greatly. • Mechanical couplings of the load are loose, or the mechanism is eccentric. • An alarm occurs during auto-tuning and causes interruption. • The vibration cannot be suppressed if the load carries large inertia. In this case, increase the acceleration/deceleration time to ensure the motor current is not saturated. • The position tracking performance is inadequate, which is usually caused by the situation that the maximum motor speed is lower than the speed set by inertia auto-tuning, leading to position tracking error.	• Rectify the fault and perform inertia auto-tuning again. • For vibration that cannot be suppressed, enable vibration suppression. • Make sure that mechanical couplings are connected securely. • Increase the maximum operating speed, reduce the acceleration/deceleration time, and shorten the stroke of the lead screw during ETune operation. • Make sure that the speed setpoint is lower than the maximum motor speed.

7.5 Manual Gain Tuning

7.5.1 Basic Parameters

When automatic gain tuning cannot fulfill the requirements, perform manual gain tuning to achieve better result.

The servo system consists of three control loops, which are the position loop, the speed loop, and the current loop from external to internal. The basic control diagram is shown in the following figure.

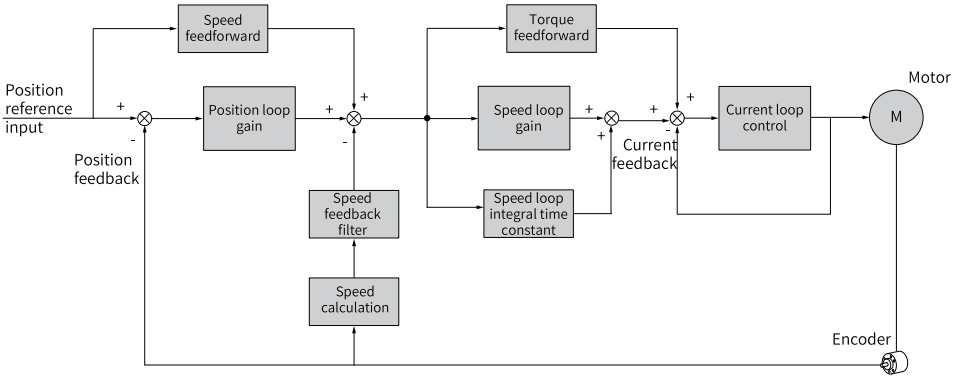


Figure 7-7 Basic control for manual gain tuning



Caution



The response level of the inner loop must be higher than that of the outer loop. If it is not observed, the system may be unstable.

The current loop gain has been set with the highest level of responsiveness by default, avoiding the need for tuning. However, the default current loop gain may not be appropriate when you match it against a third-party motor. Therefore, automatic gain tuning of the current loop is required. You only need to tune the position loop gain, speed loop gain, and other auxiliary gains. For gain tuning in position control mode, the position loop gain must be increased together with the speed loop gain, and the responsiveness of the former must be lower than the latter.

The following table describes how to adjust the basic gain parameters.

Table 7–5 Gain tuning parameters

Step	Parameter	Name	Description
1	H08.00	Speed loop gain	Parameter function: Determines the maximum frequency of a variable speed reference that can be followed by the speed loop. When H08.15 (Load inertia ratio) is correctly set, the maximum frequency that can be followed by the speed loop is the setpoint of H08.00.  Tuning method: • Increasing the setpoint without incurring extra noise or vibration shortens the positioning time, stabizes the speed, and improves the follow-up behavior. • If noise occurs, decrease the setpoint. • If mechanical vibration occurs, enable the resonance suppression function according to "*Vibration suppression*" *on page 367*.
2	H08.01	Speed loop integral time constant	Parameter function: Eliminates the speed loop deviation.  Tuning method: Set H08.01 according to the following formula: 500 ≤ H08.00 × H08.01 ≤ 1000. For example, if H08.00 is set to 40.0 Hz, the setpoint of H08.01 must meet the following requirement: 12.50 ms ≤ H08.01 ≤ 25.00 ms. Decreasing the setpoint strengthens the integral action and shortens the positioning time, but an excessively low setpoint may easily lead to mechanical vibration. An excessively high setpoint prevents the speed loop deviation from being cleared. When H08.01 is set to 512.00 ms, the integral is invalid.

Step	Parameter	Name	Description
3	H08.02	Position loop gain	Parameter function: Defines the maximum frequency of position references that can be followed by the position loop. The maximum following frequency of the position loop equals the value of H08.02.  Tuning method: To ensure system stability, the maximum following frequency of the speed loop is 3 to 5 times of the maximum following frequency of the position loop. $3 \leqslant \frac{2 \times \pi \times H08.00}{H08.02} \leqslant 5$ For example, when H08.00 is set to 40.0 Hz, H08.02 must meet the following requirement: 50.2 Hz ≤ H08.02 ≤ 83.7 Hz. Adjust the setting based on the positioning time. Increasing the setpoint shortens the positioning time and improves the anti-interference capacity of a motor at standstill. An excessively high setpoint may easily lead to system instability and oscillation.
4	H07.05	Torque reference filter time constant	Parameter function: Eliminates the high-frequency noise and suppresses mechanical resonance.  Tuning method: Ensure that the cutoff frequency of the torque reference low-pass filter is higher than 4 times of the maximum follow frequency of the speed loop. $\frac{1000}{2 \times \pi \times H07.05} \geqslant (H08.00) \times 4$ For example, when H08.00 is set to 40.0 Hz, the setpoint of H07.05 must be lower than or equal to 1.00 ms. If vibration occurs after H08.00 is increased, adjust H07.05 to suppress the vibration. For details, see *" Vibration suppression" on page 367*. An excessively high setpoint weakens the responsiveness of the current loop. To suppress vibration at stop, increase H08.00 and decrease H07.05. If strong vibration occurs upon stop, decrease the setpoint of H07.05.

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.05	2007-06h	Torque reference filter time constant 1	0.00 to 30.00	0.50	ms	Real time	"H07_en.05" on page 471
H08.00	2008-01h	Speed loop gain	0.0 to 2000.0	40.0	Hz	Real time	"H08_en.00" on page 478
H08.01	2008-02h	Speed loop integral time constant	0.15 to 512.00	19.89	ms	Real time	"H08_en.01" on page 479
H08.02	2008-03h	Position loop gain	0.0 to 2000.0	64.0	Hz	Real time	"H08_en.02" on page 479

7.5.2 Gain Switchover

Gain switchover can be triggered by the internal state of the drive or an external DI. It is only effective in position and speed control modes. Gain switchover achieves the following purposes:

- Switching to the lower gain when the motor is at a standstill (servo ON) to suppress vibration
- Switching to the higher gain when the motor is at a standstill to shorten the positioning time
- Switching to the higher gain during operation of the motor to achieve better reference tracking performance
- Switching between different gain settings through an external signal to fit different conditions of the load devices

H08.08=0

When H08.08 is set to 0, the 1st gain (H08.00 to H08.02 and H07.05) is used, but you can switch between proportional control and proportional integral control through FunIN.3 (GAIN_SEL, gain switchover) for the speed loop.

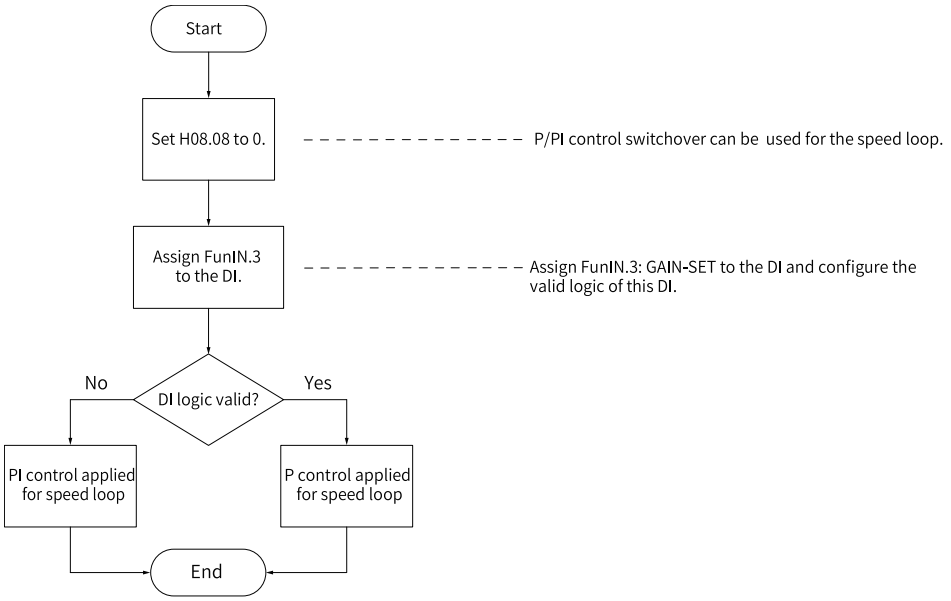


Figure 7-8 Gain switchover flowchart (H08.08 set to 0)

H08.08=1

You can switch between the 1st gain set (H08.00 to H08.02, H07.05) and 2nd gain set (H08.03 to H08.05, H07.06) based on the condition defined by H08.09.

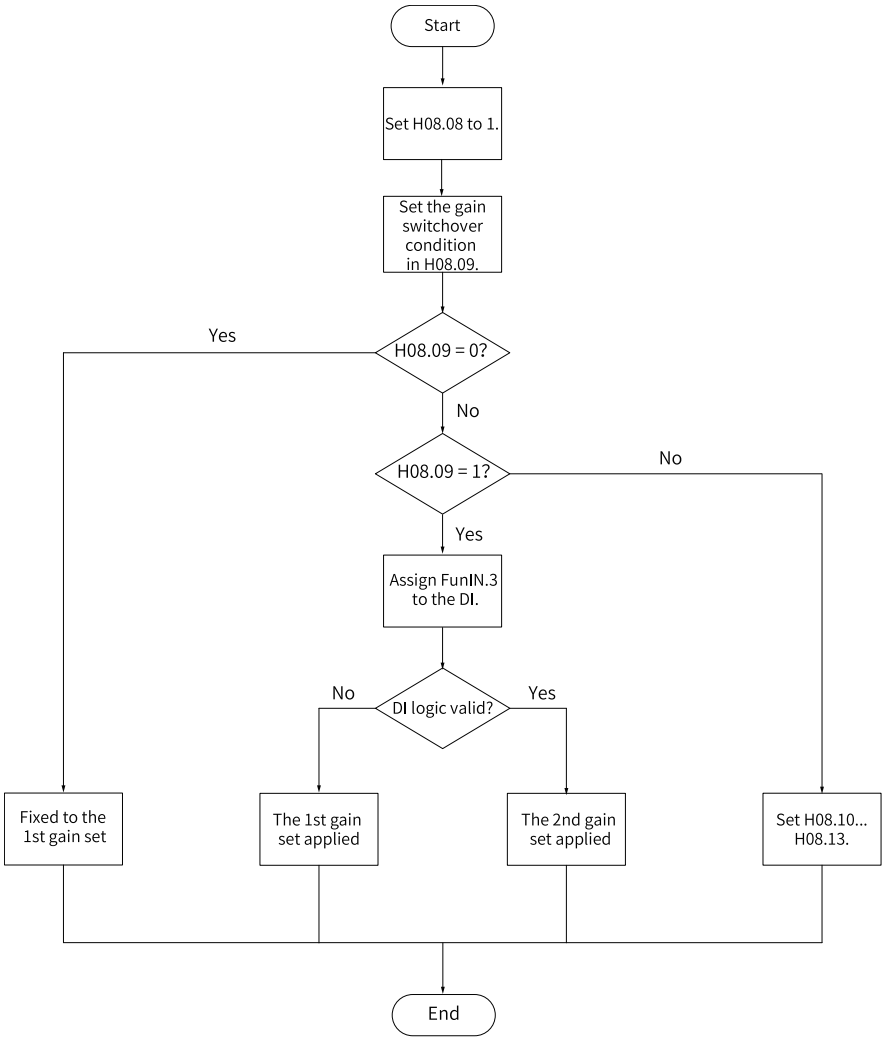
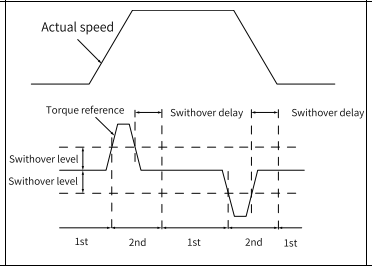
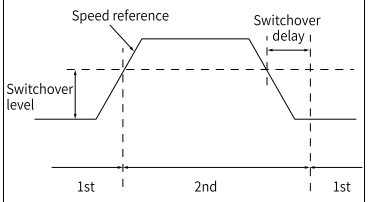
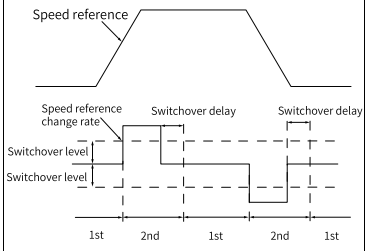
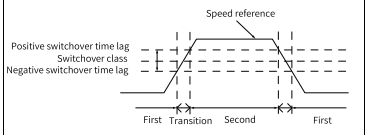
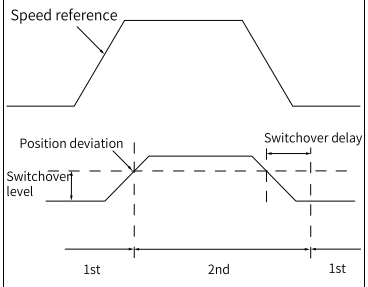
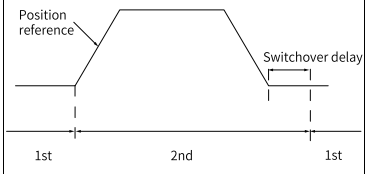
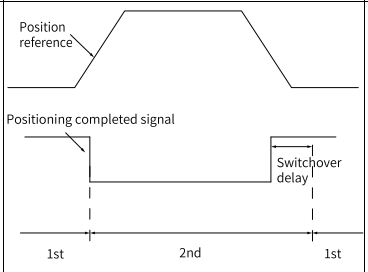
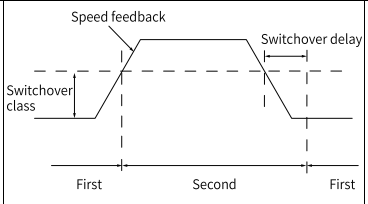


Figure 7-9 Gain switchover flowchart when H08.08 is set to 1

There are in total 11 gain switchover modes. The following table describes the diagrams and parameters of different modes.

Table 7–6 Gain switchover conditions


Gain switchover condition			Related parameters		
H08.09 Setpoint	Condition	Diagram	Delay time (H08.10)	Switchover level (H08.11)	Switchover hysteresis (H08.12)
0	Fixed at 1st gain	-	Inactive	Inactive	Inactive
1	Switchover by external DI	-	Inactive	Inactive	Inactive
2	Torque reference		Active	Active (%)	Active (%)

Gain switchover condition			Related parameters		
H08.09 Setpoint	Condition	Diagram	Delay time (H08.10)	Switchover level (H08.11)	Switchover hysteresis (H08.12)
3	Speed reference		Active	Active	Active
4	Speed reference change rate		Active	Active (10 rpm/s)	Inactive (10 rpm/s)
5	Speed reference high/low-speed threshold		Inactive	Active (rpm)	Active (rpm)
6	Position deviation		Active	Active (encoder unit)	Active (encoder unit)
7	Position reference		Active	Inactive	Inactive
8	Positioning not completed		Active	Inactive	Inactive
9	Actual speed		Active	Active (rpm)	Active (rpm)
10	Position reference available + Actual speed	See the following note for details.	Active	Active (rpm)	Active (rpm)

Caution

H08.10 (Gain switchover delay) is valid only during switching to the 1st gain.

Note

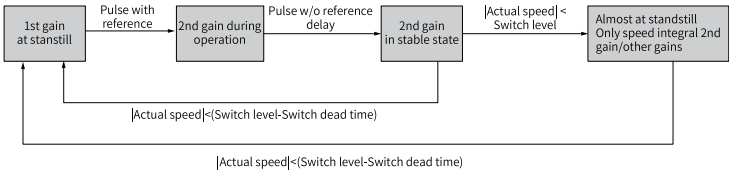

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.08	2008-09h	2nd gain mode setting	0: Fixed to the 1st gain set, P and PI switched as defined by bit26 of external 60FEh 1: Switched between the 1st and 2nd gain set as defined by H08.09	1	-	Real time	"H08_en.08" on page 480
H08.09	2008-0Ah	Gain switchover condition selection	0: Fixed to the 1st gain set (PS) 1: Switched as defined by bit26 of 60FEh or DI-based switchover 2: Torque reference excessively high (PS)3: Speed reference excessively high (PS) 4: Speed reference change rate excessively high (PS) 5: Speed reference low/high speed threshold (PS) 6: Position deviation excessively high (P) 7: Position reference available (P) 8: Positioning unfinished (P) 9: Actual speed (P) 10: Position reference available + Actual speed (P)	0	-	Real time	"H08_en.09" on page 480
H08.10	2008-0Bh	Gain switchover delay	0.0 to 1000.0	5.0	ms	Real time	"H08_en.10" on page 482
H08.11	2008-0Ch	Gain switchover level	0 to 20000	50	-	Real time	"H08_en.11" on page 482

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.12	2008-0Dh	Gain switchover time lag	0 to 20000	30	-	Real time	"H08_en.12" on page 483
H08.13	2008-0Eh	Position gain switchover time	0.0 to 1000.0	3.0	ms	Real time	"H08_en.13" on page 483

7.5.3 Position reference filter

Function	Function	Applicable scenario	Impact of excessive filtering
Position reference filter	The position reference filter is used to filter the position references (in encoder unit) divided or multiplied by the electronic gear ratio, smoothening motor operation and reducing impact to the machine.	• The acceleration/deceleration process is not performed on the position references sent from the host controller. • The pulse reference frequency is low. • The electronic gear ratio is larger than 10.	The response delay is prolonged.

7.5.4 Feedforward Gain

Speed feedforward is applicable to the position control mode. The speed feedforward function can be used to improve the speed reference responsiveness and reduce the position deviation at a fixed speed.

Speed feedforward

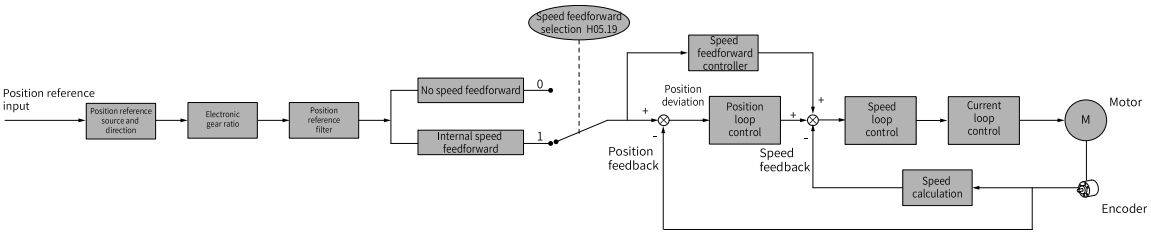


Figure 7-10 Procedure for speed feedforward control

Procedure for setting speed feedforward:

1. Set the speed feedforward signal source.
   Set H05.19 (Speed feedforward control) to a non-zero value to enable the speed feedforward function. The corresponding signal source will be selected as well.

Parameter	Name	Setpoint	Remarks
H05.19	Speed feedforward control	0: No speed feedforward	-
		1: Internal speed feedforward	Defines the speed corresponding to the position reference (encoder unit) the speed feedforward signal source.
		2: 60B1h used as speed offset	-
		3: Zero phase control	-

2. Set speed feedforward parameters.

   Set the speed feedforward gain (H08.19) and speed feedforward filter time constant (H08.18).

   ☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.18	2008-13h	Speed feedforward filter time constant	0.00 to 64.00	0.50	ms	Real time	"H08_en.18" on page 484
H08.19	2008-14h	Speed feedforward gain	0.0 to 100.0	0.0	%	Real time	"H08_en.19" on page 484

Zero phase control

Zero phase control is used to compensate for the position deviation generated upon start delay of the position reference, reducing the position deviation upon start/stop in the position control mode.

The loop calculation model is shown in the following figure.

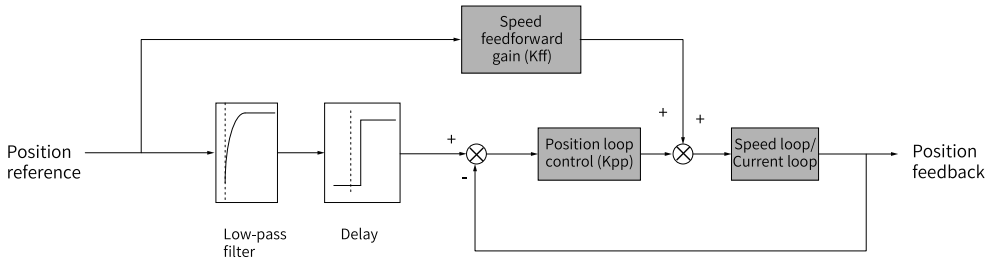


Figure 7-11 Zero phase control

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H05.04	2005-05h	First-order low-pass filter time constant	0.0 to 6553.5	0.0	ms	At stop	"H05_en.04" on page 434
H05.19	2005-14h	Speed feedforward control	0: No speed feedforward 1: Internal speed feedforward 2: H05.72 3: Zero phase	1	-	At stop	"H05_en.19" on page 439
H08.17	2008-12h	Zero phase delay	0.0 to 4.0	0.0	ms	Real time	"H08_en.17" on page 484

Torque feedforward

In position control mode, torque feedforward can be used to improve torque reference responsiveness and reduce the position deviation during operation at constant acceleration/deceleration rate.

In speed control mode, torque feedforward can be used to improve speed reference responsiveness and reduce the speed deviation during operation at constant speed.

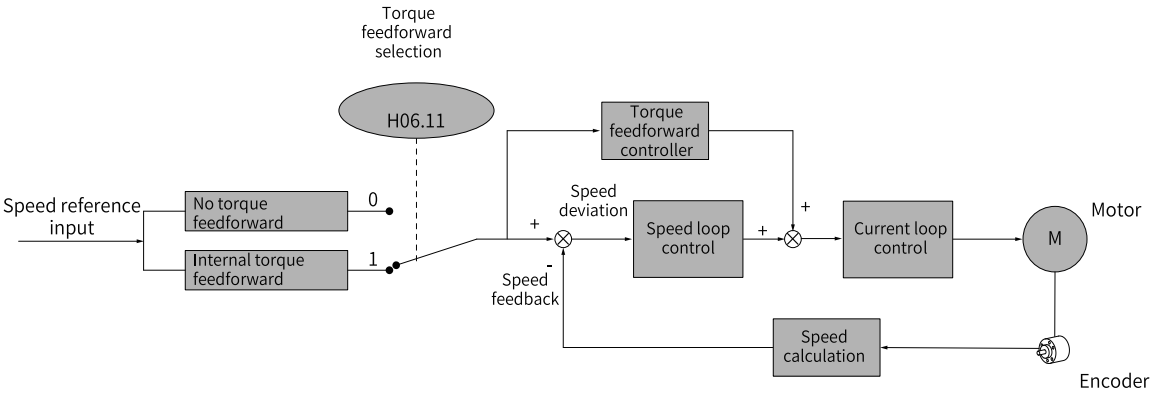


Figure 7-12 Torque feedforward function

Procedure for setting torque feedforward:

1. Set the torque feedforward signal source.

   Set H06.11 to 1 to activate torque feedforward and locate the corresponding signal source.

Parameter	Name	Setpoint	Remarks
H06.11	Torque feedforward control	0: No torque feedforward	-
		1: Internal torque feedforward	Use the speed reference as the source of the torque feedforward signal. In position control mode, the speed reference is outputted from the position controller.

2. Set torque feedforward parameters.

Parameter	Name	Description
H08.20	Torque feedforward filter time constant	Parameter function: • Increasing the value of H08.21 improves the response but may cause overshoot during acceleration/deceleration. • Decreasing the value of H08.20 suppresses overshoot during acceleration/deceleration. Increasing the value of H08.20 suppresses the noise. Tuning method: • Keep H08.20 to the default value, and then gradually increase the value of H08.21 from 0 to a certain value at which torque feedforward achieves the desired effect. • Tune H08.20 and H08.21 repeatedly until a balanced performance is achieved.
H08.21	Torque feedforward gain	See this section for details.

7.5.5 PDFF control

The pseudo derivative feedback and feedforward (PDFF) control mode can be used to adjust speed loop control in non-torque control modes.

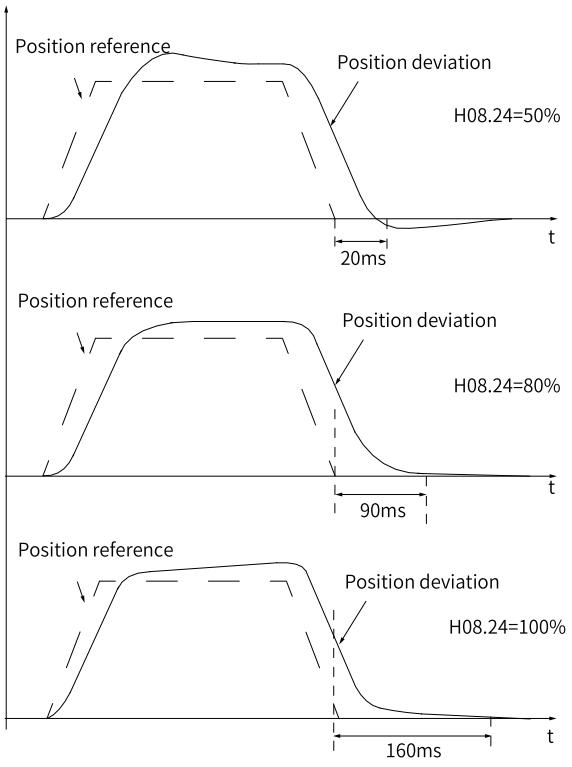


Figure 7-13 Example of PDFF control

By adjusting the speed loop control method, PDFF control enhances the anti-disturbance capacity of the speed loop and improves the performance in following the speed references.

Param.	Name	Description
H08.24	Pseudo differential feedforward control coefficient	Parameter function: • Defines the control method of the speed loop in non-torque control modes. Tuning method: • Setting H08.24 to an excessively low value slows down the responsiveness of the speed loop. • When the speed feedback overshoots, gradually decrease the setpoint of H08.24 from 100.0 to a certain value at which the pseudo differential feedforward control achieves the desired effect. • When H08.24 is set to 100.0, the speed loop control method does not change and the default proportional integral control is used.


7.5.6 Torque disturbance observer

This function is intended to be used in non-torque control modes.

Disturbance observer

The disturbance observer is used to observe external disturbance. You can set different cutoff frequencies and compensation values to observe and suppress the disturbance within the frequency range.

The following figure shows the control block diagram of the disturbance observer.

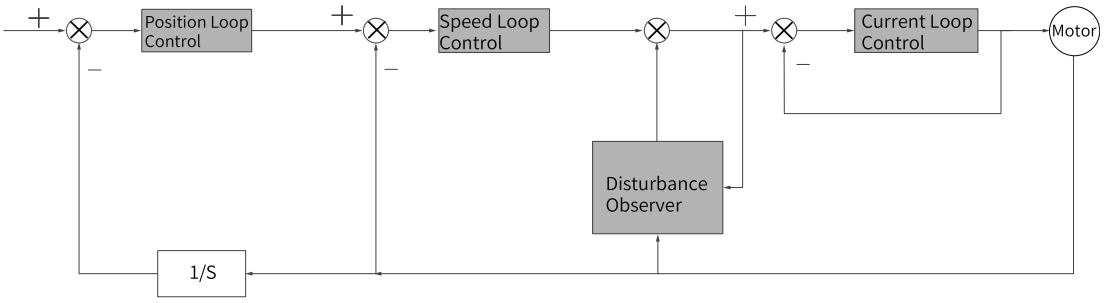

Note

1/S: Integral term

Param.	Name	Description
H08.31	Disturbance cutoff frequency	The higher the cutoff frequency, the more easily will vibration occur.
H08.32	Disturbance compensation gain	Defines the compensation percentage for the observer.
H08.33	Disturbance observer inertia calibration coefficient	H08.33 needs to be changed only when the inertia ratio does not reflect the actual condition. The acting inertia is the product of the set inertia and H08.33. It is recommended to use the default value of H08.33.

☆ Related parameters:


Param.	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H08.31	2008-20h	Disturbance cutoff frequency	1 to 4000	600	Hz	Real time	"H08_en.31" on page 487
H08.32	2008-21h	Disturbance compensation gain	0 to 100	0	%	Real time	"H08_en.32" on page 488
H08.33	2008-22h	Disturbance observer inertia calibration coefficient	1 to 1600	100	%	Real time	"H08_en.33" on page 488

7.5.7 Speed observer


The speed observer, which facilitates quick positioning, applies in applications with slight load characteristic change and constant inertia.

It improves the responsiveness and filters high frequencies automatically, improving the gains and shortening the positioning time without incurring high-frequency vibration.

The block diagram for the speed observer is as follows.

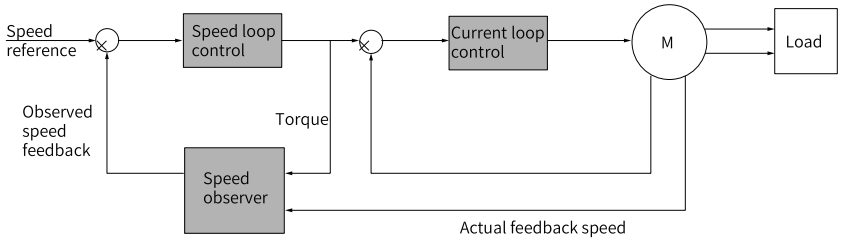

Commissioning procedure

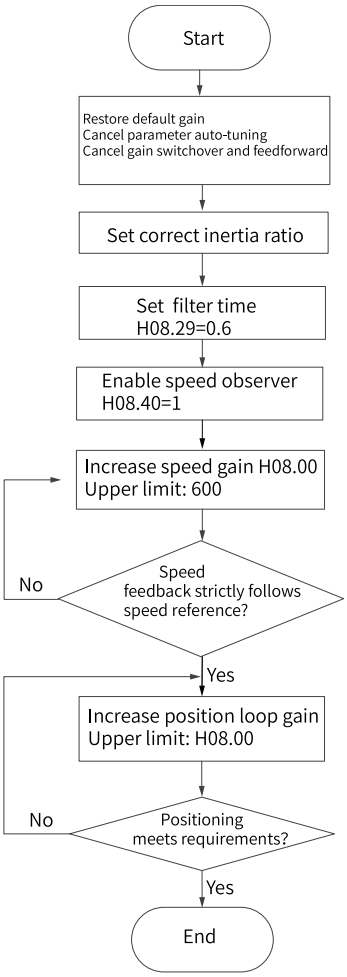

Note

- Before using the speed observer, set H08.15 (Load inertia ratio) to a proper value or perform inertia auto-tuning. A wrong inertia ratio can cause vibration.
- Setting H08.27, H08.28, or H08.29 to excessively low or high values can result in motor vibration.

Related parameters

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H08.00	2008-01h	Speed loop gain	0.0 to 2000.0	40.0	Hz	Real time	"H08_en.00" on page 478
H08.27	2008-1Ch	Cutoff frequency of speed observer	50 to 600	170	Hz	Real time	"H08_en.27" on page 487
H08.28	2008-1Dh	Speed observer inertia calibration coefficient	1 to 1600	100	%	Real time	"H08_en.28" on page 487

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H08.29	2008-1Eh	Speed observer filter time	0.00 to 10.00	0.80	ms	Real time	"H08_en.29" on page 487
H08.40	2008-29h	Speed observer enable	0: Disable 1: Enable	0	-	Real time	"H08_en.40" on page 489

7.5.8 Model Tracking


Model tracking control can be used to improve responsivity and shorten the positioning time. It is available only in position control mode.

Parameters used by model tracking are normally set automatically through ITune or ETune along with the gain parameters.


However, manual tuning is needed in the following situations:

- The auto-tuned values cannot deliver desired performance.
- Improving the responsiveness takes priority over the auto-tuned or customized values.
- User-defined gain parameters or model tracking control parameters are needed.

The block diagram for model tracking control is as follows.

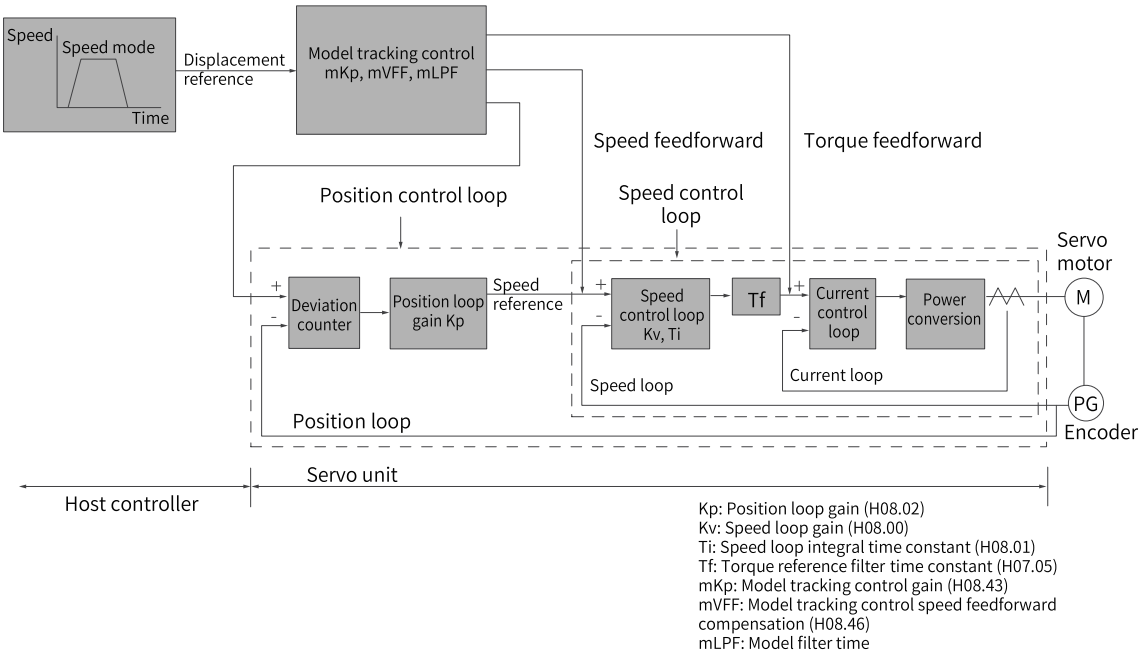

Commissioning procedure

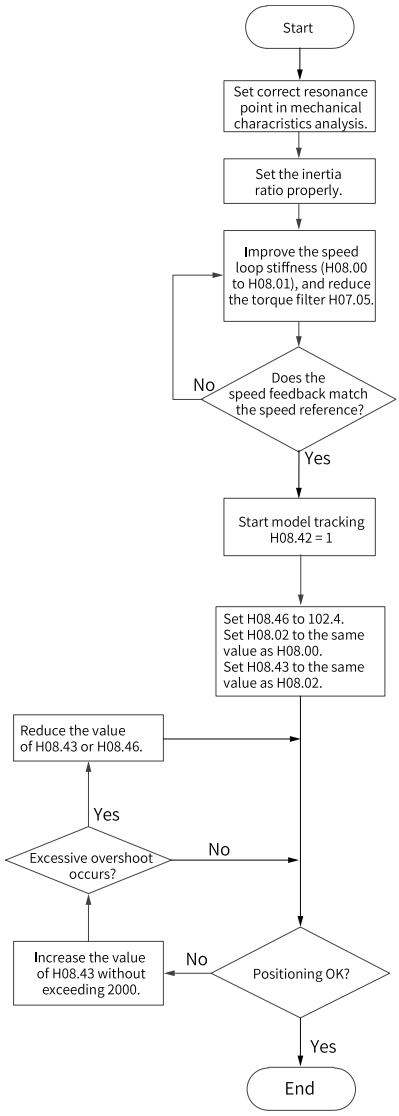

Note

Ensure the set inertia is accurate. Otherwise, motor vibration may occur.

Related parameters

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H07.05	2007-06h	Torque reference filter time constant 1	0.00 to 30.00	0.50	ms	Real time	"*H07_en.05*" on *page 471*
H08.00	2008-01h	Speed loop gain	0.0 Hz to 2000.0 Hz	40.0	Hz	Real time	"*H08_en.00*" on *page 478*
H08.01	2008-02h	Speed loop integral time constant	0.15 to 512.00	19.89	ms	Real time	"*H08_en.01*" on *page 479*

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.02	2008-03h	Position loop gain	0.0 Hz to 2000.0 Hz	64.0	Hz	Real time	"H08_en.02" on page 479
H08.42	2008-2Bh	Model control enable	0: Disable 1: Enable 2: Reserved 4: Model tracking B	0	-	Real time	"H08_en.42" on page 489
H08.43	2008-2Ch	Model gain	0.1 to 2000.0	40.0	-	Real time	"H08_en.43" on page 490
H08.46	2008-2Fh	Feedforward value	0.0 to 102.4	95.0	-	Real time	"H08_en.46" on page 490

7.5.9 Friction Compensation

Friction compensation is used to reduce the impact of the friction on the operating effect during mechanical transmission. Use different positive/negative compensation values according to the direction of operation.

Note


Friction compensation is effective only in the position mode.

☆Related parameters

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.32	2009-21h	Gravity compensation value	-100.0 to +100.0	0.0	%	Real time	"H09_en.32" on page 501
H09.33	2009-22h	Forward friction compensation value	0.0 to 100.0	0.0	%	Real time	"H09_en.33" on page 501
H09.34	2009-23h	Negative friction compensation value	-100.0 to 0.0	0.0	%	Real time	"H09_en.34" on page 502

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.35	2009-24h	Friction compensation speed	0.0 to 20.0	2.0	-	Real time	"H09_en.35" on page 502
H09.36	2009-25h	Friction compensation speed selection	0: Slow mode+Speed reference 1: Slow mode+Model speed 2: Slow mode+Speed feedback 3: Slow mode+Observed speed 16: Quick mode +Speed reference 17: Quick mode +Model speed 18: Quick mode +Speed feedback 19: Quick mode+Observed speed	0x0	-	Real time	"H09_en.36" on page 502

The diagram for friction compensation is as follows.

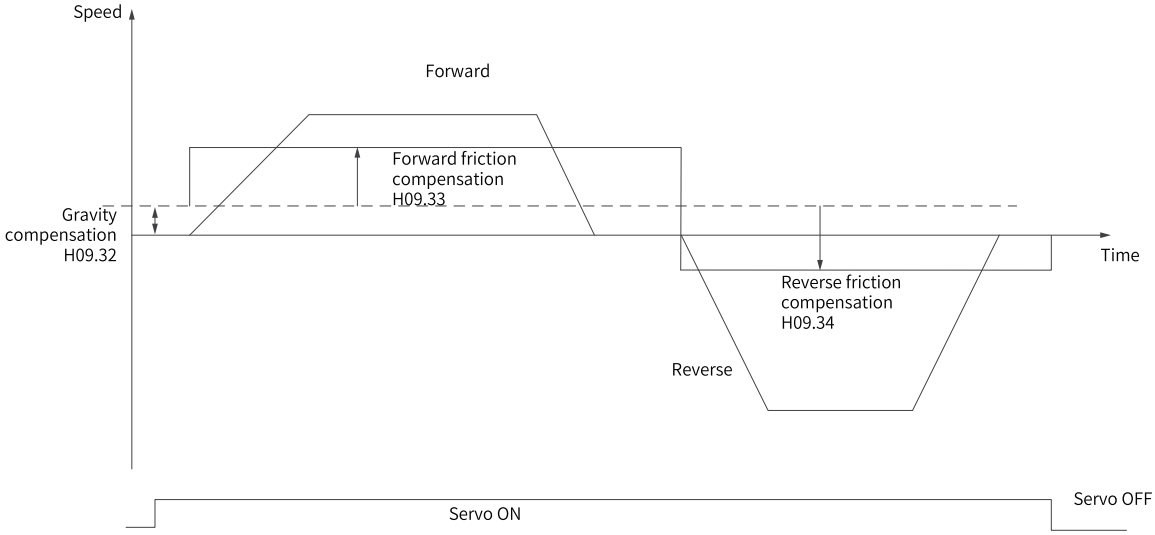

Note

Note: When the speed is less than the speed threshold, static friction applies. When the speed exceeds the speed threshold, dynamic friction applies. The compensation direction is determined by the direction of the position reference. Forward direction requires a positive compensation value. Reverse direction requires a negative compensation value.

7.5.10 Motor Cogging Torque Ripple Compensation

The motor cogging torque ripple compensation function is used to compensate for the torque ripple caused by the motor cog, suppressing the speed fluctuation caused by the cogging torque ripple under low control loop gain, ensuring system stability, and reducing the speed fluctuation.

The SV670-INT series drive supports two applicable scenarios for general-purpose rotary (ROT) motors and direct-drive rotary (DDR) motors[1]:

Note

[1]: DDR refers to a direct drive torque motor.

- **ROT/DDR motors with Inovance absolute encoders**
  In this scenario, compensation data is obtained before the motor is delivered. You do not need to manually obtain the compensation data. You only need to set H06.28 to enable or disable this function.

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H06.28	2006-1Dh	Cogging torque ripple compensation	0 to 1	1	-	At stop	"H06_en.28" on page 460

- **ROT/DDR motors with incremental encoders (Incremental communication encoder with Inovance T5 interpolator and ABZ incremental encoder with TTL signals)**
  In this scenario, you need to perform auto-tuning on motor cogging torque ripples and obtain the compensation table before you can enable the cogging torque ripple compensation function. Angle auto-tuning and homing must be completed before auto-tuning and compensation can take effect. The flowchart is as follows:

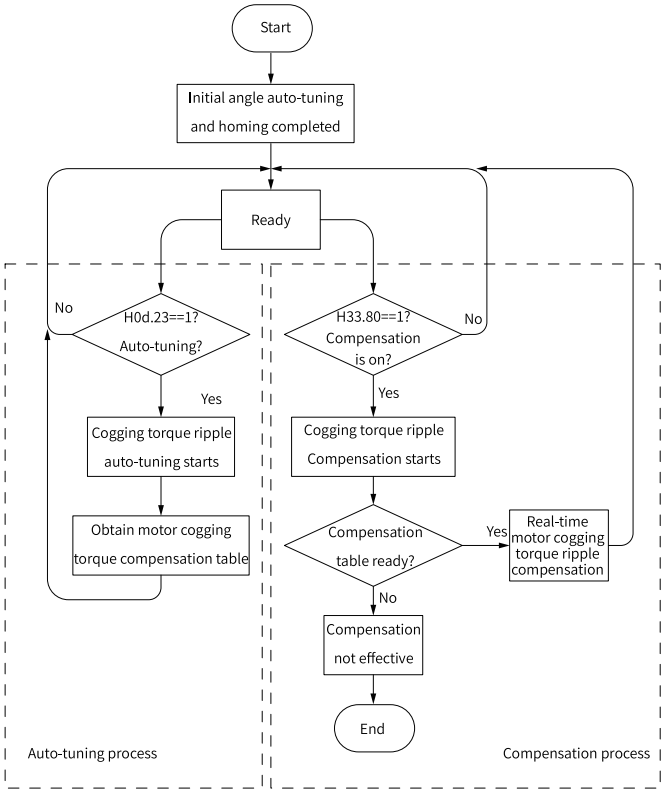


Figure 7-14 Flowchart of ROT/DDR motors with incremental encoder

Parameter	Comm. address	Parameter name	Value range	Default value	Unit	Change mode	Page
H33.80	2033-51h	Motor cogging torque ripple compensation data storage position	0: Stored in the encoder 1: Stored in the Flash	0	-	At stop	"H33_en.80" on page 775
H0d.23	200d-18h	Motor cogging torque fluctuation auto-tuning enable	0: Disable 1: Enable	0	-	At stop	"H0d_en.23" on page 556

When auto-tuning of motor torque ripple is enabled (H0d.23 = 1), the SV670-INT drive moves the motor for several revolutions to obtain a torque ripple compensation table.

Note

During this process, you need to ensure that the motor has enough operating range to avoid collision. To avoid external disturbance, it is recommended to perform auto-tuning with the motor disconnected from the load.

After auto-tuning is completed, motor torque ripple compensation is automatically enabled (H06.28 = 1). This function takes effect after the drive is powered off and powered on again and angle auto-tuning and homing are completed. You can manually disable this function (H06.28 = 0) when compensation is not required.

7.6 Parameter Tuning in Different Control Modes

Perform parameter tuning in the sequence of inertia auto-tuning > gain auto-tuning > manual gain tuning in all control modes.

7.6.1 Parameter Tuning in Speed Control Mode

Parameter tuning in speed control mode is the same as that in position control mode, except for the position loop gain (H08.02 and H08.05). For details, see "7.6.2 Parameter Tuning in Position Control Mode" on page 365.

7.6.2 Parameter Tuning in Position Control Mode

Obtain the value of H08.15 (Load inertia ratio) through inertia auto-tuning.

Gain parameters in position control mode:

- 1st gain:

Parameter	Name	Function	Default
H07.05	Torque reference filter time constant 1	These parameters set the time constant of the torque reference filter.	0.50 ms
H08.00	Speed loop gain	Defines the speed loop proportional gain.	40.0 Hz
H08.01	Speed loop integral time constant	Defines the integral time constant of the speed loop.	19.89 ms
H08.02	Position loop gain	Defines the position loop proportional gain.	64.0 Hz

- 2nd gain:

Parameter	Name	Function	Default
H07.06	Torque reference filter time constant 2	These parameters set the time constant of the torque reference filter.	0.27 ms
H08.03	2nd speed loop gain	Defines the speed loop proportional gain.	75.0 Hz
H08.04	2nd speed loop integral time constant	Defines the integral time constant of the speed loop.	10.61 ms
H08.05	2nd position loop gain	Defines the position loop proportional gain.	120.0 Hz
H08.08	2nd gain mode setting	Defines the mode of the 2nd gain set.	1
H08.09	Gain switchover condition selection	Defines the gain switchover condition.	0
H08.10	Gain switchover delay	Defines the gain switchover delay.	5.0 ms
H08.11	Gain switchover level	Defines the gain switchover level.	50
H08.12	Gain switchover time lag	Defines the dead time of gain switchover.	30
H08.13	Position gain switchover time	Defines the position loop gain switchover time.	3.0 ms

- Common gain

Parameter	Name	Function	Default
H08.18	Speed feedforward filter time constant	Defines the speed feedforward filter time constant.	0.50 ms
H08.19	Speed feedforward gain	Defines the speed feedforward gain.	0.0%
H08.20	Torque feedforward filter time constant	Defines the torque feedforward filter time constant.	0.50 ms
H08.21	Torque feedforward gain	Defines the torque feedforward gain.	0.0%
H08.22	Speed feedback filter option	Defines the speed feedback filter function.	0
H08.23	Cutoff frequency of speed feedback low-pass filter	Defines the cutoff frequency of the first-order low-pass filter for speed feedback.	8000 Hz
H08.24	Pseudo differential feedforward control coefficient	Defines the coefficient of the PDFF controller.	100.0%

Parameter	Name	Function	Default
H09.30	Torque disturbance compensation gain	Defines the torque disturbance compensation gain.	0.0%
H09.31	Time constant of torque disturbance observer filter	Defines the filter time constant of the disturbance observer.	0.5 ms
H09.04	Suppression mode of low-frequency resonance	Defines the low-frequency resonance suppression mode.	0
H09.38	Frequency of low-frequency resonance suppression 1 at the mechanical end	Defines the frequency of the low-frequency resonance suppression filter.	100.0 Hz
H09.39	Low-frequency suppression 1 at the mechanical end	Defines the setting of low-frequency resonance suppression filter.	2

Perform again auto-tuning to obtain the initial values of the 1st gain set (or 2nd gain set) and common gain set.

Manually fine tune the following gain parameters.

Parameter	Name	Function	Default
H07.05	Torque reference filter time constant 1	These parameters set the time constant of the torque reference filter.	0.50 ms
H08.00	Speed loop gain	Defines the speed loop proportional gain.	40.0 Hz
H08.01	Speed loop integral time constant	Defines the integral time constant of the speed loop.	19.89 ms
H08.02	Position loop gain	Defines the position loop proportional gain.	64.0 Hz
H08.19	Speed feedforward gain	Defines the speed feedforward gain.	0.0%


7.6.3 Parameter Tuning in Torque Control Mode

Parameter tuning in torque control mode are classified into two types based on the condition:

- If the actual speed reaches the speed limit, the adjustment method is the same as that described in *"7.6.1 Parameter Tuning in Speed Control Mode" on page 365*.
- If the actual speed does not reach the speed limit, the adjustment method is the same as that described in *"7.6.1 Parameter Tuning in Speed Control Mode" on page 365*, except the position/speed loop gain and speed loop integral time constant.

7.7 Vibration Suppression

The block diagram of vibration suppression is as follows:

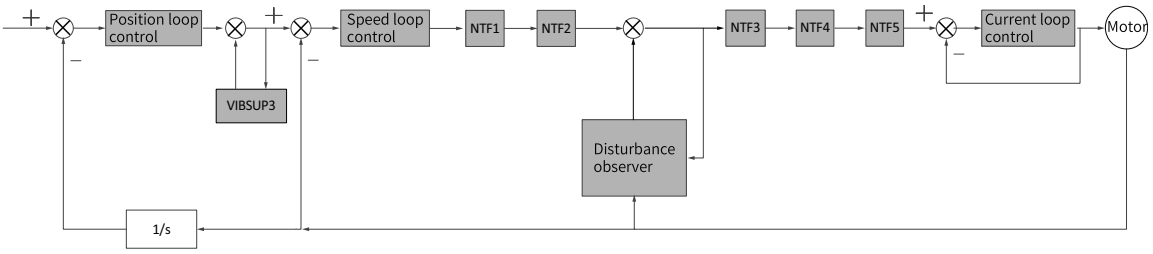

Where:

- NTF1-5: 1st notch to 5th notch
- VIBSUP3: Suppression of medium- and low-frequency vibration
- 1/s: Integral element

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H08.53	2008-36h	Medium- and low-frequency jitter suppression frequency 3	0.0 to 300.0	0.0	Hz	Real time	"H08_en.53" on page 491
H08.54	2008-37h	Medium- and low-frequency jitter suppression compensation 3	0 to 200	0	%	Real time	"H08_en.54" on page 491
H08.56	2008-39h	Medium- and low-frequency jitter suppression phase modulation 3	0 to 600	100	%	Real time	"H08_en.56" on page 491

Note

- jitter suppression phase modulation coefficient: synchronous phase adjustment of the compensation value and vibration. It is recommended to use the default value. Adjustment is needed when the compensation value phase differs greatly from the vibration phase.
- Jitter suppression frequency: Defines the jitter frequency that needs to be suppressed.
- Jitter suppression compensation coefficient: Defines the compensation coefficient for jitter suppression.

7.7.1 Mechanical Resonance Suppression

Resonance frequency is present in the mechanical system. When the gain of the drive increases, resonance may occur near the resonance frequency, disabling further increase of the gain.

Mechanical resonance can be suppressed in the following two methods:

Torque reference filter (H07.05, H07.06)

To suppress the mechanical resonance, set the filter time constant to enable the torque reference to be attenuated in the frequency range above the cutoff frequency.

Filter cutoff frequency fc (Hz) = 1 ÷ [2π × H07.05 (ms) × 0.001]

Notch

The notch reduces the gain at certain frequencies to suppress mechanical resonance. After the vibration is suppressed by the notch, you can continue to increase the gain. The following figure shows how the notch works.

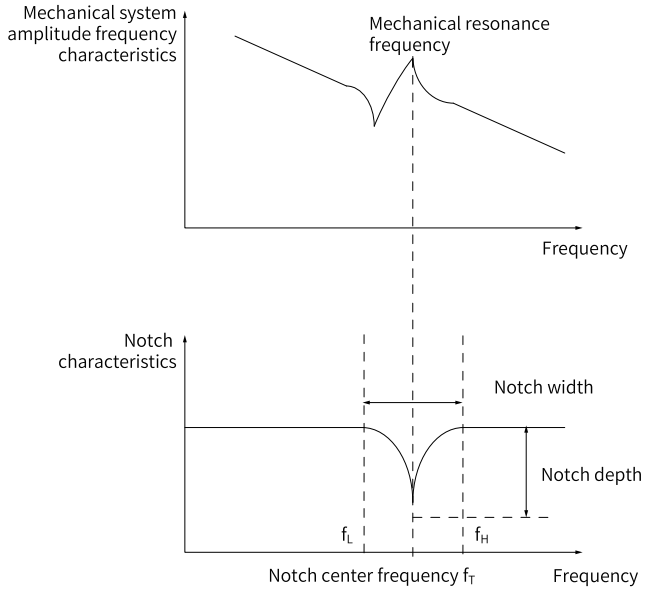


Figure 7-15 How the notch works

A total of five notches can be used, and each notch is defined by three parameters: frequency, width level, and depth level. The 1st, 2nd, and fifth notches are manual notches whose parameters needs to be set by the user. Parameters of the 3rd and 4th notches can be either set by the user or set automatically after being configured as an adaptive notch (H09.02 =1 or 2).

Table 7–7 Description of notch parameters

Item	Manual notch			Manual/Adaptive Notch	
	1st Notch	2nd Notch	5th Notch	3rd Notch	4th Notch
Frequency	H09.12	H09.15	H09.41	H09.18	H09.21
Bandwidth level	H09.13	H09.16	H09.42	H09.19	H09.22
Depth level	H09.14	H09.17	H09.43	H09.20	H09.23

Note

- When the frequency is 8000 Hz (default), the notch is inactive.
- The adaptive notch is preferred for resonance suppression. The manual notch can be used in cases where the adaptive notch cannot deliver desired performance.

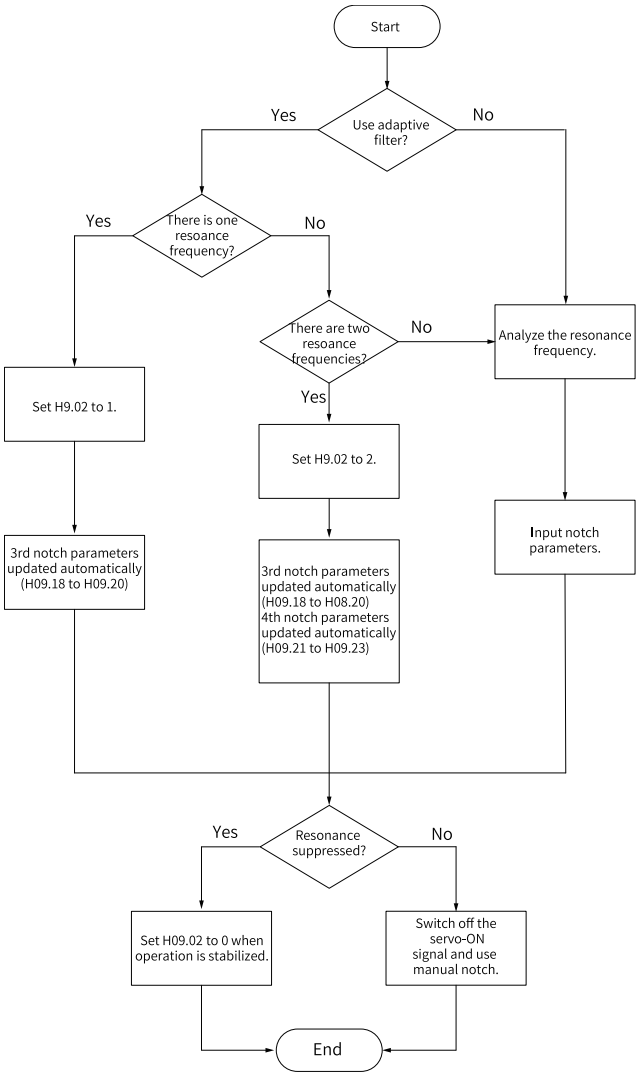


Figure 7-16 Procedure for setting a notch

- Procedure for setting the adaptive notch:

  1. Set H09.02 (Adaptive notch mode selection) to 1 or 2 based on the number of resonance frequencies.
  2. When resonance occurs, set H09.02 to 1 first to enable one adaptive notch. If new resonance occurs after gain tuning, set H09.02 to 2 to enable two adaptive notches.
  3. Parameters of the 3rd or 4th notches are updated automatically during operation, and parameter values are saved automatically to the corresponding parameters in group H09 every 30 min.
  4. If resonance is suppressed, the adaptive notch works. After the servo drive runs stably for a period of time, set H09.02 to 0 and the parameters of the adaptive notch are fixed to the last updated values.

     This is to prevent notch parameters from being updated to wrong values due to misoperation. Wrong values will intensify resonance.
  5. If resonance persists after the notch is working for a period of time, switch off the S-ON signal.

6. If more than two resonance frequencies exist, the problem cannot be solved only by using the adaptive notches. In this case, add a manual notch. Or use all the four notches as manual ones (H09.02 = 0).

Note

- When adaptive notch is applied, if the S-OFF signal is activated within 30 min, the notch parameters will not be saved to the corresponding parameter
- When the resonance frequency is below 300 Hz, the suppression effect of the adaptive notch may be degraded.

- Procedure for setting the manual notch:

  1. Analyze the resonance frequency.
  2. When using the manual notch, set the notch frequency to same value as the actual resonance frequency obtained in the following ways: The resonance frequency can be obtained by using the following methods:
     - Use the "Mechanical characteristic analysis" function in the Inovance software tool.
     - Calculate the resonance frequency based on the motor phase current displayed on the oscilloscope interface of the software tool.
     - Set H09.02 (Adaptive notch mode) to 3. The drive detects the resonance frequency and saves the detected value to H09.24 automatically during operation.
  3. Input the resonance frequency obtained in step 1 to the parameter of the selected notch, and input the width level and depth level of this notch.
  4. If resonance has been suppressed, it indicates the notch functions well and you can continue tuning the gain. If resonance occurs again, repeat steps 1 and 2.
  5. If resonance persists after the notch is working for a period of time, switch off the S-ON signal.

- Notch width level
  The width level indicates the ratio of the notch width to the center frequency of the notch.

  $$\text{Notch width level} = \frac{f_H - f_L}{f_T}$$

  Where:

  f_T: Center frequency of the notch, which is also the mechanical resonance frequency.

  $f_H - f_L$: Notch filter bandwidth, indicating the frequency bandwidth where the amplitude attenuation reaches -3dB relative to the notch center frequency.

  The following figure shows the mapping relationship. Use the default value 2 in normal cases.

- Notch depth level
  The notch depth level indicates the ratio of the input to the output at the center frequency.

  When the depth level is 0, the input is completely suppressed at the center frequency. When the depth level is 99, the input can be fully passed at the center frequency. Therefore, a lower depth level indicates a higher notch depth and a stronger suppression effect. Note that an excessively low depth level may lead to system oscillation.

Note

If the amplitude frequency characteristic curve obtained through the mechanical analysis function does not have obvious peak, it indicates that vibration occurs actually. Such vibration may not be mechanical resonance, and cannot be suppressed by the notch. It occurs because the gain reaches the limit, and can be suppressed only by reducing the gain or the filter time of torque reference.

The following figure shows the frequency characteristics of the notch.

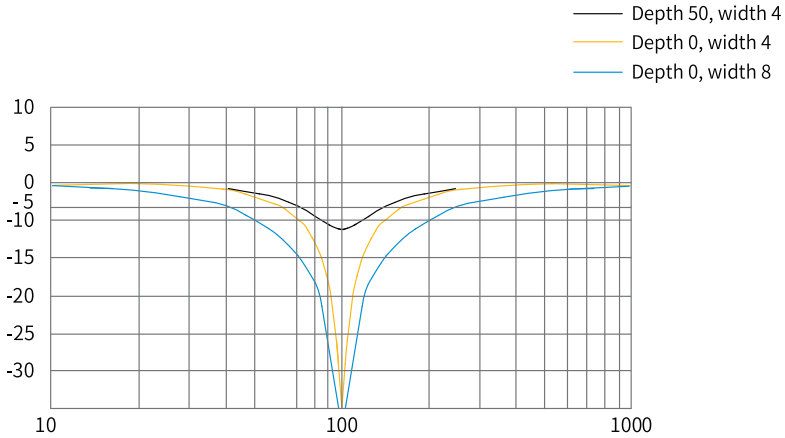


Figure 7-17 Notch frequency characteristics

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.02	2009-03h	Adaptive notch mode selection	0: Adaptive notch no longer updated 1: One adaptive notch activated (3rd notch) 2: Two adaptive notches activated (3rd and 4th notches) 3: Resonance point tested only (displayed in H09.24) 4: Adaptive notch cleared, values of 3rd and 4th notches restored to default	0	-	Real time	"H09_en.02" on page 495
H09.12	2009-0Dh	Frequency of the 1st notch	50 to 8000	8000	Hz	Real time	"H09_en.12" on page 498
H09.13	2009-0Eh	Bandwidth level of the 1st notch	0 to 20	2	-	Real time	"H09_en.13" on page 498
H09.14	2009-0Fh	Depth level of the 1st notch	0 to 99	0	-	Real time	"H09_en.14" on page 498
H09.15	2009-10h	Frequency of the 2nd notch	50 to 8000	8000	Hz	Real time	"H09_en.15" on page 499

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.16	2009-11h	Bandwidth level of the 2nd notch	0 to 20	2	-	Real time	"H09_en.16" on page 499
H09.17	2009-12h	Depth level of the 2nd notch	0 to 99	0	-	Real time	"H09_en.17" on page 499
H09.18	2009-13h	Frequency of the 3rd notch	50 to 8000	8000	Hz	Real time	"H09_en.18" on page 499
H09.19	2009-14h	Bandwidth level of the 3rd notch	0 to 20	2	-	Real time	"H09_en.19" on page 500
H09.20	2009-15h	Depth level of the 3rd notch	0 to 99	0	-	Real time	"H09_en.20" on page 500
H09.21	2009-16h	Frequency of the 4th notch	50 to 8000	8000	Hz	Real time	"H09_en.21" on page 500
H09.22	2009-17h	Bandwidth level of the 4th notch	0 to 20	2	-	Real time	"H09_en.22" on page 500
H09.23	2009-18h	Depth level of the 4th notch	0 to 99	0	-	Real time	"H09_en.23" on page 501
H09.24	2009-19h	Auto-tuned resonance frequency	0 to 5000	0	Hz	Read-only	"H09_en.24" on page 501
H09.41	2009-2Ah	Frequency of the 5th notch	50 to 8000	8000	Hz	Real time	"H09_en.41" on page 503
H09.42	2009-2Bh	Bandwidth level of the 5th notch	0 to 20	2	-	Real time	"H09_en.42" on page 504
H09.43	2009-2Ch	Depth level of the 5th notch	0 to 99	0	-	Real time	"H09_en.43" on page 504

7.7.2 Low-frequency resonance suppression at the mechanical end

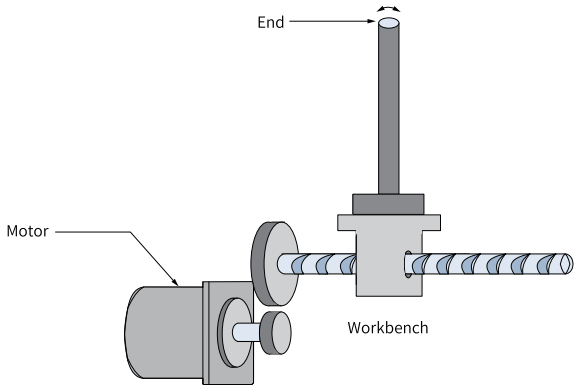


Figure 7-18 Low-frequency vibration at the mechanical end

If the mechanical load end is long and heavy, vibration may easily occur in this part during emergency stop, affecting the positioning effect. Such vibration is called low-frequency resonance as its frequency is generally within 100 Hz, which is lower than the mechanical resonance frequency mentioned in *"7.7.1 Mechanical Resonance Suppression" on page 368*. Use the low-frequency resonance suppression function to reduce such vibration.

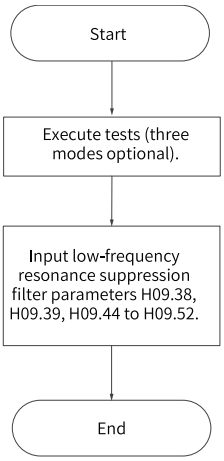


Figure 7-19 Procedure for setting low-frequency resonance suppression filter

First, use the oscilloscope function in the software tool to collect the position deviation waveform of the motor in the positioning state. Then, calculate the position deviation fluctuation frequency, which is the low-frequency resonance frequency. Finally, input the value of H09.38 manually and use the default value of H09.39. Observe the resonance suppression effect after using the low-frequency resonance suppression filter.

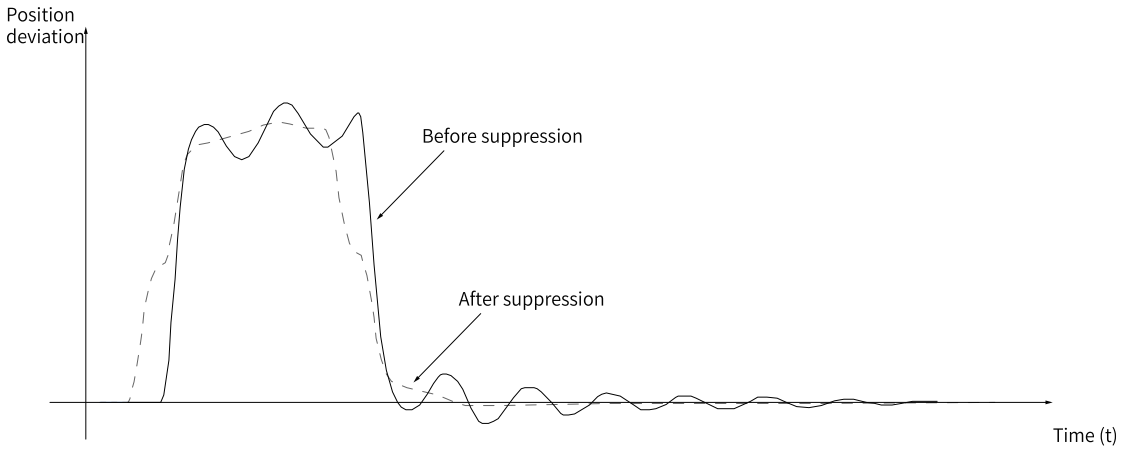


Figure 7-20 Low-frequency resonance suppression effect

☆ Related parameters:

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.38	2009-27h	Frequency of low-frequency resonance suppression 1 at the mechanical end	1.0 to 100.0	100.0	Hz	At stop	"H09_en.38" on page 503
H09.39	2009-28h	Low-frequency suppression 1 at the mechanical end	0 to 3	2	-	At stop	"H09_en.39" on page 503
H09.44	2009-2Dh	Frequency of low-frequency suppression 2 at the mechanical end	0.0 to 200.0	0.0	-	At stop	"H09_en.44" on page 504
H09.45	2009-2Eh	Response of low-frequency resonance suppression 2 at mechanical end	0.01 to 10.00	1.00	-	At stop	"H09_en.45" on page 504
H09.47	2009-30h	Bandwidth of low-frequency resonance suppression 2 at mechanical end	0.00 to 2.00	1.00	-	At stop	"H09_en.47" on page 505
H09.49	2009-32h	Frequency of low-frequency resonance suppression 3 at the mechanical end	0.0 to 200.0	0.0	-	At stop	"H09_en.49" on page 505

Parameter	Comm. address	Parameter name	Setpoint	Default value	Unit	Change mode	Page
H09.50	2009-33h	Response of low-frequency resonance suppression 3 at the mechanical end	0.01 to 10.00	1.00	-	At stop	"H09_en.50" on page 505
H09.52	2009-35h	Bandwidth of low-frequency resonance suppression 3 at the mechanical end	0.00 to 2.00	1.00	-	At stop	"H09_en.52" on page 505

7.8 Mechanical Characteristic Analysis

Overview

Mechanical characteristic analysis is used to determine the mechanical resonance point and system bandwidth. Up to 8 kHz response characteristic analysis is available and three modes including mechanical characteristics, speed open loop, and speed closed loop are supported.

Procedure

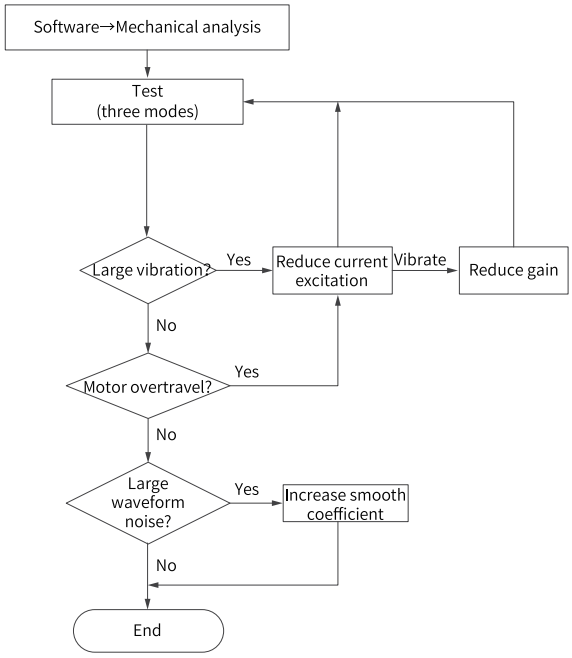


Figure 7-21 Operating procedure for mechanical characteristic analysis

Note

- To avoid large vibration during the test, set the current excitation to 10% during initial execution.
- The analysis waveform may be distorted if the current excitation is too low.
- If vibration generated during testing cannot be suppressed by reducing the current excitation, the causes and solutions may be: 1) The gain values are too high. Reduce the speed gain or set notch parameters based on the auto-tuned resonance point. 2) The set inertia ratio is too high. Set the inertia ratio properly.
- After setting the notch, the waveform under mechanical characteristic test mode is the same with that before the setting, but the speed closed loop and speed open loop modes will be attenuated.

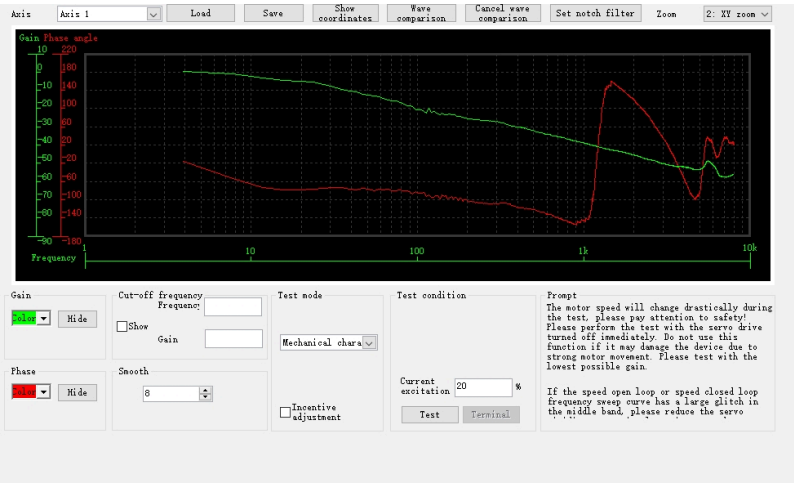


Figure 7-22 Example of the waveform obtained

An example of the waveform obtained with the mechanical characteristic analysis is shown in *"Figure 7-22 Example of the waveform obtained" on page 377*.

7.9 High-Performance Tuning

Overview

High-performance tuning is an upgrade function of mechanical characteristic analysis. In addition to analyzing mechanical resonance frequencies and system bandwidth, it can also simulate the effect of adding filters and tuning parameters on loop control. Up to 8 kHz response characteristic analysis is available and measurement and simulation of mechanical characteristics, current loops, and frequency-domain characteristics of speed/position control (open-loop and closed-loop) are supported.

Note

- Before frequency domain measurement, you need to set H02.00 to the corresponding speed mode or position mode. Other modes may trigger an abnormal servo state alarm.
- During the measurement, do not disconnect the drive from the software, otherwise the measurement process will be interrupted.

Procedure

1. **Generate a measurement curve**

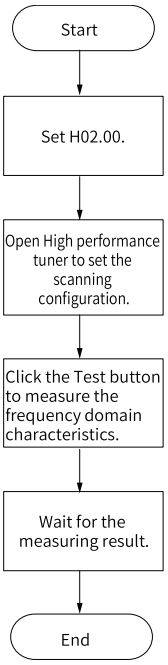


Figure 7-23 Process for generating a measurement curve

a. In the "Work Space" section, select "High performance tuner" and click "Sweep configuration".



Figure 7-24 Sweep configuration

☆ Related parameters:

Parameter	Name	Unit
H09.71	Low-frequency starting frequency	Hz
H09.72	Termination frequency	Hz
H09.73	Low-frequency points	-
H09.74	Excitation amplitude	%
H09.75	High-frequency starting frequency	Hz
H09.76	High frequency points	-

b. After the sweep completes, the frequency-domain characteristics are generated. In the following figure, the red and orange curves indicate the measured values and the green and brown curves indicate the simulation values.

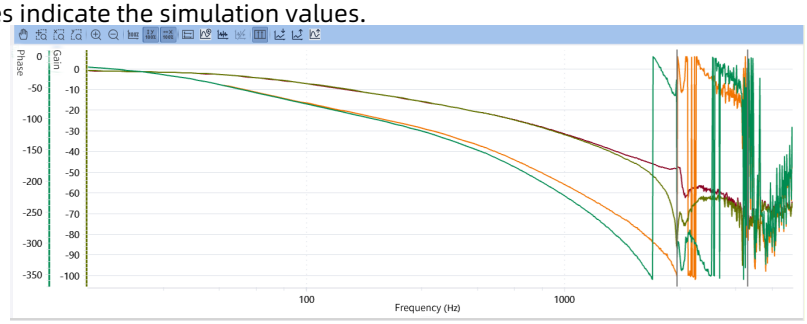


Figure 7-25 Frequency-domain curves (red and orange curves: measured values, green and brown curves: simulation values)

Note

- To avoid large vibration during the test, set the current excitation to 10% during initial execution.
- The analysis waveform may be distorted if the current excitation is too low.
- If vibration is present during the test, and cannot be eliminated by reducing current excitation, possible causes and measures are:
  - 1) The gain is too high. Reduce the speed gain or set the notch based on the auto-tuned resonance point.
  - 2) The set inertia ratio is too high. Rectify the setting.

2. **Tune loop control**

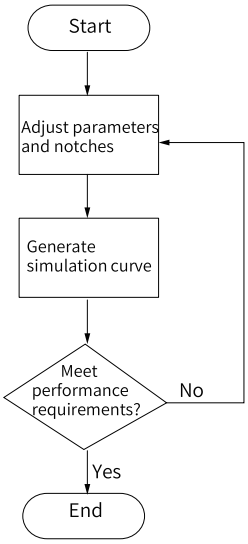


Figure 7-26 Process of loop tuning

After you tune the parameter settings and four notches, a simulation curve is generated, which reflects the effect of parameter tuning on the system.

☆ Related parameters:

Parameter	Name	Parameter type
H08.00	Speed loop gain	Gain
H08.01	Speed loop integral time	Gain
H08.02	Position loop gain	Gain
H08.05	Inertia ratio	Gain

Parameter	Name	Parameter type
H07.05	Torque reference filter	Filter
H09.77 to H09.81	Biquad filter	Filter
H09.12 to H09.23	Notch	Filter

Note

Notch filter 1 becomes a notch only when it is not enabled. It can be configured as first-order low-pass, second-order low-pass, lead-lag, or custom biquad filter.

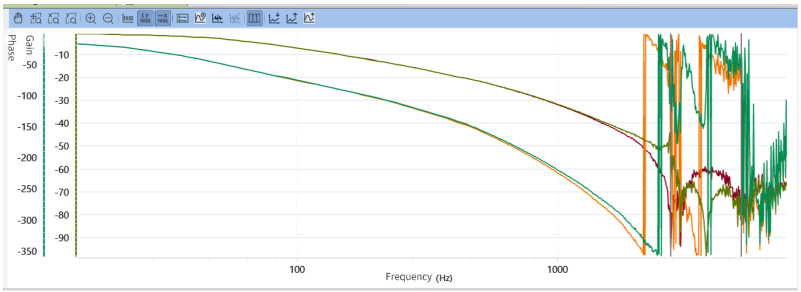


Figure 7-27 Comparison between the simulation curve of notch 2 and the measurement curve

8 Parameter Descriptions

8.1 H00 Servo Motor Parameters

H00.00 **Motor code**

Comm. address:	2000-01h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	14101	Change mode:	At stop

Value range:

20000: Linear motor - Pulse-type encoder

14202: Linear motor - Inovance communication-type 23-bit encoder

20001: DDR motor - Pulse-type encoder

14201: DDR motor - Inovance communication-type 23-bit encoder

20002: Rotary motor - Pulse-type encoder

14000: Rotary motor - Inovance communication-type 20-bit encoder

14101: Rotary motor - Inovance communication-type 23-bit encoder

14020: Rotary motor - Harmonic 20-bit encoder - 2.5 M baud rate

14021: Rotary motor - Harmonic 17-bit encoder - 2.5 M baud rate

14022: Rotary motor - Harmonic 17-bit encoder - 4 M baud rate

14120: Rotary motor - Nikon 20-bit encoder - 2.5 M baud rate

14121: Rotary motor - Nikon 17-bit encoder - 2.5 M baud rate

14122: Rotary motor - Nikon 17-bit encoder - 4 M baud rate

14130: Rotary motor - TAMAGAWA 17-bit encoder

14131: Rotary motor - TAMAGAWA 23-bit encoder

Parameter description

20000: Linear motor - Pulse-type encoder

14202: Linear motor - Inovance communication-type 23-bit encoder

20001: DDR motor - Pulse-type encoder

14201: DDR motor - Inovance communication-type 23-bit encoder

20002: Rotary motor - Pulse-type encoder

14000: Rotary motor - Inovance communication-type 20-bit encoder

14101: Rotary motor - Inovance communication-type 23-bit encoder

14020: Rotary motor - Harmonic 20-bit encoder - 2.5 M baud rate

14021: Rotary motor - Harmonic 17-bit encoder - 2.5 M baud rate

14022: Rotary motor - Harmonic 17-bit encoder - 4 M baud rate

14120: Rotary motor - Nikon 20-bit encoder - 2.5 M baud rate

14121: Rotary motor - Nikon 17-bit encoder - 2.5 M baud rate

14122: Rotary motor - Nikon 17-bit encoder - 4 M baud rate

14130: Rotary motor - TAMAGAWA 17-bit encoder

14131: Rotary motor - TAMAGAWA 23-bit encoder

H00.02 **Customized No.**

Comm. address:	2000-03h	Effective mode:	-

Min. value:	0.00	Unit:	-
Max. value:	42949672.95	Data type:	UInt32
Default value:	0.00	Change mode:	Read-only

Value range:
0.00 to 42949672.95
Description
Differentiates the customized MCU software version, which is not applicable to standard models.

H00.04 **Encoder version**

Comm. address:	2000-05h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Description
Saved in the encoder and used to differentiate the encoder software version.

H00.05 **Bus motor code**

Comm. address:	2000-06h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Description
Displays the code of the bus encoder motor, which is determined by the motor model and unchangeable.

H00.06 **Non-standard FPGA code**

Comm. address:	2000-07h	Effective mode:	-
Min. value:	0.00	Unit:	-
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	Read-only

Value range:
0.00 to 655.35
Description
Differentiates the customized FPGA software version, which is not applicable to standard models.

H00.07 **STO version**

Comm. address:	2000-08h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16

Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Description
Displays the software version of STO function.

H00.08 **Bus encoder type**

Comm. address:	2000-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Description
14100: Multi-turn absolute encoder
Others: Single-turn absolute encoder

H00.40 **Motor control type**

Comm. address:	2000-29h	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	2	Change mode:	Read-only

Value range:
0: General-purpose rotary motor (ROT)
1: Direct drive rotary motor (DDR)
2: Direct drive linear motor (DDL)
3: Voice coil motor (VOL)
Parameter description
Supported motor types:
0: General-purpose rotary motor (ROT)
1: Direct drive rotary motor (DDR)
2: Direct drive linear motor (DDL)
3: Voice coil motor (VOL)

H00.45 **Encoder pitch 1**

Comm. address:	2000-2Eh	Effective mode:	Next power-on
Min. value:	0.00	Unit:	[mm]/[deg]
Max. value:	655.35	Data type:	UInt16
Default value:	2.00	Change mode:	At stop

Value range:
0.00 to 655.35
Description
Defines the encoder pitch characteristics, which should be used together with encoder pitch fluctuation suppressor 1. See details in H08.90.

H00.46 **Encoder pitch 2**

Comm. address:	2000-2Fh	Effective mode:	Next power-on
Min. value:	0.00	Unit:	[mm]/[deg]
Max. value:	655.35	Data type:	UInt16
Default value:	0.50	Change mode:	At stop

Value range:
0.00 to 655.35
Description
Defines the encoder pitch characteristics, which should be used together with encoder pitch fluctuation suppressor 2. See details in H08.90.

H00.48 **Linear motor pole pitch (N-S)**

Comm. address:	2000-31h	Effective mode:	Next power-on
Min. value:	0.01	Unit:	mm
Max. value:	655.35	Data type:	UInt16
Default value:	16.00	Change mode:	At stop

Value range:
0.01 to 655.35
Description
Defines the pole pitch between N-S of the linear motor.

H00.49 **Direct drive encoder resolution**

Comm. address:	2000-32h	Effective mode:	Next power-on
Min. value:	0.001	Unit:	um/p
Max. value:	65.535	Data type:	UInt16
Default value:	1.000	Change mode:	At stop

Value range:
0.001 to 65.535
Description
Defines the resolution of the linear motor readhead.

H00.55 **Rated torque (Uint32)**

Comm. address:	2000-38h	Effective mode:	Next power-on
Min. value:	0.00	Unit:	[N]/[N·m]
Max. value:	42949672.95	Data type:	UInt32
Default value:	2.00	Change mode:	At stop

Value range:
0.00 to 42949672.95
Description
Defines the rated torque of the motor.

H00.57 **Max. torque (Uint32)**

Comm. address:	2000-3Ah	Effective mode:	Next power-on

Min. value:	0.00	Unit:	[N]/[N·m]
Max. value:	42949672.95	Data type:	UInt32
Default value:	7.00	Change mode:	At stop

Value range:
0.00 to 42949672.95
Description
Defines the maximum motor torque.

H00.59 **Encoder counting direction**

Comm. address:	2000-3Ch	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Forward
1: Reverse
Description
Defines the motor phase sequence.
0: Forward
1: Reverse

8.2 H01 Drive Parameters

H01.00 **MCU software version**

Communication address:	2001-01h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Parameter description
Displays the MCU software version.

H01.01 **FPGA software version**

Communication address:	2001-02h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Parameter description
Displays the FPGA software version.

H01.02 **Servo drive series No.**

Communication address:	2001-03h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the servo drive series number.

H01.06 **Board card software version**

Comm. address:	2001-07h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Parameter description
Displays the board card software version.

H01.10 **Drive series No.**

Comm. address:	2001-0Bh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	3	Change mode:	At stop

Value range:
2: S1R6
3: S2R8
5: S5R5
6: S7R6
7: S012
8: S018
9: S022
10: S027
10001: T3R5
10002: T5R4
10003: T8R4
10004: T012
10005: T017
10006: T021
10007: T026
Parameter description

Displays the drive series number.
2: S1R6
3: S2R8
5: S5R5
6: S7R6
7: S012
8: S018
9: S022
10: S027
10001: T3R5
10002: T5R4
10003: T8R4
10004: T012
10005: T017
10006: T021
10007: T026

H01.11 **DC-AC voltage level**

Communication address:	2001-0Ch	Effective mode:	-
Min. value:	0	Unit:	V
Maximum value:	65535	Data type:	UInt16
Default value:	220	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Defines the DC-AC voltage level.

H01.12 **Rated power of the drive**

Communication address:	2001-0Dh	Effective mode:	-
Min. value:	0.00	Unit:	kW
Max. value:	42949672.95	Data type:	UInt32
Default value:	0.40	Change mode:	Read-only

Value range:
0.00 to 42949672.95
Description
Displays the rated power of the drive.

H01.14 **Maximum output power of the drive**

Communication address:	2001-0Fh	Effective mode:	-
Min. value:	0.00	Unit:	kW
Max. value:	42949672.95	Data type:	UInt32
Default value:	0.40	Change mode:	Read-only

Value range:

0.00 to 42949672.95

Description

Displays the maximum output power of the drive.

H01.16 **Rated output current of the drive**

Communication address:	2001-11h	Effective mode:	-
Min. value:	0.00	Unit:	A
Max. value:	42949672.95	Data type:	UInt32
Default value:	2.80	Change mode:	Read-only

Value range:

0.00 to 42949672.95

Description

Displays the rated output current of the drive.

H01.18 **Maximum output current of the drive**

Communication address:	2001-13h	Effective mode:	-
Min. value:	0.00	Unit:	A
Max. value:	42949672.95	Data type:	UInt32
Default value:	10.10	Change mode:	Read-only

Value range:

0.00 to 42949672.95

Description

Displays the maximum output current of the drive.

H01.40 **DC bus overvoltage protection threshold**

Communication address:	2001-29h	Effective mode:	Real time
Min. value:	0	Unit:	V
Max. value:	2000	Data type:	UInt16
Default value:	420	Change mode:	Real time

Value range:

0 to 2000

Parameter description

Displays the DC bus overvoltage protection threshold.

H01.75 **Current loop amplification coefficient**

Comm. address:	2001-4Ch	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	655.35	Data type:	UInt16
Default value:	1.00	Change mode:	Real time

Range:

0.00 to 655.35

Description

Displays the current loop amplification factor.

H01.88 **Junction temperature parameter version 1**

Comm. address:	2001-59h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Parameter description
Display the version 1 of the junction temperature parameter.

H01.89 **Junction temperature parameter version 2**

Comm. address:	2001-5Ah	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays version 2 of the junction temperature parameter.

H01.90 **Motor attribute mask code**

Comm. address:	2001-5Bh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
The setpoint 1 indicates that the bit function of H00.60 is being masked.

8.3 H02 Basic Control Parameters

H02.00 **Control mode selection**

Communication address:	2002-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	8	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0: Speed control mode
1: Position control mode
2: Torque control mode
3: Torque/Speed control mode
4: Speed/Position control mode
5: Torque/Position control mode
6: Torque/Speed/Position compound mode
7: Process segment
8: CANopen mode

Parameter description

0: Speed control mode
1: Position control mode
2: Torque control mode
3: Torque/Speed control mode
4: Speed/Position control mode
5: Torque/Position control mode
6: Torque/Speed/Position compound mode
7: Process segment
8: CANopen mode

H02.01 **Absolute system selection**

Comm. address:	2002-02h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Incremental mode
1: Absolute position linear mode
2: Absolute position rotation mode
3: Absolute position linear mode (without encoder overflow alarm)
4: Absolute position single-turn mode

Parameter description

Defines the absolute encoder system mode.

0: Incremental mode
1: Absolute position linear mode
2: Absolute position rotation mode
3: Absolute position linear mode (without encoder overflow alarm)
4: Absolute position single-turn mode

H02.02 **Direction of rotation**

Comm. address:	2002-03h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:


0: CCW direction as the forward direction

1: CW direction as the forward direction

Parameter description

Defines the forward direction of the motor when viewed from the motor shaft side.

Setpoint	Direction of rotation	Remarks
0	CCW direction as forward direction	When a forward command is input, the motor rotates in CCW direction viewed from the motor shaft side, that is, the motor rotates counterclockwise.
1	CW direction as forward direction	When a forward command is input, the motor rotates in CW direction viewed from the motor shaft side, that is, the motor rotates clockwise.

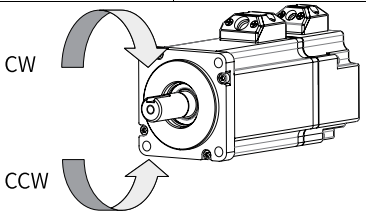

H02.03 **Output pulse phase**

Communication address:	2002-04h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop



Value range:

0: Phase A leads phase B

1: Phase A lags behind phase B

Parameter description

Defines the relationship between phase A and phase B on the condition that the motor direction of rotation remains unchanged when pulse output is enabled.

Setpoint	Output pulse phase	Remarks
0	Phase A advancing phase B	Phase A leads phase B by 90° in encoder frequency-division output pulses. 
1	Phase A lagging phase B	Phase A lags behind phase B by 90° in encoder frequency-division output pulses. 

H02.05 **Stop mode at S-OFF**

Comm. address:	2002-06h	Effective mode:	At stop
Min. value:	-4	Unit:	-
Max. value:	2	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:

-4: Stop based on ramp 2, keeping dynamic braking state

-3: Stop at zero speed, keeping dynamic braking state

-2: Stop based on ramp 1, keeping dynamic braking state

-1: Dynamic braking stop, keeping dynamic braking state

0: Coast to stop, keeping de-energized state

1: Stop based on ramp 1, keeping de-energized state

2: Dynamic braking stop, keeping de-energized state

Parameter description

Defines the deceleration mode of the motor for stopping rotating upon S-OFF and the motor state after stop.

-4: Ramp to stop based on ramp 2, keeping dynamic braking state

-3: Stop at zero speed, keeping dynamic braking state

-2: Ramp to stop based on ramp 1, keeping dynamic braking state

-1: Dynamic braking stop, keeping dynamic braking state

0: Coast to stop, keeping de-energized state

1: Dynamic braking stop, keeping de-energized state

2: Dynamic braking stop, keeping dynamic braking state

Note: After the brake is enabled, H02.08 will be forcibly set to 2 (Dynamic braking stop, keeping dynamic braking state).

H02.06 **Stop mode at No.2 fault**

Comm. address:	2002-07h	Effective mode:	At stop
Min. value:	-5	Unit:	-
Maximum value:	4	Data type:	Int16
Default value:	2	Change mode:	Real time

Value range:

-5: Stop at zero speed, keeping dynamic braking state

-4: Stop at emergency stop torque, keeping dynamic braking state

-3: Stop based on ramp 2, keeping dynamic braking state

-2: Stop based on ramp 1, keeping dynamic braking state

-1: Dynamic braking stop, keeping dynamic braking state

0: Coast to stop, keeping de-energized state

1: Stop based on ramp 1, keeping de-energized state

2: Stop based on ramp 2, keeping de-energized state

3: Stop at emergency stop torque, keeping de-energized state

4: Dynamic braking stop, keeping de-energized state

Parameter description

Defines the deceleration mode of the servo motor for stopping rotating and the servo motor status when a No. 2 fault occurs.

-5: Stop at zero speed, keeping dynamic braking state

-4: Stop at emergency-stop torque, keeping dynamic braking state

-3: Ramp to stop based on ramp 2, keeping dynamic braking state

-2: Ramp to stop based on ramp 1, keeping dynamic braking state

-1: Dynamic braking stop, keeping dynamic braking state
0: Coast to stop, keeping de-energized state
1: Ramp to stop as defined by 6084h/609Ah (HM), keeping de-energized state
2: Ramp to stop as defined by 6085h, keeping de-energized state
3: Stop at emergency-stop torque, keeping de-energized state
4: Dynamic braking stop, keeping de-energized state
Note: After the brake is enabled, H02.06 will be forcibly set to -3 (Stop at emergency-stop torque as defined by 6085h, keeping de-energized state).

H02.07 **Stop mode at overtravel**

Communication address:	2002-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0: Coast to stop, keeping de-energized state
1: Stop at zero speed, keeping position lock state
2: Stop at zero speed, keeping de-energized state
3: Stop based on ramp 2, keeping de-energized state
4: Stop based on ramp 2, keeping position lock state
5: Dynamic braking stop, keeping de-energized state
6: Dynamic braking stop, keeping dynamic braking state
7: Not responding to overtravel
Parameter description
Defines the deceleration mode of the motor for stopping rotating and the servo motor status when overtravel occurs.
0: Coast to stop, keeping de-energized state
1: Stop at zero speed, keeping position lock state
2: Stop at zero speed, keeping de-energized state
3: Stop based on ramp 2, keeping de-energized state
4: Stop based on ramp 2, keeping position lock state
5: Dynamic braking stop, keeping de-energized state
6: Dynamic braking stop, keeping dynamic braking state
7: Not responding to overtravel
Note: Set H02.07 to 7. After hitting the limit signal, some PLC can stop sending position references even if the drive does not respond, so the drive may stop.
Note: After the brake function is enabled, H02.07 will be forcibly set to 4 (Ramp to stop as defined by 6085h, keeping position lock state).

H02.08 **Stop mode at No. 1 fault**

Comm. address:	2002-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	2	Change mode:	At stop

Value range:

0: Coast to stop, keeping de-energized state

1: Dynamic braking stop, keeping de-energized state

2: Dynamic braking stop, keeping dynamic braking state

Parameter description

Defines the deceleration mode of the motor for stopping rotating and the motor state when a No. 1 fault occurs.

0: Coast to stop, keeping de-energized state

1: Dynamic braking stop, keeping de-energized state

2: Dynamic braking stop, keeping dynamic braking state

Note: After the brake is enabled, H02.08 will be forcibly set to 2 (Dynamic braking stop, keeping dynamic braking state).

H02.09 Delay from brake output ON to command received

Communication address:	2002-0Ah	Effective mode:	At stop
Min. value:	0	Unit:	ms
Max. value:	500	Data type:	UInt16
Default value:	250	Change mode:	Real time

Value range:

0 to 500

Parameter description

Defines the delay from the moment the brake output signal is ON to the moment the drive starts to receive commands after power-on.

H02.10 Delay from brake output OFF to motor de-energized

Comm. address:	2002-0Bh	Effective mode:	Real time
Min. value:	50	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	150	Change mode:	Real time

Value range:

50 to 1000

Parameter description

Defines the delay time from motor standstill (de-energized) to brake output OFF.

H02.11 Motor speed threshold at brake output OFF in rotation state

Communication address:	2002-0Ch	Effective mode:	Real time
Min. value:	20	Unit:	rpm
Max. value:	3000	Data type:	UInt16
Default value:	30	Change mode:	Real time

Value range:

20 to 3000

Parameter description

Defines the motor speed threshold when brake (BK) output is OFF in the rotation state.

H02.12 Delay from S-ON off to brake output off in the rotary state

Communication address:	2002-0Dh	Effective mode:	Real time

Min. value:	1	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
1 to 65535
Parameter description
Defines the delay time from BK OFF to S-ON OFF when the motor is in the rotation state.

H02.15 **Alarm display on the LED**

Communication address:	2002-10h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Immediately output alarm message
1: Do not output alarm message
Parameter description
Defines whether to switch the keypad to the fault display mode when a No. 3 alarm occurs.
0: Immediately output alarm message
1: Do not output alarm message

H02.17 **Stop mode upon main circuit power failure**

Comm. address:	2002-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	2	Change mode:	Real time

Value range:
0: Keep current action
1: Stop upon fault as defined by H02.06
2: Stop at S-ON OFF as defined by H02.05
3: Stop quickly as defined by H02.18
Parameter description
Defines the stop mode of the motor for stopping rotating upon main circuit power failure.
0: Keep current action
1: Stop upon fault as defined by H02.06
2: Stop at S-ON OFF as defined by H02.05
3: Stop quickly as defined by H02.18

H02.18 **Quick stop mode**

Comm. address:	2002-13h	Effective mode:	At stop
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	2	Change mode:	Real time

Value range:

0: Coast to stop, keeping de-energized state
1: Stop by ramp 1, keeping de-energized state
2: Stop by ramp 2, keeping de-energized state
3: Stop at emergency stop torque, keeping de-energized state
5: Stop by ramp 1, keeping position lock state
6: Stop by ramp 2, keeping position lock state
7: Stop at emergency stop torque, keeping position lock state

Parameter description

Defines the deceleration mode of the motor for stopping rotating upon quick stop and the motor state after stop.

0: Coast to stop, keeping de-energized state
1: Ramp to stop based on ramp 1, keeping de-energized state
2: Ramp to stop based on ramp 2, keeping de-energized state
3: Stop at emergency stop torque, keeping de-energized state
5: Ramp to stop based on ramp 1, keeping position lock state
6: Ramp to stop based on ramp 2, keeping position lock state
7: Stop at emergency stop torque, keeping position lock state

Note: After the brake is enabled, if the setpoint of H02.18 is lower than 4, this parameter will be set to 2 forcibly.

H02.21 Min. allowable resistance of braking resistor

Comm. address:	2002-16h	Effective mode:	-
Min. value:	1	Unit:	Ω
Maximum value:	1000	Data type:	UInt16
Default value:	40	Change mode:	Read-only

Value range:

1 to 1000

Parameter description

The minimum allowable resistance of the braking resistor is only related to the drive model.

H02.22 Power of built-in braking resistor

Communica-tion address:	2002-17h	Effective mode:	-
Min. value:	0	Unit:	W
Maximum value:	65535	Data type:	UInt16
Default value:	50	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

The power of the built-in braking resistor is dependent on the drive model and cannot be modified.

H02.23 Resistance of built-in braking resistor

Communica-tion address:	2002-18h	Effective mode:	-

Min. value:	0	Unit:	Ω
Max. value:	65535	Data type:	UInt16
Default value:	50	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
The resistance of the built-in braking resistor is dependent on the drive model and cannot be modified.

Table 8–1 Braking resistor specifications

Drive model	Specifications of built-in braking resistors			Min. allowable resistance of external braking resistor (Ω) (H02.21)
	Resistance (Ω)	Power (Pr) (W)	Processing power Pa (W)	
SV670*S1R6I-*INT	-	-	-	40
SV670*S2R8I-*INT	-	-	-	
SV670*S5R5I-*INT	50	50	40	
SV670*S7R6I-*INT	25	80	64	20
SV670*S012I-*INT				15
SV670*S018I-*INT	20	100	80	20
SV670*S022I-*INT				
SV670*S027I-*INT				
SV670*T5R4I-*INT	100	80	64	60
SV670*T8R4I-*INT	50			45
SV670*T012I-*INT				40
SV670*T017I-*INT	35	100	80	35
SV670*T021I-*INT				25
SV670*T026I-*INT				

H02.24 **Resistor heat dissipation coefficient**

Communication address:	2002-19h	Effective mode:	Real time
Min. value:	10	Unit:	%
Max. value:	100	Data type:	UInt16
Default value:	30	Change mode:	Real time

Value range:
10 to 100
Parameter description
Defines the heat dissipation coefficient of the braking resistor, which is applicable to both external and built-in braking resistors.
Set this parameter properly according to actual heat dissipation conditions of the resistor.
Recommendation:
Generally, the value of H02.24 cannot exceed 30% for natural cooling.
The value of H02.24 cannot exceed 50% for forced air cooling.

H02.25 **Braking resistor type**

Communication address:	2002-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	3	Change mode:	Real time

Value range:

0: Built-in

1: External, natural cooling

2: External, forced air cooling

3: No resistor needed

Parameter description

Defines the resistor type and the mode of absorbing and releasing the braking energy.

0: Built-in

1: External, natural cooling

2: External, forced air cooling

3: No resistor needed

H02.26 **Power of external braking resistor**

Comm. address:	2002-1Bh	Effective mode:	Real time
Min. value:	1	Unit:	W
Maximum value:	65535	Data type:	UInt16
Default value:	40	Change mode:	Real time

Value range:

1 to 65535

Parameter description

Defines the power of the external braking resistor.

H02.27 **Resistance of external braking resistor**

Communication address:	2002-1Ch	Effective mode:	Real time
Min. value:	15	Unit:	Ω
Maximum value:	1000	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:

15 to 1000

Parameter description

Defines the resistance of the external braking resistor.

H02.28 **Parameter initialization option**

Comm. address:	2002-1Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Parameters in group H02 and above initialized
1: Parameters in group H00, H02 and above initialized
2: All parameters initialized (default values used for model-related parameters)
Parameter description
Defines the option for restoring default settings.
0: Parameters in group H02 and above initialized
1: Parameters in group H00, H02 and above initialized
2: All parameters initialized (default values used for model-related parameters)

H02.30 **User password**

Communication address:	2002-1Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the user password.

H02.31 **System parameter initialization**

Communication address:	2002-20h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: No operation
1: Restore default settings
2: Clear fault records
Parameter description
Restores default values or clears fault records.
0: No operation
1: Restore default settings
2: Clear fault records

H02.32 **Selection of parameters in group H0b**

Comm. address:	2002-21h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	50	Change mode:	Real time

Range:
0 to 99
Parameter description
Defines the offset of the parameter to be displayed on the keypad.

For example, the setpoint 0 indicates the value of H0b.00 (Motor speed actual value) is displayed on the keypad.
The setpoint 1 indicates the value of H0b.01 is displayed on the keypad.

H02.35 **Keypad data update frequency**

Comm. address:	2002-24h	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Maximum value:	20	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 20
Parameter description
Defines the keypad data refresh frequency.

H02.38 **Overload time of external resistor**

Comm. address:	2002-27h	Effective mode:	Next power-on
Min. value:	0	Unit:	s
Max. value:	200	Data type:	UInt16
Default value:	40	Change mode:	Real time

Value range:
0 to 200
Parameter description
Defines the overload time threshold of the external braking resistor.

H02.41 **Manufacturer password**

Communica-tion address:	2002-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Enter the manufacturer password to access the manufacturer-specific parameters.

H02.47 **Delay time from power cable breakage to brake OFF**

Comm. address:	2002-30h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the delay time from power cable disconnection to brake OFF.

8.4 H03 Terminal Input Parameters

H03.00 **DI function assignment 1 (activated upon power-on)**

Communication address:	2003-01h	Effective mode:	Next power-on
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:

0: Corresponding to null

1: Corresponding to FunIN.1

2: Corresponding to FunIN.2

4: Corresponding to FunIN.3

8: Corresponding to FunIN.4

16: Corresponding to FunIN.5

32: Corresponding to FunIN.6

64: Corresponding to FunIN.7

128: Corresponding to FunIN.8

256: Corresponding to FunIN.9

512: Corresponding to FunIN.10

1024: Corresponding to FunIN.11

2048: Corresponding to FunIN.12

4096: Corresponding to FunIN.13

8192: Corresponding to FunIN.14

16384: Corresponding to FunIN.15

32768: Corresponding to FunIN.16

Parameter description

Allows a certain DI function (FunIN.1 to FunIN.16) to be activated immediately at next power-on.

H03.01 **DI function assignment 2 (activated upon power-on)**

Communication address:	2003-02h	Effective mode:	Next power-on
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:

0: Corresponding to null
1: Corresponding to FunIN.17
2: Corresponding to FunIN.18
4: Corresponding to FunIN.19
8: Corresponding to FunIN.20
16: Corresponding to FunIN.21
32: Corresponding to FunIN.22
64: Corresponding to FunIN.23
128: Corresponding to FunIN.24
256: Corresponding to FunIN.25
512: Corresponding to FunIN.26
1024: Corresponding to FunIN.27
2048: Corresponding to FunIN.28
4096: Corresponding to FunIN.29
16384: Corresponding to FunIN.31
32768: Corresponding to FunIN.32

Parameter description

Allows a certain DI function (FunIN.17 to FunIN.32) to be activated immediately at next power-on.

H03.02 **DI1 function selection**

Communication address:	2003-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	14	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2

40: Multiple-speed reference enabled
41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI1.

H03.03 **DI1 logic selection**

Comm. address:	2003-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI1 when the function assigned to DI1 is active.

H03.04 **DI2 function selection**

Communication address:	2003-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	15	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI2.

H03.05 **DI2 logic selection**

Communication address:	2003-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI2 when the function assigned to DI2 is active.

H03.06 **DI3 function selection**

Communication address:	2003-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	13	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI3.

H03.07 **DI3 logic selection**

Communication address:	2003-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI3 when the function assigned to DI3 is active.

H03.08 **DI4 function selection**

Communication address:	2003-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	2	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI4.

H03.09 **DI4 logic selection**

Communication address:	2003-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI4 when the function assigned to DI4 is active.

H03.10 **DI5 function selection**

Communication address:	2003-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI5.

H03.11 **DI5 logic selection**

Communication address:	2003-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI5 when the function assigned to DI5 is active.

H03.12 **DI6 terminal function selection**

Comm. address:	2003-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI6.

H03.13 **DI6 terminal logic selection**

Comm. address:	2003-0Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI6 when the function assigned to DI6 is active.

H03.14 **DI7 function selection**

Comm. address:	2003-0Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	45	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI7.

H03.15 DI7 terminal logic selection

Comm. address:	2003-10h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI7 when the function assigned to DI7 is active.

H03.16 DI8 terminal function selection

Communication address:	2003-11h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	31	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
38: Touch probe 1
39: Touch probe 2
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
45: Interrupt positioning enable
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

Defines the function of DI8.

H03.17 DI8 terminal logic selection

Comm. address:	2003-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open
1: Closed

Parameter description

Defines the level logic of DI8 when the function assigned to DI8 is active.

H03.34 DI function assignment 3 (activated upon power-on)

Communication address:	2003-23h	Effective mode:	Next power-on
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:

0: Corresponding to null
1: Corresponding to FunIN.33
2: Corresponding to FunIN.34
4: Corresponding to FunIN.35
8: Corresponding to FunIN.36
16: Corresponding to FunIN.37
32: Corresponding to FunIN.38
64: Corresponding to FunIN.39
128: Corresponding to FunIN.40
256: Corresponding to FunIN.41
512: Corresponding to FunIN.42
1024: Corresponding to FunIN.43
2048: Corresponding to FunIN.44
4096: Corresponding to FunIN.45
8192: Corresponding to FunIN.46
16384: Corresponding to FunIN.47
32768: Corresponding to FunIN.48

Parameter description

Enables a certain DI function (FunIN.33 to FunIN.37) to be activated immediately at next power-on.

H03.35 DI function assignment 4 (activated upon power-on)

Communication address:	2003-24h	Effective mode:	Next power-on
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:

0: Corresponding to null
1: Corresponding to FunIN.49
2: Corresponding to FunIN.50
4: Corresponding to FunIN.51
8: Corresponding to FunIN.52
16: Corresponding to FunIN.53
32: Corresponding to FunIN.54
64: Corresponding to FunIN.55
128: Corresponding to FunIN.56
256: Corresponding to FunIN.57
512: Corresponding to FunIN.58
1024: Corresponding to FunIN.59
2048: Corresponding to FunIN.60
4096: Corresponding to FunIN.61
8192: Corresponding to FunIN.62
16384: Corresponding to FunIN.63

Parameter description

Enables a certain DI function (FunIN.49 to FunIN.64) to be activated immediately at next power-on.

H03.49 **AI1/AI2 dead zone mode**

Comm. address:	2003-32h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 1
Description
Defines whether analog input AI1/AI2 is in dead zone mode.

H03.50 **Voltage-type AI1 offset**

Comm. address:	2003-33h	Effective mode:	Real time
Min. value:	-5000	Unit:	mV
Max. value:	5000	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:
-5000 to +5000
Parameter description
Defines the actual input voltage of AI1 when the drive sampling voltage is 0 after zero drift calibration.

H03.51 **Voltage-type AI1 input filter time constant**

Comm. address:	2003-34h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	655.35	Data type:	UInt16
Default value:	2.00	Change mode:	Real time

Range:
0.00 to 655.35
Description
Defines the filter time constant of voltage signal input from AI1.
Set this parameter properly to avoid motor reference fluctuation caused by unstable analog voltage input and reduce motor false operation caused by interference signals.
The filter function cannot eliminate or suppress the zero drift or dead zone.

H03.53 **Voltage-type AI1 dead zone**

Comm. address:	2003-36h	Effective mode:	Real time
Min. value:	0.0	Unit:	mV
Max. value:	1000.0	Data type:	UInt16
Default value:	10.0	Change mode:	Real time

Value range:
0.0 to 1000.0
Parameter description
Defines the AI1 input voltage range when the drive sampling voltage is 0.

H03.54 **Voltage-type AI1 zero drift**

Comm. address:	2003-37h	Effective mode:	Real time
Min. value:	-500.0	Unit:	mV
Max. value:	500.0	Data type:	Int16
Default value:	0.0	Change mode:	Real time

Value range:
-500.0 to +500.0
Parameter description
Zero drift refers to the voltage sampled by the drive relative to GND when the analog input voltage is 0.
Set H0d.10 (AI1 tuning) to 1 (AI1 tuning) to perform automatic tuning on AI1 zero drift. The AI1 zero drift after tuning will be saved into H03.54.

H03.55 **Voltage-type AI2 offset**

Comm. address:	2003-38h	Effective mode:	Real time
Min. value:	-5000	Unit:	mV
Max. value:	5000	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:
-5000 to +5000
Parameter description
Defines the actual input voltage of AI2 when the drive sampling voltage is 0 after zero drift calibration.

H03.56 **Voltage-type AI2 input filter time constant**

Comm. address:	2003-39h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	655.35	Data type:	UInt16
Default value:	2.00	Change mode:	Real time

Range:
0.00 to 655.35
Description
Defines the filter time constant of voltage signal input from AI2.
Set this parameter properly to avoid motor reference fluctuation caused by unstable analog voltage input and reduce motor false operation caused by interference signals.
The filter function cannot eliminate or suppress the zero drift or dead zone.

H03.58 **Voltage-type AI2 dead zone**

Comm. address:	2003-3Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	mV
Max. value:	1000.0	Data type:	UInt16
Default value:	10.0	Change mode:	Real time

Value range:
0.0 to 1000.0

Parameter description
Defines the AI2 input voltage range when the drive sampling voltage is 0.

H03.59 **Voltage-type AI2 zero drift**

Comm. address:	2003-3Ch	Effective mode:	Real time
Min. value:	-500.0	Unit:	mV
Max. value:	500.0	Data type:	Int16
Default value:	0.0	Change mode:	Real time

Value range:
-500.0 to +500.0
Parameter description
Zero drift refers to the voltage sampled by the drive relative to GND when the analog input voltage is 0.
Set H0d.10 (AI2 tuning) to 2 (AI2 tuning) to perform automatic tuning on AI2 zero drift. The AI2 zero drift after tuning will be saved into H03.59.

H03.60 **DI1 filter time**

Comm. address:	2003-3Dh	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI1. The DI function is active only after the effective level is kept within the time defined by H03.60.

H03.61 **DI2 fitter time**

Comm. address:	2003-3Eh	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI2. The DI function is active only after the effective level is kept within the time defined by H03.61.

H03.62 **DI3 filter time**

Comm. address:	2003-3Fh	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16

Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI3. The DI function is active only after the effective level is kept within the time defined by H03.62.

H03.63 **DI4 fitter time**

Comm. address:	2003-40h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI4. The DI function is active only after the effective level is kept within the time defined by H03.63.

H03.64 **DI5 filter time**

Comm. address:	2003-41h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI5. The DI function is active only after the effective level is kept within the time defined by H03.64.

H03.65 **DI6 filter time**

Comm. address:	2003-42h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI6. The DI function is active only after the effective level is kept within the time defined by H03.65.

H03.66 **DI7 filter time**

Comm. address:	2003-43h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	0.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI7. The DI function is active only after the effective level is kept within the time defined by H03.66.

H03.67 **DI8 filter time**

Comm. address:	2003-44h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Maximum value:	500.00	Data type:	UInt16
Default value:	3.00	Change mode:	Real time

Value range:
0.00 to 500.00
Parameter description
Defines the filter time of DI8. The DI function is active only after the effective level is kept within the time defined by H03.67.

H03.80 **Speed corresponding to analog 10 V**

Comm. address:	2003-51h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	3000	Change mode:	At stop

Value range:
0 to 10000
Parameter description
Defines the corresponding motor speed when the sampling voltage is 10 V.
Speed reference value = Sampling voltage ÷ 10 × H03.80

H03.81 **Torque corresponding to analog 10 V**

Comm. address:	2003-52h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	8.00	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.00 to 8.00
Parameter description

Defines the corresponding motor torque when the sampling voltage is 10 V.
Torque reference value = Sampling voltage ÷ 10 × H03.81

8.5 H04 Terminal Output Parameters

H04.00 **DO1 function selection**

Communication address:	2004-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: No function
1: Servo ready
2: Motor rotation signal
3: Zero speed signal
4: Speed matching signal
5: Positioning completed
6: Positioning near
7: Torque limited signal
8: Speed limited signal
9: Braking
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reached signal
19: Speed reached signal
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
25: Comparison output
26: Closed-loop state
30: Alarm or fault output
31: Communication-forced DO
32: EDM output

Parameter description
Defines the function of DO1.

H04.01 **DO1 logic selection**

Comm. address:	2004-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16

Default value:	0	Change mode:	Real time

Value range:
0: Normally open
1: Closed
Parameter description
Defines the level logic of DO1 when the function assigned to DO1 is active.

H04.02 **DO2 function selection**

Communication address:	2004-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	9	Change mode:	Real time

Value range:
0: No function
1: Servo ready
2: Motor rotation signal
3: Zero speed signal
4: Speed matching signal
5: Positioning completed
6: Positioning near
7: Torque limited signal
8: Speed limited signal
9: Braking
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reached signal
19: Speed reached signal
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
25: Comparison output
26: Closed-loop state
30: Alarm or fault output
31: Communication-forced DO
32: EDM output
Parameter description
Defines the function of DO2.

H04.03 **DO2 logic selection**

Comm. address:	2004-04h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Normally open
1: Closed
Parameter description
Defines the level logic of DO2 when the function assigned to DO2 is active.

H04.04 **DO3 function selection**

Communication address:	2004-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: No function
1: Servo ready
2: Motor rotation signal
3: Zero speed signal
4: Speed matching signal
5: Positioning completed
6: Positioning near
7: Torque limited signal
8: Speed limited signal
9: Braking
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reached signal
19: Speed reached signal
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
25: Comparison output
26: Closed-loop state
30: Alarm or fault output
31: Communication-forced DO
32: EDM output
Parameter description
Defines the function of DO3.

H04.05 **DO3 logic**

Comm. address:	2004-06h	Effective mode:	Real time

Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Normally open
1: Closed
Parameter description
Defines the level logic of DO3 when the function assigned to DO3 is active.

H04.06 **DO4 function selection**

Communication address:	2004-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	11	Change mode:	Real time

Value range:
0: No function
1: Servo ready
2: Motor rotation signal
3: Zero speed signal
4: Speed matching signal
5: Positioning completed
6: Positioning near
7: Torque limited signal
8: Speed limited signal
9: Braking
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reached signal
19: Speed reached signal
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
25: Comparison output
26: Closed-loop state
30: Alarm or fault output
31: Communication-forced DO
32: EDM output
Parameter description
Defines the function of DO4.

H04.07 **DO4 logic selection**

Comm. address:	2004-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open

1: Closed

Parameter description

Defines the level logic of DO4 when the function assigned to DO1 is active.

H04.08 **DO5 terminal function selection**

Communication address:	2004-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	16	Change mode:	Real time

Value range:

0: No function

1: Servo ready

2: Motor rotation signal

3: Zero speed signal

4: Speed matching signal

5: Positioning completed

6: Positioning near

7: Torque limited signal

8: Speed limited signal

9: Braking

10: Alarm

11: Fault

15: Interrupt positioning completed

16: Homing completed

17: Electrical homing completed

18: Torque reached signal

19: Speed reached signal

21: Enable completed

22: Internal command completed

23: Writing next command allowed

24: Internal motion completed

25: Comparison output

26: Closed-loop state

30: Alarm or fault output

31: Communication-forced DO

32: EDM output

Parameter description

Defines the function of DO5.

H04.09 **DO5 terminal logic selection**

Comm. address:	2004-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Normally open

1: Closed

Parameter description

Defines the level logic of DO5 when the function assigned to DO5 is active.

H04.22 **DO source**

Comm. address:	2004-17h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	31	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: DO1

0: DO1 function output

1: bit0 of H31.04

bit1: DO2

0: DO2 function output

1: bit1 of H31.04

bit2: DO3

0: DO3 function output

1: bit2 of H31.04

bit3: DO4

0: DO4 function output

1: bit3 of H31.04

bit4: DO5

0: DO5 function output

1: bit4 of H31.04

Parameter description

Defines whether the logic of a physical DO terminal is defined by the actual state of the drive or by communication.

H04.22 is displayed in decimal format on the keypad. After H04.22 is converted to a binary equivalent, setting bit(n) of H04.22 to 0 indicates that DO (n+1) logic is determined by the servo drive state. Setting bit(n) of H04.22 to 1 indicates that DO(n+1) logic is determined by communication (H31.04).

Setpoint (decimal)	Setpoint (binary)					DO logic	
	bit4	bit3	bit2	bit1	bit0	Defined by the drive state	Defined by communication (H31.04)
	DO5	DO4	DO3	DO2	DO1		
0	0	0	0	0	0	DO1 to DO5	None
1	0	0	0	0	1	DO2 to DO5	DO1
...	...	...	...	...	...	...	...
31	1	1	1	1	1	None	DO1 to DO5

Set H04.22 to a value listed in the preceding table.

H31.04 is not displayed on the keypad and can only be modified through communication. For H31.04, "bit(n) = 1" indicates the logic of DO(n+1) is active. "bit(n) = 0" indicates the logic of DO(n +1) is inactive.

H04.23 Communication-forced DO logic in non-operational state

Comm. address:	2004-18h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	31	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: DO1

0: Status unchanged

1: No output

bit1: DO2

0: Status unchanged

1: No output

bit2: DO3

0: Status unchanged

1: No output

bit3: DO4

0: Status unchanged

1: No output

bit4: DO5

0: Status unchanged

1: No output

Parameter description

Defines the DO status when communication is disconnected.

H04.50 **AO1 signal selection**

Comm. address:	2004-33h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	10	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Motor speed (1 V/1000 [mm/s]/[rpm])

1: Speed reference (1 V/1000 [mm/s]/[rpm])

2: Torque reference (1 V/100 × rated torque)

3: Position deviation (0.5 mV/1 reference unit)

4: Position deviation (0.5 mV/1 encoder unit)

5: Position reference speed (1 V/1000 [mm/s]/[rpm])

6: Positioning completed

8: AI1 voltage

9: AI2 voltage

10: H31.05

Parameter description

Defines the physical value source of AO1.

0: Motor speed (1 V/1000 [mm/s]/[rpm])

1: Speed reference (1 V/1000 [mm/s]/[rpm])

2: Torque reference (1 V/100 × rated torque)

3: Position deviation (0.5 mV/1 reference unit)

4: Position deviation (0.5 mV/1 encoder unit)

5: Position reference speed (1 V/1000 [mm/s]/[rpm])

6: Positioning completed

8: AI1 voltage

9: AI2 voltage

10: H31.05

H04.51 **AO1 offset voltage**

Comm. address:	2004-34h	Effective mode:	Real time
Min. value:	-10000	Unit:	mV
Max. value:	10000	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:

-10000 to 10000

Parameter description

Defines the actual AO1 output voltage after offset when theoretical output voltage is 0 V.

H04.52 **AO1 scaling factor**

Comm. address:	2004-35h	Effective mode:	Real time
Min. value:	-99.99	Unit:	-
Max. value:	99.99	Data type:	Int16
Default value:	1.00	Change mode:	Real time

Value range:
-99.99 to +99.99
Parameter description
Defines the actual AO1 output voltage after being processed by the scaling factor when theoretical output voltage is 1 V.

8.6 H05 Position Control Parameters

H05.00 **Main position reference source**

Comm. address:	2005-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Pulse reference
1: Step amount
2: Multi-position reference
Parameter description
Defines the position reference source in the position control mode.
0: Pulse reference
1: Step amount
2: Multi-position reference

H05.01 **Position pulse reference input terminal selection**

Communication address:	2005-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Low speed
1: High speed
Parameter description
Sets the physical input terminal based on the input pulse frequency when the pulse reference acts as the position reference source in position control mode.
0: Low speed
1: High speed

H05.02 **Number of position references per motor revolution**

Communication address:	2005-03h	Effective mode:	Next power-on
Min. value:	0	Unit:	PPR
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	At stop

Value range:
0 to 4294967295


Parameter description
Defines the number of pulses required per revolution of the motor.

H05.04 **First-order low-pass filter time constant**

Communication address:	2005-05h	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 6553.5
Parameter description
Defines the first-order low pass filter time constant of position references.

If position reference P is rectangular wave or trapezoidal wave, the position reference after first-order low pass filtering is as follows:

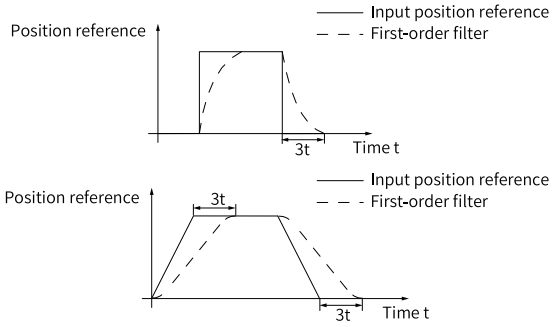

This function has no effect on the displacement (total pulses of position references). If the setting is excessive, the response delay may be too large. Set the filter time constant based on actual conditions.

H05.05 **Step size**

Communication address:	2005-06h	Effective mode:	Real time
Minimum value:	-9999	Unit:	Reference unit
Maximum value:	9999	Data type:	Int16
Default value:	50	Change mode:	At stop

Value range:
-9999 to +9999
Parameter description
Defines the position reference sum when the step reference acts as the main position reference source.

H05.06 **Moving average filter time constant 1**

Comm. address:	2005-07h	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	128.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 128.0
Parameter description
Defines the moving average filter time constant for the first group of position references.

H05.07 **Electronic gear ratio 1 (numerator)**

Communication address:	2005-08h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	1073741824	Data type:	UInt32
Default value:	8388608	Change mode:	Real time

Value range:
1 to 1073741824
Parameter description
Defines the numerator of electronic gear ratio 1 for encoder unit conversion to user unit.

H05.09 **Electronic gear ratio 1 (denominator)**

Communication address:	2005-0Ah	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	1073741824	Data type:	UInt32
Default value:	10000	Change mode:	Real time

Value range:
1 to 1073741824
Parameter description
Defines the denominator of electronic gear ratio 1 for encoder unit conversion to user unit.

H05.11 **Electronic gear ratio 2 (numerator)**

Communication address:	2005-0Ch	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	1073741824	Data type:	UInt32
Default value:	8388608	Change mode:	Real time

Value range:
1 to 1073741824
Parameter description
Defines the numerator of electronic gear ratio 2 for encoder unit conversion to user unit.

H05.13 **Electronic gear ratio 2 (denominator)**

Communication address:	2005-0Eh	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	1073741824	Data type:	UInt32
Default value:	10000	Change mode:	Real time

Value range:
1 to 1073741824
Parameter description
Defines the denominator of electronic gear ratio 2 for encoder unit conversion to user unit.

H05.15 **Pulse input format**

Communication address:	2005-10h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Direction + Pulse, positive logic

1: Direction + Pulse, negative logic

2: Phase A + phase B quadrature pulse, quadrupled frequency

3: CW + CCW

Parameter description

Defines the input pulse form when the main position reference source is pulse input.

















0: Direction + Pulse, positive logic

1: Direction + Pulse, negative logic

2: Phase A + phase B quadrature pulse, quadrupled frequency

3: CW + CCW

Table 8–2 Pulse forms

H02.02	H05.15	Pulse form	Signal	Diagram of forward pulses	Diagram of reverse pulses
0	0	Pulse + Direction Positive logic	PULSE SIGN		
	1	Pulse + Direction Negative logic	PULSE SIGN		
	2	Phase A + phase B quadrature pulse 4-frequency multiplication	PULSE (phase A) SIGN (phase B)	Phase A leads phase B by 90°. 	Phase B leads phase A by 90°. 
	3	CW + CCW	PULSE (CW) SIGN (CCW)		
1	0	Pulse + Direction Positive logic	PULSE SIGN		
	1	Pulse + Direction Negative logic	PULSE SIGN		
	2	Phase A + phase B quadrature pulse 4-frequency multiplication	PULSE (phase A) SIGN (phase B)	Phase B leads phase A by 90°. 	Phase A leads phase B by 90°. 
	3	CW + CCW	PULSE (CW) SIGN (CCW)		

Note

The rising time and falling time of position pulses must be smaller than 0.1 μs.

Table 8–3 Pulse reference specifications

Input terminal	Single-channel max. input frequency (pps)	Min. time width (us)	
High-speed pulse input	4 Mpps	t1	0.125
		t2	0.125
		t3	0.125
		t4	0.0625
		t5	0.125
		t6	0.125
Low-speed pulse input terminal	200 kpps	t1	2.5
		t2	2.5
		t3	2.5
		t4	1.25
		t5	2.5
		t6	2.5

H05.16 **Clear action selection**

Comm. address:	2005-11h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Position deviation cleared upon S-OFF and fault

1: Position deviation cleared upon S-OFF and fault

2: Position deviation cleared upon non-operational state or active DI function 35

Parameter description

Defines the condition for clearing the position deviation.

0: Position deviation cleared upon S-OFF and fault

1: Position deviation cleared upon S-OFF and fault

2: Position deviation cleared upon non-operational state or active DI function 35

H05.17 **Number of encoder frequency-division pulses**

Communica-tion address:	2005-12h	Effective mode:	Next power-on
Min. value:	0	Unit:	PPR
Max. value:	4194303	Data type:	UInt32
Default value:	2500	Change mode:	At stop

Value range:

0 to 4194303

Parameter description

Defines the number of pulses output by PAO or PBO per motor revolution.
Pulse output resolution = H05.17 × 4

H05.19 **Speed feedforward control**

Communication address:	2005-14h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0: No speed feedforward

1: Internal speed feedforward

2: H05.72

3: Zero phase

Parameter description

Defines the source of the speed loop feedforward signal.

0: No speed feedforward

1: Internal speed feedforward

2: External speed feedforward H05.72

3: Zero phase

Note: When setting external speed feedforward, the feedforward source is set through H05.72.

H05.20 **Condition for positioning completed signal output**

Comm. address:	2005-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	10	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: The positioning completion signal ON is outputted when the absolute value of position deviation is lower than the value of H05.21.
1: The positioning completion signal ON is outputted when the absolute position deviation is lower than the setpoint of H05.21 and the filtered position reference is 0.
2: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21 and the unfiltered position reference is 0.
3: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21 and the unfiltered position reference is 0. If the positioning hold time is within the time defined by H05.60 continuously and the position reference is 0, the positioning completion signal will be output. After the positioning hold time defined by H05.60 elapses, whether the positioning completion signal is outputted depends on the non-filtered position reference and absolute value of position deviation.
4: The positioning completion signal ON is outputted when the absolute position deviation is lower than the setpoint of H05.21 and the filtered position reference is 0. If the positioning hold time is within the time defined by H05.60 continuously and the position reference is 0, the positioning completion signal will be output. After the positioning hold time defined by H05.60 elapses, whether the positioning completion signal is output depends on the filtered position reference and absolute value of position deviation.
5: The positioning completion signal ON is outputted when the non-filtered position reference is 0, the zero speed signal is ON, and the absolute value of position deviation is lower than H05.21.
6: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21, the zero speed signal is ON, and the filtered position reference is 0.
7: Positioning completion is judged after the delay defined by H05.60 elapses, with unfiltered position reference being 0. The positioning completion signal ON is output when the non-filtered position reference is 0 and the absolute position deviation is lower than H05.21.
8: Positioning completion is judged after the delay defined by H05.60 elapses and the filtered position reference is 0. The positioning completion signal ON is output when the filtered position reference is 0 and the absolute position deviation is lower than H05.21.
9: Positioning completion is judged after the delay defined by H05.60 elapses when the non-filtered position reference is 0 and the absolute value of position deviation is lower than H05.21. The positioning completion signal ON is output when the non-filtered position reference is 0 and the absolute position deviation is lower than H05.21.
10: Positioning completion is judged after the delay defined by H05.60 elapses when the filtered position reference is 0 and absolute position deviation is lower than H05.21. The positioning completion signal ON is output when the filtered position reference is 0 and the absolute position deviation is lower than H05.21.

Parameter description

Defines the condition for outputting positioning completed/proximity signal. In position control mode, if the absolute value of the position deviation during operation is within the setpoint of H05.21, the drive outputs the positioning completed/proximity signal. You can set the condition for outputting the positioning completed/proximity signal in H05.20.
0: The positioning completion signal ON is outputted when the absolute value of position deviation is lower than the value of H05.21.
1: The positioning completion signal ON is outputted when the absolute position deviation is lower than the setpoint of H05.21 and the filtered position reference is 0.
2: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21 and the unfiltered position reference is 0.
3: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21 and the unfiltered position reference is 0. If the positioning hold time is within the time defined by H05.60 continuously and the position reference is 0, the positioning completion signal will be output. After the positioning hold time defined by H05.60 elapses, whether the positioning completion signal is outputted depends on the non-filtered position reference and absolute value of position deviation.
4: The positioning completion signal ON is outputted when the absolute position deviation is lower than the setpoint of H05.21 and the filtered position reference is 0. If the positioning hold time is within the time defined by H05.60 continuously and the position reference is 0, the positioning completion signal will be output. After the positioning hold time defined by H05.60 elapses, whether the positioning completion signal is output depends on the filtered position reference and absolute value of position deviation.
5: The positioning completion signal ON is outputted when the non-filtered position reference is 0, the zero speed signal is ON, and the absolute value of position deviation is lower than H05.21.
6: The positioning completion signal ON is outputted when the absolute position deviation is lower than H05.21, the zero speed signal is ON, and the filtered position reference is 0.
7: Positioning completion is judged after the delay defined by H05.60 elapses, with unfiltered position reference being 0. The positioning completion signal ON is output when the non-filtered position reference is 0 and the absolute position deviation is lower than H05.21.
8: Positioning completion is judged after the delay defined by H05.60 elapses and the filtered position reference is 0. The positioning completion signal ON is output when the filtered position reference is 0 and the absolute position deviation is lower than H05.21.
9: Positioning completion is judged after the delay defined by H05.60 elapses when the non-filtered position reference is 0 and the absolute value of position deviation is lower than H05.21. The positioning completion signal ON is output when the non-filtered position reference is 0 and the absolute position deviation is lower than H05.21.
10: Positioning completion is judged after the delay defined by H05.60 elapses when the filtered position reference is 0 and absolute position deviation is lower than H05.21. The positioning completion signal ON is output when the filtered position reference is 0 and the absolute position deviation is lower than H05.21.
Note: This parameter is active only when H02.00 is not set to 8.


H05.21 **Threshold of positioning completion**

Communication address:	2005-16h	Effective mode:	Real time
Min. value:	1	Unit:	Encoder unit

Maximum value:	65535	Data type:	UInt16
Default value:	5872	Change mode:	Real time

Value range:
1 to 65535
Parameter description
Defines the threshold of the absolute value of position deviation when the drive outputs the positioning completion signal.

Positioning completed signal: DO function 5 (FunOUT.5: COIN).

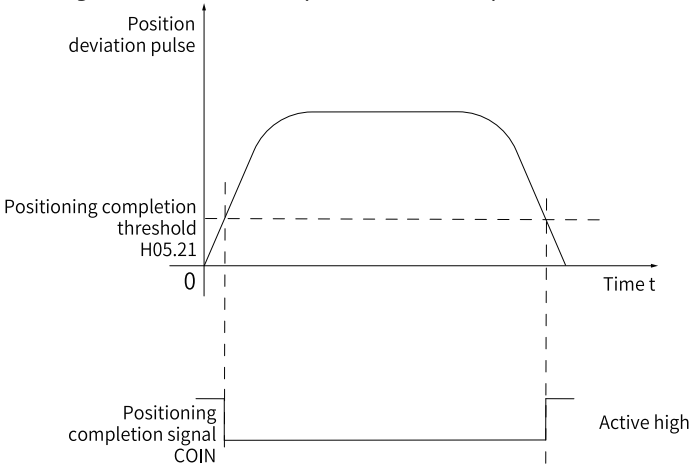

Note: This parameter is active only when H02.00 is not set to 8.

H05.22 **Threshold of proximity**

Communication address:	2005-17h	Effective mode:	Real time
Min. value:	1	Unit:	Encoder unit
Maximum value:	65535	Data type:	UInt16
Default value:	65535	Change mode:	Real time

Value range:
1 to 65535
Parameter description
Defines the threshold of the absolute value of position deviation when the drive outputs the proximity signal.
Note: This parameter is active only when H02.00 is not set to 8.

H05.24 **Displacement of interrupt positioning**

Communication address:	2005-19h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824

Parameter description

Defines the position reference for interrupt positioning.

H05.26 **Constant operating speed in interrupt positioning**

Comm. address:	2005-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:

0 to 10000

Parameter description

Defines the maximum speed during interrupt positioning.

H05.27 **Acceleration/Deceleration time of interrupt positioning**

Communication address:	2005-1Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:

0 to 65535

Parameter description

Defines the time for the motor to change from 0[mm/s]/[rpm] to 1000 [mm/s]/[rpm] at a constant speed during interrupt positioning.

H05.29 **Interrupt positioning cancellation signal**

Comm. address:	2005-1Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

0: Disable

1: Enable

Parameter description

Defines whether to cancel the interrupt positioning signal.

0: Disable

1: Enable

H05.30 **Homing enable selection**

Comm. address:	2005-1Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	8	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Disabled
1: Homing enabled through the HomingStart signal input from DI
2: Electrical homing enabled through the HomingStart signal input from DI
3: Homing started immediately upon power-on
4: Homing executed immediately
5: Electrical homing started
6: Current position as home
8: D-triggered position as home

Parameter description

Defines the homing mode and the trigger signal source.
0: Disabled
1: Homing enabled through the HomingStart signal input from DI
2: Electrical homing enabled through the HomingStart signal input from DI
3: Homing started immediately upon power-on
4: Homing executed immediately
5: Electrical homing started
6: Current position as home
8: DI-triggered position as home
Note: When H05.30 is set to 6, the position feedback is the setpoint of H05.36 regardless of the setpoint of H05.40.

H05.31 **Mode of home return**

Communication address:	2005-20h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	16	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Forward, home switch as deceleration point and home
1: Reverse, home switch as deceleration point and home
2: Forward, Z signal as deceleration point and home
3: Reverse, motor Z signal as deceleration point and home
4: Forward, home switch as deceleration point and Z signal as home
5: Reverse, home switch as deceleration point and Z signal as home
6: Forward, positive limit switch as deceleration point and home
7: Reverse, negative limit switch as deceleration point and home
8: Forward, positive limit switch as deceleration point and Z signal as home
9: Reverse, negative limit switch as deceleration point and Z signal as home
10: Forward, mechanical limit position as deceleration point and home
11: Reverse, mechanical limit position as deceleration point and home
12: Forward, mechanical limit position as deceleration point and Z signal as home
13: Reverse, mechanical limit position as deceleration point and Z signal as home
14: Forward single-turn homing
15: Reverse single-turn homing
16: Nearby single-turn homing

Parameter description

Defines the default motor direction of rotation, deceleration point, and home during homing.
0: Forward, home switch as deceleration point and home
1: Reverse, home switch as deceleration point and home
2: Forward, Z signal as deceleration point and home
3: Reverse, motor Z signal as deceleration point and home
4: Forward, home switch as deceleration point and Z signal as home
5: Reverse, home switch as deceleration point and Z signal as home
6: Forward, positive limit switch as deceleration point and home
7: Reverse, negative limit switch as deceleration point and home
8: Forward, positive limit switch as deceleration point and Z signal as home
9: Reverse, negative limit switch as deceleration point and Z signal as home
10: Forward, mechanical limit position as deceleration point and home
11: Reverse, mechanical limit position as deceleration point and home
12: Forward, mechanical limit position as deceleration point and Z signal as home
13: Reverse, mechanical limit position as deceleration point and Z signal as home
14: Forward single-turn homing
15: Reverse single-turn homing
16: Nearby single-turn homing

H05.32 **Speed in high-speed searching for home switch signal**

Communication address:	2005-21h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	3000	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:
0 to 3000
Parameter description
Defines the motor speed for searching for the deceleration point signal during homing.

H05.33 **Speed in low-speed searching for home switch signal**

Communication address:	2005-22h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	1000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the motor speed for searching for the home signal during homing.

H05.34 **Acceleration/Deceleration time during homing**

Communication address:	2005-23h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	1000	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the time for the motor to accelerate from 0 [mm/s]/[rpm] to 1000 [mm/s]/[rpm] at a constant speed during homing.

H05.35 **Home search time limit**

Communication address:	2005-24h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	10000	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the maximum time for searching the home. The unit is set by H05.66.

H05.36 **Mechanical home offset**

Communication address:	2005-25h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the absolute position of the motor after homing.

H05.38 **Frequency-division output source**

Comm. address:	2005-27h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Encoder frequency-division output
1: Pulse reference synchronous output
2: Frequency-division output inhibited
3: Second encoder frequency-division output
4: H31.01

Parameter description

Defines the output source of the pulse output terminal.

Setpoint	Output source	Remarks
0	Encoder frequency-division output	The encoder feedback signal is outputted only after being divided by the value of H05.17 during rotation of the motor. Encoder frequency-division output mode is recommended when the host controller is used for closed-loop feedback.
1	Pulse reference synchronous output	The input pulse references are outputted synchronously only when H05.00 is set to 0. When pulses of the multi-axis servo are synchronously tracked, pulse synchronous output is suggested.
2	Frequency-division output inhibited	The pulse output terminal has no output. In this case, frequency-division output terminals act as the input terminals of fully closed-loop external scale signals.
3	Second encoder frequency-division output	The encoder feedback signal is outputted only after being divided by the value of H05.17 during rotation of the motor.
4	H31.01 Reference frequency output	-

H05.39 Electronic gear ratio switchover condition

Comm. address:	2005-28h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Switchover after position reference is kept 0 for 2.5 ms

1: Switchover in real time

Parameter description

Defines the switchover condition for the electronic gear ratio. After the fully closed-loop function is enabled and H0F.00 is set to 2, the setpoint is forcibly set to 0.

When H0F.00 is set to 2, the switchover condition is 0 after the position reference is 0 and positioning has been completed for 2.5 ms. When H0F.00 is not 2, The switchover condition is when the position reference is 0 and lasts 2.5 ms

H05.40 Mechanical home offset and action upon overtravel

Comm. address:	2005-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: H05.36 as the coordinate after homing, reverse homing applied after homing triggered again on overtravel

1: H05.36 as the relative offset after homing, reverse homing applied after homing triggered again on overtravel

2: H05.36 as the coordinate after homing, reverse homing auto-applied on overtravel

3: H05.36 as the relative offset after homing, reverse homing auto-applied on overtravel

Parameter description

Defines the offset relationship between the mechanical home and mechanical zero, as well as the action upon overtravel during homing.

0: H05.36 as the coordinate after homing, reverse homing applied after homing triggered again on overtravel

1: H05.36 as the relative offset after homing, reverse homing applied after homing triggered again on overtravel

2: H05.36 as the coordinate after homing, reverse homing auto-applied on overtravel

3: H05.36 as the relative offset after homing, reverse homing auto-applied on overtravel

H05.41 **Z pulse output polarity selection**

Comm. address:	2005-2Ah	Effective mode:	Next power-on
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x1	Change mode:	At stop

Value range:

bit0: Frequency-division Z output polarity

0: Positive (high level upon active Z pulse)

1: Negative (low level upon active Z pulse)

bit1: output polarity

0: Positive (high level upon active Z pulse)

1: Negative (low level upon active Z pulse)

bit2: Inner loop probe Z signal source









0: Motor Z signal

1: Frequency-division output Z signal

Parameter description

Defines the output level when phase Z of the pulse output terminal is active.

Table 8–4 Pulse diagrams of encoder frequency-division output (H05.38 is 0)

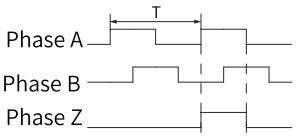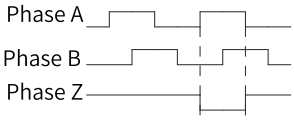H02.03 (Output pulse phase)	H05.41 (Z pulse output polarity)	Pulse output diagram of forward run	Pulse output diagram of reverse run
0	0	 Phase A leads phase B by 90°.	 Phase B leads phase A by 90°.
	1	 Phase A leads phase B by 90°.	 Phase B leads phase A by 90°.
1	0	 Phase B leads phase A by 90°.	 Phase A leads phase B by 90°.
	1	 Phase B leads phase A by 90°.	 Phase A leads phase B by 90°.

It is recommended to use the active edge outputted by Z signal when a high precision frequency-division output of Z signal is required.

Setpoint	Output polarity of Z pulse
0	Positive (high level when pulse Z is active)
1	Negative (low level when pulse Z is active)

H05.41 = 0: Falling-edge triggered; H05.41 = 1: Rising-edge triggered

H05.43 **Position pulse edge**

Communication address:	2005-2Ch	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Rising edge active

1: Falling edge active

Parameter description

Defines the valid edge of pulse reference. When it is set to 0, the falling edge of the pulse is active. When it is set to 1, the rising edge of the pulse is active.

H05.44 **Numerator of frequency-division output reduction ratio**

Comm. address:	2005-2Dh	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	16383	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
1 to 16383
Parameter description
Defines the numerator of frequency-division output reduction ratio.

H05.45 **Denominator of frequency-division output reduction ratio**

Comm. address:	2005-2Eh	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	8191	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
1 to 8191
Parameter description
Defines the denominator of frequency-division output reduction ratio.

H05.46 **DI selection of multi-turn frequency-division Z starting point**

Comm. address:	2005-2Fh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	8	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: No selection
1: DI1
2: DI2
3: DI3
4: DI4
5: DI5
6: DI6
7: DI7
8: DI8
Parameter description

Defines the starting point for frequency-division output. It is only effective when the frequency-division ratio is greater than 1.
0: No selection
1: DI1
2: DI2
3: DI3
4: DI4
5: DI5
6: DI6
7: DI7
8: DI8

H05.47 Frequency-division Z pulse width

Comm. address:	2005-30h	Effective mode:	Real time
Min. value:	0	Unit:	μs
Max. value:	400	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 400
Parameter description
Defines the minimum output width (μs) of frequency-division output PZ. When the pulse signal is used as master encoder and fully closed-loop encoder, the setpoint 0 indicates the original Z signal will be outputted. Other setpoints indicate the frequency-division Z signal will be outputted.

H05.48 Frequency-division output dead zone setting threshold

Comm. address:	2005-31h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 255
Parameter description
Defines the dead zone threshold of frequency-division output to prevent frequency-division output caused by encoder jitter.
Note: When this function is enabled, the frequency-division output pulse may not be sequential at constant low speed. Set this parameter properly.

H05.50 Mechanical gear ratio in absolute position rotation mode (numerator)

Communica-tion address:	2005-33h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	1	Change mode:	At stop

Range:

1 to 65535

Parameter description

Defines the mechanical gear ratio (numerator) in absolute position rotation mode

H05.51 **Mechanical gear ratio in absolute position rotation mode (denominator)**

Communication address:	2005-34h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	1	Change mode:	At stop

Range:

1 to 65535

Parameter description

Defines the mechanical gear ratio (denominator) in absolute position rotation mode

H05.52 **Pulses per revolution of the load in absolute position rotary mode (low-order 32 bits)**

Communication address:	2005-35h	Effective mode:	Real time
Min. value:	0	Unit:	Encoder unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	At stop

Value range:

0 to 4294967295

Parameter description

Defines the number of pulses per revolution of the rotary load in the absolute position rotary mode (low 32 bits).

H05.54 **Pulses per revolution of the load in absolute position rotary mode (high-order 32 bits)**

Communication address:	2005-37h	Effective mode:	Real time
Min. value:	0	Unit:	Encoder unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	At stop

Value range:

0 to 4294967295

Parameter description

Defines the number of pulses per revolution of the rotary load in the absolute position rotation mode (high-order 32 bits).

H05.58 **Torque threshold in homing upon hit-and-stop**

Communication address:	2005-3Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	100.0	Change mode:	Real time

Value range:

0.0 to 400.0

Parameter description

Defines the maximum positive/negative torque limit in limit-triggered homing.

H05.59 **Positioning window time**

Communication address:	2005-3Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	30000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:

0 to 30000

Parameter description

When the position deviation remains smaller than the threshold of positioning completed for more than the time set in this parameter, the positioning completed signal can output the valid state.

H05.60 **Hold time of positioning completion**

Communication address:	2005-3Dh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	30000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:

0 to 30000

Parameter description

Defines the hold time of an active positioning completion signal.

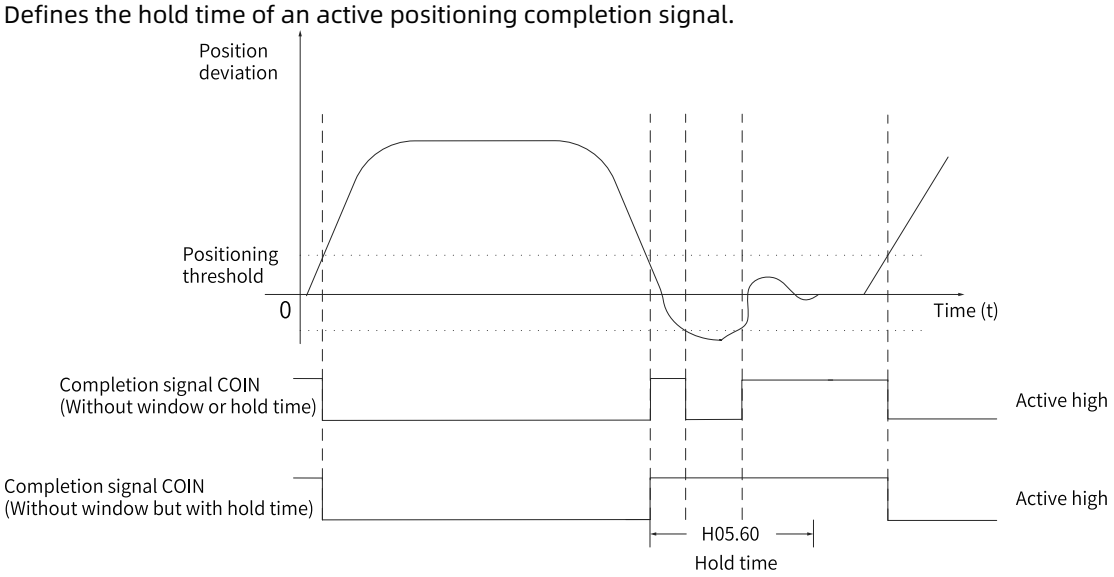


Figure 8-1 Diagram of positioning completed time window and holding time

When the retention function for positioning completed output is used, the value 0 indicates that the positioning completed signal remains active until the moment when the position reference is received for the next time.

H05.66 **Homing time unit**

Communication address:	2005-43h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	2	Change mode:	At stop

Value range:

0: 1 ms

1: 10 ms

2: 100 ms

Parameter description

Defines the homing time unit.

0: 1 ms

1: 10 ms

2: 100 ms

Note: The actual timeout is H05.35 x H05.66 (ms).

H05.71 **Motor Z signal width**

Comm. address:	2005-48h	Effective mode:	Real time
Min. value:	1	Unit:	ms
Max. value:	100	Data type:	UInt16
Default value:	4	Change mode:	Real time

Value range:

1 to 100

Parameter description

Defines the output pulse width when motor Z signal is active.

H05.72 **External speed feedforward source selection**

Comm. address:	2005-49h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

0: 60B1

1: AI1

2: AI2

Parameter description

External speed feedforward source selection

0: 60B1

1: AI1

2: AI2

H05.73 **Homing completion threshold**

Comm. address:	2005-4Ah	Effective mode:	Next power-on
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16

Default value:	1.0	Change mode:	At stop

Value range:
0.0 to 6553.5
Parameter description
Defines the position deviation condition that must be met when homing is done.

8.7 H06 Speed Control Parameters

H06.00 **Source of main speed reference A**

Comm. address:	2006-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: H06.03
1: AI1
2: AI2
Parameter description
Defines the source of main speed reference A.
0: H06.03
1: AI1
2: AI2

H06.01 **Source of auxiliary speed reference B**

Comm. address:	2006-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	5	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0: H06.03
1: AI1
2: AI2
5: Multi-speed reference
Parameter description
Defines the source of auxiliary speed reference B.
0: H06.03
1: AI1
2: AI2
5: Multi-speed reference

H06.02 **Speed reference source**

Comm. address:	2006-03h	Effective mode:	Real time
Min. value:	0	Unit:	-

Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Source of main speed reference A

1: Source of auxiliary speed reference B

2: A+B

3: Switchover between A and B

4: Communication

Parameter description

Defines the source of speed references.

Setpoint	Control mode	Remarks
0	Source of main speed reference A	The reference source is defined by H06.00.
1	Source of auxiliary speed reference B	The reference source is defined by H06.01.
2	A + B	The reference source is the product of A + B (H06.00 + H06.01).
3	Switched between A and B	The reference source is switched between A and B as defined by FunIN.4 (Cmd_SEL).
4	Communication	The speed reference is defined by operating on H31.09 through communication (unit: 0.001 RPM).

State of FunIN.4 (Cmd_ SEL)	Reference Source
Inactive	Source of main speed reference A
Active	Source of auxiliary speed reference B

H06.03 **Speed reference set through keypad**

Communication address:	2006-04h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	200	Change mode:	Real time

Value range:

-10000 to 10000

Parameter description

Defines the speed reference set through the keypad.

H06.04 **DI jog speed reference**

Comm. address:	2006-05h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	150	Change mode:	Real time

Value range:

0 to 10000

Parameter description

Defines the DI jog speed reference.

H06.05 **Acceleration ramp time of speed reference**

Comm. address:	2006-06h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 65535

Parameter description

Defines the ramp-up time of speed references.

H06.05 defines the time for the speed reference to change from 0 [mm/s]/[rpm] to 1000 [mm/s]/[rpm].

The formula for calculating the actual ramp-up/down time is as follows.

Actual ramp-up time t = (Speed reference/1000) x Ramp-up time of speed reference

H06.06 **Deceleration ramp time of speed reference**

Comm. address:	2006-07h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 65535

Parameter description

Defines the ramp-down time of speed reference.

H06.06 defines the time for the speed reference to change from 1000 [mm/s]/[rpm] to 0 [mm/s]/[rpm].

The formula for calculating the actual ramp-up/down time is as follows.

Actual ramp-down time t = (Speed reference/1000) x Ramp-down time of speed reference

H06.07 **Maximum speed limit**

Communication address:	2006-08h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	7000	Change mode:	Real time

Value range:

0 to 10000

Parameter description

Defines the maximum speed limit.

H06.08 **Positive speed limit**

Communication address:	2006-09h	Effective mode:	Real time
Min. value:	0	Unit:	rpm

Max. value:	10000	Data type:	UInt16
Default value:	7000	Change mode:	Real time

Value range:
0 to 10000
Parameter description
Defines the positive speed limit.

H06.09 **Negative speed limit**

Communication address:	2006-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	7000	Change mode:	Real time

Value range:
0 to 10000
Parameter description
Defines the negative speed limit.

H06.10 **Deceleration unit in quick stop**

Comm. address:	2006-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Multiplied by 1
1: Multiplied by 10
2: Multiplied by 100
Parameter description
Defines the deceleration unit in emergency stop.
0: Multiplied by 1
1: Multiplied by 10
2: Multiplied by 100

H06.11 **Torque feedforward control**

Communication address:	2006-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: No torque feedforward
1: Internal torque feedforward
3: Torque feedforward of STune mode 5
Parameter description

Defines the source for torque feedforward control.
0: No torque feedforward
1: Internal torque feedforward
3: Torque feedforward of STune mode 5

H06.12 Ramp-up/down time of jog speed

Comm. address:	2006-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the ramp-up/down time of speed JOG.
It indicates the time for the speed reference to change from 0 rpm to 1000 rpm or from 1000 rpm to 0 rpm.
The formula for calculating the actual ramp-up/down time is as follows.
Actual ramp-up/down time (t) = (Speed reference/1000) x Ramp-up time of speed reference

H06.13 Speed feedforward smoothing filter

Comm. address:	2006-0Eh	Effective mode:	Real time
Min. value:	0	Unit:	μs
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the speed feedforward smoothing filter time.

H06.15 Speed threshold for zero clamp

Communica-tion address:	2006-10h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
Defines the zero clamp speed threshold.

H06.16 Threshold of motor rotation state

Comm. address:	2006-11h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	1000	Data type:	UInt16
Default value:	20	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the threshold of motor rotation state.

H06.17 **Threshold of speed consistency signal**

Communication address:	2006-12h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	100	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 100
Parameter description
Defines the threshold of speed consistency signal.

H06.18 **Threshold of speed arrival signal**

Communication address:	2006-13h	Effective mode:	Real time
Min. value:	20	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	1000	Change mode:	Real time

Value range:
20 to 10000
Parameter description
Defines the threshold of speed arrival signal.

H06.19 **Threshold of zero speed output signal**

Communication address:	2006-14h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
1 to 10000
Parameter description
Defines the threshold of zero speed output signal.

H06.28 **Cogging torque ripple compensation**

Communication address:	2006-1Dh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0 to 1
Description
Used to enable cogging torque fluctuation compensation.

H06.40 **Ramp-down time of ramp 1**

Comm. address:	2006-29h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the deceleration time of ramp 1, which is the time taking from decelerating from 1000 rpm to 0 rpm.

H06.41 **Ramp-down time of ramp 2**

Comm. address:	2006-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the deceleration time of ramp 2, which is the time taking from decelerating from 1000 rpm to 0 rpm.

H06.50 **Speed S-curve enable switch**

Comm. address:	2006-33h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0: Disable
1: Enable
Parameter description
0: Accelerate/Decelerate at fixed acceleration rate
1: Accelerate/Decelerate based on the S-curve

H06.51 **Increasing acceleration 1 of speed S-curve acceleration segment**

Comm. address:	2006-34h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.52 **Decreasing acceleration 1 of speed S-curve acceleration segment**

Comm. address:	2006-35h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.53 **Increasing deceleration 1 of speed S-curve deceleration segment**

Comm. address:	2006-36h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.54 **Decreasing deceleration 1 of speed S-curve deceleration segment**

Comm. address:	2006-37h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.55 **Increasing acceleration 2 of speed S-curve acceleration segment**

Comm. address:	2006-38h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description

Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.56 **Decreasing acceleration 2 of speed S-curve acceleration segment**

Comm. address:	2006-39h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.57 **Increasing deceleration 2 of speed S-curve deceleration segment**

Comm. address:	2006-3Ah	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.58 **Decreasing deceleration 2 of speed S-curve deceleration segment**

Comm. address:	2006-3Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.59 **Increasing acceleration 3 of speed S-curve acceleration segment**

Comm. address:	2006-3Ch	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.60 **Decreasing acceleration 3 of speed S-curve acceleration segment**

Comm. address:	2006-3Dh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.61 **Increasing deceleration 3 of speed S-curve deceleration segment**

Comm. address:	2006-3Eh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.62 **Decreasing deceleration 3 of speed S-curve deceleration segment**

Comm. address:	2006-3Fh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.63 **Increasing acceleration 4 of speed S-curve acceleration segment**

Comm. address:	2006-40h	Effective mode:	Real time

Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.64 **Decreasing acceleration 4 of speed S-curve acceleration segment**

Comm. address:	2006-41h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.65 **Increasing deceleration 4 of speed S-curve deceleration segment**

Comm. address:	2006-42h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.66 **Decreasing deceleration 4 of speed S-curve deceleration segment**

Comm. address:	2006-43h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.67 **Increasing acceleration 5 of speed S-curve acceleration segment**

Comm. address:	2006-44h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.68 **Decreasing acceleration 5 of speed S-curve acceleration segment**

Comm. address:	2006-45h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.69 **Increasing deceleration 5 of speed S-curve deceleration segment**

Comm. address:	2006-46h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.70 **Decreasing deceleration 5 of speed S-curve deceleration segment**

Comm. address:	2006-47h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description

Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.71 **Increasing acceleration 6 of speed S-curve acceleration segment**

Comm. address:	2006-48h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.72 **Decreasing acceleration 6 of speed S-curve acceleration segment**

Comm. address:	2006-49h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.73 **Increasing deceleration 6 of speed S-curve deceleration segment**

Comm. address:	2006-4Ah	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.74 **Decreasing deceleration 6 of speed S-curve deceleration segment**

Comm. address:	2006-4Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.75 **Increasing acceleration 7 of speed S-curve acceleration segment**

Comm. address:	2006-4Ch	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.76 **Decreasing acceleration 7 of speed S-curve acceleration segment**

Comm. address:	2006-4Dh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.77 **Increasing deceleration 7 of speed S-curve deceleration segment**

Comm. address:	2006-4Eh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.78 **Decreasing deceleration 7 of speed S-curve deceleration segment**

Comm. address:	2006-4Fh	Effective mode:	Real time

Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

H06.79 **Increasing acceleration 8 of speed S-curve acceleration segment**

Comm. address:	2006-50h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing acceleration time at acceleration segment: The percentage of motor increasing acceleration time in the selected acceleration time.

H06.80 **Decreasing acceleration 8 of speed S-curve acceleration segment**

Comm. address:	2006-51h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at acceleration segment: The percentage of motor decreasing acceleration time in the selected acceleration time.

H06.81 **Increasing deceleration 8 of speed S-curve deceleration segment**

Comm. address:	2006-52h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Increasing deceleration time at deceleration segment: The percentage of motor increasing deceleration time in the selected deceleration time.

H06.82 **Decreasing deceleration 8 of speed S-curve deceleration segment**

Comm. address:	2006-53h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	At stop

Value range:
0.0 to 100.0
Parameter description
Eight groups of S curve smoothing parameters can be set for each speed reference.
Decreasing acceleration time at deceleration segment: The percentage of motor decreasing deceleration time in the selected deceleration time.

8.8 H07 Torque Control Parameters

H07.00 **Sources of main torque reference A**

Comm. address:	2007-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: H07.031
: AI1
2: AI2
Parameter description
Defines the source of the main torque reference A.
0: H07.031
: AI1
2: AI2

H07.01 **Sources of auxiliary torque reference B**

Comm. address:	2007-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0: H07.031
: AI1
2: AI2
Parameter description
Defines the source of auxiliary torque references.
0: H07.031
: AI1
2: AI2

H07.02 **Torque reference source**

Comm. address:	2007-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Source of main torque reference A

1: Source of auxiliary torque reference B

2: Source of A+B

3: Switched between A and B

4: Communication

Parameter description

Defines the torque reference source.

<table>
<tr><th>Setpoint</th><th>Control mode</th><th>Remarks</th></tr>
<tr><td>0</td><td>Sources of main torque reference A</td><td>The reference source is defined by H07.00.</td></tr>
<tr><td>1</td><td>Sources of auxiliary torque reference B</td><td>The reference source is defined by H07.01.</td></tr>
<tr><td>2</td><td>A + B</td><td>The reference source is the product of A+B (H07.00 +H07.01).</td></tr>
<tr><td>3</td><td>Switched between A and B</td><td>The reference source is switched between A and B as defined by FunIN.4 (Cmd_SEL).
<table>
<tr><th>State of FunIN.4 (Cmd_ SEL)</th><th>Reference Source</th></tr>
<tr><td>Inactive</td><td>Sources of main torque reference A</td></tr>
<tr><td>Active</td><td>Sources of auxiliary torque reference B</td></tr>
</table></td></tr>
<tr><td>4</td><td>Communication</td><td>The torque reference is defined by operating on H31.11 through communication.</td></tr>
</table>

H07.03 **Torque reference set through keypad**

Comm. address:	2007-04h	Effective mode:	Real time
Min. value:	-400.0	Unit:	%
Max. value:	400.0	Data type:	Int16
Default value:	0.0	Change mode:	Real time

Value range:

-400.0 to 400.0

Parameter description

Defines the torque reference.

H07.05 **Torque reference filter time constant 1**

Comm. address:	2007-06h	Effective mode:	Real time

Min. value:	0.00	Unit:	ms
Max. value:	30.00	Data type:	UInt16
Default value:	0.50	Change mode:	Real time

Value range:
0.00 to 30.00
Parameter description
Defines the torque reference filter time constant 1.

H07.06 **Torque reference filter time constant 2**

Comm. address:	2007-07h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	30.00	Data type:	UInt16
Default value:	0.27	Change mode:	Real time

Value range:
0.00 to 30.00
Parameter description
Defines the torque reference filter time constant 2.

H07.07 **Torque limit source**

Comm. address:	2007-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Positive/Negative internal torque limit
1: Internal or external limit as defined by DI
2: T_LMT
3: T_LMT or external limit as defined by DI (FunIN.16 or FunIN.17)
4: T_LMT or internal limit (FunIN.16 or FunIN.17) as defined by DI
Parameter description
Selects the torque limit source.
0: Positive/Negative internal torque limit
1: Internal or external limit as defined by DI
2: T_LMT
3: T_LMT or external limit as defined by DI (FunIN.16 or FunIN.17)
4: T_LMT or internal limit (FunIN.16 or FunIN.17) as defined by DI

H07.08 **T-LMT selection**

Comm. address:	2007-09h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

1: AI1

2: AI2

Parameter description

Sets the AI as the torque limit.

1: AI1

2: AI2

H07.09 **Positive internal torque limit**

Comm. address:	2007-0Ah	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	350.0	Change mode:	Real time

Value range:

0.0 to 400.0

Parameter description

Defines the positive internal torque limit.

H07.10 **Negative internal torque limit**

Comm. address:	2007-0Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	350.0	Change mode:	Real time

Value range:

0.0 to 400.0

Parameter description

Defines the negative internal torque limit.

H07.11 **Positive external torque limit**

Comm. address:	2007-0Ch	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	350.0	Change mode:	Real time

Value range:

0.0 to 400.0

Parameter description

Defines the positive external torque limit.

H07.12 **Negative external torque limit**

Comm. address:	2007-0Dh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	350.0	Change mode:	Real time

Value range:

0.0 to 400.0

Parameter description
Defines negative external torque limit.

H07.15 Emergency-stop torque

Comm. address:	2007-10h	Effective mode:	At stop
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	100.0	Change mode:	Real time

Value range:
0.0 to 400.0
Parameter description
Defines the torque of emergency stop.

H07.17 Speed limit source

Comm. address:	2007-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Internal speed limit
1: V-LMT
2: H07.19 or H07.20 as defined by DI
Parameter description
Defines the speed limit source.
0: Internal speed limit
1: V-LMT
2: H07.19 or H07.20 as defined by DI
Note: This parameter is active only when H02.00 is not set to 8.

H07.18 V-LMT selection

Comm. address:	2007-13h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
1: AI1
2: AI2
Parameter description
Sets the AI as the speed limit.
1: AI1
2: AI2

H07.19 Positive speed limit/Speed limit 1 in torque control

Comm. address:	2007-14h	Effective mode:	Real time
Min. value:	0	Unit:	rpm

Max. value:	10000	Data type:	UInt16
Default value:	3000	Change mode:	Real time

Value range:
0 to 10000
Parameter description
Defines the positive speed limit/speed limit 1 in torque control.

H07.20 Negative speed limit/Speed limit 2 in torque control

Comm. address:	2007-15h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	3000	Change mode:	Real time

Value range:
0 to 10000
Parameter description
Defines the negative speed limit/speed limit 2 in torque control.

H07.21 Base value for torque arrival

Comm. address:	2007-16h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 400.0
Parameter description
Defines the reference value for torque arrival.

H07.22 Threshold of active torque arrival

Comm. address:	2007-17h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	20.0	Change mode:	Real time

Value range:
0.0 to 400.0
Parameter description
Defines the threshold of valid torque arrival.

H07.23 Threshold of inactive torque arrival

Comm. address:	2007-18h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	10.0	Change mode:	Real time

Value range:

0.0 to 400.0

Parameter description

Defines the threshold of invalid torque reach.

H07.24 Field weakening depth

Comm. address:	2007-19h	Effective mode:	Real time
Min. value:	60	Unit:	%
Max. value:	115	Data type:	UInt16
Default value:	115	Change mode:	Real time

Value range:

60 to 115

Parameter description

Defines the field weakening depth.

H07.25 Maximum allowable demagnetization current

Comm. address:	2007-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	300	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:

0 to 300

Parameter description

Defines the maximum allowable demagnetization current.

H07.26 Field weakening selection

Comm. address:	2007-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

Field weakening selection

0: Disable

1: Enable

H07.27 Field weakening gain

Comm. address:	2007-1Ch	Effective mode:	Real time
Min. value:	0.001	Unit:	Hz
Max. value:	1.000	Data type:	UInt16
Default value:	0.030	Change mode:	Real time

Value range:

0.001 to 1.000

Parameter description
Defines the gain of field weakening.

H07.28 **Speed of flux weakening point**

Comm. address:	2007-1Dh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Defines the speed of field weakening point.

H07.35 **Torque non-standard function selection**

Comm. address:	2007-24h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
bit0: Enable motor output calibration
bit1: Enable shield compensation data
Parameter description
Torque non-standard feature switch
bit0: Enable motor torque output calibration
bit1: Enable compensation data shielding

H07.36 **Time constant of low-pass filter 2**

Comm. address:	2007-25h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	10.00	Data type:	UInt16
Default value:	0.00	Change mode:	Real time

Value range:
0.00 to 10.00
Parameter description
Defines the time constant of low-pass filter 2.

H07.37 **Torque reference filter selection**

Comm. address:	2007-26h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: First-order filter
1: Second-order filter

Parameter description
Torque reference filter selection
0: First-order filter
1: Second-order filter
Note: When second-order filter is selected, the filter structure is biquad filter for ROT motors, and the filter parameters are set through H07.38. For DDR/DDL motors, the filter structure is biquad low-pass filter, and the filter parameters are set through H07.42.

H07.38 Biquad filter attenuation ratio

Comm. address:	2007-27h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	50	Data type:	UInt16
Default value:	16	Change mode:	Real time

Value range:
0 to 50
Parameter description
Defines the attenuation ratio of biquad filter.

H07.40 Speed limit threshold in torque control mode

Comm. address:	2007-29h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	300	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 300
Parameter description
Defines the speed limit time window in the torque control mode.

H07.42 Damping coefficient of biquad low-pass filter

Comm. address:	2007-2Bh	Effective mode:	Real time
Min. value:	0.001	Unit:	-
Max. value:	10.000	Data type:	UInt16
Default value:	1.000	Change mode:	Real time

Value range:
0.001 to 10.000
Parameter description
Defines the damping coefficient of biquad low-pass filter.

8.9 H08 Gain Parameters

H08.00 Speed loop gain

Comm. address:	2008-01h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz

Max. value:	2000.0	Data type:	UInt16
Default value:	40.0	Change mode:	Real time

Range:
0.0 to 2000.0
Parameter description
Defines the response of the speed loop. The higher the setpoint, the faster the speed loop response is. Note that an excessively high setpoint may cause vibration.
In position control mode, the position loop gain must be increased together with the speed loop gain.

H08.01 **Speed loop integral time constant**

Comm. address:	2008-02h	Effective mode:	Real time
Min. value:	0.15	Unit:	ms
Max. value:	512.00	Data type:	UInt16
Default value:	19.89	Change mode:	Real time

Value range:
0.15 to 512.00
Parameter description
Defines the integral time constant of the speed loop.
The lower the setpoint, the better the integral action, and the quicker will the deviation value be close to 0.
Note:
There is no integral action when H08.01 is set to 512.00.

H08.02 **Position loop gain**

Comm. address:	2008-03h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	2000.0	Data type:	UInt16
Default value:	64.0	Change mode:	Real time

Range:
0.0 to 2000.0
Parameter description
Defines the proportional gain of the position loop.
Defines the response of the position loop. A high setpoint shortens the positioning time. Note that an excessively high setpoint may cause vibration.
The 1st group of gain parameters include H08.00 (Speed loop gain), H08.01 (Speed loop integral time constant), H08.02, and H07.05 (Filter time constant of torque reference).

H08.03 **2nd speed loop gain**

Comm. address:	2008-04h	Effective mode:	Real time
Min. value:	0.1	Unit:	Hz
Max. value:	2000.0	Data type:	UInt16
Default value:	75.0	Change mode:	Real time

Value range:
0.1 to 2000.0

Parameter description
Defines the 2nd speed loop gain.

H08.04 **2nd speed loop integral time constant**

Comm. address:	2008-05h	Effective mode:	Real time
Min. value:	0.15	Unit:	ms
Max. value:	512.00	Data type:	UInt16
Default value:	10.61	Change mode:	Real time

Value range:
0.15 to 512.00
Parameter description
Defines the 2nd speed loop integral time constant.

H08.05 **2nd position loop gain**

Comm. address:	2008-06h	Effective mode:	Real time
Min. value:	0.1	Unit:	Hz
Max. value:	2000.0	Data type:	UInt16
Default value:	120.0	Change mode:	Real time

Value range:
0.1 to 2000.0
Parameter description
Defines the second gain of the position loop and speed loop. The 2nd group of gain parameters include H08.03 (Speed loop gain), H08.04 (Speed loop integral time constant), H08.05, and H07.06 (Torque reference filter time constant 2).

H08.08 **2nd gain mode setting**

Comm. address:	2008-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: Fixed to the 1st gain set, P and PI switched as defined by bit26 of external 60FEh
1: Switched between the 1st and 2nd gain set as defined by H08.09
Parameter description
Defines the switchover mode of the 2nd gain set.
0: Fixed to the 1st gain set, P and PI switched as defined by bit26 of external 60FEh
1: Switched between the 1st and 2nd gain set as defined by H08.09

H08.09 **Gain switchover condition selection**

Comm. address:	2008-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	10	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Fixed to the 1st gain set (PS)
1: Switched as defined by bit26 of 60FEh or DI-based switchover
2: Torque reference excessively high (PS)
3: Speed reference excessively high (PS)
4: Speed reference change rate excessively high (PS)
5: Speed reference low/high speed threshold (PS)
6: Position deviation excessively high (P)
7: Position reference available (P)
8: Positioning unfinished (P)
9: Actual speed (P)
10: Position reference available + Actual speed (P)

Parameter description

Defines the gain switchover condition.

Setpoint	Gain Switchover Condition	Remarks
0	Fixed at 1st gain	The 1st gain is always used.
1	Switched based on bit26 of 60FEh or DI	-
2	Large torque reference	If the torque reference absolute value exceeds (Level + Dead time) [%] in the last 1st gain set, the drive switches to the 2nd gain set. If the absolute value of the torque reference is lower than (level – Dead time) [%] and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain, the drive returns to the 1st gain set.
3	Large speed reference	When the absolute value of the speed reference exceeds (level + hysteresis, RPM) in the 1st gain, the drive switches over to the 2nd gain. If the absolute value of the speed reference is lower than (level - Dead time) [rpm] and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain, the drive returns to the 1st gain set.
4	Large speed reference change rate	It is valid only in non-speed control mode. When the absolute value of the speed reference change rate exceeds (level + hysteresis, 10 RPM/s) in the 1st gain, the drive switches over to the 2nd gain. If the absolute value of the speed reference change rate is lower than (level – hysteresis) [10 rpm/s] and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain, the drive returns to the 1st gain set. The drive always uses the 1st gain in speed control mode.
5	Speed reference high/low-speed threshold	When the absolute value of the speed reference exceeds (level – hysteresis, RPM) in the 1st gain, the drive starts to switch over to the 2nd gain and the gain changes gradually. When the absolute value of the speed reference exceeds (level + hysteresis, RPM), the drive completely switches over to the 2nd gain. When the absolute value of the speed reference is smaller than (level + hysteresis, RPM) in the 2nd gain, the drive starts to return to the 1st gain and the gain changes gradually. When the absolute value of the speed reference reaches (level – hysteresis, RPM), the drive completely returns to the 1st gain.
6	Large position deviation	It is valid only in fully closed-loop position control mode. When the absolute value of the position deviation exceeds (level + hysteresis, encoder unit) in the 1st gain, the drive switches over to the 2nd gain. When the absolute value of the position deviation is lower than (Level - Dead time) [encoder unit] and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain, the drive returns to the 1st gain set. The drive always uses the 1st gain if not in position control or fully closed-loop control.

Setpoint	Gain Switchover Condition	Remarks
7	Position reference available	It is valid only in fully closed-loop position control mode. When the position reference is not 0 in the 1st gain, the drive switches to the 2nd gain. When the position reference is 0 and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain, the drive returns to the 1st gain set. The drive always uses the 1st gain if not in position control or fully closed-loop control.
8	Positioning not completed	It is valid only in fully closed-loop position control mode. When positioning is not completed in the 1st gain, the drive switches to the 2nd gain. If positioning is not completed and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain set, the servo drive returns to the 1st gain set. The drive always uses the 1st gain if not in position control or fully closed-loop control.
9	High actual speed	It is valid only in fully closed-loop position control mode. When the absolute value of the actual motor speed exceeds (level + hysteresis, RPM) in the 1st gain, the drive switches over to the 2nd gain. If the absolute value of actual speed is lower than (Level - Dead time) [rpm] and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain set, the drive returns to the 1st gain set. The drive always uses the 1st gain if not in position control or fully closed-loop control.
10	Position reference available + Actual speed	It is valid only in fully closed-loop position control mode. When the position reference is not 0 in the 1st gain, the drive switches to the 2nd gain. If the position reference is 0 and such status lasts within the delay defined by H08.10 (Gain switchover delay) in the 2nd gain set, the 2nd gain set applies. When the position reference is 0 and the delay defined by (H08.10) is reached, if the absolute value of actual speed is lower than (Level) [rpm], the speed loop integral time constant is fixed to the setpoint of H08.04 (2nd speed loop integral time constant), and others return to the 1st gain set. If the absolute value of actual speed does not reach (Level - Dead time) [rpm], the speed integral also returns to the setpoint of H08.01 (Speed loop integral time constant). The drive always uses the 1st gain if not in position control or fully closed-loop control.

H08.10 **Gain switchover delay**

Comm. address:	2008-0Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	1000.0	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 1000.0

Parameter description
Defines the delay when the drive switches from the 2nd gain set to the 1st gain set.

H08.11 **Gain switchover level**

Comm. address:	2008-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20000	Data type:	UInt16
Default value:	50	Change mode:	Real time

Range:
0 to 20000
Parameter description
Defines the gain switchover level.
Gain switchover is affected by both the level and the time lag, as defined by H08.09. The unit of gain switchover level varies with the switchover condition.

H08.12 Gain switchover time lag

Comm. address:	2008-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20000	Data type:	UInt16
Default value:	30	Change mode:	Real time

Range:
0 to 20000
Parameter description
Defines the delay for gain switchover.
Gain switchover is affected by both the level and the time lag, as defined by H08.09. The unit of gain switchover delay varies with the switchover condition.
Note:
The value of H08.11 (Gain switchover level) must be higher than or equal to that of H08.12. Otherwise, H08.11 will be set to a value equal to H08.12 automatically.

H08.13 Position gain switchover time

Comm. address:	2008-0Eh	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	1000.0	Data type:	UInt16
Default value:	3.0	Change mode:	Real time

Value range:
0.0 to 1000.0
Parameter description
In position control, if H08.05 (2nd position loop gain) is much higher than H08.02 (Position loop gain), set the time for switching from H08.02 to H08.05.
This parameter can be used to reduce the impact caused by an increase in the position loop gain.

H08.15 Load moment of inertia ratio

Comm. address:	2008-10h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	120.00	Data type:	UInt16
Default value:	1.00	Change mode:	Real time

Range:
0.00 to 120.00
Parameter description
Defines the load-to-motor inertia ratio.

When H08.15 is set to 0, it indicates the motor is not connected to the load. If it is set to 1.00, it indicates the mechanical load inertia is the same as the motor moment of inertia.

H08.17 Zero phase delay

Comm. address:	2008-12h	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	4.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 4.0
Parameter description
Defines the zero phase delay.

H08.18 Speed feedforward filter time constant

Comm. address:	2008-13h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	64.00	Data type:	UInt16
Default value:	0.50	Change mode:	Real time

Value range:
0.00 to 64.00
Parameter description
Defines the filter time constant of speed feedforward.

H08.19 Speed feedforward gain

Comm. address:	2008-14h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 100.0
Parameter description
In position control and fully closed-loop control, speed feedforward is the product of speed feedforward signal and H08.19 and is part of the speed reference.
Increasing the setpoint improves the response to position references and reduces the position deviation during operation at a constant speed.
Set H08.18 to a fixed value first, and then increase the value of H08.19 gradually from 0 to a certain value at which speed feedforward achieves the desired effect.
Tune H08.18 and H08.19 repeatedly until a balanced performance is achieved.
Note:
For how to enable the speed feedforward function and select the speed feedforward signal, see H05.19 (Speed feedforward control).

H08.20 Torque feedforward filter time constant

Comm. address:	2008-15h	Effective mode:	Real time

Min. value:	0.00	Unit:	ms
Max. value:	64.00	Data type:	UInt16
Default value:	0.50	Change mode:	Real time

Value range:
0.00 to 64.00
Parameter description
Defines the filter time constant of torque feedforward.

H08.21 **Torque feedforward gain**

Comm. address:	2008-16h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
In control modes other than torque control, torque feedforward is the product of torque feedforward signal and H08.21, which is a part of the torque reference.
Increasing the setpoint improves the response to variable speed references.
Increasing the setpoint improves the response to position references and reduces the position deviation during operation at a constant speed.
During parameter tuning, set H08.20 (Torque feedforward filter time constant) to the default value first, and then increase H08.21 gradually to enhance the effect of torque feedforward. When speed overshoot occurs, keep H08.21 unchanged and increase the value of H08.20. Tune H08.20 and H08.21 repeatedly until a balanced performance is achieved.
Note:
For how to enable the torque feedforward function and select the torque feedforward signal, see H06.11 (Torque feedforward control).

H08.22 **Speed feedback filter option**

Comm. address:	2008-17h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Speed feedback average filter disabled
1: Speed feedback 2 times average filter
2: Speed feedback 4 times average filter
3: Speed feedback 8 times average filter
4: Speed feedback 16 times average filter
Parameter description

Defines the moving average filtering count on the speed feedback.
0: Disable
1: 2 times
2: 4 times
3: 8 times
4: 16 times
Note: The higher the number of filtering times, the lower the speed feedback fluctuation, but the longer the feedback delay will be.

H08.23 **Cutoff frequency of speed feedback low-pass filter**

Comm. address:	2008-18h	Effective mode:	Real time
Min. value:	100	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:
100 to 8000
Parameter description
Defines the cutoff frequency for first-order low-pass filtering on the speed feedback.
Note:
The lower the setpoint, the weaker the speed feedback fluctuation, but the longer the feedback delay can be.
Setting the cutoff frequency to 8000 Hz negates the filtering effect.

H08.24 **Pseudo differential feedforward control coefficient**

Comm. address:	2008-19h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	200.0	Data type:	UInt16
Default value:	100.0	Change mode:	Real time

Value range:
0.0 to 200.0
Parameter description
Defines the control mode of the speed loop.
When this parameter is set to 100.0, PI control (default mode) is used for speed loop, bringing rapid dynamic response.
When this parameter is set to 0.0, the integral action is activated to filter out low-frequency disturbance. However, the dynamic response is slow.
H08.24 can be used to keep a quick response of the speed loop, with the anti-interference capacity in low-frequency bands improved and the speed feedback overshoot unaffected.

H08.25 **Speed measurement method**

Comm. address:	2008-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: M-method

1: MT-method

Parameter description

Speed measurement method

0: M-method

1: MT-method

Note: It is active only with setpoint 1 and a pulse encoder.

H08.27 **Cutoff frequency of speed observer**

Comm. address:	2008-1Ch	Effective mode:	Real time
Min. value:	50	Unit:	Hz
Max. value:	600	Data type:	UInt16
Default value:	170	Change mode:	Real time

Value range:

50 to 600

Parameter description

Defines the cutoff frequency of the speed observer. Note that an excessively high setpoint may incur resonance. Decrease the setpoint properly in case of large speed feedback noise.

H08.28 **Speed observer inertia calibration coefficient**

Comm. address:	2008-1Dh	Effective mode:	Real time
Min. value:	1	Unit:	%
Max. value:	1600	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:

1 to 1600

Parameter description

Defines the speed observer inertia calibration coefficient. If H08.15 is set based on the actual inertia, there is no need to tune this parameter.

H08.29 **Speed observer filter time**

Comm. address:	2008-1Eh	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	10.00	Data type:	UInt16
Default value:	0.80	Change mode:	Real time

Value range:

0.00 to 10.00

Parameter description

Defines the speed observer filter time. It is recommended to set this parameter to a value equal to the sum of H07.05 plus 0.2 ms.

H08.31 **Disturbance cutoff frequency**

Comm. address:	2008-20h	Effective mode:	Real time
Min. value:	1	Unit:	Hz
Max. value:	4000	Data type:	UInt16

Default value:	600	Change mode:	Real time

Value range:
1 to 4000
Parameter description
Defines the cutoff frequency of the disturbance observer. Increasing the setpoint improves the responsiveness of the disturbance observer and the compensation effect. Note that an excessively high setpoint may incur resonance.

H08.32 **Disturbance compensation gain**

Comm. address:	2008-21h	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	100	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 100
Parameter description
Defines the compensation gain of the disturbance observer. The setpoint 100% indicates full compensation.

H08.33 **Disturbance observer inertia calibration coefficient**

Comm. address:	2008-22h	Effective mode:	Real time
Min. value:	1	Unit:	%
Max. value:	1600	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:
1 to 1600
Parameter description
Defines the disturbance observer inertia calibration coefficient. If H08.15 is set based on the actual inertia, there is no need to tune this parameter.

H08.37 **Phase modulation for medium-frequency jitter suppression 2**

Comm. address:	2008-26h	Effective mode:	Real time
Min. value:	-90	Unit:	°
Max. value:	90	Data type:	Int16
Default value:	0	Change mode:	Real time

Range:
-90 to +90
Parameter description
Defines the compensation phase of medium-frequency jitter suppression 2.

H08.38 **Frequency for medium-frequency jitter suppression 2**

Comm. address:	2008-27h	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	1000	Data type:	UInt16

Default value:	0	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Set this parameter based on actual resonance frequency. The active suppression frequency range for medium-frequency jitter suppression 2 is 100 Hz to 1000 Hz.

H08.39 **Compensation gain for medium-frequency jitter suppression 2**

Comm. address:	2008-28h	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	300	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 300
Parameter description
Defines the compensation gain for medium-frequency jitter suppression 2. Set this parameter to a value between 40% to 55% in general cases. Setting this parameter to 0 deactivates medium-frequency jitter suppression 2.

H08.40 **Speed observer enable**

Comm. address:	2008-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
Parameter description
Defines the bit for enabling the speed observer.
0: Disable
1: Enable

H08.42 **Model control enable**

Comm. address:	2008-2Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
2: Reserved
3: New model tracking
4: Model tracking B

Parameter description
Enables model tracking control.

H08.43 **Model gain**

Comm. address:	2008-2Ch	Effective mode:	Real time
Min. value:	0.1	Unit:	-
Max. value:	2000.0	Data type:	UInt16
Default value:	40.0	Change mode:	Real time

Value range:
0.1 to 2000.0
Parameter description
Defines the single inertia model gain. The higher the gain, the faster the position response. Note that an excessively high setpoint may incur excessive overshoot.

H08.46 **Feedforward value**

Comm. address:	2008-2Fh	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	102.4	Data type:	UInt16
Default value:	95.0	Change mode:	Real time

Range:
0.0 to 102.4
Parameter description
Defines the speed feedforward gain for single inertia model control. If overshoot occurs, reduce the setpoint properly.

H08.48 **Model torque feedforward positive compensation coefficient**

Comm. address:	2008-31h	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	204.8	Data type:	UInt16
Default value:	102.4	Change mode:	Real time

Value range:
0.0 to 204.8
Parameter description
Defines the speed feedforward gain for single inertia model control. If overshoot occurs, reduce the setpoint properly.

H08.49 **Model torque feedforward negative compensation coefficient**

Comm. address:	2008-32h	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	204.8	Data type:	UInt16
Default value:	102.4	Change mode:	Real time

Value range:
0.0 to 204.8

Parameter description

Defines the speed feedforward gain for single inertia model control. If overshoot occurs, reduce the setpoint properly.

H08.53 **Medium- and low-frequency jitter suppression frequency 3**

Comm. address:	2008-36h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:

0.0 to 300.0

Parameter description

Set this parameter based on actual resonance frequency. The resonance suppression range is 100 Hz to 300 Hz.

H08.54 **Medium- and low-frequency jitter suppression compensation 3**

Comm. address:	2008-37h	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	200	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 200

Parameter description

Defines the compensation gain for medium- and low-frequency suppression compensation 3. The setpoint 200% indicates full compensation.

H08.56 **Medium- and low-frequency jitter suppression phase modulation 3**

Comm. address:	2008-39h	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	600	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:

0 to 600

Parameter description

Tune this parameter based on the actual compensation effect.

H08.59 **Medium- and low-frequency jitter suppression frequency 4**

Comm. address:	2008-3Ch	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:

0.0 to 300.0

Parameter description

Set this parameter based on actual resonance frequency. The resonance suppression range is 100 Hz to 300 Hz.

H08.60 Medium- and low-frequency jitter suppression compensation 4

Comm. address:	2008-3Dh	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	200	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 200

Parameter description

Defines the compensation gain for medium- and low-frequency suppression 4. The setpoint 200% indicates full compensation.

H08.61 Medium- and low-frequency jitter suppression phase modulation 4

Comm. address:	2008-3Eh	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	600	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:

0 to 600

Parameter description

Tune this parameter based on the actual compensation effect.

H08.62 Position loop integral time constant

Comm. address:	2008-3Fh	Effective mode:	Real time
Min. value:	0.15	Unit:	-
Max. value:	512.00	Data type:	UInt16
Default value:	512.00	Change mode:	Real time

Value range:

0.15 to 512.00

Parameter description

Defines the position loop integral time constant.

H08.63 2nd position loop integral time constant

Comm. address:	2008-40h	Effective mode:	Real time
Min. value:	0.15	Unit:	-
Max. value:	512.00	Data type:	UInt16
Default value:	512.00	Change mode:	Real time

Value range:

0.15 to 512.00

Parameter description

Defines the 2nd position loop integral time constant.

H08.64 **Speed observer feedback source**

Comm. address:	2008-41h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Observer speed output value

1: Speed observed by the observer

Parameter description

Defines the speed observer feedback source.

0: Observer speed output value

1: Speed observed by the observer

H08.65 **Zero deviation control selection**

Comm. address:	2008-42h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Disable

1: Enable

Parameter description

Enables/disables zero deviation control

0: Disable

1: Enable

H08.66 **Moving average filtering of zero-deviation control position**

Comm. address:	2008-43h	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	320.0	Data type:	UInt16
Default value:	5.0	Change mode:	At stop

Value range:

0.0 to 320.0

Parameter description

Defines the average filter time of zero deviation control position. It is recommended to increase the setpoint in case of large noise caused by low command resolution.

H08.68 **Speed feedforward of zero deviation control**

Comm. address:	2008-45h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	100.0	Change mode:	Real time

Value range:

0.0 to 100.0

Parameter description
Defines the speed feedforward of zero deviation control.

H08.69 **Torque feedforward of zero deviation control**

Comm. address:	2008-46h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	100.0	Change mode:	Real time

Value range:
0.0 to 100.0
Parameter description
Defines the torque feedforward of zero deviation control.

H08.90 **Encoder pitch fluctuation suppression device**

Comm. address:	2008-5Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	6	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Inhibited
1: 1st group activated only-adaptive mode
2: 1st group activated only-hysteresis mode
3: Two groups activated-adaptive mode
4: Two groups activated-hysteresis mode
Parameter description
Used to enable the encoder pitch fluctuation suppression function.
0: Disable
1: 1st group activated only-adaptive mode. This mode is used to suppress or eliminate the control loop torque fluctuation caused by encoder pitch fluctuation, which can help alleviate speed fluctuation and operation noise.
2: 1st group activated only-hysteresis mode. This mode is used in scenarios featuring a long travel distance and slow speed changes (such as digital printing industry).
3: Two groups activated-adaptive mode. Note that the number of suppressors used depend on the magnitude of torque fluctuation caused by encoder pitch fluctuation.
4. Two groups activated-hysteresis mode. Note that the hysteresis mode is only applicable to scenarios requiring reciprocating movement. The adaptive mode is applicable to scenarios with slow speed changes.

8.10 H09 Auto-tuning Parameters

H09.00 **Auto-tuning mode selection**

Comm. address:	2009-01h	Effective mode:	Real time

Min. value:	0	Unit:	-
Max. value:	9	Data type:	UInt16
Default value:	4	Change mode:	Real time

Value range:

0: Disabled, manual gain tuning required

1: Enabled, gain parameters generated automatically based on the stiffness level

2: Positioning mode, gain parameters generated automatically based on the stiffness level

3: Interpolation mode+Inertia auto-tuning

4: Normal mode+Inertia auto-tunin

5: STune mode 5

6: Quick positioning mode+Inertia auto-tuning

8: New model tracking+Inertia auto-tuning

9: Model tracking B+Inertia auto-tuning+Friction compensation

Parameter description

Defines different gain tuning modes. Related gain parameters can be set manually or automatically according to the stiffness level.

0: Disabled, manual gain tuning required

1: Enabled, gain parameters generated automatically based on the stiffness level

2: Positioning mode, gain parameters generated automatically based on the stiffness level

3: Interpolation mode+Inertia auto-tuning

4: Normal mode+Inertia auto-tunin

5: STune mode 5

6: Quick positioning mode+Inertia auto-tuning

8: New model tracking+Inertia auto-tuning

9: Model tracking B+Inertia auto-tuning+Friction compensation

H09.01 **Stiffness level selection**

Comm. address:	2009-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	41	Data type:	UInt16
Default value:	15	Change mode:	Real time

Range:

0 to 41

Parameter description

Defines the stiffness level of the servo system. The higher the stiffness level, the higher the gains and the quicker the response. But an excessively high stiffness level can cause vibration.
The setpoint 0 indicates the lowest stiffness and 41 indicates the highest stiffness.

H09.02 **Adaptive notch mode selection**

Comm. address:	2009-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Adaptive notch no longer updated

1: One adaptive notch activated (3rd notch)

2: Two adaptive notches activated (3rd and 4th notches)

3: Resonance point tested only (displayed in H09.24)

4: Adaptive notch cleared, values of 3rd and 4th notches restored to default

Parameter description

Defines the operation mode of the adaptive notch.

0: Adaptive notch no longer updated

1: One adaptive notch activated (3rd notch)

2: Two adaptive notches activated (3rd and 4th notches)

3: Resonance point tested only (displayed in H09.24)

4: Adaptive notch cleared, values of 3rd and 4th notches restored to default

H09.03 **Online inertia auto-tuning mode**

Comm. address:	2009-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Disabled

1: Enabled, changing slowly

2: Enabled, changing normally

3: Enabled, changing quickly

Parameter description

Defines whether to enable online inertia auto-tuning and set the inertia ratio update speed during online inertia auto-tuning.

0: Disabled

1: Enabled, changing slowly

2: Enabled, changing normally

3: Enabled, changing quickly

H09.05 **Offline inertia auto-tuning mode**

Comm. address:	2009-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Bidirectional

1: Unidirectional

Parameter description

Defines the offline inertia auto-tuning mode. The offline inertia auto-tuning function can be enabled through H0d.02.

0: Bidirectional

1: Unidirectional

H09.06 **Maximum speed of inertia auto-tuning**

Comm. address:	2009-07h	Effective mode:	Real time
Min. value:	100	Unit:	rpm
Max. value:	1000	Data type:	UInt16
Default value:	500	Change mode:	At stop

Value range:
100 to 1000
Parameter description
Defines the maximum allowable motor speed reference in offline inertia auto-tuning mode. During inertia auto-tuning, the higher the speed, the more accurate the auto-tuned value. Use the default value in general applications.

H09.07 **Time constant for accelerating to maximum speed during inertia auto-tuning**

Comm. address:	2009-08h	Effective mode:	Real time
Min. value:	10	Unit:	ms
Max. value:	5000	Data type:	UInt16
Default value:	125	Change mode:	At stop

Value range:
10 to 5000
Parameter description
Defines the time for the motor to accelerate from 0 [mm/s]/[rpm] to the maximum speed of inertia auto-tuning (H09.06) during offline inertia auto-tuning.

H09.08 **Interval time upon completion of inertia auto-tuning**

Comm. address:	2009-09h	Effective mode:	Real time
Min. value:	50	Unit:	ms
Max. value:	10000	Data type:	UInt16
Default value:	800	Change mode:	At stop

Value range:
50 to 10000
Description
Defines the time interval between two consecutive speed references when H09.05 (Offline inertia auto-tuning mode) is set to 1 (Positive/Negative triangular wave mode).

H09.09 **Motor movement distance per inertia auto-tuning**

Comm. address:	2009-0Ah	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	100.00	Data type:	UInt16
Default value:	1.00	Change mode:	Real time

Value range:
0.00 to 100.00
Parameter description
Defines the motor rotation distance required for inertia auto-tuning when H09.05 (Offline inertia auto-tuning mode) is set to 1 (Positive/Negative triangular wave mode).

Note:
When using the offline inertia auto-tuning function, verify that the travel distance of the motor at the stop position is higher than the value of H09.09. If not, decrease the value of H09.06 or H09.07 properly until the motor travel distance fulfills the requirement.

H09.11 Oscillation threshold

Comm. address:	2009-0Ch	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 100.0
Parameter description
Defines the alarm threshold for current feedback oscillation.

H09.12 Frequency of the 1st notch

Comm. address:	2009-0Dh	Effective mode:	Real time
Min. value:	50	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:
50 to 8000
Parameter description
Defines the center frequency of the notch, which is the mechanical resonance frequency.
If the notch frequency is 8000 Hz in torque control mode, the notch function is disabled.

H09.13 Bandwidth level of the 1st notch

Comm. address:	2009-0Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	2	Change mode:	Real time

Range:
0 to 20
Parameter description
Defines the bandwidth level of the notch. Use the default setpoint in general cases.
The notch width level indicates the ratio of the notch width to the notch center frequency.

H09.14 Depth level of the 1st notch

Comm. address:	2009-0Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:

0 to 99

Parameter description

Defines the depth level of the notch.

The notch depth level indicates the ratio of input to output at center frequency.

The higher the setpoint, the lower the notch depth and the weaker the mechanical resonance suppression. Note that an excessively high setpoint may cause system instability.

H09.15 **Frequency of the 2nd notch**

Comm. address:	2009-10h	Effective mode:	Real time
Min. value:	50	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:

50 to 8000

Parameter description

Defines the frequency of the 2nd notch.

H09.16 **Bandwidth level of the 2nd notch**

Comm. address:	2009-11h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	2	Change mode:	Real time

Range:

0 to 20

Parameter description

Defines the bandwidth level of the 2nd notch.

H09.17 **Depth level of the 2nd notch**

Comm. address:	2009-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:

0 to 99

Parameter description

Defines the depth level of the 2nd notch.

H09.18 **Frequency of the 3rd notch**

Comm. address:	2009-13h	Effective mode:	Real time
Min. value:	50	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:

50 to 8000

Parameter description

Defines the frequency of the 3rd notch.

H09.19 **Bandwidth level of the 3rd notch**

Comm. address:	2009-14h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	2	Change mode:	Real time

Range:

0 to 20

Parameter description

Defines the width level of the 3rd notch.

H09.20 **Depth level of the 3rd notch**

Comm. address:	2009-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:

0 to 99

Parameter description

Defines the depth level of the 3rd notch.

H09.21 **Frequency of the 4th notch**

Comm. address:	2009-16h	Effective mode:	Real time
Min. value:	50	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:

50 to 8000

Parameter description

Defines the frequency of the 4th notch.

H09.22 **Bandwidth level of the 4th notch**

Comm. address:	2009-17h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	2	Change mode:	Real time

Range:

0 to 20

Parameter description

Defines the bandwidth level of the 4th notch.

H09.23 **Depth level of the 4th notch**

Comm. address:	2009-18h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 99
Parameter description
Defines the depth level of the 4th notch.

H09.24 **Auto-tuned resonance frequency**

Comm. address:	2009-19h	Effective mode:	-
Min. value:	0	Unit:	Hz
Max. value:	5000	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 5000
Parameter description
When H09.02 (Adaptive notch mode) is set to 3, the current mechanical resonance frequency is displayed.

H09.32 **Gravity compensation value**

Comm. address:	2009-21h	Effective mode:	Real time
Min. value:	-100.0	Unit:	%
Max. value:	100.0	Data type:	Int16
Default value:	0.0	Change mode:	Real time

Range:
-100.0 to +100.0
Parameter description
Defines the gravity compensation value. Setting this parameter properly in vertical axis applications can reduce the falling amplitude upon start.

H09.33 **Forward friction compensation value**

Comm. address:	2009-22h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 100.0
Parameter description
Defines the forward friction compensation value.

H09.34 **Negative friction compensation value**

Comm. address:	2009-23h	Effective mode:	Real time
Min. value:	-100.0	Unit:	%
Max. value:	0.0	Data type:	Int16
Default value:	0.0	Change mode:	Real time

Value range:
-100.0 to 0.0
Parameter description
Defines the negative friction compensation value.

H09.35 **Friction compensation speed**

Comm. address:	2009-24h	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	20.0	Data type:	UInt16
Default value:	2.0	Change mode:	Real time

Value range:
0.0 to 20.0
Parameter description
Defines the friction compensation speed.

H09.36 **Friction compensation speed selection**

Comm. address:	2009-25h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x13	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:
0: Slow mode+Speed reference
1: Slow mode+Model speed
2: Slow mode+Speed feedback
3: Slow mode+Observed speed
16: Quick mode +Speed reference
17: Quick mode +Model speed
18: Quick mode +Speed feedback
19: Quick mode+Observed speed
Parameter description
Friction compensation speed
0: Slow mode+Speed reference
1: Slow mode+Model speed
2: Slow mode+Speed feedback
3: Slow mode+Observed speed
16: Quick mode +Speed reference
17: Quick mode +Model speed
18: Quick mode +Speed feedback
19: Quick mode+Observed speed

H09.37 **Vibration monitoring time**

Comm. address:	2009-26h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	300	Change mode:	Real time

Value range:
0 to 65535
Parameter description
The resonance detection suppression function is turned off automatically after the time defined by this parameter elapses. To enable the resonance suppression function, set this parameter to 0.

H09.38 **Frequency of low-frequency resonance suppression 1 at the mechanical end**

Comm. address:	2009-27h	Effective mode:	Real time
Min. value:	1.0	Unit:	Hz
Maximum value:	100.0	Data type:	UInt16
Default value:	100.0	Change mode:	At stop

Value range:
1.0 to 100.0
Parameter description
Defines the low-frequency resonance suppression 1 frequency at the mechanical end. Set this parameter based on the actual jitter frequency.

H09.39 **Low-frequency suppression 1 at the mechanical end**

Comm. address:	2009-28h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	2	Change mode:	At stop

Value range:
0 to 3
Parameter description
Defines different low-frequency resonance suppression types at the mechanical end. Type 1 features the shortest delay.

H09.41 **Frequency of the 5th notch**

Comm. address:	2009-2Ah	Effective mode:	Real time
Min. value:	50	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:
50 to 8000
Parameter description
Defines the frequency of the 5th notch.

H09.42 **Bandwidth level of the 5th notch**

Comm. address:	2009-2Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	2	Change mode:	Real time

Range:
0 to 20
Parameter description
Defines the bandwidth level of the 5th notch.

H09.43 **Depth level of the 5th notch**

Comm. address:	2009-2Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 99
Parameter description
Defines the depth level of the 5th notch.

H09.44 **Frequency of low-frequency suppression 2 at the mechanical end**

Comm. address:	2009-2Dh	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	200.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 200.0
Parameter description
Defines the low-frequency resonance suppression 2 frequency at the mechanical end. Set this parameter based on the actual jitter frequency.

H09.45 **Response of low-frequency resonance suppression 2 at mechanical end**

Comm. address:	2009-2Eh	Effective mode:	Real time
Min. value:	0.01	Unit:	-
Max. value:	10.00	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.01 to 10.00
Parameter description
Defines the end low-frequency suppression 2 response. Use the default setpoint in general cases. To increase the setpoint, decrease the delay time.

H09.47 **Bandwidth of low-frequency resonance suppression 2 at mechanical end**

Comm. address:	2009-30h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	2.00	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.00 to 2.00
Parameter description
Defines the bandwidth of low-frequency resonance suppression 2 at the mechanical end. Use the default setpoint in general cases. To increase the setpoint, increase the delay time.

H09.49 **Frequency of low-frequency resonance suppression 3 at the mechanical end**

Comm. address:	2009-32h	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	200.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 200.0
Parameter description
Defines the frequency of low-frequency resonance suppression 3 at mechanical end.

H09.50 **Response of low-frequency resonance suppression 3 at the mechanical end**

Comm. address:	2009-33h	Effective mode:	Real time
Min. value:	0.01	Unit:	-
Max. value:	10.00	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.01 to 10.00
Parameter description
Defines the response of low-frequency resonance suppression 3 at the mechanical end.

H09.52 **Bandwidth of low-frequency resonance suppression 3 at the mechanical end**

Comm. address:	2009-35h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	2.00	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.00 to 2.00
Parameter description
Defines the bandwidth of low-frequency resonance suppression 3 at mechanical end.

H09.54 **Resonance detection torque threshold**

Comm. address:	2009-37h	Effective mode:	Real time

Min. value:	0.0	Unit:	%
Max. value:	300.0	Data type:	UInt16
Default value:	50.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
Defines the vibration threshold. If the torque fluctuation exceeds the setpoint, an error can be reported. Setting this parameter to 0 disables the resonance detection function.

H09.56 **Maximum overshoot allowed by ETune**

Comm. address:	2009-39h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	2936	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the maximum overshoot value allowed during ETune.

H09.57 **STune resonance suppression switchover frequency**

Comm. address:	2009-3Ah	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	4000	Data type:	UInt16
Default value:	650	Change mode:	Real time

Value range:
0 to 4000
Parameter description
If the resonance frequency is lower than the setpoint, use medium-frequency resonance suppression 2 to suppress resonance. Otherwise, use the notch to suppress resonance. When H09.57 exceeds the frequency upper limit (1000 Hz) of medium frequency suppression 2, the medium frequency suppression is inactive.

H09.58 **STune resonance suppression reset selection**

Comm. address:	2009-3Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
Parameter description
Resets STune resonance suppression to clear parameters related to resonance suppression, medium-frequency resonance suppression 2 and notches 3 and 4.
0: Disable
1: Enable

H09.62 **STune stop delay judgment**

Comm. address:	2009-3Fh	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	50.00	Data type:	UInt16
Default value:	1.00	Change mode:	Real time

Value range:
0.00 to 50.00
Parameter description
Defines the STune stop delay judgement.

H09.63 **STune quick convergence speed**

Comm. address:	2009-40h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	50.00	Data type:	UInt16
Default value:	1.00	Change mode:	Real time

Value range:
0.00 to 50.00
Parameter description
Defines the STune quick convergence speed.

H09.71 **Starting frequency**

Comm. address:	2009-48h	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	15	Change mode:	Real time

Value range:
0 to 8000
Parameter description
Defines the start frequency for high-performance sweep tuning.

H09.72 **Termination frequency**

Comm. address:	2009-49h	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Value range:
0 to 8000
Parameter description
Defines the end frequency for high-performance sweep tuning.

H09.73 **Frequency subdivision**

Comm. address:	2009-4Ah	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	500	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:
0 to 500
Parameter description
Defines the frequency resolution of high-performance tuning in the low frequency band (start frequency-start frequency 2). The higher the setpoint, the lower the resolution is.

H09.74 **Excitation amplitude**

Comm. address:	2009-4Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	15.0	Change mode:	Real time

Value range:
0.0 to 400.0
Parameter description
Defines the sweeping excitation amplitude for high-performance tuning.

H09.75 **Starting frequency 2**

Comm. address:	2009-4Ch	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	8000	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 8000
Parameter description
Defines the start frequency for high-performance tuning in medium- and high-frequency bands.

H09.76 **Frequency subdivision 2**

Comm. address:	2009-4Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1000	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the frequency resolution of high-performance tuning in the low frequency band (start frequency 2 to end frequency). The higher the set value, the lower the resolution is.

H09.77 **Biquad filter mode**

Comm. address:	2009-4Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	6	Data type:	UInt16

Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: First-order low-pass
2: Second-order low-pass
3: Notch
4: Lead-lag
5: User-defined

Parameter description
Used to select biquad filter mode.
0: Disable
1: First-order low-pass
2: Second-order low-pass
3: Notch
4: Lead-lag
5: User-defined

H09.78 **Biquad filter numerator frequency**

Comm. address:	2009-4Fh	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	16000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Range:
0 to 16000

Parameter description
Defines the biquad filter numerator frequency.

H09.79 **Damping coefficient of biquad filter numerator**

Comm. address:	2009-50h	Effective mode:	Real time
Min. value:	0.001	Unit:	-
Max. value:	10.000	Data type:	UInt16
Default value:	1.000	Change mode:	Real time

Value range:
0.001 to 10.000

Parameter description
Defines the damping coefficient of biquad filter numerator.

H09.80 **Biquad filter denominator frequency**

Comm. address:	2009-51h	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	16000	Data type:	UInt16
Default value:	8000	Change mode:	Real time

Range:
0 to 16000

Parameter description
Defines the biquad filter denominator frequency.

H09.81 **Damping coefficient of biquad filter denominator**

Comm. address:	2009-52h	Effective mode:	Real time
Min. value:	0.001	Unit:	-
Max. value:	10.000	Data type:	UInt16
Default value:	1.000	Change mode:	Real time

Value range:
0.001 to 10.000
Parameter description
Defines the damping coefficient of biquad filter denominator.

H09.82 **Vibration frequency 1**

Comm. address:	2009-53h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
Defines the vibration frequency 1.

H09.83 **Resonance frequency 1**

Comm. address:	2009-54h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
Defines the resonance frequency 1.

H09.84 **Vibration damping 1**

Comm. address:	2009-55h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	0.50	Data type:	UInt16
Default value:	0.05	Change mode:	Real time

Value range:
0.00 to 0.50
Parameter description
Defines the vibration damping 1.

H09.85 **Resonance damping 1**

Comm. address:	2009-56h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	0.50	Data type:	UInt16
Default value:	0.05	Change mode:	Real time

Value range:
0.00 to 0.50
Parameter description
Defines resonance damping 1.

H09.86 **Vibration frequency 2**

Comm. address:	2009-57h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
Defines the vibration frequency 2.

H09.87 **Resonance frequency 2**

Comm. address:	2009-58h	Effective mode:	Real time
Min. value:	0.0	Unit:	Hz
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
Defines the resonance frequency 2.

H09.88 **Vibration damping 2**

Comm. address:	2009-59h	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	0.50	Data type:	UInt16
Default value:	0.05	Change mode:	Real time

Value range:
0.00 to 0.50
Parameter description
Defines the vibration damping 2.

H09.89 **Resonance damping 2**

Comm. address:	2009-5Ah	Effective mode:	Real time
Min. value:	0.00	Unit:	-

Max. value:	0.50	Data type:	UInt16
Default value:	0.05	Change mode:	Real time

Value range:
0.00 to 0.50
Parameter description
Defines resonance damping 2.

H09.92 Model friction compensation enable

Comm. address:	2009-5Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: Disable
1: Enable
Parameter description
Model friction compensation

H09.93 Model friction compensation coefficient

Comm. address:	2009-5Eh	Effective mode:	Real time
Min. value:	0.00	Unit:	%/1000 rpm
Max. value:	50.00	Data type:	UInt16
Default value:	0.00	Change mode:	Real time

Value range:
0.00 to 50.00
Parameter description
Defines the model friction compensation coefficient.

H09.94 Model tracking gain proportional coefficient in STune

Comm. address:	2009-5Fh	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	30.00	Data type:	UInt16
Default value:	2.00	Change mode:	Real time

Value range:
0.00 to 30.00
Parameter description
Tune H08.43 (model gain). Gain tuning is available only in STune8.

H09.95 Auto-tuning of jitter suppression at the mechanical end

Comm. address:	2009-60h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
2: Clear resonance suppression parameters
Parameter description
-

H09.98 **Auto-tuning of vibration suppression function**

Comm. address:	2009-63h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Auto-tuning of fast vibration suppression
2: Auto-tuning of slow vibration suppression
Parameter description
0: Disable
1: Auto-tuning of fast vibration suppression
2: Auto-tuning of slow vibration suppression

8.11 H0A Fault and Protection Parameters

H0A.00 **Power input phase loss protection**

Comm. address:	200A-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Enable
1: Disable
Parameter description
Inovance provides servo drives of single-phase 200 V, three-phase 200 V, and three-phase 400 V. When the input voltage fluctuates violently or phase loss occurs, the servo drive flexibly selects the protection mode according to the setting of H0A.00.
0: Enable
1: Disable

H0A.01 **Absolute position limit**

Comm. address:	200A-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
2: Enable after homing
Parameter description
Defines the activation condition for enabling the software limit function and the software limit.
0: Disable
1: Enable
2: Enable after homing

H0A.04 **Motor overload protection gain**

Comm. address:	200A-05h	Effective mode:	Real time
Min. value:	50	Unit:	-
Max. value:	300	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:
50 to 300
Parameter description
Defines the motor overload duration before E620.0 is reported when H32.70 is set to 0.
You can change the setpoint based on motor temperature to reduce or prolong the time to trigger overload protection. The setpoint 50% indicates the trigger time is reduced by 50%. The setpoint 150% indicates the trigger time is prolonged by 50%.
Set this parameter based on the actual heating condition of the motor, and take caution during use.

H0A.08 **Overspeed threshold**

Comm. address:	200A-09h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	20000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 20000
Parameter description
Defines the overspeed threshold of the motor.

Setpoint	Overspeed threshold	Condition for reporting E500.0
0	Max. motor speed × 1.2	If the speed feedback exceeds the overspeed threshold several times, the drive reports E500.0 (Motor overspeed).
1 to 20000	If H0A-08 ≥ (Maximum motor speed × 1.2): The overspeed threshold equals the maximum motor speed × 1.2.	
	If H0A-08 < (Maximum motor speed × 1.2): The overspeed threshold equals H0A.08.	

H0A.09 **Max. pulse input frequency in position control**

Comm. address:	200 A-0Ah	Effective mode:	Real time
Min. value:	100	Unit:	kHz
Maximum value:	16000	Data type:	UInt16
Default value:	16000	Change mode:	At stop

Value range:
100 to 16000

Parameter description
Defines the maximum frequency of input pulses when the position reference source is pulse reference (H05.00 = 0) in position control mode.
When the actual pulse input frequency exceeds the value of H0A.09, the drive reports EB01.0 (Position reference input error).

H0A.10 **Threshold of excessive local position deviation**

Comm. address:	200A-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	27486951	Change mode:	Real time

Value range:
0 to 4294967295

Parameter description
Defines the threshold for excessive position deviation in the position control mode. The unit is defined by H0A.17.
When the position deviation exceeds this threshold, the drive reports EB00.0 (Excessive position deviation).

H0A.12 **Runaway protection**

Comm. address:	200A-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0: Disable
1: Enable runaway protection scheme 1
2: Enable runaway protection scheme 2

Parameter description
Defines whether to enable runaway protection.
0: Hide E234 when the motor drives a vertical axis or is driven by the load
1: Enable runway protection scheme 1
2: Enable runway protection scheme 2

H0A.13 **Angle auto-tuning mode**

Comm. address:	200A-0Eh	Effective mode:	Real time

Min. value:	0	Unit:	-
Max. value:	10	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Angle auto-tuning through pre-positioning

1: Angle auto-tuning through inching

2: Angle auto-tuning through voltage injection

6: Angle auto-tuning through static Hall

8: Angle auto-tuning through closed-loop pre-positioning

9: Angle auto-tuning through position lock

Parameter description

Defines the motor angle auto-tuning mode.

0: Angle auto-tuning through pre-positioning

1: Angle auto-tuning through inching

2: Angle auto-tuning through voltage injection

6: Angle auto-tuning through static Hall

8: Angle auto-tuning through closed-loop pre-positioning

9: Angle auto-tuning through position lock

Limits on the use of method 2:

1. The setpoint 2 is only applicable to motors with iron cores. It is applicable to ROT and DDR motors, not DDL motors.

2. If other auto-tuning methods fail, perform the following test before using angle auto-tuning through voltage injection. Specifically, with continuous power-on and no software reset, perform angle auto-tuning through voltage injection at five different positions. Record each auto-tuning result (H00.28). Angle auto-tuning through voltage injection can be used only if the maximum deviation of the auto-tuning results is within 5400.

H0A.17 Reference pulse selection

Comm. address:	200 A-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Pulse unit

1: Reference unit

Parameter description

Sets the unit for determining the threshold of excessive position deviation, positioning completion, and positioning proximity.

0: Pulse unit

1: Reference unit

H0A.18 IGBT over-temperature threshold

Comm. address:	200A-13h	Effective mode:	Real time
Min. value:	120	Unit:	℃
Max. value:	175	Data type:	UInt16

Default value:	140	Change mode:	Real time

Value range:
120 to 175
Parameter description
Defines the threshold for reporting E640.0 and E640.1.

H0A.19 **Filter time constant of touch probe 1**

Comm. address:	200A-14h	Effective mode:	Real time
Min. value:	0.00	Unit:	μs
Max. value:	6.30	Data type:	UInt16
Default value:	2.00	Change mode:	Real time

Value range:
0.00 to 6.30
Parameter description
Defines the filter time of touch probe 1.

H0A.20 **Filter time constant of probe 2**

Comm. address:	200A-15h	Effective mode:	Real time
Min. value:	0.00	Unit:	μs
Max. value:	6.30	Data type:	UInt16
Default value:	2.00	Change mode:	Real time

Value range:
0.00 to 6.30
Parameter description
Defines the filter time of touch probe 2.

H0A.21 **STO function selection switch**

Comm. address:	200A-16h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
bit0: Not hide E150.0 fault
bit2: Hide E150.5 fault
Parameter description
STO function selection switch
bit0: STO display selection 0: The keypad displays "sto_" after the STO function is triggered. In this case, no fault is reported and the corresponding DO has no output. 1: The keypad displays "E150.0" after the STO function is triggered. In this case, the dive reports the fault and the corresponding DO outputs the fault signal.
bit2: E150.5 fault mask selection 0: Not mask; 1: Mask

H0A.23 **TZ signal filter time**

Comm. address:	200A-18h	Effective mode:	Next power-on

Min. value:	0	Unit:	25 ns
Max. value:	31	Data type:	UInt16
Default value:	15	Change mode:	At stop

Value range:
0 to 31
Description
Defines the TZ signal filter time.

H0A.24 **Filter time constant of low-speed pulse input terminal**

Comm. address:	200 A-19h	Effective mode:	Next power-on
Min. value:	0	Unit:	25 ns
Max. value:	255	Data type:	UInt16
Default value:	30	Change mode:	At stop

Value range:
0 to 255
Parameter description
Defines the filter time constant of low-speed pulse input terminal which is enabled (H05.01 = 0) when the position reference source is pulse input (H05.00 = 0) in the position control mode. When peak interference exists in the low-speed pulse input terminal, set this parameter to suppress peak interference and prevent motor malfunction due to interference signal inputted to the servo drive.

H0A.25 **Speed display DO low-pass filter time**

Comm. address:	200A-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	5000	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 5000
Parameter description
Defines the low-pass filter time constant of the speed information for speed feedback and position references.

H0A.26 **Motor overload mask**

Comm. address:	200A-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Show motor overload alarm (E909.0) and fault (E620.0)
1: Hide motor overload alarm (E909.0) and fault (E620.0)
Parameter description
Defines whether to enable motor overload detection.
0: Show motor overload alarm (E909.0) and fault (E620.0)
1: Hide motor overload alarm (E909.0) and fault (E620.0)

H0A.27 **Moving average filter time for speed display DO**

Comm. address:	200A-1Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	100	Data type:	UInt16
Default value:	50	Change mode:	At stop

Value range:
0 to 100
Parameter description
Defines the moving average filter time constant of the speed information for speed feedback and position references.

H0A.28 **ABZ encoder pulse signal filter time**

Comm. address:	200 A-1Dh	Effective mode:	Next power-on
Min. value:	0	Unit:	25 ns
Max. value:	255	Data type:	UInt16
Default value:	2	Change mode:	At stop

Value range:
0 to 255
Parameter description
Defines the pulse signal filter time of the ABZ encoder that is used as the primary encoder.

H0A.29 **Fully closed-loop encoder (ABZ) filter time**

Comm. address:	200A-1Eh	Effective mode:	Next power-on
Min. value:	0	Unit:	25 ns
Max. value:	65535	Data type:	UInt16
Default value:	4111	Change mode:	At stop

Value range:
bit0 to bit7: Fully closed loop encoder (ABZ) pulse signal filtering time
bit8-bit15: Fully closed loop encoder (ABZ) wire breakage filter time
Parameter description
bit0 to bit7: Fully closed-loop encoder (ABZ) pulse signal filter time.
bit8 to bit15: Fully closed-loop encoder (ABZ) disconnection filter time.

H0A.30 **Filter time constant of high-speed pulse input terminal**

Comm. address:	200 A-1Fh	Effective mode:	Next power-on
Min. value:	0	Unit:	ns
Maximum value:	255	Data type:	UInt16
Default value:	2	Change mode:	At stop

Value range:
0 to 255
Parameter description
Defines the filter time constant of high-speed pulse input terminal.

H0A.32 **Over-temperature protection time window upon stall**

Comm. address:	200A-21h	Effective mode:	Real time
Min. value:	10	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
10 to 65535
Parameter description
Defines the overtemperature duration before E630.0 (Motor stall) is detected by the drive. H0A.32 can be used to adjust the sensitivity of motor stall overtemperature detection.

H0A.33 **Over-temperature protection selection upon stall**

Comm. address:	200A-22h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: Disable
1: Enable
Parameter description
Enables or disables the detection for E630.0 (Motor stall over-temperature protection).
0: Disable
1: Enable

H0A.36 **Encoder multi-turn overflow fault mask**

Comm. address:	200A-25h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
Parameter description
Defines whether to mask the encoder multi-turn overflow fault in absolute position linear mode (H02.01 = 1).
0: Disable
1: Enable

H0A.37 **Filter time for ABZ encoder open-circuit detection**

Comm. address:	200 A-26h	Effective mode:	Next power-on
Min. value:	0	Unit:	25 ns
Max. value:	255	Data type:	UInt16
Default value:	200	Change mode:	At stop

Value range:

0 to 255

Parameter description

Defines the disconnection detection filter time of the ABZ encoder that is used as the master encoder.

H0A.40 **Compensation function enable**

Comm. address:	200A-29h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x1F	Data type:	UInt16
Default value:	0x6	Change mode:	At stop

Value range:

bit0: Overtravel compensation

0: Enable

1: Disable

bit1: Touch probe rising edge compensation

0: Disable

1: Enable

bit2: Touch probe falling edge compensation

0: Disable

1: Enable

bit3: Touch probe logic

0: Probe edge trigger coupled with DI logic

1: Probe edge trigger not coupled with DI logic

bit4: Touch probe 2 independent compensation

0: Disable

1: Enable

Parameter description

Selects overtravel and probe compensation functions.

bit0: Overtravel compensation

0: Compensation enabled

1: Compensation inhibited

bit1: Touch probe rising edge compensation

0: Not compensated

1: Compensated

bit2: Touch probe falling edge compensation

0: Not compensated

1: Compensated

bit3: Touch probe logic

0: Probe edge trigger coupled with DI logic

1: Probe edge trigger not coupled with DI logic

bit4: Touch probe 2 function selection

0: Disable

1: Enable

H0A.41 **Positive software position limit**

Comm. address:	200A-2Ah	Effective mode:	Real time

Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	2147483647	Change mode:	At stop

Value range:
-2147483648 to +2147483647
Parameter description
When the absolute position counter (H0b.07) is larger than H0A.41, the drive reports E950.0 (Forward overtravel) and stops accordingly.

H0A.43 **Negative software position limit**

Comm. address:	200A-2Ch	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	-2147483648	Change mode:	At stop

Value range:
-2147483648 to +2147483647
Parameter description
When the absolute position counter (H0b.07) is smaller than H0A.43, the drive reports alarm E952.0 (Reverse overtravel) and stops accordingly.

H0A.49 **Braking resistor over-temperature threshold**

Comm. address:	200A-32h	Effective mode:	Real time
Min. value:	100	Unit:	℃
Max. value:	175	Data type:	UInt16
Default value:	140	Change mode:	Real time

Value range:
100 to 175
Parameter description
Defines the temperature threshold for braking resistor overload.

H0A.50 **Encoder communication fault tolerance threshold**

Comm. address:	200A-33h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	31	Data type:	UInt16
Default value:	31	Change mode:	Real time

Value range:
0 to 31
Description
When the number of communication failures between the encoder and the drive exceeds the number defined by H0A.50, the communication between the encoder and the drive fails.

H0A.51 **Phase loss detection filtering count**

Comm. address:	200A-34h	Effective mode:	Real time
Min. value:	3	Unit:	55 ms

Max. value:	36	Data type:	UInt16
Default value:	20	Change mode:	Real time

Value range:
3 to 36
Parameter description
Phase loss fault is reported when phase loss keeps active for a period longer than that defined by H0A.51.

H0A.52 Encoder temperature protection threshold

Comm. address:	200A-35h	Effective mode:	Real time
Min. value:	0	Unit:	℃
Max. value:	175	Data type:	UInt16
Default value:	120	Change mode:	Real time

Value range:
0 to 175
Parameter description
Defines the temperature threshold for encoder over-temperature protection.

H0A.53 Probe DI ON compensation time

Comm. address:	200A-36h	Effective mode:	Real time
Min. value:	-3000	Unit:	25 ns
Max. value:	3000	Data type:	Int16
Default value:	200	Change mode:	Real time

Value range:
-3000 to 3000
Parameter description
Compensates for the action time when the touch probe is switched on.

H0A.54 Probe DI OFF compensation time

Comm. address:	200 A-37h	Effective mode:	Real time
Min. value:	-3000	Unit:	25 ns
Max. value:	3000	Data type:	Int16
Default value:	1512	Change mode:	Real time

Value range:
-3000 to 3000
Parameter description
Compensates for the action time when the touch probe is switched off.

H0A.55 Runaway current threshold

Comm. address:	200A-38h	Effective mode:	Real time
Min. value:	100.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	200.0	Change mode:	Real time

Value range:
100.0 to 400.0
Parameter description
Defines the current threshold for runaway protection detection.

H0A.56 **Fault reset delay**

Comm. address:	200A-39h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	60000	Data type:	UInt16
Default value:	10000	Change mode:	Real time

Value range:
0 to 60000
Parameter description
Defines the fault reset delay.

H0A.57 **Runaway speed threshold**

Comm. address:	200A-3Ah	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	1000	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:
1 to 1000
Parameter description
Defines the overspeed threshold for runaway protection detection.

H0A.58 **Runaway speed filter time**

Comm. address:	200A-3Bh	Effective mode:	Next power-on
Min. value:	0.1	Unit:	ms
Max. value:	100.0	Data type:	UInt16
Default value:	2.0	Change mode:	Real time

Value range:
0.1 to 100.0
Parameter description
Defines the speed feedback filter time for runaway protection detection.

H0A.59 **Runaway protection detection time**

Comm. address:	200A-3Ch	Effective mode:	Real time
Min. value:	10	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	30	Change mode:	Real time

Value range:
10 to 1000
Parameter description
The runaway fault (E234.0) will be reported when the runaway state keeps active for a period longer than H0A.59.

H0A.60 **Black box function mode**

Comm. address:	200A-3Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

0: Disable

1: Any fault

2: Designated fault

3: Triggered by designated condition

Parameter description

Defines the condition for triggering black box sampling.

0: Disable

1: Any fault

2: Designated fault

3: Triggered by designated condition

H0A.61 **Specified fault code**

Comm. address:	200A-3Eh	Effective mode:	Real time
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:

0.0 to 6553.5

Parameter description

Defines the fault code for triggering the black box function.

H0A.62 **Trigger source**

Comm. address:	200A-3Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	25	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 25

Parameter description

Defines the fault code for triggering the black box function through the specified channel.

H0A.63 **Trigger level**

Comm. address:	200A-40h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Defines the trigger level for triggering the black box function through the specified channel.

H0A.65 **Trigger level selection**

Comm. address:	200A-42h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Rising edge

1: Equal

2: Falling edge

3: Edge-triggered

Parameter description

Defines the mode for triggering the black box function through H0A.63.

0: Rising edge

1: Equal

2: Falling edge

3: Edge-triggered

H0A.66 **Trigger position**

Comm. address:	200A-43h	Effective mode:	Real time
Min. value:	0	Unit:	%
Max. value:	100	Data type:	UInt16
Default value:	75	Change mode:	Real time

Value range:

0 to 100

Parameter description

Defines the pre-trigger position for triggering black box sampling.

H0A.67 **Sampling frequency**

Comm. address:	200A-44h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Current loop

1: Position loop

2: Main cycle

Parameter description

Defines the frequency sampling mode during black box sampling.

0: Current loop

1: Position loop

2: Main cycle

H0A.70 **Overspeed threshold 2**

Comm. address:	200A-47h	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	20000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 20000
Parameter description
Defines the speed threshold for reporting E500.2 (Position feedback pulse overspeed).

H0A.71 **Internal function switchover switch**

Comm. address:	200A-48h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	4098	Change mode:	Real time

Value range:
0 to 65535
Parameter description
bit0:

Bit	Function	Description
0	MS1 overload curve selection	0: New curve 1: Old curve
1	Bleeder switch status upon power failure	0: Enable 1: Mask
2	Forced brake motor stop	0: Enable 1: Disable
3	New external characteristic switchover switch in multi-speed DI mode	0: Old characteristic 1: New characteristic
4	Mask alarm E120.3 (Drive power smaller than motor power)	0: Mask 1: Not mask
5	Prohibit software from reading parameter	0: Disable 1: Enable
6	Mask alarm E108.4	0: Not mask 1: Mask
7	CSV instruction interpolation method	0: Sync interrupt interpolation 1: IRQ interrupt interpolation
8	Data type used for the rated motor current, inertia, and back EMF coefficient	0: 16-bit 1: 32 bit
9	Enable/Disable disconnection detection	0: Enable 1: Disable

Bit	Function	Description
10	Torque limit source	0: Auto switch according to H02.00 1: H07.09 and H07.10
11	Ultra-precise speed feedback switch	0: Disable 1: Enable
12	Retentive at power failure: homing completion flag	0: Disable 1: Enable
13	STO status word fallback switch	0: Switch on disable 1: Fault
14	Encoder adaptive function switch	0: Enable 1: Disable
15	Interrupt positioning	0: Determined by current motor running direction 1: Determined by parameter

H0A.72 **Maximum stop time in ramp-to-stop**

Comm. address:	200A-49h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10000	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the time for the motor to decelerate from the maximum speed to 0 rpm during ramp-to-stop.

H0A.73 **STO 24 V disconnection filter time**

Comm. address:	200A-4Ah	Effective mode:	Real time
Min. value:	1	Unit:	ms
Max. value:	5	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
1 to 5
Parameter description
Defines the delay from the moment when 24 V is disconnected to the moment when the STO state applies.

H0A.74 **Filter time for two inconsistent STO channels**

Comm. address:	200A-4Bh	Effective mode:	Real time
Min. value:	1	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:

1 to 1000

Parameter description

Defines the delay from the moment the inconsistent 24 V is input to the drive through two channels to the moment when the STO state applies.

H0A.75 **Servo OFF delay after STO triggered**

Comm. address:	200A-4Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	25	Data type:	UInt16
Default value:	20	Change mode:	Real time

Value range:

0 to 25

Parameter description

Defines the delay from the moment the STO state is triggered to the moment the S-ON signal is switched off.

H0A.81 **Voltage drop protection enable**

Comm. address:	200 A-52h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: No operation

1: Host controller executes torque limit

2: Servo executes torque limit

Parameter description

Defines whether to enable voltage drop protection.

0: No operation

1: Host controller executes torque limit

2: Servo executes torque limit

H0A.82 **Voltage drop torque limit**

Comm. address:	200 A-53h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	100.0	Data type:	UInt16
Default value:	50.0	Change mode:	Real time

Value range:

0.0 to 100.0

Parameter description

Defines the voltage drop torque limit.

H0A.83 **Torque limit cancellation time**

Comm. address:	200 A-54h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	1000	Data type:	UInt16

Default value:	100	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the torque limit deactivation time.

H0A.84 **Hold time of instantaneous power failure**

Comm. address:	200 A-55h	Effective mode:	Real time
Min. value:	20	Unit:	ms
Max. value:	50000	Data type:	UInt16
Default value:	1000	Change mode:	Real time

Value range:
20 to 50000
Parameter description
Defines the instantaneous power failure hold time.

H0A.85 **Open circuit detection torque reference**

Comm. address:	200A-56h	Effective mode:	Real time
Min. value:	4.0	Unit:	%
Max. value:	400.0	Data type:	UInt16
Default value:	5.0	Change mode:	At stop

Value range:
4.0 to 400.0
Parameter description
Defines the open circuit detection torque reference.

H0A.86 **Open circuit detection filter time**

Comm. address:	200A-57h	Effective mode:	Real time
Min. value:	5	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	30	Change mode:	At stop

Value range:
5 to 1000
Parameter description
Defines the open circuit detection filter time.

H0A.87 **Number of Hall status fault filtering times**

Comm. address:	200 A-58h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1000	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0 to 1000

Parameter description
Defines the number of hall status fault filtering times.

H0A.90 **Speed display low-pass filter time**

Comm. address:	200A-5Bh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	100	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 100
Parameter description
Defines the low-pass filter time constant for displayed speed values.

H0A.91 **Moving average filter time for torque display**

Comm. address:	200A-5Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	100	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 100
Parameter description
Defines the moving average filter time constant for displayed torque values.

H0A.92 **Moving average filter time for position display**

Comm. address:	200A-5Dh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	100	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 100
Parameter description
Defines the moving average filter time constant for displayed position values.

H0A.93 **Voltage display low-pass filter time**

Comm. address:	200A-5Eh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	250	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 250
Parameter description
Defines the low-pass filter time constant for displayed voltage values.

H0A.94 **Thermal display low-pass filter time**

Comm. address:	200A-5Fh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	250	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 250
Parameter description
Defines the low-pass filter time constant for thermal values.

8.12 H0b Monitoring Parameters

H0b.00 **Actual motor speed**

Comm. address:	200b-01h	Effective mode:	-
Min. value:	-32767	Unit:	[mm/s]/[rpm]
Max. value:	32767	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-32767 to +32767
Parameter description
Displays the actual motor speed after round-off, which is accurate to 1 [mm/s]/[rpm].
You can set in H0A.25 (Speed display DO low-pass filter time) the filter time constant for H0b.00.

H0b.01 **Speed reference**

Comm. address:	200b-02h	Effective mode:	-
Min. value:	-32767	Unit:	[mm/s]/[rpm]
Max. value:	32767	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-32767 to +32767
Parameter description
Indicates the present speed reference (accurate to 1 [mm/s]/[rpm]) of the drive in position and speed control modes.

H0b.02 **Internal torque reference**

Comm. address:	200b-03h	Effective mode:	-
Min. value:	-3276.7	Unit:	%
Max. value:	3276.7	Data type:	Int16
Default value:	0.0	Change mode:	Read-only

Value range:
-3276.7 to +3276.7

Parameter description

Displays the current torque reference in units of 0.1%. The value 100.0% corresponds to the rated torque of the motor.

H0b.03 Monitored DI states

Comm. address:	200b-04h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Displays the level states of the 8 DI terminals without filtering.

Upper LED segments ON: high level (indicated by "1"); Lower LED segments ON: low level (indicated by "0")

H0b.05 Monitored DO states

Comm. address:	200b-06h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Displays the level status of five DOs without filtering.

Upper LED segments ON: high level (indicated by "1"); Lower LED segments ON: low level (indicated by "0")

H0b.07 Absolute position counter

Comm. address:	200b-08h	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:

-2147483648 to +2147483647

Parameter description

Displays current absolute position of the motor in reference unit.

This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.

H0b.09 Mechanical angle

Comm. address:	200b-0Ah	Effective mode:	-
Min. value:	0.0	Unit:	°
Max. value:	360.0	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 360.0
Parameter description
Displays present mechanical angle (encoder unit) of the motor. The setpoint 0 indicates the mechanical angle is 0°.
Actual mechanical angle = 360° × H0b.09 ÷ (Maximum value of H0b.09 + 1)

Maximum value of H0b.09 for an absolute encoder is 65535.

H0b.10 Electrical angle

Comm. address:	200b-0Bh	Effective mode:	-
Min. value:	0.0	Unit:	°
Max. value:	360.0	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 360.0
Parameter description
Displays the present electrical angle of the motor, which is accurate to 0.1°.
The electrical angle variation range is ±360.0° during rotation. If the motor has four pairs of poles, each revolution generates four rounds of angle change from 0° to 359°. Similarly, if the motor has five pairs of poles, each revolution generates five rounds of angle change from 0° to 359°.

H0b.12 Average load ratio

Comm. address:	200b-0Dh	Effective mode:	-
Min. value:	0.0	Unit:	%
Max. value:	800.0	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 800.0
Parameter description
Displays the percentage of the average load torque to the rated torque of the motor, which is accurate to 0.1%. The value 100.0% corresponds to the rated torque of the motor.

H0b.13 Input reference counter

Comm. address:	200b-0Eh	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Counts and displays the number of position references not divided or multiplied by the electronic gear ratio during operation.
This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.

H0b.15 **Position following error (encoder unit)**

Comm. address:	200b-10h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647

Parameter description
Counts and displays the position deviation value after being divided or multiplied by the electronic gear ratio in position control mode.
This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.
Note:
H0b.15 can be cleared when the condition defined in H05.16 is met.

H0b.17 **Feedback pulse counter**

Comm. address:	200b-12h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647

Parameter description
Counts the position pulses fed back by the encoder in any mode.
This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.

H0b.19 **Total power-on time**

Comm. address:	200b-14h	Effective mode:	-
Min. value:	0.0	Unit:	s
Max. value:	429496729.5	Data type:	UInt32
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 429496729.5

Parameter description
Records the total operation time of the drive.
This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.
Note:
If multiple power cycles are performed on the drive within a short period of time, there may be a one-hour deviation between the value of this parameter and the actual time.

H0b.21 **AI1 voltage display**

Comm. address:	200b-16h	Effective mode:	-
Minimum value:	-327.67	Unit:	V
Max. value:	327.67	Data type:	Int16
Default value:	0.00	Change mode:	Read-only

Value range:
-327.67 to 327.67
Parameter description
Displays the actual sampling voltage of AI1.

H0b.22 AI2 voltage display

Comm. address:	200b-17h	Effective mode:	-
Minimum value:	-327.67	Unit:	V
Max. value:	327.67	Data type:	Int16
Default value:	0.00	Change mode:	Read-only

Value range:
-327.67 to 327.67
Parameter description
Displays the actual sampling voltage of AI2.

H0b.24 Effective value of phase current

Comm. address:	200b-19h	Effective mode:	-
Min. value:	0.0	Unit:	A
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Parameter description
Displays the RMS value of the phase current of the motor in unit of 0.1 A.

H0b.25 Angle obtained upon voltage injection auto-tuning

Comm. address:	200b-1Ah	Effective mode:	-
Min. value:	0.0	Unit:	°
Max. value:	360.0	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 360.0
Parameter description
Displays angle obtained upon voltage injection auto-tuning.

H0b.26 Bus voltage

Comm. address:	200b-1Bh	Effective mode:	-
Min. value:	0.0	Unit:	V
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5

Parameter description
Displays the rectified DC bus voltage of the main circuit input voltage in units of 0.1 V.

H0b.27 Module temperature

Comm. address:	200b-1Ch	Effective mode:	-
Min. value:	-20	Unit:	℃
Max. value:	200	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-20 to 200
Parameter description
Displays the temperature of the module inside the drive, which can be used as a reference for estimating the actual temperature of the drive.

H0b.28 Absolute encoder fault information from FPGA

Comm. address:	200b-1Dh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the absolute encoder fault information generated by FPGA.

H0b.29 Axis status information generated by FPGA

Comm. address:	200b-1Eh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the axis status information generated by FPGA.

H0b.30 Axis fault information generated by FPGA

Comm. address:	200b-1Fh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the axis fault information generated by FPGA.

H0b.31 **Encoder fault information**

Comm. address:	200b-20h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the encoder fault information.

H0b.33 **Fault record**

Comm. address:	200b-22h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	19	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Active fault
1: Last fault
2: 2nd to last fault
3: 3rd to last fault
4: 4th to last fault
5: 5th to last fault
6: 6th to last fault
7: 7th to last fault
8: 8th to last fault
9: 9th to last fault
10: 10th to last fault
11: 11th to last fault
12: 12th to last fault
13: 13th to last fault
14: 14th to last fault
15: 15th to last fault
16: 16th to last fault
17: 17th to last fault
18: 18th to last fault
19: 19th to last fault
Parameter description

Used to view the latest 20 faults of the drive.
0: Active fault
1: Last fault
2: 2nd to last fault
3: 3rd to last fault
4: 4th to last fault
5: 5th to last fault
6: 6th to last fault
7: 7th to last fault
8: 8th to last fault
9: 9th to last fault
10: 10th to last fault
11: 11th to last fault
12: 12th to last fault
13: 13th to last fault
14: 14th to last fault
15: 15th to last fault
16: 16th to last fault
17: 17th to last fault
18: 18th to last fault
19: 19th to last fault

H0b.34 **Fault code of the selected fault**

Comm. address:	200b-23h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the fault code of the selected fault.

H0b.35 **Timestamp of the selected fault**

Comm. address:	200b-24h	Effective mode:	-
Min. value:	0.0	Unit:	s
Max. value:	429496729.5	Data type:	UInt32
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 429496729.5
Parameter description
Displays the time stamp of the selected fault.

H0b.37 **Motor speed upon the selected fault**

Comm. address:	200b-26h	Effective mode:	-
Min. value:	-32767	Unit:	[mm/s]/[rpm]

Max. value:	32767	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-32767 to +32767
Parameter description
Displays the motor speed upon occurrence of the selected fault.

H0b.38 Motor phase U current upon selected fault

Comm. address:	200b-27h	Effective mode:	-
Min. value:	-3276.7	Unit:	A
Max. value:	3276.7	Data type:	Int16
Default value:	0.0	Change mode:	Read-only

Value range:
-3276.7 to +3276.7
Parameter description
Displays the motor phase U current upon the selected fault.

H0b.39 Motor phase V current upon displayed fault

Comm. address:	200b-28h	Effective mode:	-
Min. value:	-3276.7	Unit:	A
Max. value:	3276.7	Data type:	Int16
Default value:	0.0	Change mode:	Read-only

Value range:
-3276.7 to +3276.7
Parameter description
Displays the motor phase V current upon the selected fault.

H0b.40 Bus voltage upon occurrence of the selected fault

Comm. address:	200b-29h	Effective mode:	-
Min. value:	0.0	Unit:	V
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5
Parameter description
Displays the bus voltage upon the selected fault.

H0b.41 Input terminal state upon selected fault

Comm. address:	200b-2Ah	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Displays the input terminal state upon the selected fault.

H0b.43 Output terminal state upon selected fault

Comm. address:	200b-2Ch	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Displays the output terminal status upon the selected fault.

H0b.45 Internal fault code

Comm. address:	200b-2Eh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFF

Parameter description

Displays the internal fault code.

H0b.46 Absolute encoder fault information generated by FPGA upon selected fault

Comm. address:	200b-2Fh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFF

Parameter description

Displays the absolute encoder fault information generated by FPGA upon the selected fault.

H0b.47 System status information generated by FPGA upon selected fault

Comm. address:	200b-30h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFF

Parameter description

Displays the system status information generated by FPGA upon the selected fault.

H0b.48 **System fault information sent by FPGA upon selected fault**

Comm. address:	200b-31h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the system fault information generated by FPGA upon the selected fault.

H0b.49 **Encoder fault information upon the selected fault**

Comm. address:	200b-32h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the encoder fault information upon occurrence of the selected fault.

H0b.51 **Internal fault code upon the selected fault**

Comm. address:	200b-34h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the internal fault code upon the selected fault.

H0b.52 **FPGA timeout fault standard bit upon selected fault**

Comm. address:	200b-35h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the FPGA timeout fault standard bit upon occurrence of the selected fault.

H0b.53 **Position following error (reference unit)**

Comm. address:	200b-36h	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit

Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647

Parameter description
Displays the position error before being processed by the electronic gear ratio in position control mode.
Position deviation (reference unit) is the value obtained after encoder position deviation calculation. The precision is compromised during division operation.
This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.

H0b.55 Actual motor speed 2

Comm. address:	200b-38h	Effective mode:	-
Min. value:	-214748364.8	Unit:	[mm/s]/[rpm]
Max. value:	214748364.7	Data type:	Int32
Default value:	0.0	Change mode:	Read-only

Value range:
-214748364.8 to +214748364.7

Parameter description
Indicates the actual value of motor speed, which is accurate to 0.1 [mm/s]/[rpm].
This parameter is a 32-bit integer, which is displayed as a decimal on the keypad.
H0A.25 can be used to set the filter time constant of the speed feedback.

H0b.57 Control circuit bus voltage

Comm. address:	200b-3Ah	Effective mode:	-
Min. value:	0.0	Unit:	V
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5

Parameter description
Displays the bus voltage of the control circuit.

H0b.58 Mechanical absolute position (32 low-order bits)

Comm. address:	200b-3Bh	Effective mode:	-
Min. value:	0	Unit:	Encoder unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Read-only

Value range:
0 to 4294967295

Parameter description
Displays the low 32 low-order bit values (encoder unit) of the mechanical position feedback when the absolute encoder is used.

H0b.60 **Mechanical absolute position (32 high-order bits)**

Comm. address:	200b-3Dh	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:

-2147483648 to +2147483647

Parameter description

Displays the 32 high-order bit values (encoder unit) of the mechanical position feedback when the absolute encoder is used.

H0b.63 **NotRdy state**

Comm. address:	200b-40h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	9	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0: Normal

1: Control circuit error

2: Main circuit input error

3: Bus undervoltage

4: Soft start failed

5: Encoder initialization not done

6: Short circuit to ground failed

7: Others

8: STO

9: Initialization of fully closed-loop encoder not done

Parameter description

Displays the reason for NotRdy state.

0: Normal

1: Control circuit error

2: Main circuit input error

3: Bus undervoltage

4: Soft start failed

5: Encoder initialization not done

6: Short circuit to ground failed

7: Others

8: STO

9: Initialization of fully closed-loop encoder not done

H0b.64 **Real-time input position reference counter**

Comm. address:	200b-41h	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32

Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Displays the value of the pulse reference counter before being divided or multiplied by the electronic gear ratio. This value is independent of the servo drive status and the control mode.

H0b.66 **Encoder temperature**

Comm. address:	200b-43h	Effective mode:	-
Min. value:	-32768	Unit:	℃
Max. value:	32767	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-32768 to +32767
Parameter description
Displays the encoder temperature.

H0b.67 **Load rate of braking resistor**

Comm. address:	200b-44h	Effective mode:	-
Min. value:	0.0	Unit:	%
Max. value:	200.0	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 200.0
Parameter description
Displays the load rate of the braking resistor.

H0b.70 **Number of the absolute encoder revolutions**

Comm. address:	200b-47h	Effective mode:	-
Min. value:	-32768	Unit:	Rev
Max. value:	32767	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-32768 to +32767
Parameter description
Displays the number of absolute encoder revolutions.

H0b.71 **Position of absolute encoder within one turn**

Comm. address:	200b-48h	Effective mode:	-
Min. value:	0	Unit:	Encoder unit
Max. value:	2147483647	Data type:	UInt32
Default value:	0	Change mode:	Read-only

Value range:

0 to 2147483647

Parameter description

Displays the single-turn position feedback of the absolute encoder.

H0b.74 System fault information generated by FPGA

Comm. address:	200b-4Bh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFF

Parameter description

Displays the system fault information generated by FPGA.

H0b.77 Encoder position (32 low-order bits)

Comm. address:	200b-4Eh	Effective mode:	-
Min. value:	0	Unit:	Encoder unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Read-only

Value range:

0 to 4294967295

Parameter description

Displays the 32 low-order bits of the position feedback of the absolute encoder.

H0b.79 Encoder position (32 high-order bits)

Comm. address:	200b-50h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:

-2147483648 to +2147483647

Parameter description

Displays the 32 high-order bits of the position feedback of the absolute encoder.

H0b.81 Single-turn position of the rotating load (low-order 32 bits)

Comm. address:	200b-52h	Effective mode:	-
Min. value:	0	Unit:	Encoder unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Read-only

Value range:

0 to 4294967295

Parameter description

Displays the 32 low-order bits of the rotary load position feedback when the absolute system works in rotation mode.

H0b.83 Single-turn position of the rotating load (32 high-order bits)

Comm. address:	200b-54h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647

Parameter description
Displays the 32 high-order bits of the position feedback of the rotating load when the absolute system works in rotary mode.

H0b.85 Single-turn position of the rotary load (reference unit)

Comm. address:	200b-56h	Effective mode:	-
Min. value:	0	Unit:	Reference unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Read-only

Value range:
0 to 4294967295

Parameter description
Displays the 32 high-order bits of the position feedback of the rotating load when the absolute system works in rotary mode.

H0b.87 IGBT junction temperature

Comm. address:	200b-58h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	200	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 200

Parameter description
Displays the IGBT junction temperature.

H0b.90 Group number of the abnormal parameter

Comm. address:	200b-5Bh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF

Parameter description
Displays the group number of the abnormal parameter.

H0b.91 **Offset within the group of the abnormal parameter**

Comm. address:	200b-5Ch	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the offset within the group of the abnormal parameter.

H0b.92 **Hall state view**

Comm. address:	200b-5Dh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the Hall state.

H0b.93 **Closed loop state**

Comm. address:	200b-5Eh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0: Half closed loop
1: Fully closed loop
Parameter description
Displays the closed loop state in position control mode.
0: Half closed loop
1: Fully closed loop

H0b.94 **Single power-on time**

Comm. address:	200b-5Fh	Effective mode:	-
Min. value:	0.0	Unit:	s
Max. value:	429496729.5	Data type:	UInt32
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 429496729.5
Parameter description
Displays the individual power-on time of the drive.

H0b.96 **Single power-on time upon the selected fault**

Comm. address:	200b-61h	Effective mode:	-
Min. value:	0.0	Unit:	s
Max. value:	429496729.5	Data type:	UInt32
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 429496729.5
Parameter description
Displays the single-shot power-on time upon occurrence of the selected fault.

H0b.98 **Dynamic braking resistor load rate**

Comm. address:	200b-63h	Effective mode:	-
Min. value:	0.0	Unit:	%
Max. value:	200.0	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 200.0
Parameter description
Displays the load rate of dynamic braking resistor.

8.13 H0C Fault and Protection Parameters 2

H0C.53 **Probe DI ON compensation time 2**

Comm. address:	200C-36h	Effective mode:	Real time
Min. value:	-3000	Unit:	25 ns
Max. value:	3000	Data type:	Int16
Default value:	200	Change mode:	Real time

Value range:
-3000 to 3000
Parameter description
Compensates for the action time when touch probe 2 is switched on. (active when bit4 of H0A.40 = 1)

H0C.54 **Probe DI OFF compensation time 2**

Comm. address:	200C-37h	Effective mode:	Real time
Min. value:	-3000	Unit:	25 ns
Max. value:	3000	Data type:	Int16
Default value:	1512	Change mode:	Real time

Value range:
-3000 to 3000
Parameter description
Compensates for the action time when touch probe 2 is switched off. (active when bit4 of H0A.40 = 1)

H0C.71 **Internal function switch 2**

Comm. address:	200C-48h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	512	Change mode:	Real time

Value range:
0 to 65535
Parameter description
bit9: Switch for disabling FPGA encoder feedback overspeed threshold

H0C.72 **Internal function switch 3**

Comm. address:	200C-49h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
bit6: Fault level switchover
0: Supported
1: Not supported

H0C.73 **Internal function switch 4**

Comm. address:	200C-4Ah	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
bit1: Anti-voltage dip function, which automatically switches to the baud rate of 2 M at power-on, preventing E136 and E740 (Voltage dip) alarms.
0: ON
1: OFF
bit2: Overcurrent detection scheme switchover
0: New scheme 202/203
1: Old scheme 201
bit4: Whether E601.3 is enabled after E740.0 is reported and homing is completed in incremental mode
0: ON
1: OFF

H0C.80 **Fault level register**

Comm. address:	200C-51h	Effective mode:	Next power-on
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
bit0 to bit3: E234.0
0: Default
1: No.1 non-resettable
2: No.1 resettable
bit4 to bit7: EB00.0
0: Default
2: No.1 resettable
4: No.2 resettable
bit8 to bit11: EB00.1
0: Default
2: No.1 resettable
4: No.2 resettable
bit12 to bit15: E234.1
0: Default
1: No.1 non-resettable
2: No.1 resettable

Parameter description
bit0 to bit3: E234.0 supports escalation/deescalation of No. 1 non-resettable and resettable faults.
bit4 to bit7: EB00.0 supports the escalation/deescalation of No. 1 and No. 2 resettable faults.
bit8 to bit11: EB00.1 supports the escalation/deescalation of No. 1 and No. 2 resettable faults.
bit12 to bit15: E234.1 supports escalation/deescalation of No. 1 non-resettable and resettable faults.

8.14 H0d Auxiliary Function Parameters

H0d.00 **Software reset**

Comm. address:	200d-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: No operation
1: Software reset

Parameter description
0: No operation
1: Enable
Programs in the drive are reset automatically (similar to the program reset upon power-on) after the software reset function is enabled, without the need for a power cycle.

H0d.01 **Fault Reset**

Comm. address:	200d-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: No operation
1: Fault reset
Parameter description
0: No operation
1: Enable
When a No. 1 or No. 2 resettable fault occurs, you can enable the fault reset function in the non-operational state after rectifying the fault cause, stopping the keypad from displaying the fault, and allowing the drive to enter the "rdy" state.
When a No. 3 alarm occurs, you can enable the fault reset function directly, regardless of the servo drive status.

H0d.02 **Inertia auto-tuning**

Comm. address:	200d-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65
Parameter description
Used to enable offline inertia auto-tuning through the keypad. In parameter display mode, switch to H0d.02 and press the SET key to enable offline inertia auto-tuning.

H0d.04 **Encoder ROM read/write**

Comm. address:	200d-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: No operation
1: Write to ROM
2: Read from ROM
3: ROM failure
Parameter description

For Inovance encoders, parameters written to the ROM area can be activated only after the USB and control power supplies are restarted. Ensure that the drive is powered on during parameter writing.
0: No operation
1: Write to ROM
2: Read from ROM
3: ROM failure

H0d.05 **Emergency stop**

Comm. address:	200d-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: No operation
1: Emergency stop
Parameter description
Enable emergency stop through parameters.
0: No operation
1: Enable
Note: The stop mode corresponding to H0d.05 is defined by H02.05 or 605Ch.

H0d.06 **Current loop auto-tuning test**

Comm. address:	200d-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	6	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: No operation
1: Enable current loop auto-tuning
2: Enable current loop step test (static)
3: Enable current loop step test
Parameter description
0: No operation
1: Enable current loop auto-tuning
2: Enable current loop step test (static)
3: Enable current loop step test

H0d.10 **Automatic tuning of analog channel**

Comm. address:	200d-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: No operation

1: Adjust AI1

2: Adjust AI2

Parameter description

When auto-tuning of the analog channel is enabled, the drive automatically calibrates the zero drift voltage of the analog channel to improve signal detection accuracy.

0: No operation

1: Adjust AI1

2: Adjust AI2

H0d.12 UV phase current balance correction

Comm. address:	200d-0Dh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

Used to enable phase U/V current balance calibration.

0: Disable

1: Enable

H0d.17 Forced DI/DO switch

Comm. address:	200d-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Forced DI enable switch

0: Disable

1: Enable

bit1: Forced DO enable switch

0: Disable

1: Enable

Parameter description

Defines whether to enable forced DI/DO.

bit0: defines whether to enable forced DI.

0: Disable

1: Enable

bit1: Defines whether to enable forced DO

0: Disable

1: Enable

H0d.18 Setpoint of forced DI value

Comm. address:	200d-13h	Effective mode:	Real time

Min. value:	0x0	Unit:	-
Max. value:	0xFF	Data type:	UInt16
Default value:	0xFF	Change mode:	Real time

Value range:
0x0 to 0xFF
Parameter description
Defines whether the DI functions set in group H03 is active when forced DI is activated (H0d.17 = 1 or 3).
The value of H0d.18 is displayed as a hexadecimal on the keypad. When it is converted to a binary value, "bit(n) = 1" indicates the level logic of DI function is high level, and "bit(n) = 0" indicates the level logic of the DI function is low level.

H0d.19 Setpoint of forced DO value

Comm. address:	200d-14h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x1F	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x1F
Parameter description
Defines whether the DO functions assigned in group H04 are active when forced DO is active (H0d.17 = 2 or 3).
The value of H0d.19 is displayed as a hexadecimal on the keypad. When it is converted to a binary value, "bit(n) = 1" indicates the DO function is active, and "bit(n) = 0" indicates the DO function is inactive.

H0d.20 Absolute encoder reset

Comm. address:	200d-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: No operation
1: Reset fault
2: Reset fault and multi-turn data
3: Reset Inovance secondary encoder fault
4: Reset Inovance secondary encoder fault and multi-turn data
Parameter description
You can reset the encoder error or the multi-turn data fed back by the encoder by setting H0d.20.
0: No operation
1: Reset fault
2: Reset fault and multi-turn data
3: Reset Inovance secondary encoder fault
4: Reset Inovance secondary encoder fault and multi-turn data

H0d.23 **Motor cogging torque fluctuation auto-tuning enable**

Comm. address:	200d-18h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

Used to enable motor cogging torque fluctuation auto-tuning.

0: Disable

1: Enable

2: Auto-tuning failed (cannot be set, only for display)

H0d.29 **Motor parameter auto-tuning**

Comm. address:	200d-1Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

Resistance/Inductance auto-tuning

0: Disable

1: Enable

8.15 H0E Communication Function Parameters

H0E.00 **Node address**

Comm. address:	200E-01h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	127	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

1 to 127

Parameter description

Indicates the CAN slave node address. Ensure this parameter is consistent with the configuration of the host controller.

H0E.01 **Save data written through communication to EEPROM**

Comm. address:	200E-02h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	255	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: Not save
1: Save parameters
2: Save object dictionaries
3: Save parameters and object dictionaries
4: Save object dictionaries written before communication (OP)
255: Determined by H0E.03 and H0E.04

Parameter description
Defines whether to save parameters and object dictionaries written through the serial port or SDO communication.
0: Not save
1: Save parameters
2: Save object dictionaries
3: Save parameters and object dictionaries
4: Save object dictionaries written before communication (OP)
255: Determined by H0E.03 and H0E.04

H0E.03 **Save objects written through software tool (commissioning protocol) to EEPROM**

Comm. address:	200E-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: Not save
1: Save

Parameter description
Defines whether to save objects written through software tool (commissioning protocol) to EEPROM, including parameters and object dictionaries.
0: Parameters not saved to EEPROM
1: Parameters saved to EEPROM

H0E.04 **Save objects written through communication to EEPROM (excluding commissioning protocol)**

Comm. address:	200E-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Not save
1: Save

Parameter description
You can use this parameter to determine whether to save communication-written data in EEPROM (excluding the commissioning protocol) (CANopen, CANLink, Ethernet COE, and ModBus485). The data includes the function code and object dictionary.

0: Parameters not saved to EEPROM
1: Parameters saved to EEPROM

H0E.07 **Object dictionary unit selection**

Comm. address:	200E-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Reference unit system (p/s, p/s²)
1: User unit system (0.01 [mm/s]/[rpm], ms)
Parameter description
Servo unit system switchover:
0: Use reference unit system. The unit is p/s for speed-type object dictionaries or p/s² for acceleration-type object dictionaries.
1: Use the user unit system. The speed type object dictionary unit is 0.01 [mm/s]/[rpm], and the acceleration type object dictionary unit is the time (ms) taken to change from 0 [mm/s]/[rpm] to 1000 [mm/s]/[rpm].

H0E.10 **CAN selection**

Comm. address:	200E-0Bh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Pulse/Axis control command
1: Enhanced axis control command
2: CANopen
Parameter description
CAN function selection
0: Pulse/Axis control command
1: Enhanced axis control command
2: CANopen

H0E.11 **CAN baud rate**

Comm. address:	200E-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	5	Change mode:	At stop

Value range:

0: 20 kbps
1: 50 kbps
2: 100 kbps
3: 125 kbps
4: 250 kbps
5: 500 kbps
6: 1 Mbps
7: 1 Mbps - non-standard

Parameter description

Defines the communication rate between the drive and the host controller in the CANlink or CANopen mode.

0: 20 kbps
1: 50 kbps
2: 100 kbps
3: 125 kbps
4: 250 kbps
5: 500 kbps
6: 1 Mbps
7: 1 Mbps-customized

Note: The communication rate set in the servo drive must be the same as that in the host controller. Otherwise, communication can fail. If H0E.11 is set to 6, the baud rate is 1 Mbps. 80% sampling points are used to match most PLCs with a 1 Mbps standard baud rate.
If H0E.11 is set to 7, the baud rate is 1 Mbps. 70% sampling points are used to match most PLCs with a 1 Mbps non-standard (deviated) baud rate. Reducing sampling points can also reduce error frames.

H0E.12 **Excessive IP position command increment count**

Comm. address:	200E-0Dh	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	30	Data type:	UInt16
Default value:	20	Change mode:	Real time

Value range:

1 to 30

Parameter description

Sets the threshold of excessive IP position command increment events. EB01.2 is reported based on this threshold.

H0E.13 **CANopen sync period error limit**

Comm. address:	200E-0Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	5	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: 1/4

1: 1/2

2: 3/4

3: 1

4: 2

5: Disabled

Parameter description

Used to set CANopen sync cycle error limit.

0: 1/4

1: 1/2

2: 3/4

3: 1

4: 2

5: Disabled

H0E.14 **CANopen communication state display**

Comm. address:	200E-0Fh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	9	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 9

Parameter description

Displays CANopen communication status.

H0E.17 **Obtains the number of received NMT frames in incorrect length**

Comm. address:	200E-12h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Displays the number of received NMT frames in incorrect length.

H0E.18 **Get the number of received NMT frames with incorrect commands**

Comm. address:	200E-13h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Displays the number of received NMT frames with incorrect commands.

H0E.19 **Obtains the number of received heartbeat frames in incorrect length**

Comm. address:	200E-14h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the number of received heartbeat frames in incorrect length.

H0E.80 **Modbus baud rate**

Comm. address:	200E-51h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	9	Data type:	UInt16
Default value:	9	Change mode:	Real time

Value range:
0: 300 bps
1: 600 bps
2: 1200 bps
3: 2400 bps
4: 4800 bps
5: 9600 bps
6: 19200 bps
7: 38400 bps
8: 57600 bps
9: 115200 bps
Parameter description
Defines the communication rate between the servo drive and the host controller. The baud rate set in the drive must be the same as that in the host controller. Otherwise, communication can fail.
0: 300 bps
1: 600 bps
2: 1200 bps
3: 2400 bps
4: 4800 bps
5: 9600 bps
6: 19200 bps
7: 38400 bps
8: 57600 bps
9: 115200 bps

H0E.81 **Modbus data format**

Comm. address:	200E-52h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16

Default value:	3	Change mode:	Real time

Value range:
0: No parity, 2 stop bits (N-2)
1: Even parity, 1 stop bit (E-1)
2: Odd parity, 1 stop bit (O-1)
3: No parity, 1 stop bit (N-1)

Parameter description
Defines the data verification method for communication between the drive and host controller.
0: No parity, 2 stop bits
1: Even parity, 1 stop bit
2: Odd parity, 1 stop bit
3: No parity, 1 stop bit
The data format of the servo drive must be the same as that of the host controller. Otherwise, communication will fail.

H0E.82 **Modbus response delay**

Comm. address:	200E-53h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Maximum value:	20	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 20

Parameter description
Defines the delay from the moment when the slave receives a reference to the moment when the slave returns a response.

H0E.83 **Modbus communication timeout**

Comm. address:	200E-54h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	600	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 600

Parameter description
Defines Modbus communication timeout period.

H0E.84 **Modbus communication data sequence**

Comm. address:	200E-55h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0: High-order bits are followed by low-order bits.
1: Low-order bits are followed by high-order bits.

Parameter description

Defines the 32-bit data transmission format of Modbus communication.

0: High 16 bits before low 16 bits

1: Low 16 bits before high 16 bits

H0E.90 **Communication version**

Comm. address:	200E-5Bh	Effective mode:	-
Min. value:	0.00	Unit:	-
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	Read-only

Value range:

0.00 to 655.35

Description

Displays the communication version.

H0E.97 **Communication monitoring parameter 1**

Comm. address:	200E-62h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 65535

Parameter description

Defines communication monitoring parameter 1.

H0E.98 **Communication monitoring parameter 2**

Comm. address:	200E-63h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 65535

Parameter description

Defines communication monitoring parameter 2.

8.16 H0F Fully Closed-loop Parameters

H0F.00 **Encoder feedback mode**

Comm. address:	200F-01h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Internal encoder feedback
1: External encoder feedback
2: Inner/Outer loop switchover
Parameter description
Defines the encoder feedback signal source in fully closed-loop control.
0: Internal feedback (Position feedback signals come from the built-in encoder of the servo motor)
1: External encoder feedback (Position feedback signals come from the fully closed-loop external encoder).
Electronic gear ratio 1 is used.
2: Inner/Outer loop switchover: The DI assigned with FunIN.24 (GEAR_SEL, electronic gear ratio switchover) switches between the inner and outer position closed loops. FunIN.24:
Inactive, internal encoder feedback, with electronic gear ratio 1 used
Active: Internal encoder feedback, with electronic gear ratio 2 used

H0F.01 **External encoder usage mode**

Comm. address:	200F-02h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Standard operating direction
1: Reverse operating direction
Parameter description
Defines the feedback pulse counting direction of internal and external encoders when the motor rotates in fully closed-loop mode.
0: Operating in the standard direction: The pulse feedback counter of the internal encoder (H0F.18) is in the same direction as that of the external encoder (H0F.20) during rotation of the motor.
1: Operating in the reverse direction: The pulse feedback counter of the internal encoder (H0F.18) is in the opposite direction as that of the external encoder (H0F.20) during rotation of the motor.

H0F.02 **Fully closed-loop encoder absolute value**

Comm. address:	200F-03h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Maximum value:	0	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Incremental mode
Parameter description
Defines the fully closed-loop encoder absolute value.
0: Incremental mode

H0F.03 **Fully closed-loop encoder feedback type**

Comm. address:	200F-04h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Maximum value:	0	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Quadrature pulse

Parameter description

Defines the fully closed-loop encoder feedback type.

0: Quadrature pulse

H0F.04 **External encoder pulses per revolution**

Comm. address:	200F-05h	Effective mode:	Next power-on
Min. value:	1	Unit:	-
Max. value:	2147483647	Data type:	UInt32
Default value:	10000	Change mode:	At stop

Value range:

1 to 2147483647

Parameter description

Defines the pulses fed back by the external encoder per revolution of the motor.

This parameter defines the quantity relationship between feedback pulses from the external encoder and those from the internal encoder.

Calculate the value of this parameter based on mechanical parameters. When rigid connection is applied between the motor and the external encoder (grating scale), you can also set this parameter using the following method.

1. Manually rotate the motor and observe H0F.18 (Feedback pulse counter of internal encoder) in the meantime. After ensuring that the motor has rotated for a full turn (H0F.18 = Motor resolution), calculate the change of H0F.20 (Feedback pulse counter of external encoder) and use the absolute value of the change as the value of H0F.04.

2. Assume values of H0F.18 and H0F.20 are X1 and Y1 before the motor rotates and X2 and Y2 after the motor rotates, then the following formula applies: H0F.04 = Motor resolution x (Y2 - Y1)/(X2 - X1) The calculated data must be positive. If not, perform the first step again.

For non-rigid connection, an error may exist in the calculation result.

Note:

Ensure H0F.04 is set properly. Otherwise, EB02.0 (Position deviation too large in fully closed loop) may occur after the drive operates.

H0F.06 **Fully closed-loop encoder interface**

Comm. address:	200F-07h	Effective mode:	Next power-on
Min. value:	1	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

1: CN7

Parameter description
Defines the drive interface used by the fully closed-loop encoder.
1: CN7

H0F.08 **Excessive deviation threshold in compound control mode**

Comm. address:	200F-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2147483647	Data type:	UInt32
Default value:	1000	Change mode:	Real time

Value range:
0 to 2147483647
Parameter description
Defines the position deviation threshold at which the drive reports EB02.0 (Excessive position deviation in fully closed-loop mode).
When H0F.08 is set to 0, the drive does not detect EB02.0 and always clears the fully closed-loop position deviation.

H0F.10 **Deviation clear in compound control**

Comm. address:	200F-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	Rev
Max. value:	100	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
0 to 100
Parameter description
Defines the number of motor revolutions after which the fully closed-loop position deviation is cleared during operation of the drive. The number of revolutions is expressed by the internal encoder feedback pulses in H0F.18. The number of motor revolutions will not be cleared to 0 when the drive is in the non-operational state.

H0F.13 **Compound vibration suppression filter time**

Comm. address:	200F-0Eh	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 6553.5
Parameter description
Defines the time constant for compound vibration suppression in fully closed-loop control when external encoder feedback (H0F.00 = 1 or 2) is used.
Increase the setpoint gradually and check the response change in fully closed-loop mode.

When the stiffness of the transmission mechanism between fully closed loop and internal loop is insufficient, set the time constant properly to improve system stability, which is to generate the effect of internal loop temporarily and form a fully closed loop again after the system is stabilized. Ignore this parameter if the stiffness is sufficient.
If H0F.13 is set to 0, no EB02.1 alarms are detected.

H0F.16 **Pulse deviation display in compound control mode**

Comm. address:	200F-11h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Counts and displays the position deviation absolute value in fully closed loop control.
Pulse deviation in compound control = Absolute position feedback of external encoder – Converted value of absolute position feedback of internal encoder
Align the inner and outer loop feedbacks each time the deviation is cleared.

H0F.18 **Internal position pulse feedback display**

Comm. address:	200F-13h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Counts and displays the number of feedback pulses of the internal encoder (after being divided or multiplied by the electronic gear ratio, in internal encoder unit).

H0F.20 **External position pulse feedback display**

Comm. address:	200F-15h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Counts and displays the number of feedback pulses of the external encoder (after being divided or multiplied by the electronic gear ratio, in external encoder unit).

H0F.22 **Quadrature pulse phase Z detection inactive in fully closed-loop mode**

Comm. address:	200F-17h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Detected
1: Not detected
Parameter description
Quadrature pulse phase Z detection selection in fully closed-loop mode
0: Detected
1: Not detected

H0F.25 **Source of touch probe Z signal in fully closed-loop mode**

Comm. address:	200F-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Motor Z signal
1: External feedback Z signal
Parameter description
Defines the source of probe Z signal in fully closed-loop mode.
0: Motor Z signal
1: External feedback Z signal

H0F.45 **Positioning completion/Position deviation threshold in fully closed-loop mode**

Comm. address:	200F-2Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Threshold scaled to outer loop unit
1: Same threshold used for inner and outer loops
Parameter description
0: H05.21 (Positioning completed in fully-closed loop mode) or 6067h/H0A.10 (Excessive position deviation threshold) or 6065h (scaled to outer loop unit)
1: Same threshold used for inner and outer loops

8.17 H11 Multi-position Parameters

H11.00 **Multi-position running mode**

Comm. address:	2011-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	5	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0: Individual operation (number of displacements defined by H11.01)

1: Cyclic operation (number of displacement defined by H11.01)




2: DI-based operation (defined by DI)


3: Sequential operation




5: Axis-controlled continuous operation

Parameter description

Defines the multi-position operating mode when the main position reference source is multi-position references (H05.00 set to 2) in position control mode.

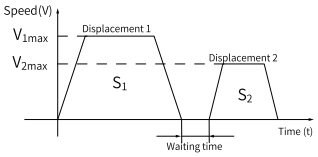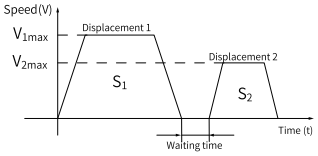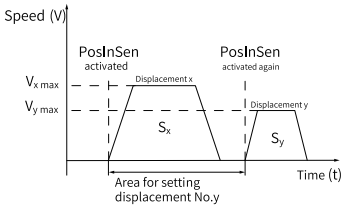Setpoint	Operating mode	Remarks	Operation curve
0	Stop after a single-shot operation	The servo drive stops at one round of running. The servo drive automatically switches to the next speed with a larger number. You can set the interval time between positions. The multi-position reference is level-triggered.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds S_1 , S_2 : displacements of 1st and 2nd positions
1	Cyclic running	The servo drive repeats running from the 1st position after one round of running. The servo drive automatically switches to the next speed with a larger number. You can set the interval time between positions. The multi-position reference is level-triggered.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds S_1 , S_2 : displacements of 1st and 2nd positions
2	DI switchover	The servo drive continues running when the position number is updated. The speed number is determined by the DI terminal logic. The interval time between positions is determined by the command delay of the host controller. The multi-position reference is edge-triggered.	 V_{xmax} , V_{ymax} : maximum operating speeds at position x and position y S_x , S_y : displacements of xth and yth positions

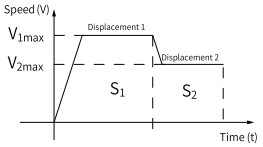Setpoint	Operating mode	Remarks	Operation curve
3	Sequential operation	The drive stops after one cycle of operation. (H11.05 = 0 or H11.05 > H11.01) When H11.05 is higher than H11.01, the software forcibly sets H11.05 to 0. The starting displacement after the first cycle is defined by H11.05. The servo drive automatically switches to the next speed with a larger number. There is no interval time between positions. The multi-position reference is level-triggered.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds S_1 , S_2 : displacements of 1st and 2nd positions

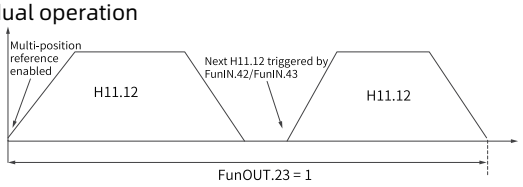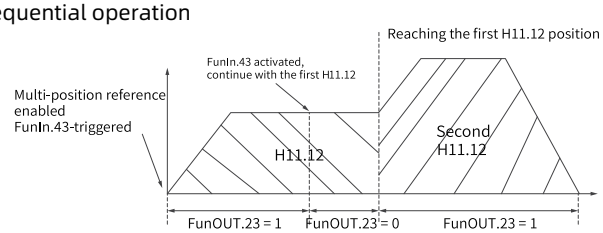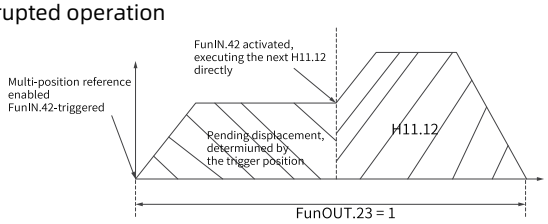Setpoint	Operating mode	Remarks	Operation curve
5	Axis-controlled continuous operation	The drive executes one displacement only. The individual operating mode, sequential operating mode, and interrupted operating mode are included. The PoslnSen (multi-position reference enable) signal is level-triggered.	• Individual operation  • The PoslnSen (multi-position reference enable) signal is triggered only once (FunIN.43/42 triggered later). The drive stops after executing the distance defined by H11.12. • Sequential operation  • The PoslnSen (multi-position reference enable) signal is triggered only once. Write H11.12 again and activate FunIN.43 when the distance defined by the first H11.12 is still in progress.• After receiving the new distance (or speed), which is the second H11.12, the servo drive continues executing the first H11.12 until the distance defined by the first H11.12 is reached. Then, it starts to execute the second H11.12 directly. The travel distance therefore is the sum of the first H11.12 and the second H11.12. • Interrupted operation  • The PoslnSen (multi-position reference enable) signal is triggered only once. Write H11.12 (such as 1000000) again and activate FunIN.42 when the first H11.12 (such as 9000000) is still in progress. After receiving the new distance (or speed), which is the second H11.12, the drive stops executing the first H11.12 and turns to executing the second H11.12.

To use the multi-position function, assign FunIN.28 (PosInSen, multi-position reference enable) to a DI first. See "Group H03: Terminal Input Parameters" for the setting mode.

The positioning completed (COIN) signal is activated each time upon completion of a displacement. To determine whether a certain displacement is done executing, use FunOUT.5 (COIN, positioning completed). See "Group H04: Terminal output parameters" for details.

The S-ON signal must be active during operation of each displacement. Otherwise, the drive stops immediately as defined by H02.05 (Stop mode at S-ON OFF) and the positioning completed (COIN) signal iS inactive. In modes other than DI-based operation, if the S-ON signal is active but multi-position is disabled during operation of a certain displacement, the drive abandons the unsent displacement reference and stops, with the positioning completed (COIN) signal being active. If the multi-position function is enabled again, the displacement to be executed is defined by H11.02.

H11.01 **Number of position references in multi-position mode**

Comm. address:	2011-02h	Effective mode:	Real time
Min. value:	1	Unit:	-
Maximum value:	16	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

1 to 16

Parameter description

Defines the total number of position references in the multi-position mode. You can set different displacements, operating speeds, and acceleration/deceleration time for each position.

H11.00 ≠ 2: Displacements are switched automatically in a sequence from 1 to H11.01.

H11.00 = 2: Assign four DIs (Hardware DI or VDI) with DI functions 6 to 9 (FunIN.6: CMD1 to FunIN.9: CMD4) and control the DI logic through the host controller to switch between different speeds. The displacement number is a 4-bit binary value. bit0 to bit3 correspond to CMD1 to CMD4.

The displacement number is a 4-bit binary value. The relationship between the displacement numbers and CMD1 to CMD4 is shown in the following table.

FunIN.9	FunIN.8	FunIN.7	FunIN.6	Segment No.
CMD4	CMD3	CMD2	CMD1	
0	0	0	0	1
0	0	0	1	2
...				
1	1	1	1	16

H11.02 **Starting position number after pause**

Comm. address:	2011-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Continue to execute the remaining positions

1: Start from position 1

Parameter description

Sets the starting position number when the multi-function running recovers after a pause.

0: Continue to execute the unexecuted positions: For example, if H11.01 is set to 16 and the drive pauses at position 2, after the drive recovers from the pause, it will start from position 3.

1: Start from position 1: For example, if H11.01 is set to 16 and the drive pauses at position 2, after the drive recovers from the pause, it will start from position 1.

Causes of pause:

1. The drive switches to another control mode or the interrupt positioning function is enabled during multi-position operation.
2. The internal multi-position enable signal (FunIN.28: PosInSen) changes from "valid" to "invalid".

H11.03 **Waiting time unit**

Comm. address:	2011-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: ms
1: s
Parameter description
Sets the unit of the acceleration/deceleration time and waiting time during the multi-position running.
Acceleration/Deceleration time: time for the servo drive to change from 0 RPM to 1000 RPM or the reverse
Waiting time: time interval from ending of the current position reference to starting of the next position reference

H11.04 **Displacement reference type**

Comm. address:	2011-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Relative displacement reference
1: Absolute displacement reference
Parameter description
Relative displacement: position increment of the target position relative to the current motor position
Absolute displacement: position increment of the target position relative to the motor home.

H11.05 **Starting position number in sequential operation**

Comm. address:	2011-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	16	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 16
Description
Defines whether to perform cyclic operation and the starting displacement number after the first cycle of operation in the sequential operation mode (H11.00 = 3).
0: The drive executes the positions defined by H11.01 only once and then stops. The motor is in the locked state.
1 to 16: Cyclic operation applies. The drive starts from the position number defined by H11.05 after the first cycle of operation. The value of H11.05 should be lower than or equal to H11.01.

H11.09 **Deceleration of multi-reference upon axis control OFF**

Comm. address:	2011-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	65535	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.10 **Starting speed of displacement 1**

Comm. address:	2011-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	6000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 6000
Parameter description
-

H11.11 **Stop speed of displacement 1**

Comm. address:	2011-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	6000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 6000
Parameter description
-

H11.12 **Displacement of position 1**

Comm. address:	2011-0Dh	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
Sets the 1st displacement in multi-position operation (in reference unit).

H11.14 **Maximum running speed of position 1**

Comm. address:	2011-0Fh	Effective mode:	Real time

Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
Defines the maximum running speed in position 1.
The maximum speed is the average operating speed when the motor is not in the acceleration/deceleration process. If H11.12 is set to an excessively low value, the actual motor speed will be lower than H11.14.

H11.15 **Acceleration/Deceleration time of position 1**

Comm. address:	2011-10h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the time for the motor to change from 0 rpm 1000 rpm at a constant speed during displacement 1.

Actual time (t) taken to accelerate to H11.14 (Maximum running speed of 1st displacement):


$$t = \frac{(H11.14) \times (H11.15)}{1000}$$

Note: The mechanical rigidity must be proper and the speed loop can follow the position reference.

H11.16 **Waiting time after completion of position 1**

Comm. address:	2011-11h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
Defines the waiting time from completion of the position 1 to the start of the next position.

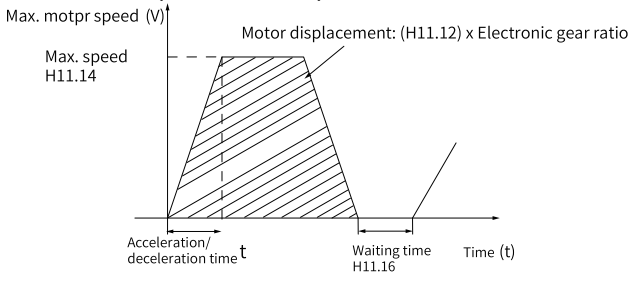

H11.17 **2nd displacement**

Comm. address:	2011-12h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.19 **Maximum running speed of 2nd displacement**

Comm. address:	2011-14h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.20 **Acceleration/Deceleration time of 2nd displacement**

Comm. address:	2011-15h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.21 **Waiting time after 2nd displacement**

Comm. address:	2011-16h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.22 **3rd displacement**

Comm. address:	2011-17h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.24 **Max. running speed of 3rd displacement**

Comm. address:	2011-19h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.25 **Acceleration/Deceleration time of 3rd displacement**

Comm. address:	2011-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.26 **Waiting time after 3rd displacement**

Comm. address:	2011-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.27 **4th displacement**

Comm. address:	2011-1Ch	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.29 **Max. running speed of 4th displacement**

Comm. address:	2011-1Eh	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.30 **Acceleration/Deceleration time in position 4**

Comm. address:	2011-1Fh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.31 **Waiting time after 4th displacement**

Comm. address:	2011-20h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.32 **5th displacement**

Comm. address:	2011-21h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.34 **Max. running speed of 5th displacement**

Comm. address:	2011-23h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.35 **Acceleration/Deceleration time of 5th displacement**

Comm. address:	2011-24h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.36 **Waiting time after 5th displacement**

Comm. address:	2011-25h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.37 **6th displacement**

Comm. address:	2011-26h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.39 **Max. running speed of 6th displacement**

Comm. address:	2011-28h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.40 **Acceleration/Deceleration time of 6th displacement**

Comm. address:	2011-29h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.41 **Waiting time after 6th displacement**

Comm. address:	2011-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.42 **7th displacement**

Comm. address:	2011-2Bh	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.44 **Max. running speed of 7th displacement**

Comm. address:	2011-2Dh	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.45 **Acceleration/Deceleration time of 7th displacement**

Comm. address:	2011-2Eh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.46 **Waiting time after 7th displacement**

Comm. address:	2011-2Fh	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.47 **8th displacement**

Comm. address:	2011-30h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.49 **Max. running speed of 8th displacement**

Comm. address:	2011-32h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.50 **Acceleration/Deceleration time of 8th displacement**

Comm. address:	2011-33h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.51 **Waiting time after 8th displacement**

Comm. address:	2011-34h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.52 **9th displacement**

Comm. address:	2011-35h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.54 **Max. running speed of 9th displacement**

Comm. address:	2011-37h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.55 **Acceleration/Deceleration time of 9th displacement**

Comm. address:	2011-38h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.56 **Waiting time after 9th displacement**

Comm. address:	2011-39h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.57 **10th displacement**

Comm. address:	2011-3Ah	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.59 **Maximum running speed in position 10**

Comm. address:	2011-3Ch	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.60 **Acceleration/Deceleration time of 10th displacement**

Comm. address:	2011-3Dh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.61 **Waiting time after 10th displacement**

Comm. address:	2011-3Eh	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.62 **11th displacement**

Comm. address:	2011-3Fh	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.64 **Max. running speed of 11th displacement**

Comm. address:	2011-41h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.65 **Acceleration/Deceleration time of 11th displacement**

Comm. address:	2011-42h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.66 **Waiting time after 11th displacement**

Comm. address:	2011-43h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.67 **12th displacement**

Comm. address:	2011-44h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.69 **Maximum running speed in position 12**

Comm. address:	2011-46h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.70 **Acceleration/Deceleration time of 12th displacement**

Comm. address:	2011-47h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.71 **Waiting time after 12th displacement**

Comm. address:	2011-48h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.72 **13th displacement**

Comm. address:	2011-49h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.74 **Max. running speed of 13th displacement**

Comm. address:	2011-4Bh	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.75 **Acceleration/Deceleration time of 13th displacement**

Comm. address:	2011-4Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.76 **Waiting time after 13th displacement**

Comm. address:	2011-4Dh	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.77 **14th displacement**

Comm. address:	2011-4Eh	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.79 **Max. running speed of 14th displacement**

Comm. address:	2011-50h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.80 **Acceleration/Deceleration time of 14th displacement**

Comm. address:	2011-51h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.81 **Waiting time after 14th displacement**

Comm. address:	2011-52h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.82 **15th displacement**

Comm. address:	2011-53h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.84 **Max. running speed of 15th displacement**

Comm. address:	2011-55h	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.85 **Acceleration/Deceleration time of 15th displacement**

Comm. address:	2011-56h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.86 **Waiting time after 15th displacement**

Comm. address:	2011-57h	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

H11.87 **16th displacement**

Comm. address:	2011-58h	Effective mode:	Real time
Minimum value:	-1073741824	Unit:	Reference unit
Maximum value:	1073741824	Data type:	Int32
Default value:	10000	Change mode:	Real time

Value range:
-1073741824 to 1073741824
Parameter description
-

H11.89 **Max. running speed of 16th displacement**

Comm. address:	2011-5Ah	Effective mode:	Real time
Min. value:	1	Unit:	rpm
Max. value:	10000	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
1 to 10000
Parameter description
-

H11.90 **Acceleration/Deceleration time of 16th displacement**

Comm. address:	2011-5Bh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
-

H11.91 **Waiting time after 16th displacement**

Comm. address:	2011-5Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms(s)
Maximum value:	10000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 10000
Parameter description
-

8.18 H12 Multi-speed Parameters

H12.00 **Multi-speed operation mode**

Comm. address:	2012-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0: Stop after running for one cycle (number of speeds defined by H12.01)

1: Cyclic operation (number of speeds defined by H12.01)

2: DI-based operation

Parameter description

Defines the multi-speed operation mode when the speed reference source is multi-speed reference (H06.01 = 5, H06.02 = 1/2/3) in speed control mode.




0: Stop after one cycle of operation, and automatically switches to the next speed.

1: Cyclic operation (start from speed 1 after each cycle of operation), which automatically switches to the next speed. Cyclic operation remains active as long as the S-ON signal of the drive is active.

2: Switched by DI: The drive can run continuously when it is enabled. The speed number is determined by DI terminal logic. The running time of each speed reference is only determined by the interval time of speed number switchover. FunIN.5 (DlR-SEL) can be used to switch the direction of the speed reference.

Ensure that the servo ON signal is active during operation of each speed reference. Otherwise, the drive immediately stops according to the mode set in H02.05.

The speed reach signal (FunOUT.19: V-Arr) is active when a certain speed reference is reached.

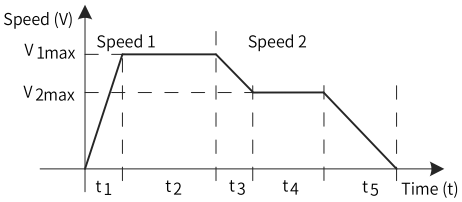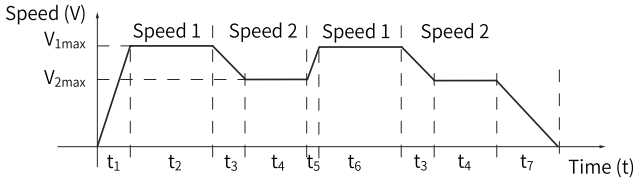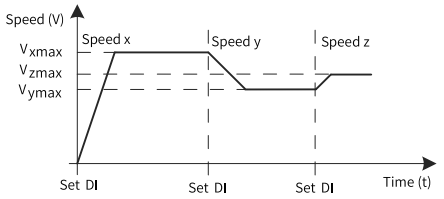Setpoint	Operating mode	Remarks	Operation curve
0	Stop after a single-shot operation	The servo drive stops at one round of running. The drive switches to the next position automatically.	 V_{1max} and V_{2max} : reference values of speed 1 and speed 2 t_1 : actual acceleration/deceleration time of speed 1 t_3 , t_5 : actual acceleration/deceleration time of 2nd speed
1	Cyclic running	The servo drive repeats from the 1st speed after each round of running. The servo drive automatically switches to the next speed with a larger number. The cyclic running state remains if the servo ON signal is active.	 V_{1max} , V_{2max} : maximum values of the 1st and 2nd speeds
2	Switchover by DI	The servo drive continues running when the servo ON signal is active. The speed number is determined by the DI terminal logic. The running time of each speed reference is determined by the time interval for speed number switchover. The speed reference direction can be switched over through FunIN.5 (DlR-SEL).	 x and y: speed number (The relationship between the speed number and the DI logic is described below.) V_x and V_y : speed references for speeds x and y The speed number determined by DI does not change, which means the speed reference operates continuously regardless of the reference operating time.

H12.01 **Number of speed references in multi-speed mode**

Comm. address:	2012-02h	Effective mode:	Real time
Min. value:	1	Unit:	-
Maximum value:	16	Data type:	UInt16
Default value:	16	Change mode:	At stop

Value range:

1 to 16

Parameter description

Defines the total number of speed references in multi-speed mode. You can set different speeds, operation time, and acceleration/deceleration time (four groups available) for each speed number.

H12.00 ≠ 2: Speeds are switched automatically in a sequence from 1 to H12.01.
H12.00 = 2: Assign four DIs (Hardware DI or VDI) with DI functions 6 to 9 (FunIN.6: CMD1 to FunIN.9: CMD4) and control the DI logic through the host controller to switch between different speeds. The displacement number is a 4-bit binary value. bit0 to bit3 correspond to CMD1 to CMD4.

FunIN.9	FunIN.8	FunIN.7	FunIN.6	Segment No.
CMD4	CMD3	CMD2	CMD1	
0	0	0	0	1
0	0	0	1	2
...				
1	1	1	1	16

The value of CMD(n) is 1 upon active DI logic and 0 upon inactive DI logic.

H12.02 **Operation time unit**

Comm. address:	2012-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: s
1: min
Parameter description
Defines the time unit of multi-speed operation.
0: s
1: min

H12.03 **Acceleration time 1**

Comm. address:	2012-04h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Acceleration time is the time for the motor to accelerate from 0 rpm to 1000 rpm at a constant speed.

H12.04 **Deceleration time 1**

Comm. address:	2012-05h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535

Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Deceleration time is the time for the motor to decelerate from 1000 rpm to 0 rpm at a constant speed.

H12.05 **Acceleration time 2**

Comm. address:	2012-06h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Acceleration time is the time for the motor to accelerate from 0 rpm to 1000 rpm at a constant speed.

H12.06 **Deceleration time 2**

Comm. address:	2012-07h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Deceleration time is the time for the motor to decelerate from 1000 rpm to 0 rpm at a constant speed.

H12.07 **Acceleration time 3**

Comm. address:	2012-08h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Acceleration time is the time for the motor to accelerate from 0 rpm to 1000 rpm at a constant speed.

H12.08 **Deceleration time 3**

Comm. address:	2012-09h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16

Default value:	100	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Deceleration time is the time for the motor to decelerate from 1000 rpm to 0 rpm at a constant speed.

H12.09 Acceleration time 4

Comm. address:	2012-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	150	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Acceleration time is the time for the motor to accelerate from 0 rpm to 1000 rpm at a constant speed.

H12.10 Deceleration time 4

Comm. address:	2012-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	150	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Four groups of acceleration/deceleration time can be selected for each speed number. Deceleration time is the time for the motor to decelerate from 1000 rpm to 0 rpm at a constant speed.

H12.20 1st speed reference

Comm. address:	2012-15h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.21 Operation time of the 1st speed reference

Comm. address:	2012-16h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
Sets the operation time of the 1st speed reference.
Operating time = Time taken in switching from the last speed reference to current speed reference + Operating time at constant speed in current segment.
If the operating time is set to 0, the drive skips this speed reference automatically.
As long as H12.00 is set to 2 and the speed number determined by the external DI does not change, the drive continues operating at the speed defined by this speed reference, without being affected by the reference operating time.

H12.22 Acceleration/Deceleration and S-curve smoothing parameter time in speed 1

Comm. address:	2012-17h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
bit0 to bit7: Acceleration/deceleration time
Sets the acceleration/deceleration time of the 1st speed reference.
0: Zero acceleration/deceleration time:Acceleration time: 0;
Deceleration time: 0
1: Acceleration/Deceleration time 1: Acceleration time: H12.03;
Deceleration time: H12.04
bit2: Acceleration/Deceleration time 2; Acceleration time: H12.05;
Deceleration time: H12.06
bit3: Acceleration/Deceleration time 3; Acceleration time: H12.07;
Deceleration time: H12.08

bit4: Acceleration/Deceleration time 4; Acceleration time: H12.09;
Deceleration time: H12.10
bit8 to bit15: S curve smoothing parameters
1: Smoothing parameter 1: Increasing acceleration time of acceleration segment: H06.51
Decreasing acceleration time of acceleration segment: H06.52
Decreasing deceleration time of deceleration segment: H06.53
Decreasing acceleration time at acceleration segment: H06.54
2: Smoothing parameter 2: Increasing acceleration time of acceleration segment: H06.55
Decreasing acceleration time of acceleration segment: H06.56
Decreasing deceleration time of deceleration segment: H06.57
Decreasing acceleration time of acceleration segment: H06.58
3: Smoothing parameter 3: Increasing acceleration time of acceleration segment: H06.59
Decreasing acceleration time of acceleration segment: H06.60
Decreasing deceleration time of deceleration segment: H06.61
Increasing acceleration time of acceleration segment: H06.62
4: Smoothing parameter 4: Increasing acceleration time of acceleration segment: H06.63
Decreasing acceleration time of acceleration segment: H06.64
Decreasing deceleration time of deceleration segment: H06.65
Decreasing acceleration time at acceleration segment: H06.66
5: Smoothing parameter 5: Increasing acceleration time of acceleration segment: H06.67
Decreasing acceleration time of acceleration segment: H06.68
Decreasing deceleration time of deceleration segment: H06.69
Decreasing acceleration time at acceleration segment: H06.70
6: Smoothing parameter 6: Increasing acceleration time of acceleration segment: H06.71
Decreasing acceleration time of acceleration segment: H06.72
Decreasing deceleration time of deceleration segment: H06.73
Decreasing acceleration time at acceleration segment: H06.74
7: Smoothing parameter 7: Increasing acceleration time of acceleration segment: H06.75
Decreasing acceleration time of acceleration segment: H06.76
Decreasing deceleration time of deceleration segment: H06.77
Decreasing acceleration time at acceleration segment: H06.78
8: Smoothing parameter 8: Increasing acceleration time of acceleration segment: H06.79
Decreasing acceleration time of acceleration segment: H06.80
Decreasing deceleration time of deceleration segment: H06.81
Decreasing acceleration time at acceleration segment: H06.82

H12.23 **2nd speed reference**

Comm. address:	2012-18h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	100	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.24 **Operation time of the 2nd speed reference**

Comm. address:	2012-19h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.25 Acceleration/Deceleration time and S curve smoothing parameter time in speed 2

Comm. address:	2012-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.26 3rd speed reference

Comm. address:	2012-1Bh	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	300	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.27 Operation time of the 3rd speed reference

Comm. address:	2012-1Ch	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.28 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 3**

Comm. address:	2012-1Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.29 **4th speed reference**

Comm. address:	2012-1Eh	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	500	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.30 **Operation time of the 4th speed reference**

Comm. address:	2012-1Fh	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.31 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 4**

Comm. address:	2012-20h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.32 **5th speed reference**

Comm. address:	2012-21h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	700	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.33 **Operation time of the 5th speed reference**

Comm. address:	2012-22h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.34 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 5**

Comm. address:	2012-23h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.35 **6th speed reference**

Comm. address:	2012-24h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	900	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.36 **Operation time of the 6th speed reference**

Comm. address:	2012-25h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.37 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 6**

Comm. address:	2012-26h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.38 **7th speed reference**

Comm. address:	2012-27h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	600	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.39 **Operation time of the 7th speed reference**

Comm. address:	2012-28h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.40 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 7**

Comm. address:	2012-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.41 **8th speed reference**

Comm. address:	2012-2Ah	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	300	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.42 **Operation time of the 8th speed reference**

Comm. address:	2012-2Bh	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.43 Acceleration/Deceleration time and S curve smoothing parameter time in speed 8

Comm. address:	2012-2Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.44 9th speed reference

Comm. address:	2012-2Dh	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	100	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.45 Operation time of the 9th speed reference

Comm. address:	2012-2Eh	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.46 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 9**

Comm. address:	2012-2Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.47 **10th speed reference**

Comm. address:	2012-30h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-100	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.48 **Operation time of the 10th speed reference**

Comm. address:	2012-31h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.49 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 10**

Comm. address:	2012-32h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.50 **11th speed reference**

Comm. address:	2012-33h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-300	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.51 **Running time of the 11th speed reference**

Comm. address:	2012-34h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.52 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 11**

Comm. address:	2012-35h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.53 **12th speed reference**

Comm. address:	2012-36h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-500	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.54 **Operation time of the 12th speed reference**

Comm. address:	2012-37h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.55 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 12**

Comm. address:	2012-38h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.56 **13th speed reference**

Comm. address:	2012-39h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-700	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.57 **Operation time of the 13th speed reference**

Comm. address:	2012-3Ah	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.58 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 13**

Comm. address:	2012-3Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.59 **14th speed reference**

Comm. address:	2012-3Ch	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-900	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.60 **Operation time of the 14th speed reference**

Comm. address:	2012-3Dh	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.61 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 14**

Comm. address:	2012-3Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.62 **15th speed reference**

Comm. address:	2012-3Fh	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-600	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.63 **Operation time of the 15th speed reference**

Comm. address:	2012-40h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.64 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 15**

Comm. address:	2012-41h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

H12.65 **16th speed reference**

Comm. address:	2012-42h	Effective mode:	Real time
Min. value:	-10000	Unit:	rpm
Max. value:	10000	Data type:	Int16
Default value:	-300	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
-

H12.66 **Operation time of the 16th speed reference**

Comm. address:	2012-43h	Effective mode:	Real time

Min. value:	0.0	Unit:	s(m)
Maximum value:	6553.5	Data type:	UInt16
Default value:	5.0	Change mode:	Real time

Value range:
0.0 to 6553.5
Parameter description
-

H12.67 **Acceleration/Deceleration time and S curve smoothing parameter time in speed 16**

Comm. address:	2012-44h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	256	Change mode:	Real time

Value range:
bit0 to bit7: Acceleration/deceleration time
0: Zero acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
bit8-bit15: S curve smoothing parameter
1: Smoothing parameter 1
2: Smoothing parameter 2
3: Smoothing parameter 3
4: Smoothing parameter 4
5: Smoothing parameter 5
6: Smoothing parameter 6
7: Smoothing parameter 7
8: Smoothing parameter 8
Parameter description
Same as H12.22.

8.19 H15 Machine Tool Parameters

H15.00 **Forward friction compensation torque**

Comm. address:	2015-01h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	50.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 50.0
Parameter description
-

H15.01 **Negative friction compensation torque**

Comm. address:	2015-02h	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	50.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 50.0
Parameter description
-

H15.02 **Forward friction torque filter time constant**

Comm. address:	2015-03h	Effective mode:	Real time
Min. value:	0.10	Unit:	ms
Max. value:	100.00	Data type:	UInt16
Default value:	0.10	Change mode:	Real time

Value range:
0.10 to 100.00
Parameter description
-

H15.03 **Negative friction torque filter time constant**

Comm. address:	2015-04h	Effective mode:	Real time
Min. value:	0.10	Unit:	ms
Max. value:	100.00	Data type:	UInt16
Default value:	0.10	Change mode:	Real time

Value range:
0.10 to 100.00
Parameter description
-

H15.04 **Friction torque compensation speed reference source**

Comm. address:	2015-05h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x4	Data type:	UInt16
Default value:	0x2	Change mode:	Real time

Value range:
0: Speed reference
1: Model speed
2: Speed feedback
3: Observation speed
4: Speed reference
Parameter description
-

H15.05 **Friction torque compensation delay time**

Comm. address:	2015-06h	Effective mode:	Real time
Min. value:	0.00	Unit:	ms
Max. value:	300.00	Data type:	UInt16
Default value:	0.00	Change mode:	Real time

Value range:
0.00 to 300.00
Parameter description
-

H15.06 **Friction torque compensation effective speed threshold**

Comm. address:	2015-07h	Effective mode:	Real time
Min. value:	0.0	Unit:	rpm
Max. value:	20.0	Data type:	UInt16
Default value:	0.1	Change mode:	Real time

Value range:
0.0 to 20.0
Parameter description
-

H15.15 **Backlash compensation enable**

Comm. address:	2015-10h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Ramp
Parameter description
-

H15.16 **Backlash compensation speed reference source**

Comm. address:	2015-11h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x4	Data type:	UInt16
Default value:	0x4	Change mode:	Real time

Value range:
0: Speed reference
1: Model speed
2: Speed feedback
3: Observation speed
4: Speed reference
Parameter description
-

H15.17 **Minimum speed threshold of backlash compensation**

Comm. address:	2015-12h	Effective mode:	Real time
Min. value:	0.0	Unit:	rpm
Max. value:	20.0	Data type:	UInt16
Default value:	2.0	Change mode:	Real time

Value range:
0.0 to 20.0
Parameter description
-

H15.18 **Number of pulses of backlash compensation**

Comm. address:	2015-13h	Effective mode:	Real time
Min. value:	0	Unit:	p
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Note: The values of H15.18, H15.21, and H15.23 must meet the following requirement: H15.18/H15.21 (H15.23) > 16.

H15.19 **Backlash delay**

Comm. address:	2015-14h	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	300.0	Data type:	UInt16
Default value:	0.0	Change mode:	Real time

Value range:
0.0 to 300.0
Parameter description
-

H15.21 **Forward backlash compensation time**

Comm. address:	2015-16h	Effective mode:	Real time
Min. value:	0.1	Unit:	ms
Max. value:	300.0	Data type:	UInt16
Default value:	0.1	Change mode:	Real time

Value range:
0.1 to 300.0
Parameter description
Note: The values of H15.18, H15.21, and H15.23 must meet the following requirement: H15.18/H15.21 (H15.23) > 16.

H15.23 **Reverse backlash compensation time**

Comm. address:	2015-18h	Effective mode:	Real time
Min. value:	0.1	Unit:	ms
Max. value:	300.0	Data type:	UInt16
Default value:	0.1	Change mode:	Real time

Value range:
0.1 to 300.0
Parameter description
Note: The values of H15.18, H15.21, and H15.23 must meet the following requirement: H15.18/H15.21 (H15.23) > 16.

H15.25 **Filter time constant of average backlash compensation value**

Comm. address:	2015-1Ah	Effective mode:	Real time
Min. value:	0.0	Unit:	ms
Max. value:	50.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 50.0
Parameter description
Defines the moving average filter time constant of position references.

8.20 H17 VDI/DO Parameters

H17.00 **VDI1 function selection**

Comm. address:	2017-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.01 **VDI1 logic level selection**

Comm. address:	2017-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.02 **VDI2 function selection**

Comm. address:	2017-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.03 **VDI2 logic level selection**

Comm. address:	2017-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.04 **VDI3 function selection**

Comm. address:	2017-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.05 **VDI3 logic level selection**

Comm. address:	2017-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.06 **VDI4 function selection**

Comm. address:	2017-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop

35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.07 **VDI4 logic level selection**

Comm. address:	2017-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.08 **VDI5 function selection**

Comm. address:	2017-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.09 **VDI5 logic level selection**

Comm. address:	2017-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.10 **VDI6 function selection**

Comm. address:	2017-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.11 VDI6 logic level selection

Comm. address:	2017-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.12 VDI7 function selection

Comm. address:	2017-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.13 **VDI7 logic level selection**

Comm. address:	2017-0Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.14 **VDI8 function selection**

Comm. address:	2017-0Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop

35: Position deviation cleared
36: Internal speed limit source37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.15 VDI8 logic level selection

Comm. address:	2017-10h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.16 VDI9 function selection

Comm. address:	2017-11h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.17 VDI9 logic level selection

Comm. address:	2017-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.18 VDI10 function selection

Comm. address:	2017-13h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.19 VDI10 logic level selection

Comm. address:	2017-14h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.20 VDI11 function selection

Comm. address:	2017-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.21 **VDI11 logic level selection**

Comm. address:	2017-16h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.22 **VDI12 function selection**

Comm. address:	2017-17h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop

35: Position deviation cleared
36: Internal speed limit source37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.23 **VDI12 logic level selection**

Comm. address:	2017-18h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.24 **VDI13 function selection**

Comm. address:	2017-19h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4

51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.25 VDI13 logic level selection

Comm. address:	2017-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.26 VDI14 function selection

Comm. address:	2017-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.27 VDI14 logic level selection

Comm. address:	2017-1Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.28 VDI15 function selection

Comm. address:	2017-1Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.29 VDI15 logic level selection

Comm. address:	2017-1Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.30 VDI16 function selection

Comm. address:	2017-1Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	55	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: S-ON
2: Alarm reset signal
3: Gain switchover switch
4: Main/Auxiliary command switchover
5:Multi-reference direction
6: Multi-reference switchover CMD1
7: Multi-reference switchover CMD2
8: Multi-reference switchover CMD3
9: Multi-reference switchover CMD4
10: Mode switchover M1-SEL
11: Mode switchover M2-SEL
12: Zero clamp enable signal
13: Position reference inhibited
14: Positive limit switch
15: Negative limit switch
16: Forward external torque limit
17: Reverse external torque limit
18: Forward jog
19: Reverse jog
20: Step enable
21: Handwheel override signal 1
22: Handwheel override signal 2
23: Handwheel enable signal
24: Electronic gear selection
25: Torque reference direction
26: Speed reference direction
27: Position reference direction
28: Multi-position reference enable
29: Interrupt positioning cancel signal
31: Home switch
32: Homing enable
33: Interrupt positioning inhibited
34: Emergency stop
35: Position deviation cleared
36: Internal speed limit source
37: Pulse reference inhibited
40: Multiple-speed reference enabled

41: Current position as home
42: Axis control command executed immediately
43: Axis control command not executed immediately
44: Positioning and command completed signal clear
46: Process segment enable
47: Process segment command switchover 1
48: Process segment command switchover 2
49: Process segment command switchover 3
50: Process segment command switchover 4
51: Event trigger process segment 1
52: Event trigger process segment 2
53: Event trigger process segment 3
54: Event trigger process segment 4
55: Process segment pause

Parameter description

-

H17.31 VDI16 logic level selection

Comm. address:	2017-20h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Active when the written value is 1
1: Active when the written value changes from 0 to 1

Parameter description

-

H17.32 VDO virtual level

Comm. address:	2017-21h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFF

Description

-

H17.33 VDO1 function selection

Comm. address:	2017-22h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.34 **VDO1 logic level selection**

Comm. address:	2017-23h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.35 **VDO2 function selection**

Comm. address:	2017-24h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.36 **VDO2 logic level selection**

Comm. address:	2017-25h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.37 **VDO3 function selection**

Comm. address:	2017-26h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.38 **VDO3 logic level selection**

Comm. address:	2017-27h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.39 **VDO4 function selection**

Comm. address:	2017-28h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.40 **VDO4 logic level selection**

Comm. address:	2017-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.41 **VDO5 function selection**

Comm. address:	2017-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.42 **VDO5 logic level selection**

Comm. address:	2017-2Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.43 **VDO6 function selection**

Comm. address:	2017-2Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.44 **VDO6 logic level selection**

Comm. address:	2017-2Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.45 **VDO7 function selection**

Comm. address:	2017-2Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.46 **VDO7 logic level selection**

Comm. address:	2017-2Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.47 **VDO8 function selection**

Comm. address:	2017-30h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.48 **VDO8 logic level**

Comm. address:	2017-31h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.49 **VDO9 function selection**

Comm. address:	2017-32h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.50 **VDO9 logic level selection**

Comm. address:	2017-33h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.51 **VDO10 function selection**

Comm. address:	2017-34h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.52 **VDO10 logic level selection**

Comm. address:	2017-35h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.53 **VDO11 function selection**

Comm. address:	2017-36h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.54 **VDO11 logic level selection**

Comm. address:	2017-37h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.55 **VDO12 function selection**

Comm. address:	2017-38h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.56 **VDO12 logic level selection**

Comm. address:	2017-39h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.57 **VDO13 function selection**

Comm. address:	2017-3Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.58 **VDO13 logic level selection**

Comm. address:	2017-3Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.59 **VDO14 function selection**

Comm. address:	2017-3Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.60 **VDO14 logic level selection**

Comm. address:	2017-3Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.61 **VDO15 function selection**

Comm. address:	2017-3Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.62 **VDO15 logic level selection**

Comm. address:	2017-3Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.63 **VDO16 function selection**

Comm. address:	2017-40h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: No assignment
1: Servo ready
2: Motor rotation
3: Zero speed
4: Speed matching
5: Positioning completed
6: Proximity
7: Torque limited
8: Speed limited
9: Brake
10: Alarm
11: Fault
15: Interrupt positioning completed
16: Homing completed
17: Electrical homing completed
18: Torque reach
19: Speed reach
21: Enable completed
22: Internal command completed
23: Writing next command allowed
24: Internal motion completed
26: Closed-loop state
30: Alarm or fault output
32: EDM output

Parameter description

-

H17.64 **VDO16 logic level selection**

Comm. address:	2017-41h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Output 1 upon active logic
1: Output 0 upon active logic

Parameter description

-

H17.90 **Communication VDI enable**

Comm. address:	2017-5Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

To use the VDI function:

1. Set H17.90 to enable VDI.
2. Set the default level after power-on through H17.91.
3. Set the DI function of the VDI terminal through parameters in group H17.
4. Set VDI output through H31.00.

H17.91 **Default VDI selection after power-on**

Comm. address:	2017-5Ch	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: VDI1

bit1: VDI2

bit2: VDI3

bit3: VDI4

bit4: VDI5

bit5: VDI6

bit6: VDI7

bit7: VDI8

bit8: VDI9

bit9: VDI10

bit10: VDI11

bit11: VDI12

bit12: VDI13

bit13: VDI14

bit14: VDI15

bit15: VDI16

Parameter description

Configures the initial value of VDI upon power-on.

bit0 corresponds to VDI1.

bit1 corresponds to VDI2.

...

bit15 corresponds to VDI16.

H17.92 **Communication VDO enable**

Comm. address:	2017-5Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

To use the VDO function:

1. Enable VDO through H17.92.
2. Set the default level after power-on in H17.93.
3. Set the function of the VDO through parameters in group H17.
4: Read the output level of the VDO in H17.32.

H17.93 **Default VDO selection after power-on**

Comm. address:	2017-5Eh	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	At stop

Value range:

bit0: VDO1
bit1: VDO2
bit2: VDO3
bit3: VDO4
bit4: VDO5
bit5: VDO6
bit6: VDO7
bit7: VDO8
bit8: VDO9
bit9: VDO10
bit10: VDO11
bit11: VDO12
bit12: VDO13
bit13: VDO14
bit14: VDO15
bit15: VDO16

Parameter description

Configures the initial value of VDO upon power-on.
bit0 corresponds to VDO1.
bit1 corresponds to VDO2.
...
bit15 corresponds to VDO16.

8.21 H18 Position Comparison Output Parameters

H18.00 **Position comparison output selection**

Comm. address:	2018-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Disable

1: Enable (rising edge triggered)

Parameter description

0: Disable

1: Enable (rising edge triggered)

H18.01 **Position comparison output feedback source**

Comm. address:	2018-02h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Motor encoder feedback

1: Fully closed-loop position feedback

Parameter description

Defines the position comparison output feedback source.

0: Motor encoder feedback

1: Fully closed-loop position feedback

H18.02 **Position comparison resolution**

Comm. address:	2018-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

0: 24-bit

1: 23-bit

2: 22-bit

3: 21-bit

4: 20-bit

5: 19-bit

6: 18-bit

7: 17-bit

Parameter description

Defines the position compare value resolution.

0: 24-bit

1: 23-bit

2: 22-bit

3: 21-bit

4: 20-bit

5: 19-bit

6: 18-bit

7: 17-bit

H18.03 **Position comparison mode**

Comm. address:	2018-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Individual comparison mode

1: Cyclic comparison mode

2: Fixed cyclic comparison mode

Parameter description

Defines the position comparison mode.

0: Individual comparison mode

1: Cyclic comparison mode

2: Fixed cyclic comparison mode

H18.04 **Current position as zero**

Comm. address:	2018-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0: Disable

1: Enable (rising edge triggered)

Parameter description

Current position as zero

H18.05 **Position comparison output width**

Comm. address:	2018-06h	Effective mode:	Real time
Min. value:	0.1	Unit:	ms
Max. value:	204.7	Data type:	UInt16
Default value:	0.1	Change mode:	Real time

Value range:

0.1 to 204.7

Parameter description

Defines the effective pulse width of the DO when the comparison point is reached.

H18.06 **Position comparison output ABZ port polarity**

Comm. address:	2018-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: OCZ output logic

0: Positive, output high level upon active logic

1: Negative, output low level upon active logic

bit1: Z port output logic

0: Positive, output high level upon active logic

1: Negative, output low level upon active logic

bit2: A/B output logic

0: Positive, output high level upon active logic

1: Negative, output low level upon active logic

Parameter description

0: Positive, output high level upon active logic; 1: Negative, output low level upon active logic

bit 0: OCZ output logic

bit1: Z output logic

bit2: A/B output logic

H18.07 **Start point of position comparison**

Comm. address:	2018-08h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	40	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

1 to 40

Parameter description

Defines the starting point of position comparison.

H18.08 **End point of position comparison**

Comm. address:	2018-09h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	40	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:

1 to 40

Parameter description

Defines the ending point of position comparison.

H18.09 **Current status of position comparison**

Comm. address:	2018-0Ah	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	1024	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 1024

Parameter description

Displays the current state of position comparison.

H18.10 **Real-time position of position comparison**

Comm. address:	2018-0Bh	Effective mode:	-
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Displays the real-time position of position comparison.

H18.12 **Zero offset of position comparison**

Comm. address:	2018-0Dh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Displays the zero offset of position comparison.

H18.14 **Position comparison output delay compensation**

Comm. address:	2018-0Fh	Effective mode:	Next power-on
Min. value:	-12.00	Unit:	μs
Max. value:	12.00	Data type:	Int16
Default value:	0.00	Change mode:	Real time

Value range:
-12.00 to 12.00
Parameter description
Compensates the delay caused by hardware signal output.

H18.15 **Fixed value mode cycle count**

Comm. address:	2018-10h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
1 to 65535
Parameter description
Defines the number of fixed value mode cycles.

H18.16 **ABZ output function setting**

Comm. address:	2018-11h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
bit 0: OCZ output function
0: Frequency-division output
1: Position comparison
bit 1: Z port output function
0: Frequency-division output
1: Position comparison
bit 2: A/B port output function
0: Frequency-division output
1: Position comparison
Parameter description
Sets the ABZ output function.
bit0: OCZ output setting. 0: Frequency-division output; 1: Position comparison.
bit1: Z output setting. 0: Frequency-division output; 1: Position comparison.
bit2: A/B output setting. 0: Frequency-division output; 1: Position comparison.

H18.17 **Fixed value mode completion count**

Comm. address:	2018-12h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the number of fixed value mode cycles.

8.22 H19 Target Position Parameters

H19.00 **Target value of position comparison 1**

Comm. address:	2019-01h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the target value of position comparison 1.

H19.02 **Attribute value of position comparison 1**

Comm. address:	2019-03h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point

bit1: Current position changes from "more than" to "less than" the comparison point

bit2: Reserved

bit3: Reserved

bit4: Reserved

bit5: Reserved

bit6: Reserved

bit7: DO1 output

bit8: DO2 output

bit9: DO3 output

bit10: DO4 output

bit11: DO5 output

bit12: Frequency-division A output

bit13: Frequency-division B output

bit14: Frequency-division Z output

bit15: Frequency-division OCZ output

Parameter description

Defines the attribute setting of position comparison point 1.

bit0: 1: Current position changing from "less than" to "more than" the comparison point enabled; 0: Disable.

bit1: 1: Current position changing from "more than" to "less than" the comparison point enabled; 0: Disable.

bit2 to bit6: N/A.

bit7: 1: Enable DO1 output; 0: Disable.

bit8: 1: Enable DO2 output; 0: Disable.

bit9: 1: Enable DO3 output; 0: Disable.

bit10: 1: Enable DO4 output; 0: Disable.

bit11: 1: Enable DO5 output; 0: Disable.

bit12: 1: Enable frequency-division A output; 0: Disable.

bit13: 1: Enable frequency-division B output; 0: Disable.

bit14: 1: Enable frequency-division C output; 0: Disable.

bit15: 1: Enable Frequency-division OCZ output; 0: Disable.

H19.03 **Target value of position comparison 2**

Comm. address:	2019-04h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.05 **Attribute value of position comparison 2**

Comm. address:	2019-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point

bit1: Current position changes from "more than" to "less than" the comparison point

bit2: Reserved

bit3: Reserved

bit4: Reserved

bit5: Reserved

bit6: Reserved

bit7: DO1 output

bit8: DO2 output

bit9: DO3 output

bit10: DO4 output

bit11: DO5 output

bit12: Frequency-division A output

bit13: Frequency-division B output

bit14: Frequency-division Z output

bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.06 **Target value of position comparison 3**

Comm. address:	2019-07h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.08 **Attribute value of position comparison 3**

Comm. address:	2019-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.09 **Target value of position comparison 4**

Comm. address:	2019-0Ah	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.11 **Attribute value of position comparison 4**

Comm. address:	2019-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.12 Target value of position comparison 5

Comm. address:	2019-0Dh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.14 Attribute value of position comparison 5

Comm. address:	2019-0Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.15 Target value of position comparison 6

Comm. address:	2019-10h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.17 Attribute value of position comparison 6

Comm. address:	2019-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.18 **Target value of position comparison 7**

Comm. address:	2019-13h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.20 **Attribute value of position comparison 7**

Comm. address:	2019-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.21 Target value of position compare 8

Comm. address:	2019-16h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.23 Property value of position compare 8

Comm. address:	2019-18h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.24 Target value of position compare 9

Comm. address:	2019-19h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.26 Property value of position compare 9

Comm. address:	2019-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.27 **Target value of position compare 10**

Comm. address:	2019-1Ch	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.29 **Property value of position compare 10**

Comm. address:	2019-1Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.30 Target value of position compare 11

Comm. address:	2019-1Fh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.32 Property value of position compare 11

Comm. address:	2019-21h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.33 Target value of position compare 12

Comm. address:	2019-22h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.35 Property value of position compare 12

Comm. address:	2019-24h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.36 Target value of position compare 13

Comm. address:	2019-25h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.38 Property value of position compare 13

Comm. address:	2019-27h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.39 Target value of position compare 14

Comm. address:	2019-28h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.41 Property value of position compare 14

Comm. address:	2019-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.42 Target value of position compare 15

Comm. address:	2019-2Bh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.44 Property value of position compare 15

Comm. address:	2019-2Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.45 Target value of position compare 16

Comm. address:	2019-2Eh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.47 Property value of position compare 16

Comm. address:	2019-30h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.48 **Target value of position compare 17**

Comm. address:	2019-31h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.50 **Property value of position compare 17**

Comm. address:	2019-33h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.51 Target value of position compare 18

Comm. address:	2019-34h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.53 Property value of position compare 18

Comm. address:	2019-36h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.54 **Target value of position compare 19**

Comm. address:	2019-37h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.56 **Property value of position compare 19**

Comm. address:	2019-39h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.57 **Target value of position compare 20**

Comm. address:	2019-3Ah	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.59 **Property value of position compare 20**

Comm. address:	2019-3Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.60 **Target value of position compare 21**

Comm. address:	2019-3Dh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.62 **Property value of position compare 21**

Comm. address:	2019-3Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.63 **Target value of position compare 22**

Comm. address:	2019-40h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.65 **Property value of position compare 22**

Comm. address:	2019-42h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.66 **Target value of position compare 23**

Comm. address:	2019-43h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.68 **Property value of position compare 23**

Comm. address:	2019-45h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.69 Target value of position compare 24

Comm. address:	2019-46h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.71 Property value of position comparison 24

Comm. address:	2019-48h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.72 **Target value of position compare 25**

Comm. address:	2019-49h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.74 **Property value of position compare 25**

Comm. address:	2019-4Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.75 **Target value of position compare 26**

Comm. address:	2019-4Ch	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.77 **Property value of position compare 26**

Comm. address:	2019-4Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.78 Target value of position compare 27

Comm. address:	2019-4Fh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.80 Property value of position compare 27

Comm. address:	2019-51h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.81 **Target value of position compare 28**

Comm. address:	2019-52h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.83 **Property value of position compare 28**

Comm. address:	2019-54h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.84 **Target value of position compare 29**

Comm. address:	2019-55h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.86 **Property value of position comparison 29**

Comm. address:	2019-57h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.87 **Target value of position compare 30**

Comm. address:	2019-58h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.89 **Property value of position comparison 30**

Comm. address:	2019-5Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.90 Target value of position comparison 31

Comm. address:	2019-5Bh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.92 Attribute value of position comparison 31

Comm. address:	2019-5Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.93 **Target value of position comparison 32**

Comm. address:	2019-5Eh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.95 **Attribute value of position comparison 32**

Comm. address:	2019-60h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.96 **Target value of position comparison 33**

Comm. address:	2019-61h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.98 **Attribute value of position comparison 33**

Comm. address:	2019-63h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.99 Target value of position comparison 34

Comm. address:	2019-64h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.101 Attribute value of position comparison 34

Comm. address:	2019-66h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.102 **Target value of position comparison 35**

Comm. address:	2019-67h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.104 **Attribute value of position comparison 35**

Comm. address:	2019-69h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.105 **Target value of position comparison 36**

Comm. address:	2019-6Ah	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.107 **Attribute value of position comparison 36**

Comm. address:	2019-6Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.108 Target value of position comparison 37

Comm. address:	2019-6Dh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.110 Attribute value of position comparison 37

Comm. address:	2019-6Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.111 Target value of position comparison 38

Comm. address:	2019-70h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.113 Attribute value of position comparison 38

Comm. address:	2019-72h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.114 Target value of position comparison 39

Comm. address:	2019-73h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.116 Attribute value of position comparison 39

Comm. address:	2019-75h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

H19.117 Target value of position comparison 40

Comm. address:	2019-76h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as parameter H19.00.

H19.119 Attribute value of position comparison 40

Comm. address:	2019-78h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

bit0: Current position changes from "less than" to "more than" the comparison point
bit1: Current position changes from "more than" to "less than" the comparison point
bit2: Reserved
bit3: Reserved
bit4: Reserved
bit5: Reserved
bit6: Reserved
bit7: DO1 output
bit8: DO2 output
bit9: DO3 output
bit10: DO4 output
bit11: DO5 output
bit12: Frequency-division A output
bit13: Frequency-division B output
bit14: Frequency-division Z output
bit15: Frequency-division OCZ output

Parameter description

Same as parameter H19.02.

8.23 H1E Oscilloscope Variables

H1E.61 **Black box status**

Comm. address:	201E-3Eh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 65535

Parameter description

-

H1E.69 **Sampling frequency**

Comm. address:	201E-46h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

-

H1E.80 **Black box function mode**

Comm. address:	201E-51h	Effective mode:	-

Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	1	Change mode:	Read-only

Value range:
0: Disable
1: Any fault
2: Designated fault
3: Triggered by designated condition

Parameter description
Defines the condition for triggering black box sampling.

H1E.81 **Specified fault code**

Comm. address:	201E-52h	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	6553.5	Data type:	UInt16
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 6553.5

Parameter description
Defines the fault code for triggering the black box function.

H1E.82 **Trigger source**

Comm. address:	201E-53h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	22	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 22

Parameter description
Defines the fault code for triggering the black box function through the specified channel.

H1E.83 **Trigger level**

Comm. address:	201E-54h	Effective mode:	-
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647

Parameter description
Defines the trigger level for triggering the black box function through the specified channel.

H1E.85 **Trigger level selection**

Comm. address:	201E-56h	Effective mode:	-
Min. value:	0	Unit:	-

Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0: Rising edge
1: Equal
2: Falling edge
3: Edge-triggered

Parameter description
Defines the mode for triggering the black box function through H0A.63.

H1E.86 **Trigger position**

Comm. address:	201E-57h	Effective mode:	-
Min. value:	0	Unit:	%
Max. value:	100	Data type:	UInt16
Default value:	75	Change mode:	Read-only

Value range:
0 to 100

Parameter description
Defines the pre-trigger position for triggering black box sampling.

H1E.87 **Sampling frequency**

Comm. address:	201E-58h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0: Current loop
1: Position loop
2: Main cycle

Parameter description
Defines the frequency sampling mode during black box sampling.

H1E.88 **Triggering offset calculation for the black box**

Comm. address:	201E-59h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535

Parameter description
Defines the waveform offset the moment when the black box is triggered.

H1E.89 **Pre-triggering the black box**

Comm. address:	201E-5Ah	Effective mode:	-

Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Defines the pre-trigger position of the black box.

H1E.90 **Defines the servo operating time.**

Comm. address:	201E-5Bh	Effective mode:	-
Min. value:	0.0	Unit:	-
Max. value:	429496729.5	Data type:	UInt32
Default value:	0.0	Change mode:	Read-only

Value range:
0.0 to 429496729.5
Parameter description
Defines the servo operating time.

H1E.92 **Black box log selected**

Comm. address:	201E-5Dh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	0	Change mode:	Real time

Range:
0 to 20
Parameter description
Black box information mapped to fault log

H1E.93 **Black box information mapped to fault log**

Comm. address:	201E-5Eh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 20
Parameter description
Black box log selected

H1E.94 **Used to read black box logs.**

Comm. address:	201E-5Fh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Used to read black box logs.

8.24 H1F Software Tool Parameters

H1F.90 **DI function state 1 read through communication**

Comm. address:	201F-5Bh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DI function 1.
bit1 corresponds to DI function 2.
bit2 corresponds to DI function 3.
...
By analogy

H1F.91 **DI function state 2 read through communication**

Comm. address:	201F-5Ch	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DI function 17.
bit1 corresponds to DI function 18.
bit2 corresponds to D1 function 19.
...
By analogy

H1F.92 **DI function state 3 read through communication**

Comm. address:	201F-5Dh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DI function 33.
bit1 corresponds to D1 function 34.

bit2 corresponds to D1 function 35.
...
By analogy

H1F.93 **DI function state 4 read through communication**

Comm. address:	201F-5Eh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DI function 49.
bit1 corresponds to DI function 50.
bit2 corresponds to DI function 51.
...
By analogy

H1F.94 **DO function state 1 read through communication**

Comm. address:	201F-5Fh	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DO function 1
bit1 corresponds to DO function 2.
bit2 corresponds to DO function 3.
...
By analogy

H1F.95 **DO function state 2 read through communication**

Comm. address:	201F-60h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DO function 17
bit1 corresponds to DO function 18.
bit2 corresponds to DO function 19.
...
By analogy

H1F.96 **DO function state 3 read through communication**

Comm. address:	201F-61h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DO function 33.
bit1 corresponds to DO function 34.
bit2 corresponds to DO function 35.
...
By analogy

H1F.97 **DO function state 4 read through communication**

Comm. address:	201F-62h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DO function 49.
bit1 corresponds to DO function 50.
bit2 corresponds to DO function 51.
...
By analogy

8.25 H21 Current Loop Gain Switchover Parameters

H21.00 **Current loop gain switchover enable**

Comm. address:	2021-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Disable
1: Enable
Parameter description
Used to enable or disable current loop gain switchover.
0: Disable
1: Enable

8.26 H22 Process Segment Parameters

H22.00 **Process segment command trigger**

Comm. address:	2022-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1000	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Used to trigger the process segment. The process segment can be triggered through the keypad or communication.
The homing function is triggered when 0 is written to H22.00.
Process segments 1 to 15 are triggered when 1 to 15 are written to H22.00.
The process segment pauses when 1000 is written to H22.00.
E126.0 (Process segment number error) is reported when a value between 16 and 999 is written to H22.00.

H22.01 **Process segment triggered by the event rising edge**

Comm. address:	2022-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
DI: ProceEvTri (OFF to ON, rising edge-triggered).
bit0 to bit3: The motor does not act when the value is 0 and the rising edge of DI: ProceEvTri1 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the rising edge of DI: ProceEvTri1 is triggered.
bit4 to bit7: The motor does not act when the value is 0 and the rising edge of DI: ProceEvTri2 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the rising edge of DI: ProceEvTri2 is triggered.
bit8 to bit11: The motor does not act when the value is 0 and the rising edge of DI: ProceEvTri3 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the rising edge of DI: ProceEvTri3 is triggered.
bit12 to bit15: The motor does not act when the value is 0 and the rising edge of DI: ProceEvTri4 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the rising edge of DI: ProceEvTri4 is triggered.

H22.02 **Process segment triggered by the event falling edge**

Comm. address:	2022-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
DI: ProceEvTri (ON to OFF, falling edge-triggered).
bit0 to bit3: The motor does not act when the value is 0 and the falling edge of DI: ProceEvTri1 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the falling edge of DI: ProceEvTri1 is triggered.
bit4 to bit7: The motor does not act when the value is 0 and the falling edge of DI: ProceEvTri2 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the falling edge of DI: ProceEvTri2 is triggered.
bit8 to bit11: The motor does not act when the value is 0 and the falling edge of DI: ProceEvTri3 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the falling edge of DI: ProceEvTri3 is triggered.
bit12 to bit15: The motor does not act when the value is 0 and the falling edge of DI: ProceEvTri4 is triggered. When the value is 1 to 15, process segments 1 to 15 will be executed when the falling edge of DI: ProceEvTri4 is triggered.

H22.03 **Acceleration/Deceleration time upon process segment pause**

Comm. address:	2022-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0: Acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
5: Acceleration/deceleration time 5
6: Acceleration/deceleration time 6
7: Acceleration/deceleration time 7
Parameter description
When the process segment is paused, the motor ramps to stop based on the deceleration time defined by H22.03. Setpoints 0 to 7 correspond to parameters H22.35 to H22.42.
0: Acceleration/deceleration time
1: Acceleration/deceleration time 1
2: Acceleration/deceleration time 2
3: Acceleration/deceleration time 3
4: Acceleration/deceleration time 4
5: Acceleration/deceleration time 5
6: Acceleration/deceleration time 6
7: Acceleration/deceleration time 7

H22.04 **Positive software limit**

Comm. address:	2022-05h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit

Max. value:	2147483647	Data type:	Int32
Default value:	2147483647	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
E956.0 can occur when the motor operates forwardly with position reference exceeding the setpoint of H22.04 during positioning in the process segment mode.

H22.06 **Negative software limit**

Comm. address:	2022-07h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	-2147483648	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
E958.0 can occur when the motor operates reversely with position reference exceeding the setpoint of H22.06 during positioning in the process segment mode.

H22.08 **Process segment number**

Comm. address:	2022-09h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Indicates the process segment number in progress in the process segment mode.

H22.09 **Process segment function switch**

Comm. address:	2022-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
bit0:
0: Keep interrupt positioning state
1: Exit interrupt positioning state when triggering technology segment

H22.10 **Process segment state**

Comm. address:	2022-0Bh	Effective mode:	-
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Used for process segment state feedback.
The process segment number will be read back when commands in the positioning mode are not done executing.
The process segment number + 10000 will be read back when commands in the positioning mode are done executing.
The process segment number + 20000 will be read back when commands in the positioning mode are done executing and positioning has been completed.

H22.19 **Target speed**

Comm. address:	2022-14h	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	50.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Eight groups of target speed are available for each process segment command.
Target speed refers to the constant operating speed when the motor is not in the acceleration/deceleration process. If the displacement is excessively small in the positioning mode, the actual motor speed will be lower than the setpoint of H22.19.

H22.20 **Target speed setpoint 1**

Comm. address:	2022-15h	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	200.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.21 **Target speed setpoint 2**

Comm. address:	2022-16h	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	500.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.22 **Target speed setpoint 3**

Comm. address:	2022-17h	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	1000.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.23 **Target speed setpoint 4**

Comm. address:	2022-18h	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	1500.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.24 **Target speed setpoint 5**

Comm. address:	2022-19h	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	2000.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.25 **Target speed setpoint 6**

Comm. address:	2022-1Ah	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	6000.0	Data type:	UInt16
Default value:	2500.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.26 **Target speed 7**

Comm. address:	2022-1Bh	Effective mode:	Real time
Min. value:	0.1	Unit:	[mm/s]/[rpm]

Max. value:	6000.0	Data type:	UInt16
Default value:	3000.0	Change mode:	Real time

Value range:
0.1 to 6000.0
Parameter description
Same as parameter H22.19.

H22.35 **Acceleration/Deceleration time**

Comm. address:	2022-24h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Eight groups of acceleration/deceleration time are available for each process segment command.
The acceleration/deceleration time refers to the time for the motor to change from 0 [mm/s]/[rpm] to 1000 [mm/s]/[rpm] at a constant speed.

H22.36 **Acceleration/Deceleration time 1**

Comm. address:	2022-25h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.35.

H22.37 **Acceleration/Deceleration time 2**

Comm. address:	2022-26h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.35.

H22.38 **Acceleration/Deceleration time 3**

Comm. address:	2022-27h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16

Default value: 1000 Change mode: Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.35.

H22.39 Acceleration/Deceleration time 4

Comm. address: 2022-28h Effective mode: Real time
Min. value: 0 Unit: ms
Max. value: 65535 Data type: UInt16
Default value: 1500 Change mode: Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.35.

H22.40 Acceleration/Deceleration time 5

Comm. address: 2022-29h Effective mode: Real time
Min. value: 0 Unit: ms
Max. value: 65535 Data type: UInt16
Default value: 2000 Change mode: Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.35.

H22.41 Acceleration/Deceleration time 6

Comm. address: 2022-2Ah Effective mode: Real time
Min. value: 0 Unit: ms
Max. value: 65535 Data type: UInt16
Default value: 2500 Change mode: Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.35.

H22.42 Acceleration/Deceleration time 7

Comm. address: 2022-2Bh Effective mode: Real time
Min. value: 0 Unit: ms
Max. value: 65535 Data type: UInt16
Default value: 3000 Change mode: Real time

Value range:
0 to 65535

Parameter description
Same as parameter H22.35.

H22.51 **Delay after completion of the process segment**

Comm. address:	2022-34h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Eight groups of delay time are available for each process segment command.
The delay time refers to the delay that starts from the end of the current command to the operation of the next command in the process segment. For details, see "Process segment mode" in the user guide.

H22.52 **Delay 1 after completion of the process segment**

Comm. address:	2022-35h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	50	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.51

H22.53 **Delay time 2 after completion of the process segment**

Comm. address:	2022-36h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	200	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.51

H22.54 **Delay time 3 after completion of the process segment**

Comm. address:	2022-37h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 65535

Parameter description
Same as parameter H22.51

H22.55 **Delay time 4 after completion of the process segment**

Comm. address:	2022-38h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	1000	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.51

H22.56 **Delay time 5 after completion of the process segment**

Comm. address:	2022-39h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	1500	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.51

H22.57 **Delay time 6 after completion of the process segment**

Comm. address:	2022-3Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	2000	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.51

H22.58 **Delay time 7 after completion of the process segment**

Comm. address:	2022-3Bh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	3000	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as parameter H22.51

H22.70 **Homing mode of process segment**

Comm. address:	2022-47h	Effective mode:	Real time
Min. value:	-32768	Unit:	-
Max. value:	32767	Data type:	Int16
Default value:	-2	Change mode:	Real time

Value range:
-32768 to +32767
Parameter description
Defines the default motor direction of rotation, deceleration point, and home during homing.
When H22.70 is set to a value from -2 to +35, 402 homing is used (6098h set to a value from -2 to +35). For details, see "Homing Mode" in the user guide.
When H22.70 is set to a value lower than or equal to -200, local homing is used (H22.70 set to the sum of -200 + H05.31). For details, see "Homing Function" in the user guide.

H22.71 **Speed in high-speed searching for home switch signal**

Communication address:	2022-48h	Effective mode:	Real time
Min. value:	0	Unit:	[mm/s]/[rpm]
Max. value:	3000	Data type:	UInt16
Default value:	100	Change mode:	Real time

Value range:
0 to 3000
Parameter description
Defines the motor speed for searching for the deceleration point signal during homing.

H22.72 **Speed in low-speed searching for home switch signal**

Communication address:	2022-49h	Effective mode:	Real time
Min. value:	0	Unit:	[mm/s]/[rpm]
Max. value:	1000	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the motor speed for searching for the home signal during homing.

H22.73 **Acceleration/Deceleration time during homing**

Communication address:	2022-4Ah	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	1000	Data type:	UInt16
Default value:	1000	Change mode:	Real time

Value range:
0 to 1000
Parameter description
Defines the time for the motor to accelerate from 0 [mm/s]/[rpm] to 1000 [mm/s]/[rpm] at a constant speed during homing.

H22.74 **Home search time limit**

Communication address:	2022-4Bh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	10000	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the maximum time for searching the home.

H22.75 **Mechanical home offset**

Communication address:	2022-4Ch	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the absolute position of the motor after homing.

H22.79 **Relative/Absolute homing**

Comm. address:	2022-50h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the offset relationship between the mechanical home and mechanical zero, as well as the action upon overtravel during homing.
When H22.79 is set to 0, the value of H05.40 is 2.
When H22.79 is set to 1, the value of H05.40 is 3.

H22.83 **Jump count threshold**

Comm. address:	2022-54h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65534
Parameter description

Eight groups of process segment jump count are available for each process segment command.
Jump count threshold: Two jumpable process segments are available for the jump reference. When the accumulative number of jumps executed by the jump reference is lower than the jump count threshold, process segment A applies. Otherwise, process segment B applies. For details, see "Process segment mode" in the user guide.

H22.84 Jump count threshold 1

Comm. address:	2022-55h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	20	Change mode:	Real time

Value range:
0 to 65534
Parameter description
Same as parameter H22.83.

H22.85 Jump judgment count 2

Comm. address:	2022-56h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	40	Change mode:	Real time

Value range:
0 to 65534
Parameter description
Same as parameter H22.83.

H22.86 Jump judgment count 3

Comm. address:	2022-57h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	80	Change mode:	Real time

Value range:
0 to 65534
Parameter description
Same as parameter H22.83.

H22.87 Jump judgment count 4

Comm. address:	2022-58h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	160	Change mode:	Real time

Value range:
0 to 65534

Parameter description
Same as parameter H22.83.

H22.88 **Jump judgment count 5**

Comm. address:	2022-59h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	320	Change mode:	Real time

Value range:
0 to 65534
Parameter description
Same as parameter H22.83.

H22.89 **Jump judgment count 6**

Comm. address:	2022-5Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	640	Change mode:	Real time

Value range:
0 to 65534
Parameter description
Same as parameter H22.83.

H22.90 **Jump judgment count 7**

Comm. address:	2022-5Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65534	Data type:	UInt16
Default value:	1280	Change mode:	Real time

Value range:
0 to 65534
Parameter description
Same as parameter H22.83.

8.27 H23 Process Segment Parameters

H23.00 **Definition of homing**

Comm. address:	2023-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295

Parameter description
See section "Homing Mode" in "Process Segment Mode".

H23.02 **Homing data**

Comm. address:	2023-03h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Not in use.

H23.04 **Definition of process segment 1**

Comm. address:	2023-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
bit0 to bit3: Mode (process segment operation mode option)
Mode = 1: The fixed speed mode applies.Mode = 2: The positioning mode applies, which stops after positioning is done. Mode = 3: The next segment is executed automatically after positioning is done. Mode = 7: The jump mode applies, which is used to jump to the designated process segment. Mode = 8: The parameter-write mode applies, which allows you to write specific parameters.
For details about the functions in each mode, see the description of each process segment mode in "Process Segment Mode".

H23.06 **Data of process segment 1**

Comm. address:	2023-07h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Different modes selected in process segment 1 correspond to different process segment data. For details, see the description of each process segment mode in "Process Segment Mode".

H23.08 **Definition of process segment 2**

Comm. address:	2023-09h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.10 **Data of process segment 2**

Comm. address:	2023-0Bh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.12 **Definition of process segment 3**

Comm. address:	2023-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.14 **Data of process segment 3**

Comm. address:	2023-0Fh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.16 **Definition of process segment 4**

Comm. address:	2023-11h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:

0 to 4294967295

Parameter description

Same as segment 1.

H23.18 **Data of process segment 4**

Comm. address:	2023-13h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as segment 1.

H23.20 **Definition of process segment 5**

Comm. address:	2023-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:

0 to 4294967295

Parameter description

Same as segment 1.

H23.22 **Data of process segment 5**

Comm. address:	2023-17h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as segment 1.

H23.24 **Definition of process segment 6**

Comm. address:	2023-19h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:

0 to 4294967295

Parameter description

Same as segment 1.

H23.26 **Data of process segment 6**

Comm. address:	2023-1Bh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.28 **Definition of process segment 7**

Comm. address:	2023-1Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.30 **Data of process segment 7**

Comm. address:	2023-1Fh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.32 **Definition of process segment 8**

Comm. address:	2023-21h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.34 **Data of process segment 8**

Comm. address:	2023-23h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-

Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.36 **Definition of process segment 9**

Comm. address:	2023-25h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.38 **Data of process segment 9**

Comm. address:	2023-27h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.40 **Definition of process segment 10**

Comm. address:	2023-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.42 **Data of process segment 10**

Comm. address:	2023-2Bh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as segment 1.

H23.44 **Definition of process segment 11**

Comm. address:	2023-2Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:

0 to 4294967295

Parameter description

Same as segment 1.

H23.46 **Data of process segment 11**

Comm. address:	2023-2Fh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as segment 1.

H23.48 **Definition of process segment 12**

Comm. address:	2023-31h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:

0 to 4294967295

Parameter description

Same as segment 1.

H23.50 **Data of process segment 12**

Comm. address:	2023-33h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:

-2147483648 to +2147483647

Parameter description

Same as segment 1.

H23.52 **Definition of process segment 13**

Comm. address:	2023-35h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.54 **Data of process segment 13**

Comm. address:	2023-37h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.56 **Definition of process segment 14**

Comm. address:	2023-39h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.58 **Data of process segment 14**

Comm. address:	2023-3Bh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

H23.60 **Definition of process segment 15**

Comm. address:	2023-3Dh	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Same as segment 1.

H23.62 **Data of process segment 15**

Comm. address:	2023-3Fh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	-
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Same as segment 1.

8.28 H30 Variables Read Through Communication

H30.00 **Servo state read through communication**

Comm. address:	2030-01h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the current operating state of the servo for interaction with the software tool.

H30.01 **DO function state 1 read through communication**

Comm. address:	2030-02h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DO function 1
bit1 corresponds to DO function 2.
bit2 corresponds to DO function 3.
...
By analogy

H30.02 **DO function state 2 read through communication**

Comm. address:	2030-03h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
bit0 corresponds to DO function 17
bit1 corresponds to DO function 18.
bit2 corresponds to DO function 19.
...
By analogy

H30.03 **Input pulse reference sampling value read through communication**

Comm. address:	2030-04h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the input pulse reference sampling value.

H30.12 **1st encoder accumulative communication timeout upon occurrence of the selected fault**

Comm. address:	2030-0Dh	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the communication timeout count of the 1st encoder upon the selected fault.

H30.13 **1st encoder accumulative communication CRC or frame stop errors upon occurrence of the selected fault**

Comm. address:	2030-0Eh	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the number of 1st encoder communication CRC errors upon occurrence of the selected fault.

H30.14 **1st encoder rising-edge triggered communication timeouts upon occurrence of the selected fault**

Comm. address:	2030-0Fh	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 255
Parameter description
Displays the number of 1st encoder rising-edge triggered communication timeouts upon occurrence of the selected fault.

H30.15 **Drive 5 V voltage monitoring value upon occurrence of the selected fault**

Comm. address:	2030-10h	Effective mode:	None
Min. value:	0.00	Unit:	V
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	Read-only

Value range:
0.00 to 655.35
Description
Displays the drive internal 5 V voltage monitoring value upon the occurrence of the selected fault.

H30.16 **1St encoder accumulative communication timeout**

Comm. address:	2030-11h	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Records the number of timeout errors in primary encoder communication upon power-on.

H30.17 **1st encoder accumulative communication CRC or frame stop errors**

Comm. address:	2030-12h	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Records the number of communication CRC check errors of the primary encoder upon power-on.

H30.18 **Peak value among 1st encoder consecutive communication timeouts**

Comm. address:	2030-13h	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Defines the maximum value of timeout error during communication of the primary encoder.

H30.28 **1st encoder rising-edge triggered communication timeouts**

Comm. address:	2030-1Dh	Effective mode:	None
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Records the number of 1st encoder rising-edge triggered communication timeouts upon the current power-on.

H30.29 **Drive 5 V voltage monitoring value**

Comm. address:	2030-1Eh	Effective mode:	None
Min. value:	0.00	Unit:	V
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	Read-only

Value range:
0.00 to 655.35
Description
Displays the drive internal 5 V voltage monitoring value.

8.29 H31 References Set Through Communication

H31.00 **VDI virtual level set through communication**

Comm. address:	2031-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
When H17.90 is set to 1, the VDI state is defined by this parameter.

The VDI logic is determined by H17.91 (Default VDI virtual level value upon power-on) upon initial power-on. Thereafter, the VDI logic is determined by H31.00.
"bit(n) = 1" of H31.00 indicates the logic of VDI (n+1) is "1". "bit(n)=0" indicates the logic of VDI (n +1) is "0".

H31.01 **Frequency-division output frequency set through communication**

Comm. address:	2031-02h	Effective mode:	Real time
Min. value:	0	Unit:	Hz
Max. value:	16000000	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 16000000
Parameter description
When H05.38 is set to 4, H31.01 defines the frequency (quadrature multiplication) of the frequency-division output port.

H31.04 **DO state set through communication**

Comm. address:	2031-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
You can set this parameter as the DO output status source through H04.22.

H31.05 **AO status set through communication**

Comm. address:	2031-06h	Effective mode:	Real time
Min. value:	-10000	Unit:	mV
Max. value:	10000	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:
-10000 to 10000
Parameter description
Set H04.50 to 10 to define H31.05 as the source of AO (unit: mV).

H31.09 **Speed reference set through communication**

Comm. address:	2031-0Ah	Effective mode:	Real time
Min. value:	-9999.000	Unit:	rpm
Max. value:	9999.000	Data type:	Int32
Default value:	0.000	Change mode:	Real time

Value range:
-9999.000 to 9999.000

Parameter description

Set H06.02 to 4 to define the speed reference in speed control mode through H31.09 (unit: 0.001 rpm).

H31.11 Torque reference set through communication

Comm. address:	2031-0Ch	Effective mode:	Real time
Min. value:	-100.000	Unit:	%
Max. value:	100.000	Data type:	Int32
Default value:	0.000	Change mode:	Real time

Value range:

-100.000 to 100.000

Parameter description

Set H07.02 to 4 to define the torque reference in the torque control mode through this parameter (unit: 0.001%). The setpoint 100.000% corresponds to the rated torque of the motor.

8.30 H32 Direct Drive Parameters

H32.00 Encoder interpolater mismatch alarm (E124)

Comm. address:	2032-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

The T2 interpolator matches the HipFace encoder. The power-on check switch is turned on by default.

0: Disable

1: Enable

H32.02 Angle auto-tuning upon power-on

Comm. address:	2032-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

Angle auto-tuning starts after the drive switches to the rdy state and the time defined by H32.41 elapses.

0: Disable

1: Enable

H32.03 **Angle auto-tuning switch controlled by control word**

Comm. address:	2032-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Control word 6

2: Control word 7

Parameter description

Used to enable the angle auto-tuning switchover switch through the control word.

0: Disable

1: Control word 6

2: Control word 7

H32.04 **Angle auto-tuning state display**

Comm. address:	2032-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

bit1: E602.9

Parameter description

When angle auto-tuning is not performed on the incremental encoder, the related alarm is generated based on the setting.

bit1: E602.9

H32.05 **Pre-positioning retract enable**

Comm. address:	2032-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Disable

1: Enable

Parameter description

After this function is enabled, the drive retracts a certain distance after angle auto-tuning through pre-positioning is done.

0: Disable

1: Enable

H32.06 **Position feedback processing enable**

Comm. address:	2032-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16

Default value:	0	Change mode:	At stop

Value range:
0: Disable
1: Enable
Parameter description
Used to align the position feedback to the position before angle auto-tuning for incremental encoders.
0: Disable
1: Enable

H32.07 **Incremental homing mode**

Comm. address:	2032-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	9	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0: Z signal short-circuited
1: Short-circuited only at the first time
Parameter description
Incremental communication encoder, Z signal selection upon homing
0: Z signal short-circuited
1: Position latched after the first short circuit
Note: The Z signal width needs to be set by H3208.

H32.08 **Homing signal width**

Comm. address:	2032-09h	Effective mode:	Real time
Min. value:	100	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	800	Change mode:	At stop

Value range:
100 to 65535
Parameter description
The setpoint is active after the position is latched by Z signal.

H32.10 **Max. reference current in angle auto-tuning through inching**

Comm. address:	2032-0Bh	Effective mode:	At stop
Min. value:	10.0	Unit:	%
Max. value:	300.0	Data type:	UInt16
Default value:	100.0	Change mode:	At stop

Value range:
10.0 to 300.0
Parameter description
Defines the maximum reference current during auto-tuning.

H32.13 **Threshold for motor rotation in angle auto-tuning through inching (ROT/DDR)**

Comm. address:	2032-0Eh	Effective mode:	At stop
Min. value:	0.001	Unit:	deg
Max. value:	20.000	Data type:	UInt16
Default value:	0.200	Change mode:	At stop

Value range:
0.001 to 20.000
Parameter description
Defines the threshold for rotation during auto-tuning.
The default value applies to most scenarios. Modify this parameter accordingly when a specific motion amplitude is required. The lower the setpoint, the smaller the motor rotation during auto-tuning, but an excessively low setpoint may lead to increased auto-tuning error.

H32.14 **Motor standstill threshold (ROT/DDR) in angle auto-tuning through inching**

Comm. address:	2032-0Fh	Effective mode:	At stop
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	100.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 100.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning.
The default value applies to most scenarios.

H32.15 **Motor action threshold (DDL) in angle auto-tuning through inching**

Comm. address:	2032-10h	Effective mode:	At stop
Min. value:	0.001	Unit:	mm
Max. value:	20.000	Data type:	UInt16
Default value:	0.200	Change mode:	At stop

Value range:
0.001 to 20.000
Parameter description
Defines the threshold for rotation during auto-tuning.
The default value applies to most scenarios. Modify this parameter accordingly when a specific motion amplitude is required. The lower the setpoint, the smaller the motor rotation during auto-tuning, but an excessively low setpoint may lead to increased auto-tuning error.

H32.16 **Motor standstill threshold (DDL) in angle auto-tuning through inching**

Comm. address:	2032-11h	Effective mode:	At stop
Min. value:	0.1	Unit:	mm/s
Max. value:	100.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 100.0

Parameter description

Defines the threshold for determining whether the motor is at a standstill during auto-tuning.

The default value applies to most scenarios.

H32.18 Motor standstill threshold in angle auto-tuning through inching

Comm. address:	2032-13h	Effective mode:	At stop
Min. value:	0.1	Unit:	s
Max. value:	10.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:

0.1 to 10.0

Parameter description

Defines the threshold for determining whether the motor is at a standstill during auto-tuning.

The default value applies to most scenarios.

H32.20 Max. reference current in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-15h	Effective mode:	At stop
Min. value:	10.0	Unit:	%
Max. value:	300.0	Data type:	UInt16
Default value:	100.0	Change mode:	At stop

Value range:

10.0 to 300.0

Parameter description

Defines the maximum reference current during auto-tuning.

H32.22 Electrical angle reference in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-17h	Effective mode:	At stop
Min. value:	0.0	Unit:	deg
Max. value:	360.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:

0.0 to 360.0

Parameter description

Defines the electrical angle during auto-tuning through pre-positioning.

H32.23 Electrical angle reference change range in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-18h	Effective mode:	At stop
Min. value:	10.0	Unit:	deg
Max. value:	170.0	Data type:	UInt16
Default value:	90.0	Change mode:	At stop

Value range:

10.0 to 170.0

Parameter description
Defines the electrical angle change range during auto-tuning.

H32.24 Motor stop threshold (ROT/DDR) in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-19h	Effective mode:	At stop
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	100.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 100.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning. The default value applies to most scenarios.

H32.25 Motor stop threshold (DDL) in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-1Ah	Effective mode:	At stop
Min. value:	0.1	Unit:	mm/s
Max. value:	100.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 100.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning. The default value applies to most scenarios.

H32.26 Damping in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-1Bh	Effective mode:	At stop
Min. value:	0.00	Unit:	[N/(m/s)]/[N·m/rpm]
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	At stop

Value range:
0.00 to 655.35
Description
Defines the motor auto-tuning action damping coefficient. A proper coefficient allows a smooth action process without shock.
1. The setpoint is related to the load characteristics. The higher the load, the higher the coefficient must be.
2. Violent shock may be present during auto-tuning in case of an excessively low setpoint, which is normal. The motor action may be delayed in case of an excessively high setpoint, which is also normal unless a timeout alarm is reported.

H32.29 Motor standstill threshold in angle auto-tuning through pre-positioning (closed-loop)

Comm. address:	2032-1Eh	Effective mode:	At stop
Min. value:	0.1	Unit:	s
Max. value:	10.0	Data type:	UInt16

Default value:	0.5	Change mode:	At stop

Value range:
0.1 to 10.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning.
The default value applies to most scenarios.

H32.30 Max. reference current in angle auto-tuning through position lock

Comm. address:	2032-1Fh	Effective mode:	At stop
Min. value:	10.0	Unit:	%
Max. value:	300.0	Data type:	UInt16
Default value:	100.0	Change mode:	At stop

Value range:
10.0 to 300.0
Parameter description
Defines the maximum reference current during auto-tuning.

H32.33 Motor action threshold (ROT/DDR) in angle auto-tuning through position lock

Comm. address:	2032-22h	Effective mode:	At stop
Min. value:	0.001	Unit:	deg
Max. value:	20.000	Data type:	UInt16
Default value:	0.200	Change mode:	At stop

Value range:
0.001 to 20.000
Parameter description
Defines the threshold for rotation during auto-tuning.
The default value applies to most scenarios. Modify this parameter accordingly when a specific motion amplitude is required. The lower the setpoint, the smaller the motor rotation during auto-tuning, but an excessively low setpoint may lead to increased auto-tuning error.

H32.34 Motor standstill threshold (ROT/DDR) in angle auto-tuning through position lock

Comm. address:	2032-23h	Effective mode:	At stop
Min. value:	0.1	Unit:	[mm/s]/[rpm]
Max. value:	100.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 100.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning.
The default value applies to most scenarios.

H32.35 Motor action threshold (DDL) in angle auto-tuning through position lock

Comm. address:	2032-24h	Effective mode:	At stop
Min. value:	0.001	Unit:	mm

Max. value:	20.000	Data type:	UInt16
Default value:	0.200	Change mode:	At stop

Value range:
0.001 to 20.000
Parameter description
Defines the threshold for rotation during auto-tuning.
The default value applies to most scenarios. Modify this parameter accordingly when a specific motion amplitude is required. The lower the setpoint, the smaller the motor rotation during auto-tuning, but an excessively low setpoint may lead to increased auto-tuning error.

H32.36 Motor standstill threshold (DDL) in angle auto-tuning through position lock

Comm. address:	2032-25h	Effective mode:	At stop
Min. value:	0.1	Unit:	mm/s
Max. value:	100.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 100.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning.
The default value applies to most scenarios.

H32.37 Angle gain in angle auto-tuning through position lock

Comm. address:	2032-26h	Effective mode:	At stop
Min. value:	0	Unit:	deg/(p/s)
Max. value:	10000	Data type:	UInt16
Default value:	1000	Change mode:	At stop

Value range:
0 to 10000
Parameter description
Defines the angle gain during auto-tuning. A proper setpoint can improve the auto-tuning accuracy. The default value applies to most applications.

H32.38 Inertia ratio in angle auto-tuning through position lock

Comm. address:	2032-27h	Effective mode:	At stop
Min. value:	0.00	Unit:	-
Max. value:	120.00	Data type:	UInt16
Default value:	0.00	Change mode:	At stop

Value range:
0.00 to 120.00
Parameter description
Defines the inertia ratio gain during auto-tuning. A proper setpoint ensures a smooth and jitter-free auto-tuning process and reduces the auto-tuning action range.

1. The setpoint is related to the load characteristics. The actual inertia ratio applies to most applications.
2. An excessively low setpoint can lead to a large movement value during auto-tuning, which is normal. An excessively high setpoint can lead to oscillation caused by gain mismatch.

H32.39 Gain class in angle auto-tuning through position lock

Comm. address:	2032-28h	Effective mode:	At stop
Min. value:	4	Unit:	level
Max. value:	31	Data type:	UInt16
Default value:	12	Change mode:	At stop

Value range:
4 to 31
Parameter description
Defines the gain level of the loop used in auto-tuning. A proper setpoint ensures a smooth and jitter-free auto-tuning process and reduces the auto-tuning action range.
1. An excessively low setpoint can lead to a large movement value during auto-tuning, which is normal. An excessively high setpoint can lead to oscillation caused by gain mismatch.

H32.40 Left/Right limit function

Comm. address:	2032-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
1. Left limit being positive limit
2. Left limit being negative limit
Parameter description
Motors with left and right limits are supported. After the parameter is set, the left and right limit is enabled.
1. Left limit being positive limit
2. Left limit being negative limit

H32.41 Angle auto-tuning delay upon power-on

Comm. address:	2032-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	s
Max. value:	65535	Data type:	UInt16
Default value:	3	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the automatic angle auto-tuning delay upon power-on.

H32.45 Black box channel 21 function

Comm. address:	2032-2Eh	Effective mode:	Real time

Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Real-time target position (607Ah)
1: Electrical angle
Parameter description
Used to switch the function of the black box monitoring channel 21.
0: Real-time target position (607Ah)
1: Electrical angle

H32.50 32-bit range compatibility enable

Comm. address:	2032-33h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	99	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
0 to 99
Parameter description
32-bit range processing enable

H32.51 Hall auto-tuning mode

Comm. address:	2032-34h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Open-loop Hall auto-tuning
1: Closed-loop Hall auto-tuning
Parameter description
Defines the Hall auto-tuning mode.

H32.52 Maximum current for Hall auto-tuning

Comm. address:	2032-35h	Effective mode:	Real time
Min. value:	10	Unit:	%
Max. value:	300	Data type:	UInt16
Default value:	100	Change mode:	At stop

Value range:
10 to 300
Parameter description
Defines the maximum auto-tuning current of dynamic Hall auto-tuning.

H32.53 **Motor standstill threshold in angle auto-tuning through position lock**

Comm. address:	2032-36h	Effective mode:	At stop
Min. value:	0.1	Unit:	s
Max. value:	10.0	Data type:	UInt16
Default value:	1.0	Change mode:	At stop

Value range:
0.1 to 10.0
Parameter description
Defines the threshold for determining whether the motor is at a standstill during auto-tuning. The default value applies to most scenarios.

H32.54 **Hall auto-tuning selection**

Comm. address:	2032-37h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
When this parameter is enabled, the Hall auto-tuning will be started automatically after basic angle auto-tuning is done.

H32.55 **Manual tuning of Hall signal U/V/W**

Comm. address:	2032-38h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	7	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 7
Parameter description
Defines the Hall level state.

H32.56 **U/V/W filter time of Hall signal**

Comm. address:	2032-39h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	10	Data type:	UInt16
Default value:	5	Change mode:	Real time

Value range:
0 to 10
Parameter description
Defines the U/V/W filter time of Hall signals.

H32.57 **Hall closed-loop stall speed**

Comm. address:	2032-3Ah	Effective mode:	Real time
Min. value:	0	Unit:	[mm/s]/[rpm]
Max. value:	65535	Data type:	UInt16
Default value:	2	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the stall threshold upon hitting the limit during closed-loop angle auto-tuning of hall position.

H32.58 **Hall closed-loop stall current**

Comm. address:	2032-3Bh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	300.0	Data type:	UInt16
Default value:	120.0	Change mode:	At stop

Value range:
0.0 to 300.0
Parameter description
Defines the stall current upon hitting the limit during closed-loop angle auto-tuning of hall position.

H32.59 **Hall closed-loop stall window time**

Comm. address:	2032-3Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	2000	Data type:	UInt16
Default value:	10	Change mode:	At stop

Value range:
0 to 2000
Parameter description
Defines the stall window time upon hitting the limit during closed-loop angle auto-tuning of hall position.

H32.60 **Hall closed loop inertia ratio**

Comm. address:	2032-3Dh	Effective mode:	Real time
Min. value:	0.00	Unit:	-
Max. value:	120.00	Data type:	UInt16
Default value:	0.00	Change mode:	At stop

Value range:
0.00 to 120.00
Parameter description
Defines the inertia ratio in closed-loop angle auto-tuning of Hall position.

H32.61 **Hall closed loop stiffness**

Comm. address:	2032-3Eh	Effective mode:	Real time
Min. value:	4	Unit:	-
Max. value:	31	Data type:	UInt16
Default value:	12	Change mode:	At stop

Value range:
4 to 31
Parameter description
Defines the stiffness level of Hall position closed-loop angle auto-tuning.

H32.62 **Electrical angle save flag**

Comm. address:	2032-3Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Automatic reset will be performed after the electrical angle is saved when dynamic Hall auto-tuning is done.

H32.63 **Electrical angle of Hall 1**

Comm. address:	2032-40h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the hall 1 electrical angle corresponding to the Hall three-phase state after Hall auto-tuning is completed.

H32.64 **Electrical angle of Hall 2**

Comm. address:	2032-41h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the hall 2 electrical angle corresponding to the Hall three-phase state after Hall auto-tuning is completed.

H32.65 **Electric angle of Hall 3**

Comm. address:	2032-42h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the hall 3 electrical angle corresponding to the Hall three-phase state after Hall auto-tuning is completed.

H32.66 **Electrical angle of Hall 4**

Comm. address:	2032-43h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the hall 4 electrical angle corresponding to the Hall three-phase state after Hall auto-tuning is completed.

H32.67 **Electrical angle of Hall 5**

Comm. address:	2032-44h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the hall 5 electrical angle corresponding to the Hall three-phase state after Hall auto-tuning is completed.

H32.68 **Electric angle of Hall 6**

Comm. address:	2032-45h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the hall 6 electrical angle corresponding to the Hall three-phase state after Hall auto-tuning is completed.

H32.70 **Motor overload protection mode**

Comm. address:	2032-47h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0: Internal motor overload curve

1: External motor overload curve

2: Current limit overload protection

3: Hide motor overload protection

Parameter description

Defines the motor overload protection mode.

0: Internal motor overload curve

1: External motor overload curve

2: Current limit overload protection

3: Hide motor overload protection

H32.73 **Overload current limit thermal threshold current**

Comm. address:	2032-4Ah	Effective mode:	Next power-on
Min. value:	10.0	Unit:	%
Max. value:	750.0	Data type:	UInt16
Default value:	115.0	Change mode:	At stop

Value range:

10.0 to 750.0

Parameter description

This parameter takes effect when the motor overload current limit is enabled. It is the rated motor current percentage. When this value is exceeded, the motor keeps heating up. The default value 115% applies to Inovance motors. It is recommended to set this parameter to 100% for third-party motors. If the overload characteristics of the motor is of poor performance, it is recommended to reduce the values of H32.73, H32.74, H32.75, and H32.76 when motor current limit protection is enabled.

H32.74 **Peak current of overload current limit**

Comm. address:	2032-4Bh	Effective mode:	Next power-on
Min. value:	100.0	Unit:	%
Max. value:	750.0	Data type:	UInt16
Default value:	300.0	Change mode:	At stop

Value range:

100.0 to 750.0

Parameter description

Defines the ratio of the peak current that can be reached by the motor to the rated current of the motor.

H32.75 **Max. current duration of overload protection**

Comm. address:	2032-4Ch	Effective mode:	Real time
Min. value:	0.01	Unit:	s
Max. value:	655.35	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.01 to 655.35
Description
Calculate the maximum heat that can be reached by the motor based on the maximum current continuous time, and take this value as the motor overload alarm threshold.

H32.76 **Current limit time constant of overload protection**

Comm. address:	2032-4Dh	Effective mode:	Real time
Min. value:	0.01	Unit:	-
Max. value:	655.35	Data type:	UInt16
Default value:	1.00	Change mode:	At stop

Value range:
0.01 to 655.35
Description
It is related to the maximum duration of the maximum current. The higher the setpoint, the longer the duration can be.

H32.77 **Current limit alarm threshold of overload protection**

Comm. address:	2032-4Eh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	750.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 750.0
Parameter description
An alarm will be reported when the limited current falls below this threshold.

H32.78 **Current limit fault threshold of overload protection**

Comm. address:	2032-4Fh	Effective mode:	Real time
Min. value:	0.0	Unit:	%
Max. value:	750.0	Data type:	UInt16
Default value:	0.0	Change mode:	At stop

Value range:
0.0 to 750.0
Parameter description
A fault can be reported when the limited current falls below this threshold.

H32.79 **Thermal threshold current of overload**

Comm. address:	2032-50h	Effective mode:	Next power-on

Min. value:	10.0	Unit:	%
Max. value:	750.0	Data type:	UInt16
Default value:	115.0	Change mode:	At stop

Value range:
10.0 to 750.0
Parameter description
Defines the thermal threshold current of overload.

H32.80 **Overload heating current interval**

Comm. address:	2032-51h	Effective mode:	Next power-on
Min. value:	0.1	Unit:	%
Max. value:	204.8	Data type:	UInt16
Default value:	6.4	Change mode:	At stop

Value range:
0.1 to 204.8
Parameter description
Defines the overload heating current interval.

H32.81 **Overload cooling current interval**

Comm. address:	2032-52h	Effective mode:	Next power-on
Min. value:	0.1	Unit:	%
Max. value:	204.8	Data type:	UInt16
Default value:	6.4	Change mode:	At stop

Value range:
0.1 to 204.8
Parameter description
Defines the overload cooling current interval.

H32.82 **Overload heating curve length**

Comm. address:	2032-53h	Effective mode:	Next power-on
Min. value:	1	Unit:	-
Max. value:	200	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
1 to 200
Parameter description
Defines the overload heating curve length.

H32.83 **Overload cooling curve length**

Comm. address:	2032-54h	Effective mode:	Next power-on
Min. value:	1	Unit:	-
Max. value:	200	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:
1 to 200
Parameter description
Defines the overload cooling curve length.

8.31 H33 Compensation Parameters

H33.00 **Compensation data BUFFER0**

Comm. address:	2033-01h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER0.

H33.01 **Compensation data BUFFER 1**

Comm. address:	2033-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER 1.

H33.02 **Compensation data BUFFER 2**

Comm. address:	2033-03h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER2.

H33.03 **Compensation data BUFFER3**

Comm. address:	2033-04h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER3.

H33.04 **Compensation data BUFFER4**

Comm. address:	2033-05h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER4.

H33.05 **Compensation data BUFFER5**

Comm. address:	2033-06h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER5.

H33.06 **Compensation data BUFFER6**

Comm. address:	2033-07h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER6.

H33.07 **Compensation data BUFFER 7**

Comm. address:	2033-08h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER7.

H33.08 **Compensation data BUFFER 8**

Comm. address:	2033-09h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER8.

H33.09 **Compensation data BUFFER 9**

Comm. address:	2033-0Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER9.

H33.10 **Compensation data BUFFER 10**

Comm. address:	2033-0Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER10.

H33.11 **Compensation data BUFFER 11**

Comm. address:	2033-0Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER11.

H33.12 **Compensation data BUFFER 12**

Comm. address:	2033-0Dh	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER12.

H33.13 Compensation data BUFFER 13

Comm. address:	2033-0Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER13.

H33.14 Compensation data BUFFER 14

Comm. address:	2033-0Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER14

H33.15 Compensation data BUFFER 15

Comm. address:	2033-10h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER15.

H33.16 Compensation data BUFFER 16

Comm. address:	2033-11h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER16.

H33.17 **Compensation data BUFFER 17**

Comm. address:	2033-12h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER17.

H33.18 **Compensation data BUFFER 18**

Comm. address:	2033-13h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER18.

H33.19 **Compensation data BUFFER 19**

Comm. address:	2033-14h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER19.

H33.20 **Compensation data BUFFER 20**

Comm. address:	2033-15h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER20.

H33.21 **Compensation data BUFFER 21**

Comm. address:	2033-16h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER21.

H33.22 **Compensation data BUFFER 22**

Comm. address:	2033-17h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER22.

H33.23 **Compensation data BUFFER 23**

Comm. address:	2033-18h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER23.

H33.24 **Compensation data BUFFER 24**

Comm. address:	2033-19h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER24.

H33.25 **Compensation data BUFFER 25**

Comm. address:	2033-1Ah	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER25.

H33.26 **Compensation data BUFFER 26**

Comm. address:	2033-1Bh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER26.

H33.27 **Compensation data BUFFER 27**

Comm. address:	2033-1Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER27.

H33.28 **Compensation data BUFFER 28**

Comm. address:	2033-1Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER28.

H33.29 **Compensation data BUFFER 29**

Comm. address:	2033-1Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER29.

H33.30 Compensation data BUFFER 30

Comm. address:	2033-1Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER30.

H33.31 Compensation data BUFFER 31

Comm. address:	2033-20h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER31.

H33.32 Compensation data BUFFER 32

Comm. address:	2033-21h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER32.

H33.33 Compensation data BUFFER 33

Comm. address:	2033-22h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 65535

Parameter description

Defines the compensation data BUFFER33.

H33.34 **Compensation data BUFFER 34**

Comm. address:	2033-23h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER34.

H33.35 **Compensation data BUFFER 35**

Comm. address:	2033-24h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER35.

H33.36 **Compensation data BUFFER 36**

Comm. address:	2033-25h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER36.

H33.37 **Compensation data BUFFER 37**

Comm. address:	2033-26h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER37.

H33.38 **Compensation data BUFFER 38**

Comm. address:	2033-27h	Effective mode:	Real time
Min. value:	0	Unit:	-

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER38.

H33.39 Compensation data BUFFER 39

Comm. address:	2033-28h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the compensation data BUFFER39.

H33.40 Current compensation BUFFER group number

Comm. address:	2033-29h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Current compensation BUFFER group number

H33.41 Compensation data count

Comm. address:	2033-2Ah	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	32767	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 32767
Parameter description
Defines the compensation data count.

H33.44 Data command

Comm. address:	2033-2Dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0 to 1

Description

Sets the data command.

H33.45 **Data storage position**

Comm. address:	2033-2Eh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	1	Change mode:	At stop

Value range:

0: Servo RAM

1: Servo FLASH

2: Encoder FLASH

Parameter description

Defines the data storage position.

0: Servo RAM

1: Servo FLASH

2: Encoder FLASH

H33.46 **Clear data**

Comm. address:	2033-2Fh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	3	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 3

Parameter description

Sets the data clear function.

H33.47 **Software tool writing status**

Comm. address:	2033-30h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 2

Parameter description

Displays the write status of the software tool. 0: Idle; 1: Writing BUFFER; 2: Writing BUFFER completed.

H33.48 **Servo reading status**

Comm. address:	2033-31h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16

Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the read status of the servo. 0: Idle; 1: Reading BUFFER; 2: Reading BUFFER completed.

H33.49 **Software tool reading status**

Comm. address:	2033-32h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	2	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 2
Parameter description
Displays the read status of the software tool. 0: Idle; 1: Reading BUFFER; 2: Reading BUFFER completed.

H33.50 **Servo writing status**

Comm. address:	2033-33h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the write status of the servo. 0: Idle; 1: Writing BUFFER; 2: Writing BUFFER completed.

H33.51 **Data transmission completion flag**

Comm. address:	2033-34h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 1
Description
Software tool data transmission completion flag. 0: Not completed; 1: Completed.

H33.52 **Servo data transfer completion flag**

Comm. address:	2033-35h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:

0 to 65535

Parameter description

Servo data transmission completion flag. 0: Not completed; 1: Completed.

H33.60 **Accuracy compensation function**

Comm. address:	2033-3Dh	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 1

Description

Used to enable accuracy compensation.

H33.61 **Accuracy compensation sum**

Comm. address:	2033-3Eh	Effective mode:	Next power-on
Min. value:	0	Unit:	count
Max. value:	2048	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:

0 to 2048

Parameter description

Total accuracy compensation points

H33.62 **Starting offset address of accuracy compensation**

Comm. address:	2033-3Fh	Effective mode:	Next power-on
Min. value:	-21474836.48	Unit:	[mm]/[deg]
Max. value:	21474836.47	Data type:	Int32
Default value:	0.00	Change mode:	At stop

Value range:

-21474836.48 to 21474836.47

Parameter description

Defines the position of the compensation home of the direct-drive motor with incremental encoder at the coordinate home of the mechanical system.

H33.64 **Accuracy compensation data interval**

Comm. address:	2033-41h	Effective mode:	Next power-on
Min. value:	-327.67	Unit:	[mm]/[deg]
Maximum value:	327.67	Data type:	Int16
Default value:	0.00	Change mode:	At stop

Value range:

-327.67 to 327.67

Parameter description
Clearance of adjacent compensation points of accuracy compensation

H33.65 **Phase sequence for generating accuracy compensation table**

Comm. address:	2033-42h	Effective mode:	Next power-on
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	At stop

Range:
0x0 to 0xFFFF
Parameter description
Records the phase sequence when generating accuracy compensation table.

H33.66 **Reference direction for generating accuracy compensation table**

Comm. address:	2033-43h	Effective mode:	Next power-on
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 1
Description
Records the reference direction for generating the accuracy compensation table.

H33.67 **Servo homing completed.**

Comm. address:	2033-44h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Accuracy compensation homing completed signal

H33.68 **Current acting index of accuracy compensation**

Comm. address:	2033-45h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Current compensation position of accuracy compensation

H33.69 **Forced homing enable**

Comm. address:	2033-46h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0 to 1
Description
Used to start accuracy compensation homing forcibly.

H33.70 **Forced homing mode**

Comm. address:	2033-47h	Effective mode:	Next power-on
Min. value:	-32768	Unit:	-
Max. value:	32767	Data type:	Int16
Default value:	-2	Change mode:	At stop

Value range:
-32768 to +32767
Parameter description
Records the homing mode during accuracy compensation generation.

H33.71 **Forced homing at low speed**

Comm. address:	2033-48h	Effective mode:	Next power-on
Min. value:	0	Unit:	[mm/s]/[rpm]
Max. value:	1000	Data type:	UInt16
Default value:	10	Change mode:	At stop

Value range:
0 to 1000
Parameter description
Records the homing speed during accuracy compensation generation.

H33.72 **Single-turn absolute position of accuracy compensation home of absolute encoder**

Comm. address:	2033-49h	Effective mode:	Next power-on
Min. value:	0	Unit:	Reference unit
Max. value:	4294967295	Data type:	UInt32
Default value:	0	Change mode:	At stop

Value range:
0 to 4294967295
Parameter description
Defines the single-turn absolute value of direct-drive motor compensation home of absolute encoder.

H33.74 **Min. pulse width of frequency-division output accuracy compensation**

Comm. address:	2033-4Bh	Effective mode:	Next power-on

Minimum value:	2	Unit:	count
Max. value:	7	Data type:	UInt16
Default value:	3	Change mode:	At stop

Value range:
2 to 7
Parameter description
Defines the minimum pulse width of accuracy compensation frequency-division output.

H33.75 **Accuracy compensation data unit**

Comm. address:	2033-4Ch	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: [um]/[arcsec]
1: [mm]/[mrad]
Parameter description
Defines the accuracy compensation data unit.
For DDL motors, 0 specifies um and 1 specifies mm.
For DDR motors, 0 specifies arcsec and 2 specifies mrad.

H33.80 **Motor cogging torque ripple compensation data storage position**

Comm. address:	2033-51h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	1	Data type:	UInt16
Default value:	0	Change mode:	At stop

Value range:
0: Stored in the encoder
1: Stored in the Flash
Description
Defines the position to save the cogging torque fluctuation compensation data.

H33.81 **Defines the motor cogging torque fluctuation compensation sum.**

Comm. address:	2033-52h	Effective mode:	Real time
Min. value:	0	Unit:	count
Max. value:	65535	Data type:	UInt16
Default value:	2000	Change mode:	At stop

Value range:
0 to 65535
Parameter description
Defines the motor cogging torque fluctuation compensation sum.

8.32 H3A Servo Version Number Parameters

H3A.00 **MCU software version - VR version**

Comm. address:	203 A-01h	Effective mode:	-
Min. value:	0.00	Unit:	-
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	Read-only

Value range:
0.00 to 655.35
Description
Displays the VR version of MCU software, with two decimal places.

H3A.01 **MCU software version - C SPC version**

Comm. address:	203 A-02h	Effective mode:	-
Min. value:	0.000	Unit:	-
Max. value:	65.535	Data type:	UInt16
Default value:	0.000	Change mode:	Read-only

Value range:
0.000 to 65.535
Parameter description
Displays the C SPC version of MCU software, with three decimal places.

H3A.02 **MCU software version - non-standard version**

Comm. address:	203 A-03h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
Displays the non-standard version of MCU software.

H3A.03 **MCU software version - test and trial versions**

Comm. address:	203 A-04h	Effective mode:	-
Min. value:	0.000	Unit:	-
Max. value:	65.535	Data type:	UInt16
Default value:	0.000	Change mode:	Read-only

Value range:
0.000 to 65.535
Parameter description
Displays the test and trial versions of MCU software (with three decimal places).

H3A.04 **MCU software version - software version**

Comm. address:	203 A-05h	Effective mode:	-

Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the MCU software version.

H3A.05 **FPGA software version - VR version**

Comm. address:	203 A-06h	Effective mode:	-
Min. value:	0.00	Unit:	-
Max. value:	655.35	Data type:	UInt16
Default value:	0.00	Change mode:	Read-only

Value range:
0.00 to 655.35
Description
Displays the VR version of FPGA software, with two decimal places.

H3A.06 **FPGA version: C SPC version**

Comm. address:	203 A-07h	Effective mode:	-
Min. value:	0.000	Unit:	-
Max. value:	65.535	Data type:	UInt16
Default value:	0.000	Change mode:	Read-only

Value range:
0.000 to 65.535
Parameter description
Displays the C SPC version of FPGA software, with three decimal places.

H3A.07 **FPGA software version - non-standard version**

Comm. address:	203 A-08h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the non-standard version of FPGA software.

H3A.08 **FPGA software version: test and trial versions**

Comm. address:	203 A-09h	Effective mode:	-
Min. value:	0.000	Unit:	-
Max. value:	65.535	Data type:	UInt16
Default value:	0.000	Change mode:	Read-only

Value range:
0.000 to 65.535
Parameter description
Displays the test and trial versions of FPGA (with three decimal places).

H3A.09 **FPGA software - software version**

Comm. address:	203 A-0Ah	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
0 to 65535
Parameter description
Displays the FPGA software version.

8.33 1000h Object Dictionary

1005h **SYNC message COB-ID**

Comm. address:	1005h	Effective mode:	Real time
Min. value:	0x80	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x80	Change mode:	Real time

Value range:
0x80~0x7FFFFFFF
Parameter description
Only 0x80 and 0x40000080 can be written to the synchronization message.
If 0x80 is written, the synchronization generator does not work.
If 0x40000080 is written, the synchronization generator is activated.
To activate the synchronization generator, set 1006h to a non-zero value first.

1006h **Synchronization cycle**

Comm. address:	1006h	Effective mode:	Real time
Min. value:	0	Unit:	μs
Max. value:	2147483647	Data type:	UInt32
Default value:	0	Change mode:	Real time

Value range:
0 to 2147483647
Parameter description
It is valid only for the synchronization generator. The unit is μs.

100Ch **Node daemon running time**

Comm. address:	100Ch	Effective mode:	Real time
Min. value:	0	Unit:	ms

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the node daemon running time, in ms.

100dh **Lifetime factor**

Comm. address:	100dh	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 255
Parameter description
This parameter must be used together with the node daemon function and must be set to a value greater than 1.

1014h **Emergency message COB-ID**

Comm. address:	1014h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x80	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
The most significant bit indicates whether to disable the emergency message of the device. Only "0x80+Node_ID" can be written to this bit to enable the device emergency message.
Writing "0x80000080+Node_ID" disables the emergency message.
When the emergency message is activated, its COB-ID must be the same as that of the object.

1016.01h **Consumer heartbeat time 1**

Comm. address:	1016-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Parameters include the address of the monitored node and actual consumer time. The heartbeat time must be longer than the heartbeat producer time (unit: ms) of the corresponding node. Do not set different consumer times for the same node.
bit0 to bit15: Monitoring time
bit16 to bit23: Monitored address
bit24 to bit31: Reserved (0)

1016.02h **Consumer heartbeat time 2**

Comm. address:	1016-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1016.01h.

1016.03h **Consumer heartbeat time 3**

Comm. address:	1016-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1016.01h.

1016.04h **Consumer heartbeat time 4**

Comm. address:	1016-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1016.01h.

1016.05h **Consumer heartbeat time 5**

Comm. address:	1016-05h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1016.01h.

1017h **Producer heartbeat time**

Comm. address:	1017h	Effective mode:	Real time
Min. value:	0	Unit:	ms

Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the heartbeat production time of the slave, in ms.

1400.01h COB-ID of RPDO1

Comm. address:	1400-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x200	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Only the most significant bit can be modified. When the most significant bit is 0, the PDO is active. When the most significant bit is 1, the PDO is inactive.
The default settings are as follows:
1400h: 0x00000200 + Node_ID
1401h: 0x80000300 + Node_ID
1402h: 0x80000400 + Node_ID
1403h: 0x80000500 + Node_ID

1400.02h Transmission type of RPDO1

Comm. address:	1400-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
This parameter can be modified only when PDO is inactive.
Different values correspond to different PDO transmission types, as shown below.
0: Not circle synchronous data
1 to 240: Circle synchronous data
254 and 255: Not circle asynchronous data

1401.01h COB-ID of RPDO2

Comm. address:	1401-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x300	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF

Parameter description
Same as 1400.01h.

1401.02h **Transmission type of RPDO2**

Comm. address:	1401-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
Same as 1400.02h.

1402.01h **COB-ID of RPDO3**

Comm. address:	1402-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x80000400	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Same as 1400.01h.

1402.02h **Transmission type of RPDO3**

Comm. address:	1402-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
Same as 1400.02h.

1403.01h **COB-ID of RPDO4**

Comm. address:	1403-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x80000500	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Same as 1400.01h.

1403.02h **Transmission type of RPDO4**

Comm. address:	1403-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
Same as 1400.02h.

1600.00h **Number of valid mapping objects in RPDO1**

Comm. address:	1600-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	3	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1600.01h **Mapping object 1 of RPDO1**

Comm. address:	1600-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60400010	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1600.02h **Mapping object 2 of RPDO1**

Comm. address:	1600-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60FF0020	Change mode:	Real time

Value range:

0x0 to 0x7FFFFFFF

Parameter description

Same as 1600.01h.

1600.03h **Mapping object 3 of RPDO1**

Comm. address:	1600-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60600008	Change mode:	Real time

Value range:

0x0 to 0x7FFFFFFF

Parameter description

Same as 1600.01h.

1600.04h **Mapping object 4 of RPDO1**

Comm. address:	1600-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:

0x0 to 0x7FFFFFFF

Parameter description

Same as 1600.01h.

1601.00h **Number of valid mapped objects in RPDO2**

Comm. address:	1601-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	2	Change mode:	Real time

Value range:

0 to 4

Parameter description

This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1601.01h **1st mapped object in RPDO2**

Comm. address:	1601-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x607A0020	Change mode:	Real time

Value range:

0x0 to 0x7FFFFFFF

Parameter description

The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1601.02h 2nd mapped object in RPDO2

Comm. address:	1601-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60810020	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1601.01h.

1601.03h 3rd mapped object in RPDO2

Comm. address:	1601-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1601.01h.

1601.04h 4th mapped object in RPDO2

Comm. address:	1601-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1601.01h.

1602.00h Number of valid mapped objects in RPDO3

Comm. address:	1602-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1602.01h 1st mapped object in RPDO3

Comm. address:	1602-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1602.02h 2nd mapped object in RPDO3

Comm. address:	1602-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1602.01h.

1602.03h 3rd mapped object in RPDO3

Comm. address:	1602-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1602.01h.

1602.04h 4th mapped object in RPDO3

Comm. address:	1602-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-

Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1602.01h.

1603.00h Number of valid mapped objects in RPDO4

Comm. address:	1603-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1603.01h 1st mapped object in RPDO4

Comm. address:	1603-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1603.02h 2nd mapped object in RPDO4

Comm. address:	1603-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1603.01h.

1603.03h **3rd mapped object in RPDO4**

Comm. address:	1603-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1603.01h.

1603.04h **4th mapped object in RPDO4**

Comm. address:	1603-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1603.01h.

1800.01h **COB-ID of TPDO1**

Comm. address:	1800-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x40000180	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Only the most significant bit and second most significant bit can be changed.
When the most significant bit is 0, the PDO is active. When the most significant bit is 1, the PDO is inactive.
The second most significant bit defines whether the PDO can be triggered by a remote frame.
You are recommended to set this bit to 1 to disable the remote frame to trigger the PDO.
The default settings are as follows:
1800h: 0x40000180 + Node_ID
1801h: 0xC0000280 + Node_ID
1802h: 0xC0000380 + Node_ID
1803h: 0xC0000480 + Node_ID

1800.02h **Transmission type of TPDO1**

Comm. address:	1800-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
This parameter can be modified only when PDO is inactive. Different values correspond to different PDO transmission types, as shown below.
0: Not circle synchronous data
1 to 240: Circle synchronous data
254 and 255: Not circle asynchronous data

1800.03h Inhibit time of TPDO1

Comm. address:	1800-03h	Effective mode:	Real time
Min. value:	0	Unit:	100 μs
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 65535
Parameter description
This parameter can be modified only when PDO is inactive.
The unit is 100 μs. The value 0 indicates that the inhibit time is invalid.

1800.05h Event counter of TPDO1

Comm. address:	1800-05h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
This parameter can be modified only when PDO is inactive.
The unit is ms. When the parameter is set to 0, the event timer is invalid.

1801.01h COB-ID of TPDO2

Comm. address:	1801-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x40000280	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Same as 1800.01h.

1801.02h Transmission type of TPDO2

Comm. address:	1801-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16

Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
Same as 1800.02h.

1801.03h Inhibit time of TPDO2

Comm. address:	1801-03h	Effective mode:	Real time
Min. value:	0	Unit:	100 μs
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as 1800.03h.

1801.05h Event counter of TPDO2

Comm. address:	1801-05h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as 1800.05h.

1802.01h COB-ID of TPDO3

Comm. address:	1802-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0xC0000380	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Same as 1800.01h.

1802.02h Transmission type of TPDO3

Comm. address:	1802-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255

Parameter description
Same as 1800.02h.

1802.03h **Inhibit time of TPDO3**

Comm. address:	1802-03h	Effective mode:	Real time
Min. value:	0	Unit:	100 μs
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as 1800.03h.

1802.05h **Event counter of TPDO3**

Comm. address:	1802-05h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as 1800.05h.

1803.01h **COB-ID of TPDO4**

Comm. address:	1803-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0xC0000480	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Same as 1800.01h.

1803.02h **Transmission type of TPDO4**

Comm. address:	1803-02h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	255	Data type:	UInt16
Default value:	255	Change mode:	Real time

Value range:
0 to 255
Parameter description
Same as 1800.02h.

1803.03h **Inhibit time of TPDO4**

Comm. address:	1803-03h	Effective mode:	Real time
Min. value:	0	Unit:	100 μs
Max. value:	65535	Data type:	UInt16
Default value:	500	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as 1800.03h.

1803.05h **Event counter of TPDO4**

Comm. address:	1803-05h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Same as 1800.05h.

1A00.00h **Number of valid mapped objects in TPDO1**

Comm. address:	1A00-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	3	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1A00.01h **Mapping object 1 of TPDO1**

Comm. address:	1A00-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60410010	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:

bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1A00.02h **Mapping object 2 of TPDO1**

Comm. address:	1A00-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60FD0020	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A00.01h.

1A00.03h **Mapping object 3 of TPDO1**

Comm. address:	1A00-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60610008	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A00.01h.

1A00.04h **Mapping object 4 of TPDO1**

Comm. address:	1A00-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A00.01h.

1A01.00h **Number of valid mapped objects in TPDO2**

Comm. address:	1A01-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	2	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1A01.01h **1st mapped object in TPDO2**

Comm. address:	1A01-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x60640020	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1A01.02h **2nd mapped object in TPDO2**

Comm. address:	1A01-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x606C0020	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A01.01h.

1A01.03h **3rd mapped object in TPDO2**

Comm. address:	1A01-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A01.01h.

1A01.04h **4th mapped object in TPDO2**

Comm. address:	1A01-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF

Parameter description
Same as 1A01.01h.

1A02.00h Number of valid mapped objects in TPDO3

Comm. address:	1A02-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1A02.01h 1st mapped object in TPDO3

Comm. address:	1A02-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1A02.02h 2nd mapped object in TPDO3

Comm. address:	1A02-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A02.01h.

1A02.03h 3rd mapped object in TPDO3

Comm. address:	1A02-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32

Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A02.01h.

1A02.04h 4th mapped object in TPDO3

Comm. address:	1A02-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A02.01h.

1A03.00h Number of valid mapped objects in TPDO4

Comm. address:	1A03-00h	Effective mode:	Real time
Min. value:	0	Unit:	-
Maximum value:	4	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 4
Parameter description
This object can be modified only when PDO is invalid. When the value 0 is written, the mapping objects of other sub-indexes are cleared.

1A03.01h 1st mapped object in TPDO4

Comm. address:	1A03-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
The total length of a mapped object cannot exceed 64 bits. Mapping based on bytes instead of bits is supported. The mapped object index and sub-index must be in the object dictionary list, in a writable state, and mappable.
Write sub-indexes in the following format:
bit16 to bit31: Index
bit8 to bit15: Sub-index
bit0 to bit7: Object length

1A03.02h **2nd mapped object in TPDO4**

Comm. address:	1A03-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A03.01h.

1A03.03h **3rd mapped object in TPDO4**

Comm. address:	1A03-03h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A03.01h.

1A03.04h **4th mapped object in TPDO4**

Comm. address:	1A03-04h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0x7FFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0x7FFFFFFF
Parameter description
Same as 1A03.01h.

8.34 6000h Object Dictionary

603Fh **Error code**

Comm. address:	603Fh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
When an error described in the DSP402 profile occurs on the drive, 603Fh is as described in DSP402.

When an error specified by the user occurs on the servo drive, 603Fh is 0xFF00. The value of 603Fh is in hexadecimal.
In addition, the object dictionary 203Fh displays auxiliary bytes of fault codes in hexadecimal. 203Fh is an UInt32 value, in which the high 16 bits indicate the internal fault code of the manufacturer, and the low 16 bits indicate the external fault code of the manufacturer.

6040h **Control word**

Comm. address:	6040h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0xFFFF
Parameter description
See section "Basic Functions of the Servo Drive" for the description of the control word.

6041h **Status word**

Comm. address:	6041h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
See section "Basic Functions of the Servo Drive" for the description of the status word.

605Ah **Quick stop mode**

Comm. address:	605Ah	Effective mode:	At stop
Min. value:	0	Unit:	-
Max. value:	7	Data type:	Int16
Default value:	2	Change mode:	Real time

Value range:
0: Coast to stop, keeping de-energized state
1: Ramp to stop as defined by 6084h/609Ah (HM), keeping de-energized state
2: Ramp to stop as defined by 6085h, keeping de-energized state
3: Stop at emergency stop torque, keeping de-energized state
5: Ramp to stop as defined by 6084h/609Ah (HM), keeping position lock state
6: Ramp to stop as defined by 6085h, keeping position lock state
7: Stop at emergency stop torque, keeping position lock state
Parameter description

Defines the deceleration mode of the motor for stopping rotating upon quick stop and the motor state after stop.
0: Coast to stop, keeping de-energized state
1: Ramp to stop as defined by 6084h/609Ah (HM), keeping de-energized state
2: Ramp to stop as defined by 6085h, keeping de-energized state
3: Stop at emergency stop torque, keeping de-energized state
5: Ramp to stop as defined by 6084h/609Ah (HM), keeping position lock state
6: Ramp to stop as defined by 6085h, keeping position lock state
7: Stop at emergency stop torque, keeping position lock state
Note: If the setpoint of 605Ah is lower than 4 after the braking is enabled, 605Ah will be forcibly set to 2 (Ramp to stop as defined by 6085h, keeping de-energized state).

605Ch **Stop mode at servo S-ON OFF**

Communication address:	605Ch	Effective mode:	At stop
Min. value:	-4	Unit:	-
Max. value:	2	Data type:	Int16
Default value:	0	Change mode:	Real time

Value range:
-4: Ramp to stop as defined by 6085h, keeping dynamic braking state
-3: Stop at zero speed, keeping dynamic braking state
-2: Ramp to stop as defined by 6084h/609Ah, keeping dynamic braking state
-1: Dynamic braking stop, keeping dynamic braking state
0: Coast to stop, keeping de-energized state
1: Ramp to stop as defined by 6084h/609Ah, keeping de-energized state
2: Dynamic braking stop, keeping de-energized state
Parameter description
Defines the deceleration mode of the motor for stopping rotating upon S-OFF and the motor state after stop.
-4: Ramp to stop as defined by 6085h, keeping dynamic braking state
-3: Stop at zero speed, keeping dynamic braking state
-2: Ramp to stop as defined by 6084h/609Ah, keeping dynamic braking state
-1: Dynamic braking stop, keeping dynamic braking state
0: Coast to stop, keeping de-energized state
1: Ramp to stop as defined by 6084h/609Ah, keeping de-energized state
2: Dynamic braking stop, keeping de-energized state
Note: After the brake is enabled, 605Ch will be forcibly set to -4 (Ramp to stop as defined by 6085h, keeping dynamic braking state).

605Dh **Halt mode**

Comm. address:	605Dh	Effective mode:	At stop
Min. value:	1	Unit:	-
Max. value:	3	Data type:	Int16
Default value:	1	Change mode:	Real time

Value range:

1: Ramp to stop as defined by 6084h/609Ah (HM), keeping position lock state

2: Ramp to stop as defined by 6085h, keeping position lock state

3: Stop at emergency stop torque, keeping position lock state

Parameter description

Defines the deceleration mode of the motor for stopping rotating upon pause and the motor status after stop.

PP/PV/HM mode:

Setpoint	Stop mode
1	Ramp to stop as defined by 6084h/609Ah (HM), keeping position lock status
2	Ramp to stop as defined by 6085h, keeping position lock status
3	Stop at emergency-stop torque, keeping the position lock status

PT mode:

Setpoint	Stop mode
1/2/3	Ramp to stop as defined by 6087h, keeping the position lock status

605Eh **Stop mode at No. 2 fault**

Communication address:	605Eh	Effective mode:	At stop
Min. value:	-5	Unit:	-
Maximum value:	4	Data type:	Int16
Default value:	2	Change mode:	Real time

Value range:

-5: Stop at zero speed, keeping dynamic braking state

-4: Stop at emergency stop torque, keeping dynamic braking state

-3: Ramp to stop as defined by 6085h, keeping dynamic braking state

-2: Ramp to stop as defined by 6084h/609Ah (HM), keeping dynamic braking state

-1: Dynamic braking stop, keeping dynamic braking state

0: Coast to stop, keeping de-energized state

1: Ramp to stop as defined by 6084h/609Ah (HM), keeping de-energized state

2: Ramp to stop as defined by 6085h, keeping de-energized state

3: Stop at emergency stop torque, keeping de-energized state

4: Dynamic braking stop, keeping de-energized state

Parameter description

Defines the deceleration mode of the servo motor for stopping rotating and the servo motor status when a No. 2 fault occurs.

-5: Stop at zero speed, keeping dynamic braking state

-4: Stop at emergency-stop torque, keeping dynamic braking state

-3: Ramp to stop as defined by 6085h, keeping dynamic braking state

-2: Ramp to stop as defined by 6084h/609Ah (HM), keeping dynamic braking state

-1: Dynamic braking stop, keeping dynamic braking state
0: Coast to stop, keeping de-energized state
1: Ramp to stop as defined by 6084h/609Ah (HM), keeping de-energized state
2: Ramp to stop as defined by 6085h, keeping de-energized state
3: Stop at emergency-stop torque, keeping de-energized state
4: Dynamic braking stop, keeping de-energized state
Note: After the brake is enabled, 605Eh will be forcibly set to -3 (Stop at emergency-stop torque as defined by 6085h, keeping de-energized state).

6060h **Servo drive mode selection**

Comm. address:	6060h	Effective mode:	Real time
Min. value:	0	Unit:	-
Max. value:	10	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
1: Profile position (PP) mode
3: Profile velocity (PV) mode
4: Profile torque (PT) mode
6: Homing (HM) mode
7: Interpolation (IP) mode
Parameter description
Defines the operation mode of the servo drive.
0: N/A (internally forced to PP mode)
1: Profile position (PP) mode
3 Profile velocity (PV) mode
4 Profile torque (PT) mode
6: Homing (HM) mode
7: Interpolation (IP) mode
Other: N/A
If an unsupported operation mode is selected through an SDO, an SDO error will be reported.
If an unsupported operation mode is selected through a PDO, the change of the operation mode will be invalid.

6061h **Operation mode display**

Comm. address:	6061h	Effective mode:	-
Min. value:	0	Unit:	-
Max. value:	10	Data type:	UInt16
Default value:	0	Change mode:	Read-only

Value range:
1: Profile position (PP) mode
3: Profile velocity (PV) mode
4: Profile torque (PT) mode
6: Homing (HM) mode
7: Interpolation (IP) mode
Parameter description

Indicates the actual operation mode of the drive.
0: Profile position (PP) mode
1: Profile position (PP) mode
3 Profile velocity (PV) mode
4 Profile torque (PT) mode
6: Homing (HM) mode
7: Interpolation (IP) mode

6062h **Position reference**

Comm. address:	6062h	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the real-time position reference (reference unit).

6063h **Position feedback**

Comm. address:	6063h	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the absolute position feedback (encoder unit) of the motor in real time.

6064h **Position feedback**

Comm. address:	6064h	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the absolute position feedback (in reference unit) in real time.
User position feedback (6064h) × Gear ratio (6091h) = Motor position feedback (6063h)

6065h **Threshold of excessive position deviation**

Comm. address:	6065h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit
Max. value:	4294967295	Data type:	UInt32
Default value:	219895614	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the threshold of excessive position deviation (reference unit).
When the difference value between 6062h and 6064h remains above ±6065h for the time defined by 6066h, B00.0 (Position deviation too large) is reported.

6066h **Time to trigger excessive position deviation**

Comm. address:	6066h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the time to trigger excessive position deviation alarms, which must be used together with 6065h.

6067h **Position reach threshold**

Comm. address:	6067h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit
Max. value:	4294967295	Data type:	UInt32
Default value:	46976	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the position reach threshold.
If the difference between 6062h and 6064h is within ±6067h and such state lasts for the time defined by 6068h, the position is reached. In this case, bit10 of 6041h is set to 1 in profile position mode.
This flag bit is valid only when the S-ON signal is valid in profile position mode.

6068h **Position reach window time**

Comm. address:	6068h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the window time for position reach, which must be used together with 6067h.

606Ch **Actual speed**

Comm. address:	606Ch	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit/s

Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the actual speed feedback value.

606Dh **Velocity window**

Comm. address:	606Dh	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the threshold for speed reach.
If the difference value between the target speed 60FFh and the actual speed 606Ch is within ±606Dh and such state lasts for the time defined by 606Eh, the speed is reached and bit10 of the status word 6041h is set to 1 in profile velocity (PV) mode.
This flag bit takes effect only when the servo drive is enabled in PV mode.


606Eh **Velocity window time**

Comm. address:	606Eh	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:
0 to 65535
Parameter description
Defines the window time for speed arrival, which must be used together with 606Dh.

Defines the time window for speed reach. If the difference value between the target speed 60FFh and the actual speed 606Ch is within ±606Dh and the time reaches 606Eh, the speed is reached and bit 10 of the status word 6041h is set to 1 in the profile velocity (PV) mode.

This flag bit takes effect only when the servo drive is enabled in PV mode.

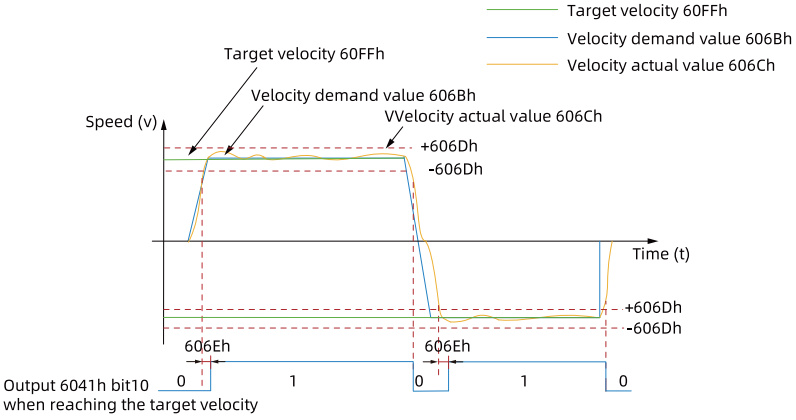

606Fh **Zero speed signal threshold**

Comm. address:	606Fh	Effective mode:	Real time
Min. value:	0	Unit:	rpm
Max. value:	65535	Data type:	UInt16
Default value:	10	Change mode:	Real time

Value range:

0 to 65535

Parameter description

Defines the threshold for determining whether the user velocity is 0.

When 606Ch is within ±606Fh and the time reaches the value set by 6070h, the user velocity is 0.

When either condition is not met, the user velocity is not 0.

This flag bit is valid only in PV mode.

This flag bit is unrelated to the enable/disable state of the servo drive.

6070h **Velocity threshold time**

Comm. address:	6070h	Effective mode:	Real time
Min. value:	0	Unit:	ms
Max. value:	65535	Data type:	UInt16
Default value:	0	Change mode:	Real time

Value range:

0 to 65535

Parameter description


Defines the window time for determining whether the user velocity is 0, which must be used together with 606Fh.

When 606Ch is within ±606Fh and the time reaches the value set by 6070h, the user velocity is 0.

When either condition is not met, the user velocity is not 0.

This flag bit is valid only in PV mode.

This flag bit is unrelated to the enable/disable state of the servo drive.

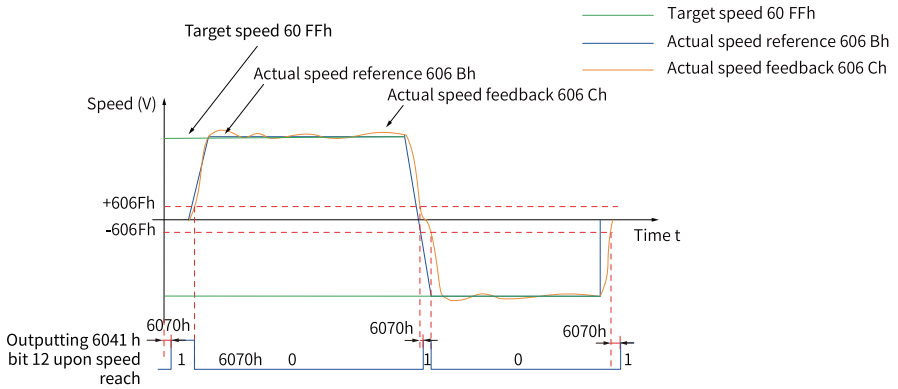

6071h **Target torque**

Comm. address:	6071h	Effective mode:	Real time
Min. value:	-4000	Unit:	0.10%
Max. value:	4000	Data type:	Int16

Default value:	0	Change mode:	Real time

Value range:
-4000 to 4000
Parameter description
Defines the target torque of the drive in profile torque mode.
The value 1000 corresponds to the rated torque of the motor.

6072h **Maximum torque**

Comm. address:	6072h	Effective mode:	Real time
Min. value:	0	Unit:	0.10%
Max. value:	4000	Data type:	UInt16
Default value:	3500	Change mode:	Real time

Value range:
0 to 4000
Parameter description
Defines the maximum torque reference limit.
The value 1000 corresponds to the rated torque of the motor.

6074h **Torque reference**

Comm. address:	6074h	Effective mode:	-
Min. value:	-4000	Unit:	0.10%
Max. value:	4000	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-4000 to 4000
Parameter description
Defines the target torque value.
The value 1000 corresponds to the rated torque of the motor.

6077h **Torque actual value**

Comm. address:	6077h	Effective mode:	-
Min. value:	-4000	Unit:	0.10%
Max. value:	4000	Data type:	Int16
Default value:	0	Change mode:	Read-only

Value range:
-4000 to 4000
Parameter description
Displays the internal torque feedback of the drive.
The value 1000 corresponds to the rated torque of the motor.

607Ah **Target position**

Comm. address:	607Ah	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32

Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the target position of the servo drive in profile position mode.
When bit6 of 6040h is set to 0, 607Ah indicates the absolute target position of current segment.
After positioning of current segment is done, the value of 6064h will be the same as the value of 607Ah.
When bit6 of 6040h is set to 1, 607Ah indicates the target increment displacement of current segment.
After positioning of current segment is done, user displacement increment will be the same as the value of 607Ah.

607Ch **Home offset**

Comm. address:	607Ch	Effective mode:	At stop
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the physical location of mechanical zero that deviates from the home of the motor in position control modes (profile position mode, interpolation mode, and homing mode).
The home offset is activated in the following conditions: The device is powered on, the homing operation is completed, and bit15 of 6041h is set to 1.
After homing is completed, the position actual value (6064h) will be the same as the value of 607Ch.
If 607Ch is outside the value of 607Dh (Software absolute position limit), E09.1 (Home setting error) will be reported.

607D.01h **Min. position limit**

Comm. address:	607D-01h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	-2147483648	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the minimum software absolute position limit relative to the mechanical zero point.
Minimum software absolute position limit = (607D.01h)
The software internal position limit is used to determine the absolute position. When homing is not performed, the software internal position limit is invalid.
The condition for activating the software absolute position limit is set in H0A.01 (object dictionary 0x200A.02h).

607D.02h **Max. position limit**

Comm. address:	607D-02h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	2147483647	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the maximum software absolute position limit relative to the mechanical zero point.
Maximum software absolute position limit = (607D.02h)

607Eh **Reference polarity**

Comm. address:	607Eh	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0xFF
Parameter description
Defines the polarity of position or speed references.
When bit7 is 1, it indicates the position reference is multiplied by "-1" and the motor direction is reversed in the standard position mode or interpolation mode.
When bit6 is 1, it indicates the speed reference (60FFh) is multiplied by "-1" and the motor direction is reversed in the speed mode.
When bit5 is 1, it indicates the torque demand value (6071h) is multiplied by "-1" and the motor direction is reversed in the torque mode.
Other bits are not assigned.

607Fh **Maximum speed**

Comm. address:	607Fh	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the maximum operating speed in user-defined unit.
Set a proper gear ratio (8:1 recommended) when using a 26-bit encoder. Otherwise, the motor speed is limited to 3840 rpm.

6081h **Profile velocity**

Comm. address:	6081h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s
Max. value:	4294967295	Data type:	UInt32

Default value:	111848106	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the constant operating speed of the current displacement reference in profile position mode.
The setpoint takes effect after the slave receives the displacement reference.

6083h **Profile acceleration**

Comm. address:	6083h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s²
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the acceleration rate in the acceleration phase of the displacement reference in profile position mode.
The following formula applies if a motor equipped with a 23-bit encoder needs to run at 400 rpm (6081h: 400 × 8388608 ÷ 60) with an acceleration rate of 400 rpm/s (6083h: 400 × 8388608 ÷ 60) and a deceleration rate of 200 rpm/s (6084h: 200 × 8388608 ÷ 60) under a gear ratio of 1:1: Acceleration time tup = Δ6081h ÷ Δ6083h = 1 (s); Deceleration time tdown = Δ6081h ÷ Δ6084h = 2 (s).

6084h **Profile deceleration**

Comm. address:	6084h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s²
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the deceleration rate in the deceleration phase of the displacement reference in profile position mode.
The following formula applies if a motor equipped with a 23-bit encoder needs to run at 400 rpm (6081h: 400 × 8388608 ÷ 60) with an acceleration rate of 400 rpm/s (6083h: 400 × 8388608 ÷ 60) and a deceleration rate of 200 rpm/s (6084h: 200 × 8388608 ÷ 60) under a gear ratio of 1:1: Acceleration time tup = Δ6081h ÷ Δ6083h = 1 (s); Deceleration time tdown = Δ6081h ÷ Δ6084h = 2 (s).

6085h **Quick stop deceleration**

Comm. address:	6085h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s²
Max. value:	4294967295	Data type:	UInt32
Default value:	2147483647	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the deceleration rate when the quick stop command (6040h = 0x0002) is active and 605Ah (Quick stop option code) is set to 2 or 5.

6087h **Torque ramp**

Comm. address:	6087h	Effective mode:	Real time
Min. value:	0	Unit:	0.1%/s
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the torque ramp-up rate in profile torque mode, in units of torque increment per second.
In the profile torque mode, if 605Ah is set to 1, 2, 5, or 6, or 605Dh is set to 1 or 2, the drive decelerates to stop as defined by 6087h.
If the value exceeds the torque reference limit, the servo drive runs at the limit.

6091.01h **Motor resolution**

Comm. address:	6091-01h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	1	Change mode:	At stop

Value range:
1 to 4294967295
Parameter description
Defines the numerator of the gear ratio.
The gear ratio is used to establish the relationship between the number of motor shaft revolutions and the number of load shaft revolutions.
The relationship between motor position feedback (encoder unit) and load shaft position feedback (reference unit) is as follows:
Motor position feedback = Load shaft position feedback × Gear ratio
The relationship between motor speed (rpm) and the load shaft speed (reference unit/s) is as follows:
Motor speed (rpm) = Load shaft speed × 6091h × 60/Encoder resolution
The relationship between the motor acceleration (rpm/ms) and the load shaft acceleration (reference unit/s2) is as follows.
Motor acceleration (rpm/ms) = Load shaft acceleration × 6091h × 1000/Encoder resolution/60

6091.02h **Load shaft resolution**

Comm. address:	6091-02h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	4294967295	Data type:	UInt32
Default value:	1	Change mode:	At stop

Value range:

1 to 4294967295

Parameter description

Defines the denominator of the gear ratio.

6098h **Homing method**

Comm. address:	6098h	Effective mode:	Real time
Min. value:	-3	Unit:	-
Max. value:	35	Data type:	Int8
Default value:	1	Change mode:	Real time

Value range:

-3 to 35

Parameter description

Defines the homing method.

-3: Nearest homing, motor Z signal as home

-2: Forward homing, positive mechanical limit as deceleration point, and motor Z signal as home

-1: Reverse homing, negative mechanical limit as deceleration point, and motor Z signal as home.

1: Reverse homing, negative limit switch as deceleration point and motor Z signal as home.

The falling edge of the negative limit switch signal must be reached before the Z signal.

2: Forward homing, positive limit switch as deceleration point and motor Z signal as home.

The falling edge of the positive limit switch signal must be reached before the Z signal.

3: Forward homing, home switch as deceleration point and motor Z signal as home.

The falling edge on the same side of the home switch signal must be reached before the Z signal.

4: Reverse homing, home switch as deceleration point and motor Z signal as home.

The rising edge on the same side of the home switch signal must be reached before the Z signal.

5: Reverse homing, home switch as deceleration point and motor Z signal as home.

The falling edge on the same side of the home switch signal must be reached before the Z signal.

6: Forward homing, home switch as deceleration point and motor Z signal as home.

The rising edge on the same side of the home switch signal must be reached before the Z signal.

7: Forward homing, home switch as deceleration point and motor Z signal as home.

The falling edge on the same side of the home switch signal must be reached before the Z signal.

8: Forward homing, home switch as deceleration point and motor Z signal as home.

The rising edge on the same side of the home switch signal must be reached before the Z signal.

9: Forward homing, home switch as deceleration point and motor Z signal as home.

The rising edge on the other side of the home switch signal must be reached before the Z signal.

10: Forward homing, home switch as deceleration point and motor Z signal as home.

The falling edge on the other side of the home switch signal must be reached before the Z signal.

11: Reverse homing, home switch as deceleration point and motor Z signal as home.

The falling edge on the same side of the home switch signal must be reached before the Z signal.

12: Reverse homing, home switch as deceleration point and motor Z signal as home.

The rising edge on the same side of the home switch signal must be reached before the Z signal.

13: Reverse homing, home switch as deceleration point and motor Z signal on the other side of the home switch signal as home.
The rising edge on the other side of the home switch signal must be reached before the Z signal.
14: Reverse homing, home switch as deceleration point and motor Z signal on the other side of the home switch signal as home.
The falling edge on the other side of the home switch signal must be reached before the Z signal.
Setpoints 17 to 30 are similar to setpoints 1 to 14 except that the deceleration point overlaps with the home.

33: Reverse homing, and motor Z signal as the home.

34: Forward homing, and motor Z signal as the home.

35: Current position as the home.

When 6098h is set to 15, 16, 31 or 32, it is invalid, and the drive does not perform the homing operation.

6099.01h Speed during search for deceleration point signal

Comm. address:	6099-01h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s
Max. value:	4294967295	Data type:	UInt32
Default value:	111848106	Change mode:	At stop

Value range:
0 to 4294967295
Parameter description
Defines the speed during search for the deceleration point. A large value can be set to prevent prolonged homing time and homing timeout fault E601.0.

6099.02h Speed during search for home signal

Comm. address:	6099-02h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s
Max. value:	4294967295	Data type:	UInt32
Default value:	11184810	Change mode:	At stop

Value range:
0 to 4294967295
Parameter description
Defines the speed in searching for the home signal. Set this sub-index to a low value to avoid overshoot during stop at high speed, preventing excessive deviation between the stop position and the preset mechanical home.

609Ah Homing acceleration

Comm. address:	609Ah	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s²
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the acceleration in homing mode.

60B8h **Touch probe mode**

Comm. address:	60B8h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0xFFFF
Parameter description
For details, see the section related to the probe in the user guide.

Bit	Name	Description
0	Touch probe 1 enable: 0: Disable 1: Enable	bit 0 to bit 5: settings related to touch probe 1 When a DI is used to trigger the touch probe function, the DI source cannot be changed once the touch probe function is enabled. For absolute encoders, Z signal refers to the zero point of the single-turn motor position feedback.
1	Touch probe 1 trigger mode 0: Single trigger mode (Latches the position at the first trigger event.) 1: Continuous trigger mode	
2	Touch probe 1 trigger signal selection 0: DI signal 1: Z signal	
3	N/A	
4	Touch probe 1 rising edge 0: Latching at rising edge disabled 1: Latching at rising edge enabled	
5	Touch probe 1 falling edge 0: Latching at falling edge disabled 1: Latching at falling edge enabled	
6 to 7	N/A	-

Bit	Name	Description
8	Touch probe 2 enable: 0: Disable 1: Enable	bit 8 to bit 13: settings related to touch probe 2
9	Touch probe 2 trigger mode 0: Single trigger mode (Latches the position at the first trigger event.) 1: Continuous trigger mode	
10	Touch probe 2 trigger signal selection 0: DI signal 1: Z signal	
11	N/A	
12	Touch probe 2 rising edge 0: Latching at rising edge disabled 1: Latching at rising edge enabled	
13	Touch probe 2 falling edge 0: Latching at falling edge disabled 1: Latching at falling edge enabled	
14 to 15	N/A	-

60B9h **Probe status**

Comm. address:	60B9h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFF

Parameter description

Defines the functions of touch probe 1 and touch probe 2.

See the following table for descriptions of each bit of 60B9h.

Bit	Name	Description
0	Touch probe 1 enable: 0: Disable 1: Enable	bit0 to bit2: State of probe 1
1	Touch probe 1 latching on a rising edge 0: No rising edge value latched 1: Rising edge value latched	
2	Touch probe 1 latching on a falling edge 0: No falling edge value latched 1: Falling edge value latched	
3 to 5	N/A	-
6 to 7	Number of touch probe trigger events when touch probe 1 is set for continuous sampling	The total number of times (0 to 3) that the touch probe is triggered when the function of touch probe 1 is set for continuous sampling.

Bit	Name	Description
8	Touch probe 2 enable: 0: Disable 1: Enable	bit8 to bit10: State of probe 2
9	Touch probe 2 latching on a rising edge 0: No rising edge value latched 1: Rising edge value latched	
10	Touch probe 2 latching on a falling edge 0: No falling edge value latched 1: Falling edge value latched	
11 to 13	N/A	-
14 to 15	Number of touch probe trigger events when touch probe 2 is set for continuous sampling	Trigger count (0 to 3) of the probe when the function of probe 2 is set to continuous sampling

60BAh **Position value at probe 1 rising edge**

Comm. address:	60BAh	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the position feedback value (reference unit) latched at the rising edge of probe 1 signal.

60BBh **Position value at probe 1 falling edge**

Comm. address:	60BBh	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the position feedback value (reference unit) latched at the falling edge of probe 1 signal.

60BCh **Position value of probe 2 rising edge**

Comm. address:	60BCh	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647

Parameter description
Indicates the position feedback value (reference unit) latched at the rising edge of probe 2 signal.

60BDh **Position value of probe 2 falling edge**

Comm. address:	60BDh	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:
-2147483648 to +2147483647
Parameter description
Indicates the position feedback value (reference unit) latched at the falling edge of probe 2 signal.

60C1.01h **Interpolation displacement**

Comm. address:	60C1-01h	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Sets the displacement reference in interpolation mode.
In interpolation mode, 60C1.01h must be set to synchronize PDO and the transmission type must be set to 1.
When each sync period reaches, the host controller sends a displacement reference to the slave.

60C2.01h **Interpolation period time constant**

Comm. address:	60C2-01h	Effective mode:	Real time
Min. value:	1	Unit:	-
Max. value:	20	Data type:	UInt16
Default value:	1	Change mode:	Real time

Value range:
1 to 20
Parameter description
Defines the interpolation period time constant.
The synchronization cycle can be set only after the drive stops.

60C2.02h **Interpolation period time unit**

Comm. address:	60C2-02h	Effective mode:	Real time
Min. value:	-3	Unit:	-
Max. value:	-3	Data type:	Int8
Default value:	-3	Change mode:	Real time

Value range:
-3
Description
Defines the interpolation period time unit.
The value "-3" indicates that the unit is ms. Therefore, the actual interpolation period (ms) is the value of 60C2.01h.

60C5h **Maximum acceleration**

Comm. address:	60C5h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s²
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the maximum permissible acceleration of the acceleration segment in profile position mode, profile velocity mode, and homing mode.
The setpoint 0 will be forcibly changed to 1.

60C6h **Max. deceleration**

Comm. address:	60C6h	Effective mode:	Real time
Min. value:	0	Unit:	Reference unit/s²
Max. value:	4294967295	Data type:	UInt32
Default value:	4294967295	Change mode:	Real time

Value range:
0 to 4294967295
Parameter description
Defines the maximum permissible deceleration of the deceleration segment in profile position mode, profile velocity mode, and homing mode.
The setpoint 0 will be forcibly changed to 1.

60D5h **Touch probe 1 rising edge counter**

Comm. address:	60D5h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
The counting value is added by "1" each time this object is triggered.

60D6h **Touch probe 1 falling edge counter**

Comm. address:	60D6h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16

Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
The counting value is incremented by "1" each time this object is triggered.

60D7h **Touch probe 2 rising edge counter**

Comm. address:	60D7h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
The counting value is added by "1" each time this object is triggered.

60D8h **Touch probe 2 falling edge counter**

Comm. address:	60D8h	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFF	Data type:	UInt16
Default value:	0x0	Change mode:	Read-only

Value range:
0x0 to 0xFFFF
Parameter description
The counting value is incremented by "1" each time this object is triggered.

60E0h **Positive torque limit**

Comm. address:	60E0h	Effective mode:	Real time
Min. value:	0	Unit:	0.10%
Max. value:	4000	Data type:	UInt16
Default value:	3500	Change mode:	Real time

Value range:
0 to 4000
Parameter description
Defines the maximum positive torque limit.

60E1h **Negative torque limit**

Comm. address:	60E1h	Effective mode:	Real time
Min. value:	0	Unit:	0.10%
Max. value:	4000	Data type:	UInt16
Default value:	3500	Change mode:	Real time

Value range:
0 to 4000

Parameter description

Defines the maximum negative torque of the drive.

60F4h **Position deviation**

Comm. address:	60F4h	Effective mode:	-
Min. value:	-2147483648	Unit:	Reference unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:

-2147483648 to +2147483647

Parameter description

Indicates the position deviation (reference unit).

60FCh **Position reference**

Comm. address:	60FCh	Effective mode:	-
Min. value:	-2147483648	Unit:	Encoder unit
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Read-only

Value range:

-2147483648 to +2147483647

Parameter description

Indicates the position reference (encoder unit).

If no alarm is detected when the S-ON signal is active, the relationship between the position reference in reference unit and that in encoder unit is as follows:

60FCh (in encoder unit) = 6062h (in reference unit) × Electronic gear ratio (6091h)

60FDh **DI state**

Comm. address:	60FDh	Effective mode:	-
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Read-only

Value range:

0x0 to 0xFFFFFFFF

Parameter description

Indicates the current DI logic of the drive.

0: Inactive

1: Active

The signal indicated by each bit is described as follows:

Bit signal
0: Reverse overtravel signal active
1: Forward overtravel signal active
2: Home signal active
3 to 15: N/A
16: DI1 input active
17: DI2 input active
18: DI3 input active
19: DI4 input active
20: DI5 input active
21: DI6 input active
22: DI7 input active
23: DI8 input active
24 to 26: N/A
27: STO1 signal input
28: STO2 signal input
29: EDM output active
30: Z signal active
31: N/A

60FFh **PV target velocity**

Comm. address:	60FFh	Effective mode:	Real time
Min. value:	-2147483648	Unit:	Reference unit/s
Max. value:	2147483647	Data type:	Int32
Default value:	0	Change mode:	Real time

Value range:
-2147483648 to +2147483647
Parameter description
Defines the target speed in the profile velocity mode.

60FE.01h **Physical output**

Comm. address:	60FE-01h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
Indicates the DO logic.
The signal indicated by each bit is described as follows:

Description of bits
0 to 15: N/A
16: Forced DO1 output (0: OFF; 1: ON), generating output only when DO function 31 is assigned and bit16 of 60FE.02h is set to 1
17: Forced DO2 output (0: OFF; 1: ON), generating output only when DO function 31 is assigned and bit17 of 60FE.02h is set to 1
18: Forced DO3 output (0: OFF; 1: ON), generating output only when DO function 31 is assigned and bit18 of 60FE.02h is set to 1
19: Forced DO4 output (0: OFF; 1: ON), generating output only when DO function 31 is assigned and bit19 of 60FE.02h is set to 1
20: Forced DO5 output (0: OFF; 1: ON), generating output only when DO function 31 is assigned and bit20 of 60FE.02h is set to 1
21 to 25: N/A
26: P/PI switched during gain switchover, active only when bit26 of 60FE.02 is set to 1
27 to 31: N/A

60FE.02h **Physical output selection**

Comm. address:	60FE-02h	Effective mode:	Real time
Min. value:	0x0	Unit:	-
Max. value:	0xFFFFFFFF	Data type:	UInt32
Default value:	0x0	Change mode:	Real time

Value range:
0x0 to 0xFFFFFFFF
Parameter description
0 to 15: N/A
16: Forced DO1 output enable
17: Forced DO2 output enable
18: Forced DO3 output enable
19: Forced DO4 output enable
20: Forced DO5 output enable
19 to 25: N/A
26: P/PI switchover enable
27 to 31: N/A

9 Troubleshooting

9.1 Fault Levels and Display

Faults and alarms of the servo drive are divided into three levels based on severity: No. 1 > No. 2 > No. 3, as shown below.

- No.1: non-resettable faults
- No.1: resettable faults
- No.2: resettable fault
- No.3: resettable warnings


Note

"Resettable" means the keypad stops displaying the fault/alarm once a "Reset signal" is input.

Fault and alarm log

The servo drive can record the latest 20 faults and alarms and values of status parameters upon faults and alarms. If a fault is repeated in the latest 5 records, the fault can be logged more than once after being cleared. If an alarm is repeated in the latest 5 records, the alarm is logged only once.

A fault or an alarm will still be saved in the fault log after reset. To remove the fault or alarm from the fault log, set H02.31 (Parameter initialization) to 2, as shown in the following figure.

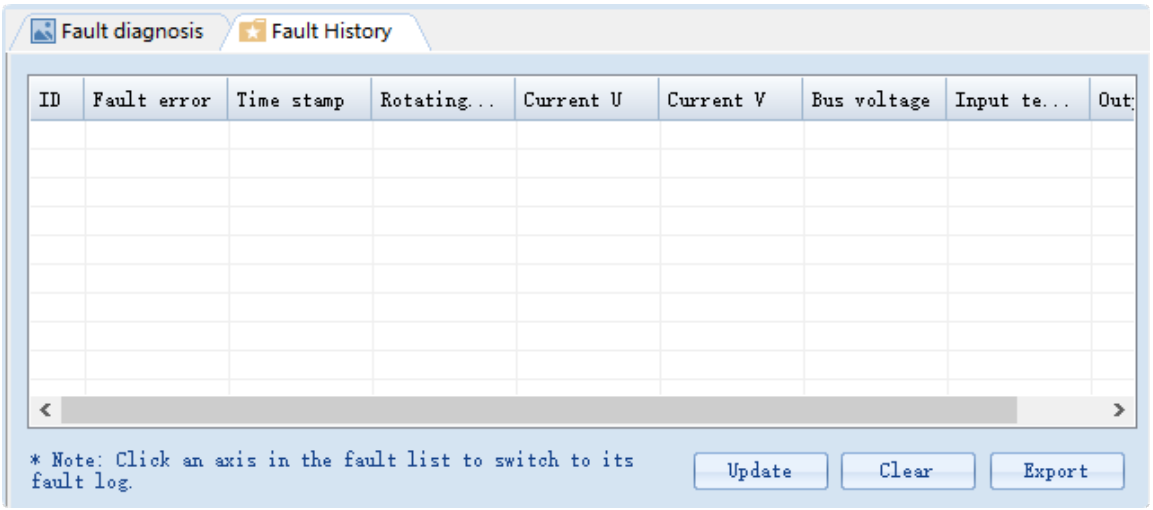

Read the value of H0b.34 in the InoDriverShop software tool to obtain the fault or alarm code, as described in the following table.

H0b.34 (Hexadecimal)	Description of H0b.34 (hexadecimal)
0101	0: Fault subcode 101: Fault code

9.2 Fault Reset

9.2.1 Reset After Troubleshooting

- To stop the keypad from displaying the fault/alarm, set H0d.01 (Fault reset) to 1 or activate the DI terminal assigned with DI function 2 (FunIN.2: ALM- RST, fault and alarm reset).
- To reset No.1 and No.2 faults, switch off the S-ON signal, and then set H0d.01 to 1 or activate the DI terminal that is assigned DI function 2.
- To reset No.3 alarms, set H0d.01 to 1 or activate the DI terminal that is assigned DI function 2.

Note

- Some faults and alarms can be reset only after the fault causes are rectified by modifying the settings. The fault can be reset only after the fault causes are rectified.
- For modifications that can be activated only at next power-on. Power off and on the drive again.
- For modifications that can be activated only after stop, switch off the S-ON signal. The drive can operate normally after the modification is activated.

☆ Related parameters:

Startup process	Fault symptom	Cause	Verification method
FunIN.2	ALM-RST	Fault/Alarm reset signal	The servo drive may, depending on the alarm type, continue operating after reset. When FunIN.2 is assigned to a low-speed DI, the effective level change of this DI must be kept for more than 3 ms. Otherwise, fault reset will be inactive. Do not allocate this function to the high-speed DI. Otherwise, this function becomes invalid. • Inactive: Not resetting the fault/alarm • Active: Resetting the fault/alarm

9.3 Troubleshooting

9.3.1 List of Fault Codes

No.1 non-resettable faults:

Table 9–1 List of No.1 non-resettable faults

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E101.0	Abnormal parameters in groups H02 and above	1	No	0x6320	0x01010101
E101.1	Abnormal parameters in group H00/H01	1	No	0x6320	0x11010101
E101.2	Address error in read/write operation after the number of parameters changes	1	No	0x6320	0x21010101
E101.9	Parameter attribute initialization check error	1	No	0x0101	0x91010101
E102.0	FPGA communication establishment error	1	No	0x7500	0x01020102

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E102.1	FPGA initialization start error	1	No	0x7500	0x11020102
E102.8	Software versions of MCU and FPGA mismatch	1	No	0x7500	0x81020102
E104.1	MCU operation timeout (MCU crashed)	1	No	0x7500	0x11040104
E104.2	FPGA operation timeout (FPGA crashed)	1	No	0x7500	0x21040104
E104.4	MCU reference update timeout	1	No	0x7500	0x41040104
E120.0	Unknown encoder type	1	No	0x7122	0x01200120
E120.1	Unknown motor model	1	No	0x7122	0x11200120
E120.2	Unknown drive model	1	No	0x7122	0x21200120
E120.5	Motor and drive current mismatch	1	No	0x7122	0x51200120
E120.6	FPGA and motor model mismatch	1	No	0x7122	0x61200120
E120.7	Model check error	1	No	0x0120	0x71200120
E120.8	Junction temperature parameter check error	1	No	0x0120	0x81200120
E136.0	Encoder ROM motor parameter verification error	1	No	0x7305	0x01360136
E136.1	Encoder ROM motor parameter read error	1	No	0x7305	0x11360136
E136.9	Range parameter initialization error	1	No	0x7305	0x11360136
E138.0	Accuracy compensation data error	1	No	0x0138	0x01380138
E138.1	Cogging fluctuation compensation data check failure	1	No	0x0138	0x11380138
E140.1	MCU key calculation failed	1	No	0x0140	0x02400140
E140.4	The signature verification fails.	1	No	0x0140	0x03400140
E201.0	Phase-P overcurrent	1	No	0x2312	0x02010201
E201.1	Phase-U overcurrent	1	No	0x2312	0x12010201
E201.2	Phase-V overcurrent	1	No	0x2312	0x22010201
E201.4	Phase-N overcurrent	1	No	0x2312	0x42010201
E210.0	Output ground fault	1	No	0x2330	0x02100210
E210.2	Output ground fault detection hardware error	1	No	0x2330	0x22100210
E234.0	Runaway (protection scheme 1)	1	No	0x0234	0x02340234
E234.1	Runaway (protection scheme 2)	1	No	0x0234	0x12340234
E308.0	Pulse encoder phase A disconnected	1	No	0x0308	0x03080308
E308.1	Pulse encoder phase B disconnected	1	No	0x0308	0x13080308
E308.2	Pulse encoder phase Z disconnected (no alarm reported for encoders without phase Z)	1	No	0x0308	0x23080308
E619.0	Absolute accuracy compensation parameter setting error	1	No	0x0619	0x06190619
E619.1	Absolute accuracy compensation overflow	1	No	0x0619	0x16190619
E720.0	Encoder interface incorrect	1	No	0x0720	0x07200720
E740.0	Absolute encoder communication timeout	1	No	0x0740	0x07400740
E740.2	Absolute encoder error	1	No	0x7305	0x27400740

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E740.3	Absolute encoder single-turn calculation error	1	No	0x7305	0x37400740
E740.6	Encoder write error	1	No	0x7305	0x67400740
E740.9	Encoder data transmission delay too long	1	No	0x7305	0x97400740
E755.0	Nikon encoder communication fault	1	No	0x0FFF	0x07552755
E765.0	Third-party encoder over-temperature or overspeed	1	No	0x0765	0x07650765
EA33.0	Encoder read/write verification error	1	No	0x7305	0x0A330A33
EA34.0	The Hall state is abnormal.	1	No	0x0A34	0x0A340A34
EA34.1	Dynamic Hall auto-tuning error	1	No	0x0A34	0x1A340A34
EA34.2	Static Hall auto-tuning error	1	No	0x0A34	0x2A340A34

No.1 resettable faults

Table 9–2 List of No.1 resettable faults

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E150.0	STO safety state applied	1	Yes	0x0150	0x01500150
E150.1	STO input state abnormal	1	Yes	0x0150	0x11500150
E150.2	Buffer 5 V supply error	1	Yes	0x0150	0x21500150
E150.3	STO input circuit hardware diagnosis failure	1	Yes	0x0150	0x31500150
E150.4	PWM Buffer hardware diagnosis failure	1	Yes	0x0150	0x41500150
E150.5	STO input signal interference	1	Yes	0x0150	0x51500150
E202.0	Bus discharge overcurrent	1	Yes	0x2312	0x02022202
E202.1	Bus phase P overcurrent	1	Yes	0x2312	0x12022202
E202.2	Bus phase N overcurrent	1	Yes	0x2312	0x22022202
E202.3	Bus current sampling hardware error	1	Yes	0x2312	0x32022202
E203.0	Current feedback closed-loop error of the power cable	1	Yes	0x2312	0x02032203
E203.1	Phase U overcurrent of the power cable	1	Yes	0x2312	0x12032203
E203.2	Phase V overcurrent of the power cable	1	Yes	0x2312	0x22032203
E203.3	Phase W overcurrent of the power cable	1	Yes	0x2312	0x32032203
E203.4	Current detection hardware error of the power cable	1	Yes	0x2312	0x42032203
E208.2	Encoder communication timeout	1	Yes	0x0208	0x22080208
E208.4	FPGA current loop operation timeout	1	Yes	0x0208	0x42080208
E240.0	Excessive deviation between the observed electrical angle and feedback electrical angle	1	Yes	0x0240	0x02402240
E240.1	Angle auto-tuning verification error	1	Yes	0x1240	0x12402240

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E240.2	Hall operation verification fault	1	Yes	0x2240	0x22402240
E243.0	Brake release error	1	Yes	0x0243	0x02430243
E243.1	Brake apply error	1	Yes	0x0243	0x12430243
E247.1	Torque saturation fault	1	Yes	0x0247	0x12470247
E248.0	Overspeed reference	1	Yes	0x0248	0x02480248
E320.0	Braking resistor overloaded	1	Yes	0x0320	0x03200320
E320.1	Enclosure temperature of the braking resistor excessively high	1	Yes	0x0320	0x13202320
E321.0	Dynamic brake resistor overloaded	1	Yes	0x0321	0x03210321
E400.0	Main circuit overvoltage	1	Yes	0x3210	0x04000400
E410.0	Main circuit undervoltage	1	Yes	0x3220	0x04100410
E410.1	Main circuit powered off	1	Yes	0x0410	0x14100410
E500.0	Motor overspeed	1	Yes	0x8400	0x05000500
E500.1	Speed feedback overflow	1	Yes	0x8400	0x15000500
E500.2	FPGA position feedback pulse overspeed	1	Yes	0x0500	0x25000500
E602.0	Angle auto-tuning failure	1	Yes	0x0602	0x06022602
E602.1	Angle auto-tuning overtravel	1	Yes	0x0602	0x16022602
E602.2	U/V/W phase sequence reversed	1	Yes	0x0602	0x26020602
E602.3	Excessive encoder feedback fluctuation during angle auto-tuning	1	Yes	0x0602	0x36022602
E602.4	Angle auto-tuning timeout	1	Yes	0x0602	0x46022602
E602.5	Angle auto-tuning failed and Z signal not found	1	Yes	0x0602	0x56022602
E602.6	Angle auto-tuning not convergent	1	Yes	0x0602	0x66022602
E605.0	Overspeed upon S-ON	1	Yes	0x8400	0x06050605
E612.0	Stall detected in phase sequence auto-tuning	1	Yes	0x0612	0x06122612
E612.1	Overtravel in phase sequence auto-tuning	1	Yes	0x0612	0x16122612
E612.3	Excessive encoder change in angle auto-tuning	1	Yes	0x0612	0x36122612
E612.4	Phase sequence auto-tuning failed, leading to auto-tuning timeout	1	Yes	0x0612	0x46122612
E613.0	Resistance/Inductance auto-tuning timeout	1	Yes	0x0613	0x06132613
E620.0	Motor overload	1	Yes	0x3230	0x06200620
E620.1	Motor overload in overload current limit mode	1	Yes	0x3230	0x16200620
E621.0	Overload current limit torque reached	1	Yes	0x0621	0x06210621
E630.0	Motor stall over-temperature protection	1	Yes	0x7121	0x06300630
E640.0	IGBT junction temperature excessively high	1	Yes	0x4210	0x06400640

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E640.1	Flywheel diode junction temperature excessively high	1	Yes	0x0640	0x16400640
E650.0	Heatsink temperature excessively high	1	Yes	0x4210	0x06500650
E660.0	Motor temperature excessively high	1	Yes	0x4210	0x06600660
E744.0	Absolute encoder communication timeout	1	Yes	0x7305	0x07442744
E744.2	Absolute encoder error	1	Yes	0x7305	0x27442744
E770.0	Phase A input disconnected in fully closed-loop mode	1	Yes	0x7305	0x07700770
E770.1	Phase B input disconnected in fully closed-loop mode	1	Yes	0x7305	0x17700770
E770.2	Phase Z input disconnected in fully closed-loop mode	1	Yes	0x7305	0x27700770
E939.0	Motor power cable disconnected	1	Yes	0x0939	0x09390939
EB00.0	Excessive position deviation	1	Yes	0x8611	0x0B000B00

No.2 resettable faults

Table 9–3 List of No.2 resettable faults

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E122.0	Multi-turn absolute encoder setting error	2	Yes	0x6320	0x01220122
E122.1	DI function allocation error	2	Yes	0x6320	0x11220122
E122.2	DO function assignment fault	2	Yes	0x0122	0x21220122
E122.3	Excessively high upper limit in rotation mode	2	Yes	0x6320	0x31220122
E122.4	VDI function assignment error	2	Yes	0x0122	0x41220122
E122.5	DI and VDI assigned the same function	2	Yes	0x0122	0x51220122
E122.7	Fully closed-loop parameter setting error	2	Yes	0x6320	0x71220122
E122.8	Interpolater version mismatch	2	Yes	0x6320	0x81220122
E126.0	Process segment number error	2	Yes	0x0126	0x01260126
E126.1	Internal operation mode error of the process segment	2	Yes	0x0126	0x11260126
E126.2	Position reference type error in process segment position mode	2	Yes	0x0126	0x21260126
E246.0	Encoder PPR (H0b.70) before power-off different from that after power-off	2	Yes	0x0246	0x02460246
E246.1	Single-turn absolute position (H0b.71) of the encoder before power-off different from that after power-off	2	Yes	0x0246	0x12460246
E246.2	Position feedback changes before and after power-off	2	Yes	0x0246	0x22460246
E249.0	Excessive speed deviation	2	Yes	0x0249	0x02490249

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E24A.0	Hard limit reached in the wrong direction	2	Yes	0x6320	0x024A024A
E420.0	Main circuit phase loss	2	Yes	0x3130	0x04200420
E661.0	STune failure	2	Yes	0x0661	0x06610661
E662.0	ETune failure	2	Yes	0x0662	0x06620662
E664.0	Excessive resonance	2	Yes	0x0664	0x06640664
E731.0	Encoder multi-turn position data loss	2	Yes	0x7305	0x07310731
E733.0	Encoder multi-turn counting error	2	Yes	0x7305	0x07330733
E735.0	Encoder multi-turn counting overflow	2	Yes	0x7305	0x07350735
E760.0	Encoder over-temperature	2	Yes	0x4210	0x07600760
E994.0	Station No. conflict	2	Yes	0x0994	0x09940994
EB00.1	Position deviation overflow	2	Yes	0x8611	0x1B000B00
EB01.0	Position reference increment too large	2	Yes	0x6320	0x0B010B01
EB01.1	Individual position reference increment excessively high	2	Yes	0x6320	0x1B010B01
EB01.2	Position reference increment remains excessively high	2	Yes	0x6320	0x2B010B01
EB01.3	Reference overflow	2	Yes	0x6320	0x3B010B01
EB02.0	Excessive position deviation in fully closed-loop mode	2	Yes	0x8611	0x0B020B02
EB02.1	Position deviation overflow in fully closed-loop mode	2	Yes	0x8611	0x1B020B02
EB03.0	Electronic gear ratio overlimit - H05.02	2	Yes	0x0B03	0x0B030B03
EB03.1	Electronic gear ratio overlimit - Electronic gear ratio 1	2	Yes	0x0B03	0x1B030B03
EB03.2	Electronic gear ratio overlimit - Electronic gear ratio 2	2	Yes	0x0B03	0x2B030B03
EB05.0	Excessive standstill deviation	2	Yes	0x0B05	0x1B050B05
ED02.0	Modbus communication timeout	2	Yes	0x0D02	0x0D020D02
ED03.0	CANlink disconnected	2	Yes	0x0D03	0x0D030D03
ED04.0	CANopen communication timeout	2	Yes	0x0D04	0x0D040D04
ED05.0	CANopen communication initialized	2	Yes	0x0D05	0x0D050D05
ED08.0	CANopen bus PDO transmission length error	2	Yes	0x0D08	0x0D080D08
ED11.0	CANopen sync cycle error too large	2	Yes	0x0D11	0x0D110D11
EE09.0	Software position limit setting error	2	Yes	0x6320	0x0E090E09
EE09.1	Home setting error	2	Yes	0x6320	0x1E090E09
EE09.2	Gear ratio overlimit	2	Yes	0x6320	0x2E090E09

9.3.2 List of Alarm Codes

9.3.2.1 List of Alarm Codes

Table 9–4 List of alarm codes

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E108.0	Storage parameter write error	3	Yes	0x5530	0x01080108
E108.1	Storage parameter read error	3	Yes	0x5530	0x11080108
E108.2	Verification error on the data written to EEPROM	3	Yes	0x5530	0x21080108
E108.3	Verification error on data read from EEPROM	3	Yes	0x5530	0x31080108
E108.4	A single piece of data is stored too many times	3	Yes	0x0108	0x41080108
E110.0	Frequency-division pulse output setting error	3	Yes	0x0110	0x01100110
E120.3	Drive and motor power not match	3	Yes	0x7122	0x31200120
E121.0	Invalid S-ON command	3	Yes	0x0121	0x01210121
E126.3	PR process segment parameter outside the upper/lower limit	3	Yes	0x0126	0x31260126
E244.0	Abnormal input torque reference	3	Yes	0x0244	0x02440244
E244.1	An error occurs during internal torque/speed limit calculation	3	Yes	0x0244	0x12440244
E247.0	Torque saturation alarm	3	Yes	0x0247	0x02470247
E510.0	Frequency division pulse output overspeed	3	Yes	0x0510	0x05100510
E600.0	Inertia auto-tuning failure	3	Yes	0x0600	0x06000600
E601.0	Homing alarm	3	Yes	0x0601	0x06010601
E601.1	Homing switch error	3	Yes	0x0601	0x16010601
E601.2	Homing mode setting error	3	Yes	0x6320	0x26010601
E601.3	Position feedback alarm	3	No	0x0601	0x36010601
E602.9	Angle auto-tuning not performed on incremental encoder	3	Yes	0x0602	0x96022602
E609.0	Data storage timeout	3	Yes	0x0609	0x06090609
E609.1	Data storage overflow	3	Yes	0x0609	0x16090609
E609.2	Data storage failure	3	Yes	0x0609	0x26090609
E609.3	Data erasure failure	3	Yes	0x0609	0x36090609
E621.1	Overload current limit torque reached	3	Yes	0x0621	0x16210621
E730.0	Encoder battery alarm	3	Yes	0x7305	0x07300730
E831.1	Excessive AI1 zero offset	3	Yes	0x0831	0x18310831
E831.2	Excessive AI2 zero offset	3	Yes	0x0831	0x28310831
E834.1	AI1 overvoltage alarm	3	Yes	0x0834	0x18340834
E834.2	AI2 overvoltage alarm	3	Yes	0x0834	0x28340834
E900.0	DI emergency braking	3	Yes	0x0900	0x09000900

Fault code	Fault name	Fault level	Resettable	Error code (603Fh)	Aux. code (203Fh)
E902.0	Invalid DI/VDI setting	3	Yes	0x6320	0x09020902
E902.1	Invalid DO/VDO setting	3	Yes	0x0902	0x19020902
E902.2	Invalid torque arrival setting	3	Yes	0x0902	0x29020902
E909.0	Motor overload alarm	3	Yes	0x3230	0x09090909
E910.0	Control circuit overvoltage	3	Yes	0x3210	0x09100910
E920.0	Braking resistor overloaded	3	Yes	0x3210	0x09200920
E921.0	Dynamic braking resistor overload alarm	3	Yes	0x3210	0x09210921
E922.0	Excessively low resistance of the external braking resistor	3	Yes	0x6320	0x09220922
E924.0	Braking transistor over-temperature	3	Yes	0x3230	0x09240924
E940.0	The controlled motor changes. It is recommended to restore default values before use.	3	Yes	0x0940	0x09400940
E941.0	Modified parameters activated at next power-on	3	No	0x6320	0x09410941
E942.0	Parameter stored too frequently	3	Yes	0x7600	0x09420942
E950.0	Forward overtravel	3	Yes	0x5443	0x09500950
E952.0	Reverse overtravel	3	Yes	0x5444	0x09520952
E954.0	Position reference overflow	3	Yes		
E956.0	Forward position reference overtravel in process segment position mode	3	Yes	0x0956	0x09560956
E958.0	Reverse position reference overtravel in process segment position mode	3	Yes	0x0958	0x09580958
E971.0	Undervoltage alarm from voltage drop protection	3	Yes	0x0971	0x09710971
E980.0	Frequency-division output overflow	3	Yes	0x0980	0x09800980
E990.0	Pulse input overspeed alarm	3	Yes	0x0990	0x09900990
E991.1	SIGN pulse connection error	3	Yes	0x0991	0x19910991
EA34.9	Missing Hall configurations during Hall auto-tuning	3	Yes	0x0A34	0x9A340A34
EA41.0	Torque fluctuation compensation failure	3	Yes	0X0A41	0x0A410A41

9.3.3 Description of Fault Codes

9.3.3.1 Troubleshooting Faults

E101.0: Abnormal parameters in groups H02 and above

Cause:

The total number of parameters changes, which generally occurs after software update. Values of parameters in groups H02 and above exceed the limit, which also occurs after software update generally.

Troubleshooting:

Cause	Verification method	Solution
1. The actual parameter value exceeds the upper/lower limit of the parameter.	View the abnormal parameter group number through H0b.90 and H0b.91.	1. Rectify the wrong values value. 2. Restore the default settings.
2. The voltage of the control circuit power supply drops instantaneously.	1. Check whether the control circuit (L1C, L2C) is in the process of power-off or instantaneous power failure occurs. 2. Measure whether the voltage input of the control cable on the non-drive side during operation is within the following specifications: 200 V servo drive: Effective value: 200 V to 240 V Allowable deviation: 10% to +10% (180 V to 264 V) 400 V servo drive: Effective value: 380V to 480 V Allowable deviation: 10% to +10% (342 V to 528 V)	1. Restore system parameters to default (H02.31 = 1) and write parameters again. 2. Enlarge the power capacity or replace with a power supply of higher capacity, restore system parameters to default values (H02.31 = 1), and then write parameters again.
3. Instantaneous power failure occurs during parameter storage.	Check whether instantaneous power failure occurs during parameter storage.	Power on the system again, restore system parameters to default (H02.31 = 1), and write parameters again.
4. The parameter write count within a certain period exceeds the limit.	1. Check whether instantaneous power failure occurs during parameter storage. 2. Check whether parameters are updated frequently through the host controller.	1. If the drive is faulty, replace the drive. 2. Change the way of writing and write parameters again. 3. Power on the system, restore default setting (H02.31 = 1) and write parameters again.
5. The software is upgraded.	Check whether parameter values in group H02 and above exceed the upper/lower limit due to software update.	Reset the servo drive model and servo motor model, and restore system parameters to default (H02.31 = 1).
6. The servo drive is faulty.	Restart the power supply and restore parameters to default settings. If the fault persists, the drive is faulty.	Replace the servo drive.

E101.1: Parameter error in group H00/H01

Cause:

The total number of parameters changes, which generally occurs after software update. Values of parameters in groups H00 or H01 exceed the limit, which generally occurs after software update.

Troubleshooting:

Cause	Verification method	Solution
The drive detects whether parameter values in groups H00 and H01 exceed the upper/lower limit range during initialization upon power-on. If yes, the keypad displays E101.1. Motor parameters in group H00 are read from the encoder. Drive parameters in group H01 are mapped based on the drive model defined by H01.10.	View the abnormal parameter group number through H0b.90 and H0b.91. Check which parameter in groups H00 and H01 exceeds the limit range. Check whether this parameter range is abnormal.	Replace the motor or servo drive.

E101.2: Address error in read/write operation after the number of parameters changes

Cause:

Address error in read/write operation after the number of parameters changes.

Troubleshooting:

Cause	Verification method	Solution
The total number of parameters changes after software update, leading to an address error in read/ write operation.	View the abnormal parameter group number through H0b.90 and H0b.91.	1. Rectify the wrong values value. 2. Restore the default settings.

E101.9: Parameter attribute initialization check error

Cause:

An error occurs during parameter property initialization verification.

Troubleshooting:

Cause	Verification method	Solution
Parameter attribute initialization check error	Check whether a parameter has been written to H0A.99.	Restore parameters to default first, then restart the drive. If the fault persists after repeated restart, replace the drive.

E102.0: FPGA communication establishment error

Cause:

The communication between MCU and FPGA cannot be established.

Troubleshooting:

Cause	Verification method	Solution
The communication between MCU and FPGA cannot be established.	Check whether the fault persists after the drive is powered off and on repeatedly.	Replace the servo drive.

E102.1: FPGA initialization startup error

Cause:

FPGA failed.

Troubleshooting:

Cause	Verification method	Solution
FPGA cannot start.	Check whether the fault persists after the drive is powered off and on repeatedly.	Replace the servo drive.

E102.8: FPGA and MCU versions mismatch

Cause:

FPGA and MCU software versions do not match.

Troubleshooting:

Cause	Verification method	Solution
The software versions of MCU and FPGA are inconsistent.	1. Check whether the MCU version of H01.00 is 9xx.x (the 4th digit on the keypad is 9). 2. Check whether the FGPA version of H01.01 is 9xx.x (the 4th digit on the keypad is 9).	Contact Inovance for technical support. Update the FPGA or MCU software.

E104.1: MCU operation timeout (MCU crashed)

Cause:

The access to MCU times out.

Troubleshooting:

Cause	Verification method	Solution
1. The FPGA is faulty. 2. The communication handshake between FPGA and HOST is abnormal. 3. Access timeout occurs between the HOST and the coprocessor.	Check whether the fault persists after the drive is powered off and on repeatedly.	Replace the servo drive.

E104.2: FPGA operation timeout (FPGA crashed)

Cause:

The MCU torque interrupt scheduling time is abnormal. This fault is reported only in the commissioning stage.

Troubleshooting:

Cause	Verification method	Solution
1. The FPGA is faulty. 2. The communication handshake between the FPGA and the MCU is abnormal.	Check whether the fault persists after the drive is powered off and on repeatedly.	Replace the servo drive.

E104.4: MCU reference update timeout

Cause:

Taking the moment when the interruption starts as the starting time, if the time when commands are written to MCU is larger than the time when position and speed regulators are started by FPGA, an alarm will be reported.

Troubleshooting:

Cause	Verification method	Solution
The system reports that the encoder communication time is set improperly, or the command calculation time is excessively long.	Check whether the fault persists after the drive is powered off and on repeatedly.	1. Hide unnecessary functions. 2. Replace the servo drive.

E120.0: Unknown encoder type

Cause:

The servo drive detects the encoder model during initialization upon power-on. If the encoder model does not comply with the requirement, E120.0 occurs.

Troubleshooting:

Cause	Verification method	Solution
1. The product (motor or servo drive) code does not exist.	Read the nameplates of the servo drive and motor to check whether SV670P series servo drive and 26-bit servo motor are used. Meanwhile, check whether H00.00 (Motor code) is set to 14102. View the servo drive code (H01.02) to check whether this servo drive code exists.	If the motor code is unknown, set H00.00 to 14102 when the SV670P series servo drive and 26-bit servo motor are used. If the drive code does not exist, check whether the servo drive model is correct according to the nameplate. If incorrect, contact Inovance technical support.
2. The power rating of the motor does not match that of the servo drive.	Check whether the servo drive model (H01.02) matches the bus motor model (H00.05).	Replace the product that does not match.

E120.1: Unknown motor model

Cause:

The drive detects the motor model defined by H00.00 during initialization upon power-on. If the motor model does not exist, E120.1 occurs.

Troubleshooting:

Cause	Verification method	Solution
The motor model defined by H00.00 is abnormal.	Check whether the motor code (H00.00) matches the nameplate of the motor used.	Rectify the value of H00.00 and set the motor code correctly.

E120.2: Unknown drive model

Cause:

The servo drive detects the servo drive model defined by H01.10 during initialization upon power-on. If the servo drive model does not exist, E120.2 occurs.

Troubleshooting:

Cause	Verification method	Solution
H01.10 is set improperly.	Check the value of H01.10.	Replace the servo drive.

E120.5: Motor and drive current mismatch

Cause:

The rated output of the servo drive is greatly higher than the rated current of the motor. You must use a servo drive of lower rated output or a motor with higher rated current.

Troubleshooting:

Cause	Verification method	Solution
The internal scale value is abnormal.	Check whether the servo drive model is correct. If the current sampling coefficient is excessively high, calculation overflow can occur.	Replace the servo drive.

E120.6: FPGA and motor model mismatch

Cause:

1. The motor model is set improperly, causing mismatch and malfunction of the servo drive.
2. The motor model is set properly, but the motor encoder is not supported by the servo drive.

Troubleshooting:

Cause	Verification method	Solution
The FPGA software version does not match the motor model specified by H00.00.	Check whether the FPGA software version (H01.01) supports the motor model set by H00.00.	Update the FPGA software to support the motor model set by H00.00 or replace the motor.

E120.7: Model parameter verification error

Cause:

The drive model parameter cannot be identified.

Troubleshooting:

Cause	Verification method	Solution
Model parameter CRC failed.	Check whether the model parameters are lost or not programmed.	Program the model parameters again.

E120.8: Junction temperature parameter verification error

Cause:

The junction temperature parameter is identified incorrectly.

Troubleshooting:

Cause	Verification method	Solution
Junction temperature parameter CRC failed.	Check whether the junction temperature parameters are lost or not programmed.	Program the junction temperature parameter again.

E122.0: Multi-turn absolute encoder setting error

Cause:

The motor does not match the absolute position mode or the motor code is set improperly.

Troubleshooting:

Cause	Verification method	Solution
The motor does not match the absolute position mode or the motor code is set incorrectly.	1. View the motor nameplate to confirm if the motor is a multi-turn absolute encoder motor. 2. Check whether the motor model (H00.00) is correct.	Reset H00.00 (motor code) according to the motor nameplate or use a suitable motor.

E122.1: Different DIs assigned with the same function

Cause:

1. The same function is assigned to different DIs.
2. The DI function No. exceeds the maximum number allowed for DI functions.

Troubleshooting:

Cause	Verification method	Solution
1. The same function is assigned to different DIs.	Check whether parameters in groups H03 (H03.02, and H03.04 to H03.20) and H17 (H17.00, and H17.02 to H17.30) are assigned with the same non-zero DI function number.	Assign different DI function numbers to parameters in groups H03 or H17, and then restart the control circuit to activate the assignment, or switch off the S-ON signal and send a RESET signal to activate the assignment.
2. The DI function No. exceeds the maximum number allowed for DI functions.	Check whether the MCU program is updated.	Restore system parameters to default values (H02.31 = 1) and restart the servo drive.

E122.2: Different DOs assigned with the same function

Cause:

The DO function No. exceeds the maximum number allowed for DO functions.

Troubleshooting:

Cause	Verification method	Solution
The DO function No. exceeds the maximum number allowed for DO functions.	Check whether DO function numbers defined by H04.00 and H04.02 are abnormal.	Set the correct DO function No.

E122.3: Invalid upper limit in rotation mode

Cause:

The upper limit of mechanical single-turn position exceeds 2^{31} in the absolute rotation mode.

Troubleshooting:

Cause	Verification method	Solution
The upper limit (reference range) of the mechanical single-turn position exceeds 2^{31}.	Check the setting of the mechanical gear ratio, the upper limit of the mechanical single-turn position, and the electronic gear ratio when the servo drive runs in absolute rotation mode (H02.01 = 2).	Reset the mechanical gear ratio, the upper limit of mechanical single-turn position and the electronic gear ratio to ensure the upper limit of mechanical single-turn position (reference range) does not exceed 2^{31}.

E122.4: Different VDIs assigned with the same function

Cause:

The same function is assigned to different VDIs. The VDI function No. exceeds the maximum number allowed for VDI functions.

Troubleshooting:

Cause	Verification method	Solution
1. The same function is assigned to different VDIs.	Check whether parameters in groups H03 (H03.02, and H03.04 to H03.20) and H17 (H17.00, and H17.02 to H17.30) are assigned with the same non-zero DI function number.	Assign different DI function numbers to parameters in groups H03 or H17, and then restart the control circuit to activate the assignment, or switch off the S-ON signal and send a RESET signal to activate the assignment.
2. The VDI function No. exceeds the maximum number allowed for VDI functions.	Check whether the MCU program is updated.	Restore system parameters to default values (H02.31 = 1) and restart the servo drive.

E122.5: DI and VDI assigned with the same function

Cause:

The same function is assigned to different VDIs. The VDI function No. exceeds the maximum number allowed for VDI functions.

Troubleshooting:

Cause	Verification method	Solution
Two or more DIs and VDIs are assigned with the same function No.	Check whether DI function numbers set in groups H03 and H17 are repetitive.	Make sure that each DI or VDI is assigned a unique function No.

E122.7: Fully closed-loop parameter setting error

Cause:

In fully closed-loop applications, the rotation mode is set in the inner loop.

Troubleshooting:

Cause	Verification method	Solution
When H0F.00 is not 0, set H02.01 to 2 (absolute position rotation mode).	Check the value of H02.01 if fully closed-loop is used.	Set the value of H02.01 to 2 if fully closed-loop is used.

E122.8: Interpolater version mismatch

Cause:

Interpolater version mismatch

Troubleshooting:

Cause	Verification method	Solution
T2 Interpolator mismatch with motor	Check whether the setting of H00.50 is consistent with that of H00.51 and neither of them are set to 65535.	1. Check whether the interpolator is used mixedly. If yes, rectify it. 2. The warning is caused by interpolator replacement. Check corresponding default parameters and write them to the interpolator.

E126.0: Process segment number error

Cause:

Process segment number error

Troubleshooting:

Cause	Verification method	Solution
The process segment number is not 1000 or any other value from 0 to 15 in the process segment mode.	Check whether the value of H22.00 exceeds the specified range of process segment number (0–15 or 1000).	Write 0 to 15 to H22.00 in process segment mode.

E126.1: Process segment internal operation mode error

Cause:

Internal operation mode error of the process segment

Troubleshooting:

Cause	Verification method	Solution
The process segment operation mode is not 0, 1, 2, 3, 7, or 8.	Check whether the values of bit0 to bit3 of the parameter defined by the process segment in fault state are 0, 1, 2, 3, 7, and 8.	Set the process segment operation mode to 0, 1, 2, 3, 7, and 8.

E126.2: Position reference type error in process segment position mode

Cause:

Position reference type error in process segment position mode

Troubleshooting:

Cause	Verification method	Solution
The position reference type in the process segment position mode is not 00 (Absolute reference) or 10 (incremental mode).	Check whether the value of bit6 or bit7 of the parameter defined by the process segment at fault is 00 or 10.	Set the position reference type in the process segment position mode to 00 (Absolute reference) or 10 (Incremental reference).

E136.0: Encoder ROM motor parameter check error

Cause:

When reading parameters from the encoder ROM, the servo drive detects that no parameters are saved or parameter values are inconsistent with the setpoints.

Troubleshooting:

Cause	Verification method	Solution
1. The servo drive model does not match the motor model.	Check whether the SV670P series servo drive and servo motor are used.	Replace the servo drive and motor.
2. A parameter check error occurs, or no parameter is saved in the serial incremental encoder ROM.	1. Check whether the encoder cable provided by Inovance is used. Cables are connected securely without scratching, breaking or poor contact on both ends. 2. Measure signals PS+, PS-, +5 V and GND on both ends of the encoder cable and observe whether signals at both ends are consistent. For signal assignment, see Chapter "Wiring" in the hardware guide.	1. Use the encoder cable provided by Inovance. Ensure motor terminals are connected securely and servo drive screws are tightened properly. Use a new encoder cable if necessary. 2. Route encoder cables and power cables (R/S/T, U/V/W) through different routes.
3. The drive is faulty.	The fault persists after the servo drive is restarted.	Replace the servo drive.

E136.1: Encoder ROM motor parameter read error

Cause:

The encoder cable is not connected properly.

A communication error occurs on the encoder due to interference.

Troubleshooting:

Cause	Verification method	Solution
1. The encoder cable connections are incorrect or loosened.	Check the encoder cable connection. Check whether ambient vibration is excessive, which loosens the encoder cable and even damages the encoder.	1. Connect the cables again according to the correct wiring diagram. 2. Connect the cables again and ensure encoder terminals are connected securely.
2. The servo drive is faulty.	The fault persists after the servo drive is restarted.	Replace the servo drive.
3. The encoder communication is being disturbed.	Check whether the fault 136.1 occurs.	Install the magnetic ring and ensure that the power cable and communication cable are routed through different routes.

E136.9: Dimension parameter initialization error

Cause:

Range parameter initialization error

Troubleshooting:

Cause	Verification method	Solution
An encoder read/write error causes 32-bit scaling compatibility initialization error.	Check whether compatibility is enabled in H32.50.	1. Disable the compatibility function. If encoder communication faults still occur, rectify the fault based on common solutions. 2. Disable the compatibility function, if everything is normal after power-on but an alarm is reported upon start, contact Inovance for technical support.

E138.0: Accuracy compensation data error

Cause:

Accuracy compensation data error

Troubleshooting:

Cause	Verification method	Solution
1. The accuracy compensation data is lost, leading to check failure. 2. The hardware of FLASH is faulty.	Read the drive compensation data through the software tool to observe whether the data is normal.	1. Perform compensation through the software tool again, and restart the drive. 2. If the fault persists, contact Inovance.

E138.1: Cogging fluctuation compensation data check failure

Cause:

Cogging fluctuation compensation data check failure

Troubleshooting:

Cause	Verification method	Solution
1. The cogging fluctuation compensation data is lost, leading to check failure. 2. The hardware of FLASH is faulty.	Read the data through software tool.	1. Perform compensation again, and restart the drive. 2. If the fault persists, contact Inovance.

E140.1: MCU key calculation failed

Cause:

The encryption chip version is incorrect.

Troubleshooting:

Cause	Verification method	Solution
The communication between the MCU and encryption integrated circuit is abnormal.	Check whether the fault persists after restart.	Contact the manufacturer to re-program the encryption software.

E140.4: Signature verification failure

Cause:

The encryption integrated circuit signature verification failed.

Troubleshooting:

Cause	Verification method	Solution
The encryption software is not programmed.	Check whether the fault persists after restart.	Contact the manufacturer to re-program the encryption software.

E150.0: STO safety state applied

Cause:

The STO input protection applies (safety state).

Troubleshooting:

Cause	Verification method	Solution
One or two 24 V inputs are disconnected, triggering the STO function.	1. Check whether the STO function is activated. 2. Check whether the STO power supply is normal. 3. Check whether the fault persists after the preceding causes are rectified.	There is no need to take any corrective actions. After the STO terminal is back to normal, clear the fault using the fault reset function. Check whether the 24 V power supply for the STO is stable. Tighten the cables that are loose or disconnected. Replace the drive.

E150.1: STO input state error

Cause:

The single-channel input of STO is inactive.

Troubleshooting:

Cause	Verification method	Solution
1. The STO input power supply is abnormal.	Check whether the STO power supply is normal.	Check whether the 24 V power supply for the STO is stable. Tighten the cables that are loose or disconnected.
2. The STO input resistor is abnormal.	After STO is triggered, only one STO signal is sent to MCU after the 24 V power supply is cut off due to input resistor drift.	Replace the servo drive.
3. STO is inactive.	The fault persists after preceding causes are rectified.	Replace the servo drive.

E150.2: Buffer 5 V voltage detection error

Cause:

The MCU monitors the 5 V power supply of the PWM Buffer to detect whether overvoltage or undervoltage occurs. If the voltage is abnormal, this fault code will be displayed.

Troubleshooting:

Cause	Verification method	Solution
The 5 V voltage supplied to the STOBuffer is abnormal due to undervoltage or overvoltage.	Check whether the fault can be removed by a restart. If not, the 5V voltage supplied to the Buffer is abnormal.	Replace the servo drive.

E150.3: STO input circuit hardware diagnosis failure

Cause:

Short circuit occurs on the optocoupler of the upstream hardware circuit of STO.

Troubleshooting:

Cause	Verification method	Solution
Shoot-through occurs on the upstream optocoupler of STO1 or STO2.	Check whether the fault persists and the keypad displays E150.3 after the drive is powered on again.	Replace the servo drive.

E150.4: PWM buffer hardware diagnosis failure

Cause:

An error occurs on the PWM Buffer integrated circuit during initialization upon power-on (the PWM signal cannot be blocked).

Troubleshooting:

Cause	Verification method	Solution
An error occurs on the STO buffer during detection upon power-on.	The fault persists and the keypad displays E150.4 after restart.	Replace the servo drive.

E150.5: STO input signal interference

Cause:

The STO signal is being disturbed, and the noise filtering condition defined by H0A.73 is not met.

Troubleshooting:

Cause	Verification method	Solution
1. The STO terminal is in poor contact or the external 24 V input voltage is unstable, which may lead to malfunction of STO.	Check whether the 24 V input voltage of the STO terminal is unstable, leading to frequent restart.	Replace the 24 V power supply to ensure the STO terminal input voltage is stable.

E201.0: Phase P overcurrent

Cause:

An excessively high current flows through the positive pole of the DC-AC circuit.

Troubleshooting:

Cause	Verification method	Solution
1. Gains are set improperly, leading to motor oscillation.	Check whether the motor vibrates or generates a sharp noise during startup and operation, or view the current feedback through Inovance commissioning software.	1. Motor parameters are set improperly, change motor parameters. 2. Current loop parameters are set improperly, re-adjust the current loop parameters. 3. Speed loop parameters are set improperly, leading to motor oscillation. 4. The servo drive operates improperly. Replace it.
2. The encoder cable is aged, corroded, or connected improperly or loosely.	Check whether the encoder cable provided by Inovance is used and whether the cable is aging, corroded, or connected loosely. Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates.	Re-solder, tighten, or replace the encoder cable.
3. The drive is faulty.	1. Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates. 2. Disconnect the motor cable and power on the servo drive again, but the fault persists. 3. Check whether resistance of the external braking resistor is too small or the braking resistor is short-circuited (between terminals P⊕ and C).	1. Replace with a regenerative resistor with matching resistance and perform wiring again. 2. Replace the servo drive.
4. Overcurrent occurs on the braking resistor.	Check whether resistance of the external braking resistor is excessively low or the braking resistor is short-circuited (between terminals P⊕ and C).	Replace with a braking resistor of proper resistance. Perform wiring again.

E201.1: Phase U overcurrent

Cause:

A current higher than the detection threshold is collected in the phase-U current.

Troubleshooting:

Cause	Verification method	Solution
1. The motor cables are in poor contact.	Check whether the drive power cables and motor cables on the U, V, and W sides of the drive are loose.	Tighten the cables that are loose or disconnected.
2. The motor cables are grounded.	After confirming the drive power cables and motor cables are connected properly, measure whether the insulation resistance between the drive U/V/W side and the PE cable is at MΩ level.	Replace the motor if the insulation is degraded.
3. The motor cables (U/V/W) are short-circuited.	Disconnect motor cables and check whether short circuit occurs among motor U/V/W cables and whether burrs exist in the wiring.	Connect the motor cables correctly.
4. The motor is damaged.	Disconnect the motor cables and measure whether the resistance among U/V/W phases of motor cables is balanced.	Replace the motor if the resistance is unbalanced.

E201.2: Phase-V overcurrent

Cause:

A current higher than the threshold is collected in the phase-V current.

Troubleshooting:

Cause	Verification method	Solution
1. The motor cables are in poor contact.	Check whether the drive power cables and motor cables on the U, V, and W sides of the drive are loose.	Tighten the cables that are loose or disconnected.
2. The motor cables are grounded.	After confirming the drive power cables and motor cables are connected properly, measure whether the insulation resistance between the drive U/V/W side and the PE cable is at MΩ level.	Replace the motor if the insulation is degraded.
3. The motor cables (U/V/W) are short-circuited.	Disconnect motor cables and check whether short circuit occurs among motor U/V/W cables and whether burrs exist in the wiring.	Connect the motor cables correctly.
4. The motor is damaged.	Disconnect the motor cables and measure whether the resistance among U/V/W phases of motor cables is balanced.	Replace the motor if the resistance is unbalanced.

E201.4: Phase N overcurrent

Cause:

An excessively high current flows through the negative pole of the DC-AC circuit.

Troubleshooting:

Cause	Verification method	Solution
1. Gains are set improperly, leading to motor oscillation.	Check whether the motor vibrates or generates a sharp noise during startup and operation, or view the current feedback through Inovance commissioning software.	Perform gain tuning.
2. The encoder cable is aged, corroded, or connected improperly or loosely.	Check whether the encoder cable provided by Inovance is used and whether the cable is aged, corroded, or connected loosely.	Re-solder, tighten, or replace the encoder cable.
3. Overcurrent occurs on the braking resistor.	Check whether resistance of the external braking resistor is excessively low or the braking resistor is short-circuited (between terminals P⊕ and C).	Replace with a braking resistor of proper resistance. Perform wiring again.
4. Overcurrent is caused by the superposition of the braking current and phase current.	Check whether the drive accelerates abruptly during braking. Check whether the voltage feedback exceeds the braking threshold through the Inovance drive software tool and whether the torque reference increases abruptly.	Increase the acceleration/ deceleration time.
5. The servo drive is faulty.	Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates. Disconnect the motor cables and check whether the fault persists at next power-on.	Replace the servo drive.

E202.0: Bus discharge overcurrent

Cause:

When in the discharge state, excessive current flows through phase P or N of the bus in the DC-AC circuit.

Troubleshooting:

Cause	Verification method	Solution
1. The braking resistor is set improperly.	Check whether resistance of the external braking resistor is excessively low or the braking resistor is short-circuited (between terminals P⊕ and C).	Replace with a braking resistor of proper resistance. Perform wiring again.
2. The gain is set improperly, leading to motor oscillation.	Check whether the motor vibrates or generates a sharp noise during startup and operation, or view the current feedback through Inovance commissioning software.	1. Motor parameters are set improperly, change motor parameters. 2. Current loop parameters are set improperly, re-adjust the current loop parameters. 3. Speed loop parameters are set improperly, leading to motor oscillation. 4. The servo drive operates improperly. Replace it.

Cause	Verification method	Solution
3. Overcurrent is caused by the superposition of the braking current and phase current.	Check whether the drive accelerates abruptly during braking. Check whether the voltage feedback exceeds the braking threshold through the Inovance drive software tool and whether the torque reference increases abruptly.	Increase the acceleration/ deceleration time.
4. The servo drive is faulty.	1. Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates. 2. Disconnect the motor cable and power on the servo drive again, but the fault persists. 3. Check whether resistance of the external braking resistor is too small or the braking resistor is short-circuited (between terminals P⊕ and C).	1. Replace with a regenerative resistor with matching resistance and perform wiring again. 2. Replace the servo drive.

E202.1: Bus phase N overcurrent

Cause:

Overcurrent occurs on phase P of the bus in DC-AC circuit.

Troubleshooting:

Cause	Verification method	Solution
1. Gains are set improperly, leading to motor oscillation.	Check whether the motor vibrates or generates a sharp noise during startup and operation, or view the current feedback through Inovance commissioning software.	Perform gain tuning.
2. The encoder cable is aged, corroded, or connected improperly or loosely.	Check whether the encoder cable provided by Inovance is used and whether the cable is aged, corroded, or connected loosely.	Re-solder, tighten, or replace the encoder cable.
3. The drive is faulty.	Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates. Disconnect the motor cables and check whether the fault persists at next power-on.	Replace the servo drive.

E202.2: Bus phase N overcurrent

Cause:

Overcurrent occurs on phase N of the bus in DC-AC circuit.

Troubleshooting:

Cause	Verification method	Solution
1. Gains are set improperly, leading to motor oscillation.	Check whether the motor vibrates or generates a sharp noise during startup and operation, or view the current feedback through Inovance commissioning software.	Perform gain tuning.
2. The encoder cable is aged, corroded, or connected improperly or loosely.	Check whether the encoder cable provided by Inovance is used and whether the cable is aged, corroded, or connected loosely.	Re-solder, tighten, or replace the encoder cable.
3. The drive is faulty.	Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates. Disconnect the motor cables and check whether the fault persists at next power-on.	Replace the servo drive.

E202.3: Bus current sampling hardware error

Cause:

Excessively high current flows through the phase P or phase N of the bus in the DC-AC circuit in the S-OFF state.

Troubleshooting:

Cause	Verification method	Solution
Check whether the servo drive is faulty.	Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates. Disconnect the motor cables and check whether the fault persists at next power-on.	Replace the servo drive.

E203.0: Current feedback closed-loop error of the power cable

Cause:

The current feedback exceeds 20% of the torque reference for a period longer than 1 ms.

Troubleshooting:

Cause	Verification method	Solution
1. Gains are set improperly, leading to motor oscillation.	Check whether the motor vibrates or generates a sharp noise during startup and operation, or view the current feedback through Inovance commissioning software.	1. Motor parameters are set improperly, change motor parameters. 2. Current loop parameters are set improperly, re-adjust the current loop parameters. 3. Speed loop parameters are set improperly, leading to motor oscillation. 4. The servo drive operates improperly. Replace it.
2. The encoder cable is aged, corroded, or connected improperly or loosely.	Check whether the encoder cable provided by Inovance is used and whether the cable is aging, corroded, or connected loosely. Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.17 (Electrical angle) changes as motor shaft rotates.	Re-solder, tighten, or replace the encoder cable.
3. The drive is faulty.	After enabling the drive, keep the reference to 0 and check whether H0b.24 is within the normal range.	Replace the servo drive.

E203.1: Phase-U overcurrent of the power cable

Cause:

A current higher than the detection threshold is collected in the phase-U current.

Troubleshooting:

Cause	Verification method	Solution
1. The motor cables are in poor contact.	Check whether the drive power cables and motor cables on the U, V, and W sides of the drive are loose.	Tighten the cables that are loose or disconnected.
2. The motor cables are grounded.	After confirming the drive power cables and motor cables are connected properly, measure whether the insulation resistance between the drive U/V/W side and the PE cable is at MΩ level.	Replace the motor if the insulation is degraded.
3. The motor cables (U/V/W) are short-circuited.	Disconnect motor cables and check whether short circuit occurs among motor U/V/W cables and whether burrs exist in the wiring.	Connect the motor cables correctly.
4. The motor is damaged.	Disconnect the motor cables and measure whether the resistance among U/V/W phases of motor cables is balanced.	Replace the motor if the resistance is unbalanced.

E203.2: Phase-V overcurrent of the power cable

Cause:

A current higher than the threshold is collected in the phase-V current.

Troubleshooting:

Cause	Verification method	Solution
1. The motor cables are in poor contact.	Check whether the drive power cables and motor cables on the U, V, and W sides of the drive are loose.	Tighten the cables that are loose or disconnected.
2. The motor cables are grounded.	After confirming the drive power cables and motor cables are connected properly, measure whether the insulation resistance between the drive U/V/W side and the PE cable is at MΩ level.	Replace the motor if the insulation is degraded.
3. The motor cables (U/V/W) are short-circuited.	Disconnect motor cables and check whether short circuit occurs among motor U/V/W cables and whether burrs exist in the wiring.	Connect the motor cables correctly.
4. The motor is damaged.	Disconnect the motor cables and measure whether the resistance among U/V/W phases of motor cables is balanced.	Replace the motor if the resistance is unbalanced.

E203.3: Phase-W overcurrent of the power cable

Cause:

A current higher than the detection threshold is detected in the phase W current.

Troubleshooting:

Cause	Verification method	Solution
1. The motor cables are in poor contact.	Check whether the drive power cables and motor cables on the U, V, and W sides of the drive are loose.	Tighten the cables that are loose or disconnected.
2. The motor cables are grounded.	After confirming the drive power cables and motor cables are connected properly, measure whether the insulation resistance between the drive U/V/W side and the PE cable is at MΩ level.	Replace the motor if the insulation is degraded.
3. The motor cables (U/V/W) are short-circuited.	Disconnect motor cables and check whether short circuit occurs among motor U/V/W cables and whether burrs exist in the wiring.	Connect the motor cables correctly.
4. The motor is damaged.	Disconnect the motor cables and measure whether the resistance among U/V/W phases of motor cables is balanced.	Replace the motor if the resistance is unbalanced.

E203.4: Current error detected by power cable

Cause:

In the S-OFF state, a high current that exceeds the detection threshold is detected in the U/V/W power cables.

Troubleshooting:

Cause	Verification method	Solution
1. The servo drive is faulty.	Disconnect the motor cables and check whether the fault persists at next power-on.	Replace the servo drive.

E208.2: Encoder communication timeout

Cause:

The FPGA detects a communication timeout with the encoder.

Troubleshooting:

Cause	Verification method	Solution
The servo drive fails to receive the data fed back by the encoder in three consecutive cycles.	1. Check whether the motor model is correct. 2. Check whether the encoder cable is wired incorrectly, damaged, connected incorrectly, disturbed, or too long. 3. Check whether the encoder version (H00.04) is correct (not 0 or 65535). (View the version only for Inovance encoders.) 4. Check whether the encoder is faulty (see H0b.28). 5. Check whether bit12 of H0b.30 is 1. If bit12 is 1, an error is reported. If bit12 is 0, no error is reported.	1. Modify the motor model according to the nameplate or replace it with a correct motor. 2. Replace the cable or add anti-interference measures. If the cable is excessively long, you can change the H01.60 (FPGA scheduling frequency). 3. Power on the system again to read the version. 4. Use H0d.20 or power on again to check whether any faults are present. 5. The drive is abnormal, replace the drive.

E208.4: FPGA current loop operation timeout

Cause:

The operating time of the current loop exceeds the interval threshold.

Troubleshooting:

Cause	Verification method	Solution
FPGA operation timeout	Internal fault code H0b.45 = 4208: Current loop operation timeout	Disable some unnecessary functions to reduce the operating load of the current loop. Modify the FPGA scheduling frequency (H01.60). After modification, the motor may respond slowly and generate unusual noise.

E210.0: Output ground fault

Cause:

The drive detects an abnormal motor phase current or bus voltage during self-test upon power-on.

1. The bus voltage exceeds the discharge threshold.
2. The phase U current of drives in size C/D/E exceeds 1/4 of the value of H01.07.
3. Overcurrent occurs on phase P and phase N of drives in sizes A and B.

Troubleshooting:

Cause	Verification method	Solution
1. The drive power cables (U/V/W) are short-circuited to ground.	Disconnect the motor cables, and measure whether the servo drive power cables (U/V/W) are short-circuited to ground (PE).	Connect the cables again or replace the servo drive power cables.
2. The motor is short-circuited to ground.	After confirming the servo drive power cables and motor cables are connected properly, measure whether the insulation resistance between the servo drive U/V/W side and the PE cable is at MΩ level.	Replace the motor.
3. The drive is faulty.	Disconnect the servo drive power cables from the servo drive. Check whether the fault persists after the power supply is switched on multiple times.	Replace the servo drive.
4. The motor speed is excessively high during ground fault detection.	Check whether the motor is rotating upon power-on.	Reduce the motor speed to a value lower than 10 rpm.
5. The bus voltage of the control circuit is higher than the discharge threshold.	Check whether the bus voltage upon fault is greater than the bus voltage discharge threshold.	Set a proper DC bus voltage discharge threshold.

E210.2: Output ground fault

Cause:

The drive detects that the motor phase current is at full scale during self-test upon power-on.

Troubleshooting:

Cause	Verification method	Solution
1. The motor is short-circuited to ground.	After confirming the servo drive power cables and motor cables are connected properly, measure whether the insulation resistance between the servo drive U/V/W side and the PE cable is at MΩ level.	Replace the motor.
2. The servo drive is faulty.	Disconnect the servo drive power cables from the servo drive. Check whether the fault persists after the power supply is switched on multiple times.	Replace the servo drive.

E234.0: Runaway (protection scheme 1)

Cause:

The speed feedback direction is opposite to torque reference direction, and the speed feedback reaches the runaway speed threshold (H0A.57). The torque reference reaches the runaway current threshold (H0A.55) and the minimum value of torque limit in the speed or position control mode, or is non-zero in the torque control mode. The fault duration reaches the value of H0A.59 (Runaway protection detection time).

Troubleshooting:

Cause	Verification method	Solution
1. The U/V/W cables are connected improperly.	Check whether the servo drive power cables are connected in the correct sequence at both ends.	Connect the U/V/W cables according to the correct sequence.
2. The motor rotor initial phase error is detected due to interference signals upon power-on.	The U/V/W phase sequence is correct, but E234.0 is reported when the servo drive is enabled.	Power cycle the motor.
3. The encoder type is set incorrectly, or the wiring is incorrect.	Check whether the set motor code (H00.00) matches the one on the motor nameplate.	Set the correct motor code (H00.00) according to the motor nameplate.
4. The encoder cable is aged or corroded, or connected incorrectly or loosely.	1. Check whether the encoder cable provided by Inovance is used and whether the cable is aging, corroded, or connected loosely. 2. Switch off the S-ON signal and rotate the motor shaft manually. Check whether the value of H0b.10 (Electrical angle) changes as motor shaft rotates.	Re-solder, tighten, or replace the encoder cable.
5. The gravity load is excessive in a vertical axis application.	Check whether the load of the vertical axis is excessive. Adjust brake parameters H02.09 to H02.12 to check whether the fault can be cleared.	Reduce the load on the vertical axis or increase the stiffness level. You can also mask this fault if it does not affect safety performance and normal use.
6. Improper parameter setting leads to excessive vibration.	The stiffness level is set to an excessively high value, leading to excessive vibration.	Set a proper stiffness level to avoid excessive vibration.

E234.1: Runaway (protection scheme 2)

Cause:

The speed feedback direction is opposite to the torque reference direction, and the speed feedback reaches the runaway speed threshold (H13.03) of scheme 2 in speed or position mode or runaway speed threshold (H13.04) of scheme 2 in torque mode. The torque reference reaches the runaway current threshold (H13.02) of scheme 2 and the minimum value of the torque limit in speed or position mode, or is non-zero in torque mode. The runaway distance meets the abnormal distance threshold (H13.01).

Troubleshooting:

Cause	Verification method	Solution
1. The torque limit or equipment model is inadequate, triggering a runway false alarm.	Check whether the torque is limited or the current is saturated during operation, leading to insufficient torque output and false runaway fault.	1. Increase the torque limit properly through H07.09/H07.10 or P models, or 60E0h/60E1h/6072h for N models. 2. Check whether the motor load is excessive due to mechanical factors. 3. Reduce the acceleration/ deceleration speed or operating speed. 4. Re-calculate the device power rating needed. 5. Increase the runaway threshold properly or mask this fault without affecting safety performance and operation.
2: Abnormal collision, triggering a runway false alarm.	Check whether a collision occurs on site. If yes: 1. Check whether 607Ah and 6064h are not aligned in the host controller program and whether the host controller commands jump abnormally. 2. Check whether the electronic gear ratio of the drive is excessively high. 3. Check whether the host controller instructions are planned properly and whether the trajectory overlaps with other mechanisms. 4. For models without dynamic brake, check whether the stop distance at zero speed is excessive. 5. Check whether the motor runs beyond the specifications, resulting in excessively long deceleration distance.	1. Align 607Ah and 6064h to avoid data error. This parameter applies to the CSP mode of the N model and the IP mode of the C model. 2. Set a proper electronic gear ratio. 3. Optimize the instruction planning of the host controller or increase the safety distance between mechanisms. 4. For models without dynamic brake, you can install a dynamic brake box or decrease the safety distance for stop at zero speed. 5. Reduce the acceleration/ deceleration speed and operating speed to avoid operation beyond specifications, or re-calculate the device power rating needed.
3. The gravity load in vertical axis scenarios is excessive, triggering a false runaway alarm.	Check whether the load of the vertical axis is excessive. Adjust brake parameters H02.09 to H02.12 to check whether the fault can be cleared.	Reduce the load in the vertical axis or increase the stiffness level, or increase the runaway threshold. You can also mask this fault without affecting safety or operation.
4. Strong vibration occurs, leading to a false runaway fault.	1. Check whether the stiffness level is excessively high, leading to excessive vibration. 2. Check whether the load is excessive, leading to vibration during stop at overtravel.	1. Set a proper stiffness level to avoid excessive vibration. 2. Modify the stop mode from "Stop at overtravel" to "Ramp to stop".

Cause	Verification method	Solution
5. The electrical angle is abnormal.	1. Check whether the U/V/W phase sequence is incorrect. 2. Check whether the encoder cable and power cable belong to the same motor. 3. Check whether the electrical angle is not auto-tuned. 4. Check whether the Hall is installed improperly. 5. Check whether deviation exists in the electrical angle and absolute position feedback in the same physical position after motor runaway occurs or after the motor operates for a period of time.	1. Connect the U/V/W cables according to the correct phase sequence. 2. Connect the encoder cable and power cable properly. 3. Perform angle auto-tuning again. 4. Install the Hall sensor properly. 5. Perform angle auto-tuning repeatedly and restart to perform auto-tuning again, or replace the encoder.
6. The encoder cable is faulty.	1. Check whether the encoder cable is aged, corroded, connected loosely, or broken. 2. Check whether the encoder cable shield fails, the power cable is being disturbed, or whether the read head is contaminated.	1. Re-solder, tighten, or replace the encoder cable. 2. Route the encoder cable and power cable of high-power devices through different routes, take measures to prevent disturbance to the signal cable, and clean the read head.
7. Power cables are damaged.	Check whether the power cable is aged, corroded, connected loosely, or broken.	Re-solder, tighten, or replace the power cable.
8. The motor or drive is damaged.	Check whether the motor and drive are damaged. Perform cross-verification to check whether the fault follows.	Replace the motor or drive.

E240.0: Excessive deviation between the observed value and feedback values of the electrical angle

Cause:

The deviation between the estimated value and the feedback value of the encoder exceeds the threshold.

Troubleshooting:

Cause	Verification method	Solution
1. Inaccurate initial angle from auto tuning. 2. The encoder feedback value is incorrect. 3. Observer alarms are enabled during angle auto-tuning. During angle auto-tuning, excessive deviation can be detected if the speed threshold condition is met. 4. The observed deviation during acceleration/deceleration is excessive. 5. Excessive motor inductance/ resistance parameter deviation affects the observed value of electrical angle. 6. Unstable loop operation and improper gain parameters affect the observed value of electrical angle.	1. Perform angle auto-tuning again and check whether the alarm persists. 2. Check whether the encoder is contaminated. Observe the position feedback signal waveform to check for pulse loss or abnormal feedback value. Mark a fixed position, record current position feedback, run the motor back and forth for a period of time, then manually rotate the motor to marked position, record position feedback again, and compare whether the two position feedback values are consistent. If not, the encoder is abnormal. 3. Check whether the alarm is reported in the angle auto-tuning state. 4. Set the function switch to "Observe only, without reporting alarm". The oscilloscope monitors the waveform of H13.71. If the value of H13.71 in the constant speed segment is high, the electrical angle may be abnormal. If the value of H13.71 is small in the constant-speed segment but large in the acceleration/deceleration segment, increase the value of H13.19/H13.20 accordingly and perform observation again. 5. Check whether the inductance/ resistance parameters of the motor deviate greatly. 6. Check whether the control loop operates improperly, the speed fluctuates, or the position deviation is abnormal, leading to deviation in the electrical angle observed.	1. Perform angle auto-tuning again to get the correct initial angle. 2. Check whether the encoder grating scale is contaminated and whether the position feedback is abnormal. Replace the motor encoder. 3. Disable the electrical angle observer alarm during angle auto-tuning. 4. If the acceleration/deceleration segment (H13.71) is high, increase H13.19/H13.20 properly and observe again. 5. Perform inductance/resistance auto-tuning again. Adjust the loop gain parameters to ensure normal operation of the motor. 6. Re-adjust the gain parameters to ensure normal operation of the control loop. For details, see the section on parameter tuning in the manual.

E240.1: Angle auto-tuning check error alarm

Cause:

Incremental encoder: After the drive is enabled, the difference between two angle auto-tuning values exceeds the threshold.
Absolute encoder: After the drive is enabled, the difference between the angle auto-tuning value and the original value of H00.28 exceeds the threshold.

Troubleshooting:

Cause	Verification method	Solution
1. The angle auto-tuning value is inaccurate. 2. The original value of H00.28 is incorrect.	1. Check whether the angle auto-tuning value is abnormal. Perform angle auto-tuning again and observe whether the value of H00.28 changes by more than 20 degrees (electrical angle). 2. Check whether the encoder is disturbed by an external interference source during angle auto-tuning.	Perform angle auto-tuning again by using a proper angle auto-tuning method.

E240.2: Hall operation check fault

Cause:

The Hall signal is abnormal in static Hall auto-tuning upon start of the motor.

Troubleshooting:

Cause	Verification method	Solution
1. The Hall is connected loosely or the installed improperly. 2. The six Hall electrical angles saved are incorrect (H32.63 to H32.68).	1. Check whether the Hall element is installed properly. 2. Move the motor and observe whether the Hall signal waveform is abnormal.	1. Install the Hall sensor properly. 2. Perform dynamic Hall auto-tuning again.

E243.0: Brake released improperly

Cause:

Brake release error

Troubleshooting:

Cause	Verification method	Solution
The brake of the brake motor is released improperly, and the load in forward/reverse run is excessive.	Check whether the brake is wired properly. During operation, check whether the current feedback exceeds the threshold defined by H13.39.	1. Connect the brake cable correctly according to the instructions in the user guide. 2. Check that the brake is wired properly. If the current feedback exceeds H13.39 due to excessive load, increase the value of H13.39 properly based on the auto-tuned values of H13.75 and H13.76. 3. Check that the brake is wired properly. If the load is not the cause for current feedback error, replace the motor.

E243.1: Brake applied improperly

Cause:

Brake apply error

Troubleshooting:

Cause	Verification method	Solution
On a motor with brake, the displacement distance after the brake is closed exceeds the set threshold.	Apply the brake when the motor is switched off, stops at overtravel, and stops at a No.2 fault, and calculate whether the travel distance is longer than H13.40. Check whether the brake is wired properly and whether the motor can rotate after the brake applies.	1. Connect the brake cable correctly according to the instructions in the user guide. 2. Verify that the brake is wired properly. If the brake backlash does not match the default range, increase the value of H13.40 properly based on the brake backlash or auto-tuned value of H13.77. 3. Verify that the brake is wired properly. After the parameters are adjusted, if the alarm persists after the S-ON and S-OFF signals are triggered several times, replace the motor.

E246.0: Encoder PPR (H0b.70) changed before and after power-off

Cause:

The deviation between the number of encoder multi-turn revolutions before and after power-off exceeds the set threshold (H0b.70).

Troubleshooting:

Cause	Verification method	Solution
The difference in encoder multi-turn data before and after power-off exceeds the set threshold.	1. Check whether H13.43 is set properly. 2. Check whether the encoder battery is faulty.	1. Adjust the threshold and set the absolute value mode. 2. Check the encoder battery. 3. Identify the fault cause and contact the manufacturer.

E246.1: Single-turn absolute position (H0b.71) of the encoder changed before and after power-off

Cause:

The difference between the encoder single-turn absolute position values (H0b.71) before and after power-off exceeds the set threshold.

Troubleshooting:

Cause	Verification method	Solution
The difference in encoder single-turn position data before and after power-off exceeds the set threshold.	1. Check whether H13.44 is set properly. 2. Check whether the encoder battery is faulty.	1. Adjust the threshold and set the absolute value mode. 2. Check the encoder battery. 3. Identify the fault cause and contact the manufacturer.

E246.2: Position feedback changes before and after power-off

Cause:

The difference between the servo feedback position data before and after power-off exceeds the set threshold.

Troubleshooting:

Cause	Verification method	Solution
The difference between the servo feedback position data before and after power-off exceeds the set threshold.	1. Check whether H13.46 is set properly. 2. Check whether the encoder battery is faulty.	1. Adjust the threshold and set the absolute value mode. 2. Check the encoder battery. 3. Identify the fault cause and contact the manufacturer.

E247.1: Torque saturation fault

Cause:

The motor torque reference remains excessively high for a long time.

Troubleshooting:

Cause	Verification method	Solution
The motor torque reference remains excessively high for a long time.	1. Check whether the acceleration/ deceleration is excessively high. 2. Check whether the torque is limited. 3. Check whether the load is excessive and the motor is running out of specification.	1. Reduce the acceleration/ deceleration rate properly. 2. Adjust the torque limit value. 3. Optimize the operation parameters or adjust the model.

E248.0: Reference speed excessively high

Cause:

The reference speed exceeds the motor speed limit.

Troubleshooting:

Cause	Verification method	Solution
The reference speed exceeds the motor speed limit.	1. Check whether the electronic gear ratio is improper. 2. Check whether the speed reference in the current operation mode exceeds H00.15 × H13.52. 3. Check whether the object dictionary unit (H0E.07) is set improperly.	Adjust the parameter value or increase the threshold as appropriate.

E249.0: Excessive speed deviation

Cause:

The deviation between the speed feedback and speed reference remains above the set threshold for the set period of time.

Troubleshooting:

Cause	Verification method	Solution
The deviation between the speed feedback and speed reference remains above the set threshold for the set period of time.	Check whether the deviation between the speed feedback and speed reference exceeds the set threshold.	1. Increase the values of H13.53 and H13.54. 2. Reduce the value of H13.55.

E24A.0: Hardware limit reached in the wrong direction

Cause:

The negative limit switch signal is triggered during positive operation or the positive limit switch signal is triggered during negative operation.

Troubleshooting:

Cause	Verification method	Solution
The hardware limit signal is wired to the incorrect terminal.	Check whether the hardware limit signal is connected to the correct terminal.	Wire the hardware limit signal to the correct terminal.

E308.0: Pulse encoder phase A disconnected

Cause:

Pulse encoder phase A disconnected

Troubleshooting:

Cause	Verification method	Solution
1. The phase A of the encoder is wired improperly. 2. The motor model is set improperly.	1. Check the wiring of the encoder. 2. Check whether the motor code (H00.00) is set properly or matches the actual encoder type.	1. Re-connect the encoder and perform a restart. 2. Check whether the motor code (H00.00) is set properly or matches the actual encoder type.

E308.1: Pulse encoder phase B disconnected

Cause:

Pulse encoder phase B disconnected

Troubleshooting:

Cause	Verification method	Solution
The encoder phase B is connected improperly.	Check the encoder wiring.	Re-connect the encoder and perform a restart.

E308.2: Phase Z of the pulse encoder disconnected (no alarm reported for the encoder without Z)

Cause:

Pulse encoder phase Z disconnected (no alarm reported for encoders without phase Z)

Troubleshooting:

Cause	Verification method	Solution
1. The encoder phase Z is wired improperly. 2. The encoder type is set improperly. Only phases A and B of the encoder are used.	1. Check whether Z signal is wired properly. 2. Check whether there is Z signal output.	1. Perform wiring again. 2. Re-install the motor and select phase A/B encoder in the encoder configuration interface.

E320.0: braking resistor overload

Cause:

The braking resistor is overloaded.

Troubleshooting:

Cause	Verification method	Solution
The cumulative heat of the braking resistor exceeds its maximum thermal capacity.	Check whether the value of H0b.67 exceeds 100%.	1. Check whether the bus voltage is excessively high, leading to excessively high bleeder current. 2. Check whether the motor is being driven by external force, leading to excessively high bleeder current. 3. Replace the servo drive.

E320.1: Enclosure temperature of the braking resistor excessively high

Cause:

The cumulative heat of the built-in braking resistor is excessive.

Troubleshooting:

Cause	Verification method	Solution
The cumulative heat of the built-in braking resistor is excessive.	Power off and check whether the built-in braking resistor is overheated.	1. Check whether the bus voltage is excessively high, leading to excessively high bleeder current. 2. Check whether the motor is being driven by external force in the reverse direction, leading to excessively high bleeder current. 3. Replace the servo drive.

E321.0: Dynamic brake resistor overload

Cause:

The dynamic braking resistor is overloaded.

Troubleshooting:

Cause	Verification method	Solution
The accumulative heat of the dynamic braking resistor exceeds the maximum thermal capacity of the resistor.	Check whether the value of H0b.98 exceeds 100%.	To avoid excessively high discharge current, prevent the motor from being driven reversely.

E400.0: Main circuit overvoltage

Cause:

The DC bus voltage between P⊕ and N⊖ exceeds the overvoltage threshold.

200 V servo drive: Normal value: 280 V; Overvoltage threshold: 420 V

400 V servo drive: Normal value: 560 V; Overvoltage threshold: 820 V

Troubleshooting:

Cause	Verification method	Solution
1. The main circuit input voltage is excessively high.	Check the input power supply specifications of the drive and measure whether the input voltage of the main circuit cable (RST) on the drive side meets the following specifications: 200 V servo drive: Effective value: 200 V to 240 V Allowable deviation: -10% to +10% (180 V to 264 V) 400 V servo drive: Effective value: 380V to 480 V Allowable deviation: -10% to +10% (342 V to 528 V)	Replace or adjust the power supply according to the specified range.
2. The power supply is unstable or affected by the lightning strike.	Check whether the power supply is unstable, affected by lightning, or complies with the preceding range.	Connect a surge protection device (SPD) and switch on the power supplies of the control circuit and the main circuit. If the fault persists, replace the servo drive.
3. The braking resistor fails.	If a built-in braking resistor is used (H02.25 = 0), check whether terminals P⊕ and D are jumpered. If yes, measure the resistance between terminals C and D. If an external braking resistor is used (H02.25 = 1 or 2), measure the resistance of the external braking resistor connected between terminals P⊕ and C. For details, See table "Specifications of the braking resistor" in the user guide.	1. If the resistance is "∞" (infinite), the braking resistor is disconnected internally. 2. If a built-in braking resistor is used, change to use an external braking resistor (H02.25 = 1 or 2) and remove the jumper between terminals P ⊕ and D. Select an external braking resistor of the same resistance and equal or higher power than the built-in one. 3. If an external braking resistor is used, replace with a new one and connect it between terminals P⊕ and C. 4. Set H02.26 (Power of external braking resistor) and H02.27 (Resistance of external braking resistor) to values consistent with the specifications of the external braking resistor used.
4. The resistance of the braking resistor is excessively high, and energy absorption during braking is insufficient.	Measure the resistance of the external braking resistor connected between terminals P⊕ and C. Compare the measured value with the recommended value.	1. Replace with an external braking resistor of recommended resistance, and connect it between terminals P⊕ and C. 2. Set H02.26 (Power of external braking resistor) and H02.27 (Resistance of external braking resistor) to values consistent with the specifications of the external braking resistor used.
5. The motor is in abrupt acceleration/deceleration status. The maximum braking energy exceeds the energy absorption value.	Confirm the acceleration/ deceleration time during operation and measure whether the DC bus voltage between P⊕ and N⊖ exceeds the overvoltage threshold during deceleration.	After verifying that the input voltage of the main circuit is within the specified range, increase the acceleration/deceleration time if allowed.

Cause	Verification method	Solution
6. The bus voltage sampling value deviates greatly from the measured value.	Check whether H0b.26 (Bus voltage) is within the following range: 200 V servo drive: H0b.26 > 420 V 400 V servo drive: H0b.26 > 820 V Measure whether the DC bus voltage between P⊕ and N⊖ is within the normal range and lower than H0b.26.	Contact Inovance for technical support.
7. The servo drive is faulty.	Check whether the fault persists after repeated power cycling of the main circuit.	Replace the servo drive.

E410.0: Main circuit undervoltage

Cause:

The DC bus voltage between terminals P⊕ and N⊕ is lower than the threshold:
200 V servo drive: Normal value: 280 V; Undervoltage threshold: 200 V (180 V for S5R5 models)
400 V servo drive: Normal value: 560 V; Undervoltage threshold: 380V

Troubleshooting:

Cause	Verification method	Solution
1. The power supply of the main circuit is unstable or a power failure occurs. 2. An instantaneous power failure occurs.	Check the input power supply specifications of the drive. Measure whether the input voltage of the main circuit cable on the non-drive side and drive side (RST) meets the following specifications. 200 V drive: Effective value: 200 V to 240 V Allowable deviation: -10% to +10% (180 V to 264 V) All three phases need to be measured.	Increase the power capacity.
3. The power voltage drops during operation.	Check the power input voltage and check whether the main circuit power supply is applied to other devices, resulting in insufficient power capacity and a voltage dip.	Increase the power capacity.
4. A three-phase servo drive is connected to a single-phase power supply, leading to phase loss.	Check the wiring of the main circuit.	Replace the cables and connect the main circuit cables in the correct phase sequence (three-phase: R/S/T).
5. The servo drive is faulty.	Check whether the value of H0b.26 (Bus voltage) is within the following range: 200 V drive: H0b.26 < 200 V 400 V drive: H0b.26 < 380V The fault persists after the main circuit is restarted several times.	Replace the servo drive.

E410.1: Main circuit de-energized

Cause:

Phase loss occurs on the three-phase servo drive.

Troubleshooting:

Cause	Verification method	Solution
The power supply is disconnected during operation.	1. Check the input power specifications of the servo drive. Measure whether the input voltage on the power supply side and the drive side (RST) of the main circuit cable meets the following specifications. 200 V servo drive: Effective value: 200 V to 240 V Allowable deviation: -10% to +10% 400 V servo drive: Effective value: 380V to 480 V Allowable deviation: -10% to +10% All three phases need to be measured. 2. Monitor the power supply voltage and check whether the main circuit power supply is applied to other devices, resulting in insufficient power capacity and voltage drop. 3. Check whether the value of H0b.26 (Bus voltage) is in the following range: 200 V drive: H0b.26 < 200 V 400 V drive: H0b.26 < 380V. The fault persists after the main circuit is powered off and on repeatedly. 4. Check the wiring of the main circuit.	1. Increase the capacity of the power supply. 2. Replace the servo drive. 3. Replace the cables and connect the main circuit cables (three-phase: RST/L1L2L3) properly.

E420.0: Main circuit phase loss

Cause:

Main circuit PL signal detection error

Troubleshooting:

Cause	Verification method	Solution
1. The three-phase power cables are not connected well.	Check whether the R/S/T cables on the drive side and cables on the non-drive side are in good condition and connected properly.	Replace the cables and connect the main circuit cables properly.
2. A single-phase power supply is used for a three-phase drive. 3. The three-phase power supply is unbalanced or the voltages of the three phases are excessively low.	Check the input power supply specifications of the drive and check the actual input voltage specifications. Measure whether the input voltage of the main circuit meets the following specifications: 200 V servo drive: Effective value: 200 V to 240 V Allowable deviation: -10% to +10% (180 V to 264 V) 400 V servo drive: Effective value: 380V to 480 V Allowable deviation: -10% to +10% (342 V to 528 V) All the three phases need to be measured.	Servo drives of 0.75 kW (H01.10 = 5) can be supplied by single-phase power supplies. If the input voltage is within the specified range, set H0A.00 to 2 (Inhibit power input phase loss fault and alarm). If it exceeds the specified range, replace or adjust the power supply according to the specified range.

E500.0: Motor overspeed

Cause:

The motor speed fed back by the motor exceeds the overspeed threshold.

Troubleshooting:

Cause	Verification method	Solution
1. The U/V/W phase sequence of the motor is incorrect.	Check whether the drive power cables are connected in the correct sequence at both ends.	Connect the U/V/W cables according to the correct sequence.
2. H0A.08 is set to an improper value.	Check whether the overspeed threshold is lower than the maximum speed needed in actual applications: Overspeed threshold = 1.2 times the maximum motor speed (H0A-08 = 0); Overspeed threshold = H0A-08 (H0A-08 ≠ 0, and H0A-08 < 1.2 times the maximum motor speed).	Reset the overspeed threshold according to the actual mechanical requirement.

Cause	Verification method	Solution
3. The input reference is higher than the overspeed threshold.	Check whether the motor speed corresponding to the input reference exceeds the overspeed fault threshold. Position control mode: In CSP mode, view the gear ratio 6091.01h/6091.02h to check the position reference increment for a single synchronous cycle and convert it to the speed information. In PP mode, view the gear ratio 6091.01h/6091.02h and define the value of 6081h (Profile velocity). In HM mode, view the gear ratio 6091.01h/6091.02h, and define the value of 6099.01h and 6099.02h. In speed control mode, view the gear ratio 6091h, and the values of 60FFh (Target velocity), H06.06 to H06.09, and 607Fh. In torque control mode, view the speed limit defined by H07.17 and check the corresponding speed limit.	Position control mode: In CSP mode, decrease the position reference increment for a single synchronous cycle. The host controller should cover the position ramp when generating references. In PP mode, decrease the value of 6081h or increase the acceleration/deceleration ramp (6083h, 6084h). In HM mode, decrease the value of 6099.01h and 6099.02h or increase the acceleration/deceleration ramp (609Ah). Decrease the gear ratio according to actual conditions. Speed control mode: Decrease the target velocity, speed limit value, gear ratio. In PV mode, increase the speed ramp 6083h and 6084h. In CSV mode, the host controller should add speed ramp processing. Torque control mode: Set the speed limit threshold to a value lower than the overspeed threshold.
4. The motor speed overshoots.	When H0A.08 is set to 0, check whether the speed feedback exceeds 1.2 × Maximum motor speed (H00.15). When H0A.08 is not set to 0, check whether the speed feedback exceeds the value set by H0A.08.	Adjust the gain or mechanical operating conditions.
5. The servo drive is faulty.	The fault persists after the drive is powered off and on again.	Replace the servo drive.
6. Encoder data errors occur.	Check whether there is interference, whether the encoder type is incorrect, and whether the encoder parameter settings are incorrect.	1. Take measures to prevent interference, such as installing magnetic ring and connecting shielded cables. 2. Check whether the encoder type is correct. If not, replace it with the correct encoder type. 3. Configure the encoder parameters correctly according to the encoder user guide.
7. The motor type selected is incorrect.	Check whether the motor type is set incorrectly, for example, the linear motor is set to rotary motor or the rotary motor is set to a linear motor.	Replace with the correct motor type or change the value of H00.00 based on the motor used.

E500.1: Speed feedback overflow

Cause:

The FPGA speed measurement overflows.

Troubleshooting:

Cause	Verification method	Solution
1. FPGA internal speed overflows.	Check whether the drive power cables are connected in the correct sequence at both ends.	Connect the U/V/W cables according to the correct sequence.
2. The motor speed overshoots.	Check whether the speed feedback exceeds the overspeed threshold through the software tool. Overspeed threshold: 16384 rpm for the rotary motor, 8192 rpm for the DDR motor, and 16384 mm/s for the linear motor	Adjust the gain or mechanical operating conditions.
3. The encoder data is incorrect.	Check whether there is interference, whether the encoder type is incorrect, and whether the encoder parameter settings are incorrect.	1. Take measures to prevent interference, such as installing magnetic ring and connecting shielded cables. 2. Check whether the encoder type is correct. If not, replace it with the correct encoder type. 3. Configure the encoder parameters correctly according to the encoder user guide.
4. The motor type is incorrect.	Check whether the motor type is set incorrectly, for example, the linear motor is set to rotary motor or the rotary motor is set to a linear motor.	Replace with the correct motor type or change the value of H00.00 based on the motor used.

E500.2: FPGA position feedback pulse overspeed

Cause:

The MCU has detected that the position feedback increment from the FPGA is excessive.

Troubleshooting:

Cause	Verification method	Solution
1. The MCU has detected that the position feedback increment from the FPGA is excessively large.	Check whether the value of H0b.17 changes abruptly.	Modify the value of H0A.70 (Overspeed threshold), which is 0 by default. Use the maximum speed of the motor as the threshold for excessive feedback increment.
2. The encoder data is incorrect.	Check whether there is interference, whether the encoder type is incorrect, and whether the encoder parameter settings are incorrect.	1. Take measures to prevent interference, such as installing magnetic ring and connecting shielded cables. 2. Check whether the encoder type is correct. If not, replace it with the correct encoder type. 3. Configure the encoder parameters correctly according to the encoder user guide.
3. The motor type selected is incorrect.	Check whether the motor type is set incorrectly, for example, the linear motor is set to rotary motor or the rotary motor is set to a linear motor.	Replace with the correct motor type or change the value of H00.00 based on the motor used.

E602.0: Angle auto-tuning failure

Cause:

Unusual jitter occurs on the encoder feedback during angle auto-tuning.

Troubleshooting:

Cause	Verification method	Solution
1. The mechanical device is stalled. 2. An encoder feedback data error occurs. 3. The U/V/W power cables are connected improperly or disconnected. 4. The drive hardware or the motor is faulty.	1. Try to Rotate a stopped motor to check whether the mechanical device is stalled. 2. After rotating the motor, check whether the encoder feedback is normal by observing whether the encoder generates feedback, whether the feedback data is consecutive, and whether the observed displacement is consistent with actual displacement through the oscilloscope. 3. Check the wiring of U/V/W power cables and test whether they are disconnected with a multimeter. 4. If the preceding fault causes are ruled out, contact the manufacturer to locate the drive or motor fault.	1. After confirming the mechanical device has been stalled, rectify the stall causes and perform angle auto-tuning (phase sequence auto-tuning) again. 2. After confirming the encoder feedback data is wrong, replace the encoder and perform angle auto-tuning (phase sequence auto-tuning) again. 3. After confirming the U/V/W cables are connected improperly or disconnected, perform wiring and angle auto-tuning (phase sequence auto-tuning) again. 4. After preceding causes are ruled out, contact the manufacturer to locate the drive or motor fault.

E602.1: Angle auto-tuning overtravel

Cause:

Angle auto-tuning overtravel

Troubleshooting:

Cause	Verification method	Solution
Excessive displacement occurs during angle auto-tuning, leading to overtravel. 1. The auto-tuning parameters does not match the load characteristics, leading to overtravel due to excessive impact during auto-tuning. 2. An encoder feedback data error occurs, leading to false overtravel alarm.	1. Observe whether the displacement is excessive to check whether the overtravel alarm is caused by improper setting of auto-tuning parameters. 2. Observe whether the encoder feedback action is consecutive, whether the displacement is consistent with actual displacement, and whether the encoder feedback data is normal through the oscilloscope.	1. If excessive displacement occurs during auto-tuning, prevent the overtravel alarm by adjusting auto-tuning parameters properly. Reduce the current rising slope [H32.21 for closed-loop pre-positioning] [H32.31 for position lock] or the maximum auto-tuning current [H32.20 for closed-loop pre-positioning] [H32.30 for position lock]. 2. If an encoder feedback data error occurs, perform angle auto-tuning/phase sequence auto-tuning again after replacing the encoder.

E602.2: U/V/W phase sequence reversed

Cause:

An incorrect U/V/W phase sequence is detected during angle auto-tuning.

Troubleshooting:

Cause	Verification method	Solution
The drive indicates the U/V/W cables are wired improperly, preventing the motor from getting out of control.	Check whether U/V/W phases of the motor are wired correctly through phase sequence auto-tuning.	1. After adjusting the phase sequence through phase sequence auto-tuning, perform angle auto-tuning again. 2. Exchange any two of U/V/W phases manually and perform angle auto-tuning again.

E602.3: Excessive encoder runout during angle auto-tuning

Cause:

Excessive encoder feedback fluctuation during angle auto-tuning

Troubleshooting:

Cause	Verification method	Solution
The encoder feedback data fluctuates excessively.	Check whether the data changes normally when the encoder is in the static state.	1. Check the wiring of the encoder. 2. Check whether external electromagnetic interference exists. If yes, install a magnetic ring and connect a shielded cable. 3. Manually increase the values of H32.14/H32.16 for angle auto-tuning through inching or the values of H32.34/H32.36 for angle auto-tuning through position lock.

E602.4: Angle auto-tuning timeout

Cause:

Angle auto-tuning timeout

Troubleshooting:

Cause	Verification method	Solution
The angle auto-tuning process lasts for an excessively long time, leading to a timeout alarm (angle auto-tuning not done within 30s). The causes may be: 1. External interference exists (such as vibration generated by other devices), leading to angle auto-tuning failure. 2. The encoder feedback data characteristics are inadequate, disturbed, or abnormal, leading to angle auto-tuning failure.	1. Check whether the machine is affected by other devices that generate vibration. 2. Check whether the encoder generates feedback, whether the feedback data is consecutive, whether the displacement is consistent with the actual displacement, and whether the data changes during standby through the oscilloscope in the software tool.	1. Check the wiring of the encoder to ensure the shielded cable is connected properly. If the encoder data is abnormal, replace the encoder and perform angle auto-tuning or phase sequence auto-tuning again. 2. Adjust angle auto-tuning parameters properly to reduce the threshold for angle auto-tuning completion.

E602.5: Angle auto-tuning failed and Z signal not found

Cause:

Angle auto-tuning failed and Z signal not found

Troubleshooting:

Cause	Verification method	Solution
1. The encoder is configured improperly. The actual motor encoder has no Z signal. 2. The polarity of the Z signal is configured improperly. 3. The encoder feedback data is abnormal. There is no Z signal.	1. Check whether the motor has Z signal. 2. Check the configuration of Z signal polarity through bit13 of H00.26. 3. Check whether the encoder generates feedback, whether the feedback data is consecutive, and whether the displacement is consistent with the actual displacement through the oscilloscope in the software tool.	1. Check the wiring of the encoder to ensure the shielded cable is connected properly. Check whether the Z signal polarity is configured properly. 2. If the encoder data is abnormal, replace the encoder and perform angle auto-tuning again.

E602.6: Angle auto-tuning not convergent

Cause:

Angle auto-tuning not convergent

Troubleshooting:

Cause	Verification method	Solution
1. The angle auto-tuning is not convergent due to external disturbance, such as vibration of other components. 2. Angle auto-tuning is not convergent due to improper auto-tuning parameter setting.	1. Check whether the machine is affected by other vibration sources. 2. Check whether the angle gain is so high that the angle auto-tuning is not convergent.	1. Check whether external electromagnetic interference exists. Install a magnetic ring and connect the shielded cable. 2. For the position lock mode, decrease the angle gain (H32.37) manually. 3. For the inching mode, decrease the action judgment threshold (H32.13/H32.15) manually or increase the standstill threshold (H32.14/H32.16).

E605.0: Motor overspeed upon S-ON

Cause:

The motor speed exceeds the rated speed when the servo drive in size A/B is enabled.

Troubleshooting:

Cause	Verification method	Solution
The motor speed exceeds the rated speed when the servo drive is switched on.	Check whether the drive is enabled when the motor is being driven.	Enable the drive when the motor is at standstill.

E612.0: Motor stalled during phase sequence auto-tuning

Cause:

Stall detected in phase sequence auto-tuning

Troubleshooting:

Cause	Verification method	Solution
1. The mechanical device is stalled. 2. An encoder feedback data error occurs. 3. The U/V/W power cables are connected improperly or disconnected. 4. The drive hardware or the motor is faulty.	1. Try to Rotate a stopped motor to check whether the mechanical device is stalled. 2. After rotating the motor, check whether the encoder feedback is normal by observing whether the encoder generates feedback, whether the feedback data is consecutive, and whether the observed displacement is consistent with actual displacement through the oscilloscope. 3. Check the wiring of U/V/W power cables and test whether they are disconnected with a multimeter. 4. If the preceding fault causes are ruled out, contact the manufacturer to locate the drive or motor fault.	1. After confirming the mechanical device has been stalled, rectify the stall causes and perform angle auto-tuning (phase sequence auto-tuning) again. 2. After confirming the encoder feedback data is wrong, replace the encoder and perform angle auto-tuning (phase sequence auto-tuning) again. 3. After confirming the U/V/W cables are connected improperly or disconnected, perform wiring and angle auto-tuning (phase sequence auto-tuning) again. 4. After preceding causes are ruled out, contact the manufacturer to locate the drive or motor fault.

E612.1: Overtravel during phase sequence auto-tuning

Cause:

Overtravel in phase sequence auto-tuning

Troubleshooting:

Cause	Verification method	Solution
Excessive displacement occurs during angle auto-tuning, leading to overtravel. 1. The auto-tuning parameters does not match the load characteristics, leading to overtravel due to excessive impact during auto-tuning. 2. An encoder feedback data error occurs, leading to false overtravel alarm.	1. Observe whether the displacement is excessive to check whether the overtravel alarm is caused by improper setting of auto-tuning parameters. 2. Observe whether the encoder feedback action is consecutive, whether the displacement is consistent with actual displacement, and whether the encoder feedback data is normal through the oscilloscope.	1. If excessive displacement occurs during auto-tuning, prevent the overtravel alarm by adjusting auto-tuning parameters properly. Reduce the current rising slope manually [H32.21]. 2. If an encoder feedback data error occurs, perform angle auto-tuning/phase sequence auto-tuning again after replacing the encoder.

E612.3: Excessive encoder runout in phase sequence auto-tuning

Cause:

Excessive encoder change in angle auto-tuning

Troubleshooting:

Cause	Verification method	Solution
The encoder feedback data fluctuates excessively.	Check whether the data changes normally when the encoder is in the static state.	1. Check the wiring of the encoder. 2. Check whether external electromagnetic interference exists. If yes, install a magnetic ring and connect a shielded cable. 3. Increase the values of H32.24 and H32.25 manually.

E612.4: Phase sequence auto-tuning timeout

Cause:

Phase sequence auto-tuning failed, leading to auto-tuning timeout

Troubleshooting:

Cause	Verification method	Solution
The angle auto-tuning process lasts for an excessively long time, leading to a timeout alarm (angle auto-tuning not done within 30s). This may be caused by: 1. External interference exists (such as vibration generated by other devices), leading to angle auto-tuning failure. 2. The encoder feedback data characteristics are inadequate, disturbed, or abnormal, leading to angle auto-tuning failure.	1. Check whether the machine is affected by other devices that generate vibration. 2. Check whether the encoder generates feedback, whether the feedback data is consecutive, whether the displacement is consistent with the actual displacement, and whether the data changes during standby through the oscilloscope in the software tool.	1. Check the wiring of the encoder to ensure the shielded cable is connected properly. If the encoder data is abnormal, replace the encoder and perform phase sequence auto-tuning again. 2. Adjust phase sequence auto-tuning parameters properly to reduce the threshold for phase sequence auto-tuning completion.

E613.0: Resistor inductance auto-tuning timeout

Cause:

Resistance/Inductance auto-tuning timeout

Troubleshooting:

Cause	Verification method	Solution
The resistor inductance auto-tuning is not done within 30 s, leading to a timeout alarm. The current feedback cannot reach the reference value because the motor power cables are disconnected or in poor contact.	Check whether the motor power cables are disconnected or in poor contact.	Check the motor power cables and ensure that they are connected properly.

E619.0: Absolute accuracy compensation parameter setting error

Cause:

The accuracy compensation parameter setting is improper.

Troubleshooting:

Cause	Verification method	Solution
1. Set the accuracy compensation interval (H33.64) to 0. 2. Inovance communication encoder DDL: 1. The distance from the mechanical home to the calibrated home exceeds the upper limit of Inovance communication-type encoder (encoder unit 2^{34}). 2. The length of the calibration exceeds the upper limit of the Inovance communication-type encoder (encoder unit 2^{34}). 3. The homing mode record is incorrect. The value of H33.70 is not within the values of {-2, -1, 1, 2, 4, 6, 17, 18, 24, 28, 33, 34}.	1. Check whether H33.64 is set to 0. 2. Check whether the distance between the mechanical home and the calibrated home (start position) exceeds the limit (encoder unit 2^{34}). 3. Check whether the value of H33.70 is within the values of {-2, -1, 1, 2, 4, 6, 17, 18, 24, 28, 33, 34}.	1. Set a correct compensation point interval. 2. Set a correct distance from the mechanical home to the calibrated home. 3. Set H33.70 to a proper value.

E619.1: Absolute accuracy compensation overflow

Cause:

1. The input quadrature pulse frequency (quadrupled) is higher than 1 ÷ (H33.74 × 25 ns).
2. The pulse count per-cycle compensation is higher than 1.

Troubleshooting:

Cause	Verification method	Solution
1. The input quadrature pulse frequency (quadrupled) is higher than 1 ÷ (H33.74 × 25 ns). 2. The pulse count per-cycle compensation is higher than 1.	1. Check the motor speed upon occurrence of the alarm. 2. View the compensation list to check whether a length longer than one index range exists.	1. Reduce the operating speed of motor. 2. Load the correct error compensation list.

E620.0: Motor overload

Cause:

Heat accumulation of the motor reaches the fault threshold.

Troubleshooting:

Cause	Verification method	Solution
1. Wiring of the motor and encoder is incorrect or in poor contact.	Check the wiring between the servo drive, servo motor and the encoder according to the correct "wiring diagram".	Connect cables according to the correct wiring diagram. Preferably use the cables provided by Inovance. When customized cables are used, prepare and connect the cables according to the hardware wiring instructions.
2. The load is excessive. The motor keeps outputting effective torque that higher than the rated torque for a long time.	Check the overload characteristics of the servo drive or servo motor. Check whether the average load rate (H0b.12) of the drive keeps exceeding 100.0%.	Use a drive of higher capacity and a matching motor. Alternatively, reduce the load and increase the acceleration/deceleration time.

Cause	Verification method	Solution
3. Acceleration/deceleration is frequent, or the load inertia is large.	Calculate the mechanical inertia ratio or perform inertia auto-tuning and view H08.15 (Inertia ratio). Confirm the single-shot operation cycle when the motor runs cyclically.	Increase the acceleration/ deceleration time for single-shot operation.
4. The gain is improper, or the stiffness is excessively high.	Check whether the motor vibrates and generates unusual noise during operation.	Adjust the gains.
5. The set servo drive model or motor model are incorrect.	View the motor model in H00.00 and drive model in H01.10.	Check the servo drive nameplate and set the servo drive model (H01.10) and motor model properly according to section "Servo Drive Model and Nameplate" in SV670P-INT Series Servo Drive Hardware Guide.
6. The motor is stalled due to mechanical problems, resulting in excessive load during operation.	Check the reference and motor speed (H0b.00) through the software tool or keypad: Reference in position control mode: H0b.13 (Input position reference counter); Reference in speed control mode: H0b.01 (Speed reference); Reference in torque control mode: H0b.02 (Internal torque reference). Check whether the reference is not 0 but the motor speed is 0 in the corresponding mode.	Rectify mechanical problems.
7. The servo drive is faulty.	The fault persists after the drive is power-cycled.	Replace the servo drive.

E620.1: Motor overload in overload current limit mode

Cause:

Motor overload in overload current limit mode

Troubleshooting:

Cause	Verification method	Solution
1. The load is too heavy and the effective torque output by the motor remains above the rated torque. 2. Acceleration/deceleration is too frequent or the load inertia is too large. 3. The motor and encoder are wired improperly. 4. The gain is improper or the stiffness level is too high. 5. The motor is stalled due to mechanical factors, resulting in overload during operation. 6. The drive is faulty.	Confirm the overload characteristics of the servo drive or servo motor. Check whether the average load ratio (H0b.12) remains above 100.0%.	Replace with a servo drive of higher capacity and a matching servo motor, or reduce the load and increase the acceleration/ deceleration time.

E621.0: Overload current limit torque reached

Cause:

Overload current limit torque reached

Troubleshooting:

Cause	Verification method	Solution
1. The load is too heavy and the effective torque output by the motor remains above the rated torque. 2. Acceleration/deceleration is too frequent or the load inertia is too large. 3. The motor and encoder are wired improperly. 4. The gain is improper or the stiffness level is too high. 5. The motor is stalled due to mechanical factors, resulting in overload during operation. 6. The drive is faulty.	1. Confirm the overload characteristics of the servo drive or servo motor. Check whether the average load rate (H0b.12) of the servo drive remains above 100.0%. 2. Check whether H32.78 is set to an excessively high value.	1. Replace with a drive of larger capacity and a matching motor, or reduce the load and increase the acceleration/deceleration time.

E630.0: Motor stall over-temperature protection

Cause:

The actual motor speed is lower than 10 rpm but the torque reference reaches the limit, and such status lasts for the time defined by H0A.32.

Troubleshooting:

Cause	Verification method	Solution
1. U/V/W output phase loss, open circuit, or incorrect phase sequence occurs on the servo drive.	Perform a motor trial run without load and check cable connections and the phase sequence with a multimeter.	Re-connect the cables according to the wiring diagram or replace the cables.
2. The motor parameter settings (especially the number of pole pairs) are improper, motor angle auto-tuning is not performed, or the motor power is higher than the drive power.	Read parameters in group H00 to check whether the number of pole pairs are set properly. Perform angle auto-tuning on the motor several times and check whether the value of H00.28 is consistent during angle auto-tuning. Check whether the motor power matches the drive power.	Modify the motor parameter values and replace with a drive of the same power.

Cause	Verification method	Solution
3. The references set through communication are disturbed.	Check whether jitter occurs on the references sent from the host controller and whether communication is disturbed.	Check whether communication between the host controller and the drive is disturbed.
4. The motor is stalled due to mechanical problems.	Check the reference and motor speed (H0B.00) through the software tool or keypad: Reference in position control mode: H0B.13 (Input position reference counter); Reference in speed control mode: H0B.01 (Speed reference); Reference in torque control mode: H0B.02 (Internal torque reference). Check whether the reference is not 0 but the motor speed is 0 in the corresponding mode. Check the current feedback (torque reference) waveform.	Check whether any mechanical part is stuck or eccentric.

E640.0: IGBT junction temperature excessively high

Cause:

The IGBT temperature reaches the fault threshold defined by H0A.18.

Troubleshooting:

Cause	Verification method	Solution
1. The ambient temperature is excessively high. 2. The drive is restarted repeatedly to reset the overload fault.	Measure the ambient temperature and view the fault log (set H0b.33 and view H0b.34) to check whether an overload fault/alarm is reported (E620.0, E630.0, E650.0, E909.0, E920.0, E922.0).	Improve the cooling conditions of the drive to lower down the ambient temperature. Change the fault reset method. After overload occurs, wait for 30s and then perform the reset operation. Increase the capacities of the servo drive and servo motor. Increase the acceleration/ deceleration time and reduce the load.
3. The fan is damaged.	Check whether the fan works properly during operation.	Replace the servo drive.
4. The installation direction and clearance between servo drives are improper.	Check whether the drive is installed properly.	Install the drive according to the installation requirements.
5. The servo drive is faulty.	The fault persists upon restart five minutes after power-off.	Replace the servo drive.

E640.1: Flywheel diode junction temperature excessively high

Cause:

The temperature of the flywheel diode reaches the fault threshold defined by H0A.18.

Troubleshooting:

Cause	Verification method	Solution
1. The ambient temperature is excessively high. 2. The drive is restarted repeatedly to reset the overload fault.	Measure the ambient temperature and view the fault log (set H0b.33 and view H0b.34) to check whether an overload fault/alarm is reported (E620.0, E630.0, E650.0, E909.0, E920.0, E922.0).	Improve the cooling conditions of the drive to lower down the ambient temperature. Change the fault reset method. After overload occurs, wait for 30s and then perform the reset operation. Increase the capacities of the servo drive and servo motor. Increase the acceleration/ deceleration time and reduce the load.
3. The fan is damaged.	Check whether the fan works properly during operation.	Replace the servo drive.
4. The installation direction and clearance between servo drives are improper.	Check whether the drive is installed properly.	Install the drive according to the installation requirements.
5. The servo drive is faulty.	The fault persists upon restart five minutes after power-off.	Replace the servo drive.

E650.0: Heatsink over-temperature

Cause:

The temperature of the servo drive power module is higher than the over-temperature threshold.

Troubleshooting:

Cause	Verification method	Solution
1. The ambient temperature is excessively high. 2. The drive is restarted repeatedly to reset the overload fault.	Measure the ambient temperature and view the fault log (set H0b.33 and view H0b.34) to check whether an overload fault/alarm is reported (E620.0, E630.0, E650.0, E909.0, E920.0, E922.0).	Improve the cooling conditions of the drive to lower down the ambient temperature. Change the fault reset method. After overload occurs, wait for 30s and then perform the reset operation. Increase the capacities of the servo drive and servo motor. Increase the acceleration/ deceleration time and reduce the load.
3. The fan is damaged.	Check whether the fan works properly during operation.	Replace the servo drive.
4. The installation direction and clearance between servo drives are improper.	Check whether the drive is installed properly.	Install the drive according to the installation requirements.
5. The servo drive is faulty.	The fault persists upon restart five minutes after power-off.	Replace the servo drive.

E660.0: Motor over-temperature

Cause:

The temperature of the air-cooled motor is too high. The PTC function is triggered inadvertently in H00.26.

Troubleshooting:

Cause	Verification method	Solution
The temperature of the air-cooled motor is too high. The PTC function is triggered inadvertently in H00.26.	Measure whether the temperature of the air-cooled motor is excessively high. Check whether the PTC function is enabled but the motor does not carry a PTC. Check whether PTC is connected properly. For Inovance motors, the temperature threshold is 130°C. For third-party motors, measure the PTC resistance and determine the motor temperature based on the resistance specifications.	1. Cool the motor down. 2. Check whether the PTC function is enabled but the motor does not carry a PTC. 3. Check whether PTC is connected properly.

E661.0: STune failure

Cause:

During STune tuning, gain reduction has reached the lower limit:
Position loop gain < 5;
Speed loop gain < 5;
Model loop gain < 10.

Troubleshooting:

Cause	Verification method	Solution
During STune tuning, gain reduction has reached the lower limit: Position loop gain < 5; Speed loop gain < 5; Model loop gain < 10.	Check whether vibration resonance is properly suppressed in the system. The torque resonance amplitude exceeds the setpoint of H09.11.	1. Set the notch manually when vibration cannot be suppressed automatically. 2. Modify the electronic gear ratio to improve the command resolution, the command filter time constant in the "Parameter configuration" interface. 3. Check the machine for cyclic fluctuation. 4. Set H09.58 to 1 to clear resonance suppression parameter and perform STune again.

E662.0: ETune failure

Cause:

Resonance during ETune operation cannot be suppressed.

Troubleshooting:

Cause	Verification method	Solution
Resonance during ETune operation cannot be suppressed.	Check whether unusual noise or torque fluctuation occurs during operation.	1. When vibration cannot be suppressed automatically, set the notch manually. 2. Modify the electronic gear ratio to improve the reference resolution, or increase the reference filter time properly in the parameter configuration interface. 3. Increase the value of H09.11 properly. 4. Check whether the machine fluctuates periodically. 5. Check whether positioning threshold is excessively low. Increase the reference acceleration/deceleration time.

E664.0: Excessive resonance

Cause:

Resonance occurs on the servo system and the torque fluctuation amplitude is higher than the value of H09.54.

Troubleshooting:

Cause	Verification method	Solution
Resonance occurs on the servo system and the torque fluctuation amplitude is higher than the value of H09.54.	Check whether unusual noise or torque fluctuation occurs during operation.	1. Check whether the inertia ratio or loop gain parameters are set properly. 2. Check whether resonance suppression parameters are set properly. 3. Increase the value of H09.54 or set this parameter to 0 to hide this function.

E720.0: Encoder interface selected improperly

Cause:

The drive does not support the present encoder interface.

Troubleshooting:

Cause	Verification method	Solution
The drive does not support the present encoder interface.	Check whether H32.01 and H0F.06 are set to correct values. If the gantry function is enabled, check whether the gantry function is in conflict with the master encoder or fully closed-loop encoder setting.	1. Check whether the signal cable required by current encoder interface solution exceeds the upper limit of an individual interface. 2. Change the values of H32.01 and H0F.01.

E731.0: Encoder multi-turn position data loss

Cause:

Encoder multi-turn position data loss

Troubleshooting:

Cause	Verification method	Solution
1. The primary encoder battery is not connected during power-off.	Check whether the battery is connected during power-off.	Set H0d.20 to 1 to clear the fault.
2. The primary encoder battery voltage is lower than 2.9 V.	Measure the battery voltage.	Replace the battery with a new one that provides matching voltage.
3. The primary encoder is disturbed by a strong magnetic field.	Check whether the encoder is in an environment with a strong magnetic field.	Remove the strong magnetic field source and set H0d.20 to 1.

E733.0: Encoder multi-turn counting error

Cause:

An encoder multi-turn counting error occurs.

Troubleshooting:

Cause	Verification method	Solution
The encoder is faulty.	Set H0d.20 to 2 to clear the fault, but E733.0 persists after a power cycle.	Replace the motor.

E735.0: Encoder multi-turn count overflow

Cause:

A multi-turn counting overflow occurs on the absolute encoder.

Troubleshooting:

Cause	Verification method	Solution
The number of forward revolutions exceeds 32767 or the number of reverse revolutions exceeds 32768.	Check whether the value of H0b.70 (Number of absolute encoder revolutions) is 32767 or 32768 when the servo drive works in the absolute linear mode (H02.01 = 1).	Set H0d.20 to 2 to power on again. Perform homing if necessary.

E740.0: Absolute encoder communication timeout

Cause:

The real-time communication timeout fault state of the encoder has been set for 100 consecutive current loop cycles.

Troubleshooting:

Cause	Verification method	Solution
1. The encoder cable is abnormal, disconnected, or in poor contact. 2. The motor type is set incorrectly. 3. The encoder is damaged.	1. Check the wiring of the encoder and power on the drive again. Check whether H30.16 exceeds 100. 2. Check whether the motor type is set properly. 3. Replace the encoder.	1. After checking that the encoder is connected properly, restart the drive. 2. Check whether the encoder type is consistent with the setting. After checking that the motor type is set correctly, restart the drive. 3. Replace the encoder for cross-verification.

E740.2: Absolute encoder error

Cause:

This fault is caused by encoder communication timeout, stop bit error, CRC error, data field error, or position counter error during non-real-time communication (initialization upon power-on or during reading ROM).
Or, this fault is caused by N (defined by H0A.50) errors that occurred consecutively during real-time communication.

Troubleshooting:

Cause	Verification method	Solution
1. The encoder cable is abnormal or communication with the encoder is disturbed. 2. The data bit of the third-party encoder is set improperly.	1. Check whether the value of H0b.28 is not 0. Check whether the signal transmission process is disturbed. 2. Check the motor encoder user guide and confirm that the data bits (H00.43/H00.44) are set correctly.	1. Ensure that the drive and motor are grounded properly. You can wind the encoder cable on a magnetic ring to reduce interference. Use a twisted pair to connect the encoder. 2. Check the encoder user guide and set a correct encoder data length.

E740.3: Absolute encoder single-turn calculation error

Cause:

An internal fault occurs on the encoder.

Troubleshooting:

Cause	Verification method	Solution
An internal fault occurs on the encoder.	Check whether bit7 of H0b.28 is set to 1.	1. Check whether encoder version (H00.04) is set properly. 2. Check whether the encoder cable is proper. 3. Replace the motor.

E740.6: Encoder write fault

Cause:

The attempt to write the encoder data fails.

Troubleshooting:

Cause	Verification method	Solution
1. The attempt to write position offset after angle auto-tuning/ phase sequence auto-tuning failed. 2. The attempt to write auto-tuned parameters after resistance/ inductance auto-tuning failed. 3. The attempt to write the current loop gain after current loop auto-tuning failed.	Replace with a new encoder cable. If the fault no longer occurs after cable replacement, it indicates the original encoder cable is damaged. Keep the motor in a certain position, power on the system several times, and observe the change of H0b.17 (Electrical angle). The electrical angle deviation should be within ±30° when the motor position does not change.	Use a new encoder cable. If the fault persists after the encoder cable is replaced, the encoder may be faulty. In this case, replace the servo motor.

E740.9: Encoder data transmission delay too long

Cause:

The set encoder data transmission delay exceeds the time of one current loop cycle.

Troubleshooting:

Cause	Verification method	Solution
1. H01.59 is set to an excessively high value. 2. The number of encoder data bits is excessive.	Power off and restart the drive.	1. Reduce the value of H01.59. 2. Replace with an encoder with lower number of bits.

E744.0: Absolute encoder communication timeout

Cause:

Communication timeout occurs on the absolute encoder.

Troubleshooting:

Cause	Verification method	Solution
The communication between the servo drive and the encoder times out.	Check the wiring of the encoder. After clearing the fault source, reset the fault.	1. Check whether the values of H30.16 and H30.18 are excessively high. 2. Check the wiring of the encoder.

E744.2: Absolute encoder error

Cause:

A communication error occurs on the RX side of the encoder.

Troubleshooting:

Cause	Verification method	Solution
An error occurs on the communication between the servo drive and the encoder due to disturbance.	Check whether the shielded cable of the encoder is connected properly. After the fault source is cleared, reset the fault.	1. Check whether the value of H30.17 is excessively high. 2. Check whether the encoder cable is connected properly. 3. Check whether the servo drive and motor are grounded properly. You can wind the encoder cable onto the magnetic ring to reduce interference.

E755.0: Nikon encoder communication fault

Cause:

Nikon encoder communication failure

Troubleshooting:

Cause	Verification method	Solution
An error occurs on the communication between the drive and encoder.	Check whether the shielded cable of the encoder is connected properly. After the fault source is cleared, reset the fault.	1. Check whether the value of H30.17 is excessively high. 2. Check whether the encoder cable is connected properly. 3. Check whether the servo drive and motor are grounded properly. You can wind the encoder cable onto the magnetic ring to reduce interference.

E760.0: Encoder over-temperature

Cause:

The temperature of the absolute encoder is too high.

Troubleshooting:

Cause	Verification method	Solution
The temperature of the absolute encoder is too high.	Measure the encoder or motor temperature.	Switch off the S-ON signal to wait for the encoder to cool down.

E765.0: Third-party encoder over-temperature or overspeed

Cause:

Motor temperature excessively high

Troubleshooting:

Cause	Verification method	Solution
Motor temperature excessively high	Check whether the ambient temperature or the average load rate is excessively high.	Switch off the S-ON signal to wait for the encoder to cool down.

E770.0: Fully-closed input phase A disconnected

Cause:

The phase A differential voltage input is disconnected in closed-loop control.

Troubleshooting:

Cause	Verification method	Solution
The phase A differential voltage input is disconnected in closed-loop control.	Measure whether the differential voltage of phase A is lower than 2.5 V.	Adjust the fully-closed loop phase A input voltage.

E770.1: Fully-closed loop input phase B disconnected

Cause:

The phase B differential voltage input is disconnected in closed-loop control.

Troubleshooting:

Cause	Verification method	Solution
The phase B differential voltage input is disconnected in closed-loop control.	Measure the phase B differential voltage to check whether it is below 2.5 V.	Adjust the fully-closed loop phase B input voltage.

E770.2: Fully-closed loop input phase Z disconnected

Cause:

The phase Z differential voltage input is disconnected in closed-loop control.

Troubleshooting:

Cause	Verification method	Solution
The phase Z differential voltage input is disconnected in closed-loop control.	Measure the phase Z differential voltage to check whether it is below 2.5 V.	Adjust the fully-closed loop phase Z input voltage.

E939.0: Motor power cable disconnected

Cause:

At least one phase of the motor power cables is disconnected.

Troubleshooting:

Cause	Verification method	Solution
1. One or two phases of the motor power cables (U/V/W) are disconnected. 2. The current loop gain is set improperly.	1. Check the wiring of U/V/W power cables. 2. The power cable is not disconnected, and current feedback and torque reference following errors occur. The fault can be cleared after inductance resistance auto-tuning and current loop auto-tuning are performed.	1. Check whether the power cables are disconnected or in poor contact. Re-connect the power cables. 2. Replace the motor. 3. Perform inductance/resistance auto-tuning and current loop auto-tuning again.

E994.0: Station number conflict

Cause:

CANlink station number conflict

Troubleshooting:

Cause	Verification method	Solution
CANlink station number conflict	Check the setpoint of H0E.00.	Rectify the value of H0E.00.

EA33.0: Encoder read/write check error

Cause:

Internal parameters of the encoder are abnormal.

Troubleshooting:

Cause	Verification method	Solution
1. The serial incremental encoder cable is disconnected or connected loosely.	Check the wiring.	Check whether the encoder cables are connected incorrectly, disconnected, or in poor contact. If the motor cables and encoder cables are bundled together, separate them.
2. The attempt to read/write bus incremental encoder parameters failed.	If the fault persists after the drive is powered off and on repeatedly, the encoder is faulty.	Replace the servo motor.

EA34.0: Hall state error

Cause:

The Hall device is faulty.

Troubleshooting:

Cause	Verification method	Solution
Hall signal outputs all high or low	Check whether the Hall is wired properly. Sample the Hall state with the oscilloscope in the software tool. Rotate the motor rotor to observe whether the Hall state ranges from 0 or 7.	1. Check the U/V/W wiring of the Hall. If the fault persists after repeated restart, the Hall unit is faulty. In this case, replace the Hall unit. 2. Check whether the shield of the encoder is connected. 3. If a certain phase of the Hall is connected improperly, modify H32.55 to adjust the active state of the single-phase level of the Hall.

EA34.1: Dynamic Hall auto-tuning error

Cause:

Dynamic Hall auto-tuning error

Troubleshooting:

Cause	Verification method	Solution
An electrical angle error is detected during dynamic Hall auto-tuning.	1. Check whether the motor rotates properly. 2. Check whether the Hall signal output corresponds to the electrical angle change. 3. Check whether the Hall function is enabled for the motor without Hall signal. 4. Check whether the Hall element is wired properly.	1. Ensure the motor can move by single side, without being affected by limit. 2. After checking parameters are set properly, test whether the Hall signal changes every time the electrical angle changes by nearly 60 degrees. If not, the Hall signal output is abnormal. In this case, replace the Hall components. 3. Check whether the motor is equipped with the Hall function. 4. Check whether Hall is wired properly.

EA34.2: Static Hall auto-tuning error

Cause:

Static Hall auto-tuning error

Troubleshooting:

Cause	Verification method	Solution
Static Hall auto-tuning cannot be enabled.	1. Check whether the motor is equipped with an incremental encoder. 2. Check whether H32.62 is set to 1 when H0A.13 is set to 6.	1. Static Hall auto-tuning is supported only by the motor equipped with an incremental encoder. 2. Perform dynamic Hall auto-tuning again when H32.62 is not set to 1 but H0A.13 is set to 6.

EB00.0: Excessive position deviation

Cause:

The position deviation is larger than the value of 6065h in position control mode.

Troubleshooting:

Cause	Verification method	Solution
1. U/V/W output phase loss or incorrect phase sequence occurs on the servo drive.	Perform a no-load trial run on the motor and check the wiring.	Re-connect the cables according to the wiring diagram or replace the cables.
2. The servo drive U/V/W output cables or encoder cables are disconnected.	Check the wiring.	Connect the cables again. The servo drive power cables (U/V/W) must be connected in the correct order at both ends. If necessary, replace all cables and ensure a reliable connection.
3. The motor rotor is stalled due to mechanical factors.	Check the reference and motor speed (H0b.00) through the software tool or keypad: Reference in position control mode: H0b.13 (Input position reference counter) Reference in speed control mode: H0b.01 (Speed reference) Reference in torque control mode: H0b.02 (Internal torque reference) Check whether the reference is not 0 but the motor speed is 0 in the corresponding mode.	Eliminate mechanical factors.
4. The servo drive gains are too low.	Check the position loop gain and speed loop gain of the drive: 1st gain set: H08.00 to H08.02; 2nd gain set: H08.03 to H08.05	Adjust the gain values manually or perform gain auto-tuning.
5. The position reference increment is excessive.	Position control mode: In CSP mode, check the gear ratio 6091.01h/6091.02h to determine the position reference increment for an individual synchronization period and convert it to the speed information. In PP mode, check the gear ratio 6091.01h/6091.02h and determine the value of 6081h (Profile velocity). In HM mode, check the gear ratio 6091.01h/6091.02h, and determine 6099.01h and 6099.02h.	In CSP mode, decrease the position reference increment per synchronization period. The host controller should cover the position ramp when generating references. In PP mode, decrease the value of 6081h, or increase the acceleration/deceleration ramp (6083h, 6084h). In HM mode, decrease the values of 6099.01h and 6099.02h or increase the acceleration/deceleration ramp (609Ah). Decrease the gear ratio according to actual conditions.
6. The value of 6065h is excessively low relative to the operating conditions.	Check whether 6065h is set to an excessively low value.	Increase the value of 6065h.
7. The servo drive or motor is faulty.	Monitor the operation waveform through the oscilloscope function in the software tool: position reference, position feedback, speed reference, and torque reference.	If the position reference is not 0 but the position feedback remains 0, replace the servo drive or motor.

EB00.1: Position deviation overflow

Cause:

Deviation of the position calculated by the drive is excessive.

Troubleshooting:

Cause	Verification method	Solution
1. U/V/W output phase loss or incorrect phase sequence occurs on the servo drive.	Perform a no-load trial run on the motor and check the wiring.	Re-connect the cables according to the wiring diagram or replace the cables.
2. The servo drive U/V/W output cables or encoder cables are disconnected.	Check the wiring.	Connect the cables again. The servo drive power cables (U/V/W) must be connected in the correct order at both ends. If necessary, replace all cables and ensure a reliable connection.
3. The motor rotor is stalled due to mechanical factors.	Check the reference and motor speed (H0b.00) through the software tool or keypad: References in the position control mode: H0b.13 (Input position reference counter) References in speed control mode: H0b.01 (Speed reference) Operation reference in torque control mode: H0b.02 (Internal torque reference) Check whether the operation reference is not 0, but the motor speed is 0 in the corresponding mode.	Eliminate mechanical factors.
4. The servo drive gains are too low.	Check the position loop gain and speed loop gain of the drive: 1st gain set: H08.00 to H08.02; 2nd gain set: H08.03 to H08.05	Adjust the gain values manually or perform gain auto-tuning.
5. The position reference increment is excessive.	Position control mode: In CSP mode, check the gear ratio 6091.01h/6091.02h to determine the position reference increment for an individual synchronization period and convert it to the speed information. In PP mode, check the gear ratio 6091.01h/6091.02h and determine the value of 6081h (Profile velocity). In HM mode, check the gear ratio 6091.01h/6091.02h, and determine 6099.01h and 6099.02h.	In CSP mode, decrease the position reference increment per synchronization period. The host controller should cover the position ramp when generating references. In PP mode, decrease the value of 6081h, or increase the acceleration/deceleration ramp (6083h, 6084h). In HM mode, decrease the values of 6099.01h and 6099.02h or increase the acceleration/deceleration ramp (609Ah). Decrease the gear ratio according to actual conditions.

Cause	Verification method	Solution
6. The value of 6065h is excessively low relative to the operating conditions.	Check whether 6065h is set to an excessively low value.	Increase the value of 6065h.
7. The servo drive or motor is faulty.	Monitor the operation waveform through the oscilloscope function in the software tool: position reference, position feedback, speed reference, and torque reference.	If the position reference is not 0 but the position feedback remains 0, replace the servo drive or motor.

EB01.0: Position reference increment too large

Cause:

The pulse reference increment exceeds the excessive reference threshold three times consecutively.

Troubleshooting:

Cause	Verification method	Solution
The pulse reference increment exceeds the excessive reference threshold three times consecutively.	Check whether the baud rate of pulse reference input exceeds H0A.09.	1. Increase the value of H0A.09. 2. Reduce the pulse input frequency.

EB01.1: Individual position reference increment too large

Cause:

The incremental distance to the target position is excessively large.

Troubleshooting:

Cause	Verification method	Solution
The target position increment is too large.	Check the variation between two adjacent target positions by using the software tool.	1. Check whether the maximum motor speed fulfills the application requirement. If yes, reduce the target position reference increment, which is to lower the profiled reference speed. If not, replace the servo motor. 2. Before switching the modes or switching on the servo drive, check whether the target position is aligned with current position feedback. 3. The communication time sequence of the host controller is abnormal, leading to errors in the data received by slave. Check the communication time sequence of the host controller.

EB01.2: Excessive position reference increment persisted

Cause:

The target position increment is excessively large for a long time.

Troubleshooting:

Cause	Verification method	Solution
The target position increment is excessively large for a long time.	Check the variation between two adjacent target positions by using the software tool.	1. Check whether the maximum motor speed fulfills the application requirement. If yes, reduce the target position reference increment, which is to lower the profiled reference speed. If not, replace the servo motor. 2. Before switching the modes or switching on the servo drive, check whether the target position is aligned with current position feedback. 3. The communication time sequence of the host controller is abnormal, leading to errors in the data received by slave. Check the communication time sequence of the host controller.

EB01.3: Reference overflow

Cause:

The target position is still in the process of transmission when the servo limit or software position limit signal is activated and the 32-bit upper/lower limit is reached.

Troubleshooting:

Cause	Verification method	Solution
The target position is still in the process of transmission when the servo limit or software position limit signal is activated and the 32-bit upper/lower limit is reached.	Check whether the host controller keeps sending commands after the overtravel alarm is reported by the servo drive.	1. Detect the servo limit signal (bit0 and bit1 of 60FDh recommended) through the host controller. 2. The host controller stops transmitting the limit direction reference after detecting the active servo limit signal.

EB02.0: Excessive position deviation in fully closed-loop mode

Cause:

The absolute value of position deviation in fully closed-loop mode exceeds the value of H0F.08 (Excessive position deviation threshold in fully closed-loop mode).

Troubleshooting:

Cause	Verification method	Solution
1. U/V/W output phase loss or incorrect phase sequence occurs on the servo drive.	Perform a no-load trial run on the motor and check the wiring.	Re-connect the cables according to the wiring diagram or replace the cables.
2. The servo drive U/V/W cables or internal/external encoder cable is disconnected.	Check the wiring.	Connect the cables again. The servo drive power cables (U/V/W) must be connected in the correct order at both ends. If necessary, replace all cables and ensure a reliable connection.

Cause	Verification method	Solution
3. The motor rotor is stalled due to mechanical factors.	Check the reference and motor speed (H0b.00) through the software tool or keypad: Reference in position control mode: H0b.13 (Input position reference counter); Reference in speed control mode: H0b.01 (Speed reference); Reference in torque control mode: H0b.02 (Internal torque reference). Check whether the reference is not 0 but the motor speed is 0 in the corresponding mode.	Eliminate mechanical factors.
4. The servo drive gains are too low.	Check the position loop gain and speed loop gain of the drive: 1st gain set: H08.00 to H08.02; 2nd gain set: H08.03 to H08.05	Adjust the gain values manually or perform gain auto-tuning.
5. The input pulse frequency is high.	When the pulse reference is used as the position reference source, check whether the pulse frequency is excessively high or whether the acceleration/deceleration time is set to 0 or an excessively low value.	Reduce the position reference frequency or the electronic gear ratio. If position pulses are outputted through the host controller, you can set the acceleration/deceleration time through the host controller directly. If not, increase the values of H05.04 and H05.06.
6. The value of H0F.08 (Threshold of excessive position deviation) is excessively low under current operating conditions.	Check whether the value of H0F.08 is excessively low.	Increase the setpoint of H0F.08.
7. The servo drive or motor is faulty.	Monitor the operation waveform through the oscilloscope function in the software tool: position reference, position feedback, speed reference, and torque reference.	If the position reference is not 0 but the position feedback remains 0, replace the servo drive or motor.

EB02.1: Fully closed-loop position deviation overflow

Cause:

The absolute value of the fully closed-loop position deviation is greater than 2^{31}.

Troubleshooting:

Cause	Verification method	Solution
1. U/V/W output phase loss or incorrect phase sequence occurs on the servo drive.	Perform a no-load trial run on the motor and check the wiring.	Re-connect the cables according to the wiring diagram or replace the cables.
2. The servo drive U/V/W cables or encoder cable is disconnected.	Check the wiring.	Connect the cables again. The servo drive power cables (U/V/W) must be connected in the correct order at both ends. If necessary, replace all cables and ensure a reliable connection.

Cause	Verification method	Solution
3. The motor rotor is stalled due to mechanical factors.	Check the reference and motor speed (H0b.00) through the software tool or keypad: Reference in position control mode: H0b.13 (Input position reference counter); Reference in speed control mode: H0b.01 (Speed reference); Reference in torque control mode: H0b.02 (Internal torque reference). Check whether the reference is not 0 but the motor speed is 0 in the corresponding mode.	Eliminate mechanical factors.
4. The servo drive gains are too low.	Check the position loop gain and speed loop gain of the drive: 1st gain set: H08.00 to H08.02; 2nd gain set: H08.03 to H08.05	Adjust the gain values manually or perform gain auto-tuning.
5. The position reference increment is excessive.	Position control mode: In IP/CSP mode, view the gear ratio 6091.01h/6091.02h to check the position reference increment for a single synchronous cycle and convert it to the speed information. In PP mode, view the gear ratio 6091.01h/6091.02h and define the value of 6081h (Profile velocity). In HM mode, view the gear ratio 6091.01h/6091.02h, and define the value of 6099.01h and 6099.02h.	In IP/CSP mode, decrease the position reference increment for a single synchronous cycle. The host controller should cover the position ramp when generating references. In PP mode, decrease the value of 6081h or increase the acceleration/deceleration ramp (6083h, 6084h). In HM mode, decrease the value of 6099.01h and 6099.02h or increase the acceleration/deceleration ramp (609Ah). Decrease the gear ratio according to actual conditions.
6. The value of H0F.08 (Threshold of excessive position deviation) is excessively low under current operating conditions.	Check whether 6065h is set to an excessively low value.	Increase the value of 6065h.
7. The servo drive or motor is faulty.	Monitor the operation waveform through the oscilloscope function in the software tool: position reference, position feedback, speed reference, and torque reference.	If the position reference is not 0 but the position feedback remains 0, replace the servo drive or motor.

EB03.0: Electronic gear ratio beyond the limit - H05.02

Cause:

The electronic gear ratio (H05.02) exceeds the limit: (0.001, 4000 × Encoder resolution ÷ 10000).

Troubleshooting:

Cause	Verification method	Solution
The electronic gear ratio converted by H05.02 exceeds the maximum gear ratio or is lower than the minimum gear ratio.	Check whether the electronic gear ratio converted by H05.02 is within the range of 0.001–4000 × Encoder resolution ÷ 10000.	Change the value of H05.02.

EB03.1: Electronic gear ratio 1 beyond the limit

Cause:

The electronic gear ratio 1 exceeds the limit: (0.001 to 4000 × Encoder resolution/10000).

Troubleshooting:

Cause	Verification method	Solution
The electronic gear ratio 1 exceeds the maximum gear ratio or is lower than the minimum gear ratio.	Check whether the electronic gear ratio 1 is within the range of 0.001–4000 x Encoder resolution/10000.	Change the values of H05.07 and H05.09.

EB03.2: Electronic gear ratio 2 beyond the limit

Cause:

The electronic gear ratio 2 exceeds the limit: (0.001–4000 × Encoder resolution÷10000).

Troubleshooting:

Cause	Verification method	Solution
The electronic gear ratio 2 exceeds the maximum gear ratio or is lower than the minimum gear ratio.	Check whether electronic gear ratio 2 is within the range of 0.001–4000 × Encoder resolution ÷ 10000.	Change the values of H05.11 and H05.13.

EB05.0: Excessive static error

Cause:

When the motor is at standstill, the motor moves beyond the set threshold for a period of time.

Troubleshooting:

Cause	Verification method	Solution
When the motor is at standstill, the motor moves beyond the set threshold for a period of time.	Check whether the motor moves beyond the set threshold when it is at standstill.	Check whether H13.12 and H13.13 are set to proper values.

ED02.0: Modbus communication timeout

Cause:

Modbus communication timeout

Troubleshooting:

Cause	Verification method	Solution
Modbus communication timeout	Increase the value of H0E.83.	Verify the Modbus access cycle by frame capturing.

ED03.0: CANLink communication failure

Cause:

The master is offline.

Troubleshooting:

Cause	Verification method	Solution
The master is offline.	1. Increase the heartbeat threshold of the master. 2. Check the wiring of components.	Capture frames to ensure that the master station is online.

ED04.0: CANopen communication timeout

Cause:

The slave reaches the time configured by the consumer or the node guarding time.

Troubleshooting:

Cause	Verification method	Solution
The slave reaches the time configured by the consumer or the node guarding time.	Check whether the heartbeat frame cycle of the host controller is normal by frame grab.	Check whether all CAN nodes are online, or check the CANopen configuration, and reset the node or communication.

ED05.0: CANopen communication initialized

Cause:

After the motor is enabled, errors such as slave offline, heartbeat abnormal, load ratio too high, data frame loss, and false master reset occurred when NMT changes to the initialization state.

Troubleshooting:

Cause	Verification method	Solution
After the motor is enabled, errors such as slave offline, heartbeat abnormal, load ratio too high, data frame loss, and false master reset occurred when NMT changes to the initialization state.	Check whether the reset frame is received during operation by capturing frames.	Reset the NMT node. When changing the NMT, disable the output stage. 1. Use shielded cables to prevent interference. 2. Ensure the drive is grounded properly. 3. Ensure the load rate is proper. 4. Ensure the set suppression time is correct if asynchronous transmission is configured. 5. Ensure the reset frame is not triggered inadvertently by the host controller. 6. Ensure the termination resistor is installed.

ED08.0: CANopen bus PDO transmission length error

Cause:

The length of the content transmitted by the PDO is inconsistent with the mapping length during configuration.

Troubleshooting:

Cause	Verification method	Solution
The length of the content transmitted by the PDO is inconsistent with the mapping length during configuration.	Check whether the PDO transmission length is consistent with the configuration by capturing frames.	Re-configure the PDO and reset the node or communication.

ED11.0: CANopen sync period error too large

Cause:

The sync cycle error exceeds the setpoint.

Troubleshooting:

Cause	Verification method	Solution
The sync cycle error exceeds the setpoint.	Sample the synchronization signal through the software tool and calculate whether the period is higher than the fault threshold.	Check the settings of 60C2.01h and 60C2.02h and ensure the synchronization period is set properly. Ensure the synchronization cycle of the host controller is set correctly and consistent with the setting of 60C2h. Check the wiring between the slave and the master.

EE09.0: Software limit setting error

Cause:

The lower limit of the software limit is equal to or larger than the upper limit.

Troubleshooting:

Cause	Verification method	Solution
The software lower limit is equal to or higher than the software upper limit.	Check the values of 607D.01h and 607D.02h.	Reset the values and ensure that the value of 607D.01h is smaller than that of 607D.02h.

EE09.1: Home setting error

Cause:

The home offset exceeds the upper/lower limit.

Troubleshooting:

Cause	Verification method	Solution
1. The home offset is outside the software limit defined by H0A.41 and H0A.43 (607C and 607D).	Check whether the home offset is outside the software limit range when the encoder works in the incremental mode, absolute linear mode, and single-turn absolute mode.	Set the home offset to a value within the software position limit range.
2. The home offset is beyond the upper/lower limit in rotation mode.	The home offset is outside the mechanical single-turn upper/ lower limit when the encoder works in rotation mode.	Set the home offset to a value within the mechanical single-turn upper/lower limit.

EE09.2: Gear ratio beyond limit

Cause:

The electronic gear ratio exceeds the limit: (0.001, 4000 × Encoder resolution ÷ 10000).

Troubleshooting:

Cause	Verification method	Solution
The set electronic gear ratio exceeds the preceding range.	The gear ratio 6091.01h/6091.02h exceeds the preceding range.	Keep the gear ratio within the preceding range.

9.3.3.2 Internal fault.

When any one of the following faults occurs, contact Inovance for technical support.

- E602.0: Angle auto-tuning failure
- E220.0: Phase sequence fault
- EA40.0: Parameter auto-tuning failure
- E111.0: Internal parameter fault

9.3.4 Description of Alarm Codes

E108.0: Storage parameter write fault

Cause:

Parameter values cannot be written to EEPROM.

Troubleshooting:

Cause	Verification method	Solution
A fault occurs when writing parameters.	Modify a certain parameter, power cycle the drive, and check whether the modification is saved.	If the modification is not saved and the fault persists after the drive is restarted repeatedly, replace the drive.

E108.1: Storage parameter read fault

Cause:

Parameter values cannot be read from EEPROM.

Troubleshooting:

Cause	Verification method	Solution
A fault occurs when writing parameters, and the system indicates an EEPROM read failure.	Modify a certain parameter, power cycle the drive, and check whether the modification is saved.	If the modification is not saved and the fault persists after the drive is restarted repeatedly, replace the drive.

E108.2: EEPROM data write verification error

Cause:

The verification on the data written to EEPROM failed.

Troubleshooting:

Cause	Verification method	Solution
A fault occurs when writing parameters.	Modify a certain parameter, power cycle the drive, and check whether the modification is saved.	If the modification is not saved and the fault persists after the drive is restarted repeatedly, replace the drive.

E108.3: EEPROM data read verification error

Cause:

The verification on the data read from EEPROM failed.

Troubleshooting:

Cause	Verification method	Solution
An error occurs when reading parameters.	Modify a certain parameter, power cycle the drive, and check whether the modification is saved.	If the modification is not saved and the fault persists after the drive is restarted repeatedly, replace the drive.

E108.4: Single data saved frequently

Cause:

Single data is saved frequently to EEPROM.

Troubleshooting:

Cause	Verification method	Solution
Saving single data frequently to the EEPROM may damage the EEPROM.	1. Check H0b.90 and H0b.91. H0b.90 displays parameters or object dictionaries that are saved frequently (displayed in hexadecimal). If H0b.91 is set to 15, H0b.90 displays the internal variable of the software. 2. Check "Func test 1" through the oscilloscope. This channel displays the address that is being saved by EEPROM. 3. Check the number of saving events through "Func test 2" of the oscilloscope.	1. If the alarm is caused by manual modification of a certain parameter or object dictionary, there will be no frequent storage of a certain data entry during operation, and you can reset the fault. 2. Check the abnormal parameter through H0b. 90 or the oscilloscope channel, and identify the cause. For example, if the host controller program frequently writes parameters through SDO, you can modify the program to stop it, or you can set H0E.01 to 0.

E110.0: Frequency-division pulse output setting error

Cause:

The frequency-division output setpoint (H05.17) exceeds the encoder resolution.

Troubleshooting:

Cause	Verification method	Solution
The number of frequency-division pulses (after quadrature multiplication) exceeds the motor resolution.	Check the setpoint of H05.17.	Adjust the value of H05.17 based on the motor resolution.

E120.3: Different power between motor and drive

Cause:

The rated power of the motor does not match that of the drive.

Troubleshooting:

Cause	Verification method	Solution
The rated current/voltage of the motor is higher than that of the servo drive.	Check whether the rated motor current/voltage is larger than the rated current of the servo drive.	Replace the motor or servo drive.

E121.0: S-ON command inactive

Cause:

A redundant S-ON signal is sent when some auxiliary functions are used.

Troubleshooting:

Cause	Verification method	Solution
The external S-ON signal is active when servo drive is enabled internally.	Check whether auxiliary functions (H0d.02, H0d.03, and H0d.12) are used and whether DI function 1 (FunIN.1: S-ON signal) is active.	Deactivate the DI assigned with FunIN.1 (both hardware DI and virtual DI).

E126.3: PR process segment parameter beyond the upper/lower limit

Cause:

PR process segment parameter outside the upper/lower limit

Troubleshooting:

Cause	Verification method	Solution
In segment mode, the parameter written exceeds the upper limit of this parameter.	Check the upper/lower limit value of the written parameter.	In segment mode, the parameter written exceeds the upper limit of this parameter.

E244.0: Abnormal input torque reference

Cause:

Abnormal input torque reference

Troubleshooting:

Cause	Verification method	Solution
The input torque reference is abnormal. The input torque reference of the motor with brake is 0 or the input torque reference is smaller than H13.41 while the input torque reference monitoring function is enabled.	Check whether the torque limit input is abnormal.	1. Adjust the torque limit input. 2. Adjust the alarm threshold (H13.41) according to the scenario.

E244.1: Positive/negative internal torque limit calculation error

Cause:

An error occurs during internal torque/speed limit calculation

Troubleshooting:

Cause	Verification method	Solution
An error occurs during internal torque/speed limit calculation	Adjust the input of torque/speed limit and electronic gear ratio to check whether the alarm is reported again.	1. Adjust the input of torque/speed limit and electronic gear ratio. 2. Identify the cause of error and contact the manufacturer.

E247.0: Torque saturation alarm

Cause:

The motor torque reference remains excessively high for a long time.

Troubleshooting:

Cause	Verification method	Solution
The motor torque reference remains excessively high for a long time.	1. Check whether the acceleration/ deceleration is excessively high. 2. Check whether the torque is limited. 3. Check whether the load is excessive and the motor is running out of specification.	1. Reduce the acceleration/ deceleration rate properly. 2. Adjust the torque limit value. 3. Optimize the operation parameters or adjust the model.

E510.0: Frequency division pulse output overspeed

Cause:

The single-channel output pulse frequency exceeds the frequency upper limit allowed by the hardware (4 MHz) when pulse output is used (H05.38 = 0/1/2).

Troubleshooting:

Cause	Verification method	Solution
The MCU detects excessive pulse increment fed back by FPGA.	1. When H05.38 is set to 0 (Encoder frequency-division output), check whether the output pulse frequency corresponding to the motor speed upon fault exceeds the limit. Output pulse frequency (Hz) = Motor speed (rpm) ÷ 60 × H05.17 2. The input pulse frequency exceeds 2 MHz or interference exists in the pulse input pins when H05.38 is set to 1 (Reference pulse synchronous output). Low-speed pulse input pins: open-collector input terminals: PULLHI, PULSE+, PULSE-, SIGN+, SIGN-; maximum pulse frequency: 200 kpps. High-speed pulse input pins: differential input terminals: HPULSE +, HPULSE-, HSIGN+, HSIGN, maximum pulse frequency: 8 Mpps	1. Decrease the value of H05.17 (encoder frequency-division pulses) to allow the output pulse frequency, within the speed range required by the machine, to drop below the frequency upper limit allowed by the hardware. 2. Decrease the input pulse frequency to a value within the frequency upper limit allowed by hardware. In this case, if you do not modify the electronic gear ratio, the motor speed will decrease. If the input pulse frequency is high but is still within the frequency upper limit allowed by the hardware, take anti-interference measures (use STP cable for pulse input and set pin filter parameter H0A.24 or H0A.30). This is to prevent false alarms caused by interference pulses superimposed to actual pulse references.

E600.0: Angle auto-tuning failure

Cause:

Vibration cannot be suppressed. You can set notch parameters (H09.12...H09.23) manually to suppress vibration.
The auto-tuned values fluctuate dramatically. Increase the maximum operating speed, reduce the acceleration/deceleration time, and shorten the stroke of the lead screw during ETune operation.
Mechanical couplings of the load are loose, or the mechanism is eccentric. Rectify mechanical faults.
An alarm occurs during auto-tuning and causes interruption. Clear the alarm and perform auto-tuning again.

The vibration cannot be suppressed if the load carries large inertia. In this case, increase the acceleration/deceleration time to ensure the motor current is not saturated.
The position following performance is inadequate. This is usually caused by the maximum motor speed being lower than the speed set for inertia auto-tuning, resulting in failure to follow the position. Ensure the speed setpoint is lower than the maximum motor speed.

Troubleshooting:

Cause	Verification method	Solution
1. Continuous vibration exists during auto-tuning. 2. The auto-tuned values fluctuate dramatically. 3. Mechanical connections of the load are loosened or eccentric. 4. An alarm occurs during auto-tuning and causes interruption. 5. The vibration cannot be suppressed if the load carries large inertia. In this case, increase the acceleration/deceleration time to ensure the motor current is unsaturated. 6. The position following performance is inadequate, which is usually caused by the situation that the maximum motor speed is lower than the speed set by inertia auto-tuning, leading to position following error.	The torque jitters upon stop at internal detection (not FFT). Three times more than the last auto-tuned value for variation less than 5 times. 0.5 times more than last auto-tuned value for variation above 5 times.	1. Clear the fault and perform inertia auto-tuning again. 2. Enable vibration suppression when the vibration cannot be suppressed automatically. 3. Check and ensure mechanical connections are secure. 4. During ETune operations, increase the maximum running speed, reduce the acceleration/deceleration time, and shorten the screw stroke. 5. Ensure that the speed setpoint is lower than the maximum speed of the motor.

E601.0: Homing alarm

Cause:

The homing time exceeds the setpoint.

Troubleshooting:

Cause	Verification method	Solution
1. The home switch is faulty.	During homing, the system continuously searches for the home at high speed. After high-speed searching, low-speed searching in the reverse direction applies.	If a hardware DI is used, check whether the corresponding DI function is assigned to a certain DI in group 2003h and check the wiring of this DI. Change the DI logic manually and observe the value of H0b.03 (monitored DI status) to monitor whether the servo drive receives corresponding DI level changes. If the home signal is Z signal, but it cannot be found, check the condition of the Z signal.
2. The home-searching time is too short.	Check whether the value of H05.35h is too low.	Increase the value of H05.35.
3. The speed for searching for the home switch signal at high speed is excessively low.	Check the distance between the start position of homing and the home switch. Then, check whether the setpoint of 6099.01h is too low, resulting in a long homing process.	Increase the value of 6099.01h.

E601.1: Homing switch error

Cause:

The home switch is set improperly.

Troubleshooting:

Cause	Verification method	Solution
The home switch is set improperly.	Check whether the limit signals at two sides are both active. Check whether the limit signal and the deceleration point signal/home signal are both active. Check whether the positive and negative position limits are activated successively.	Set the position of the hardware switch properly.

E601.2: Homing mode setting error

Cause:

The homing mode value exceeds the existing homing mode value.

Troubleshooting:

Cause	Verification method	Solution
The homing mode value exceeds the existing homing mode value.	Check whether the homing mode value exceeds the existing homing mode value (object dictionary 6098h).	Change the value of 6098h.

E601.3: Position feedback alarm

Cause:

After the encoder is disconnected and reconnected, the position feedback system reports an alarm.

Troubleshooting:

Cause	Verification method	Solution
1. After homing is completed in incremental mode, if bit4 of H0C.73 is set to 0 after the encoder is disconnected and reconnected, E601.3 (User position feedback error) is reported by the drive. 2. After homing is completed in absolute mode, if bit4 of H0C.73 is set to 0 after the encoder is disconnected and reconnected, E601.3 (User position feedback error) is reported by the drive.	1. Check whether the encoder was disconnected in incremental mode. 2. Check whether the encoder is connected improperly after disconnection in absolute mode.	1. The fault can be cleared upon power-on. 2. Set bit4 of H0C.73 to 1 to block the alarm. 3. Perform homing again.

E602.9: Angle auto-tuning not performed on incremental encoder

Cause:

Angle auto-tuning not performed on incremental encoder

Troubleshooting:

Cause	Verification method	Solution
Angle auto-tuning is not performed on the incremental encoder and the corresponding alarm is enabled.	Confirm whether bit1 of H32.04 is set.	1. The alarm is reset automatically after angle auto-tuning is completed. 2. If this alarm is not needed, reset bit1 of H32.04.

E609.0: Data storage timeout

Cause:

Data download by the software tool interrupted

Troubleshooting:

Cause	Verification method	Solution
Data download by the software tool interrupted	Check the connection between the drive and software tool.	Download the data again.

E609.1: Data storage overflow

Cause:

Data download by the software tool interrupted

Troubleshooting:

Cause	Verification method	Solution
Data download by the software tool interrupted	Check the connection between the drive and software tool.	Download the data again.

E609.2: Data storage failure

Cause:

Data storage failure

Troubleshooting:

Cause	Verification method	Solution
The FLASH memory chip is faulty or the interface between MCU and FLASH is faulty.	Download the data again at next power-on.	If the fault persists after repeated restart, replace the drive.

E609.3: Data erasure failure

Cause:

Data erasure failure

Troubleshooting:

Cause	Verification method	Solution
The FLASH memory chip is faulty or the interface between MCU and FLASH is faulty.	Download the data again at next power-on.	If the fault persists after repeated restart, replace the drive.

E621.1: Overload current limit torque reached

Cause:

Overload current limit torque reached

Troubleshooting:

Cause	Verification method	Solution
1. The load is too heavy and the effective torque output by the motor remains above the rated torque. 2. Acceleration/deceleration is too frequent or the load inertia is too large. 3. The motor and encoder are wired improperly. 4. The gain is improper or the stiffness level is too high. 5. The motor is stalled due to mechanical factors, resulting in overload during operation. 6. The drive is faulty.	1. Confirm the overload characteristics of the servo drive or servo motor. Check whether the average load rate (H0b.12) of the servo drive remains above 100.0%. 2. Check whether H32.77 is set to an excessively high value.	1. Replace with a drive of larger capacity and a matching motor, or reduce the load and increase the acceleration/deceleration time.

E730.0: Encoder battery alarm

Cause:

The battery voltage of the absolute encoder is lower than 3.0 V.

Troubleshooting:

Cause	Verification method	Solution
The battery voltage of the absolute encoder is lower than 3.0 V.	Measure the battery voltage.	Replace the battery with a new one that provides matching voltage.

E831.1: Excessive AI1 zero offset

Cause:

The AI1 zero offset exceeds 500 mV.

Troubleshooting:

Cause	Verification method	Solution
1. Check whether the wiring is incorrect or interference exists.	Check the wiring according to the correct wiring diagram.	Use twisted shielded cables to perform wiring again, shorten the cable length, and increase the AI1 input filter time.
2. The servo drive is faulty.	Disconnect AI1 and measure whether the actual terminal voltage exceeds 0.5 V.	If not, replace the drive.

E831.2: AI2 zero offset too large

Cause:

The AI2 zero offset exceeds 500 mV.

Troubleshooting:

Cause	Verification method	Solution
1. Check whether the wiring is incorrect or interference exists.	Check the wiring according to the correct wiring diagram.	Use twisted shielded cables to perform wiring again, shorten the cable length, and increase the AI2 input filter time.
2. The servo drive is faulty.	Disconnect AI2 and measure whether the actual terminal voltage exceeds 0.5 V.	If not, replace the drive.

E834.1: AI1 overvoltage alarm

Cause:

AI1 input voltage exceeds 11.5 V.

Troubleshooting:

Cause	Verification method	Solution
1. Check whether the wiring is incorrect or interference exists.	Check the wiring according to the correct wiring diagram.	Use twisted shielded cables to perform wiring again, shorten the cable length, and increase the AI1 input filter time.
2. The input voltage is too high.	Measure whether the actual terminal voltage exceeds 11.5 V.	Adjust the input voltage to a value lower than 11.5 V.

E834.2: AI2 overvoltage

Cause:

AI2 input voltage exceeds 11.5 V.

Troubleshooting:

Cause	Verification method	Solution
1. Check whether the wiring is incorrect or interference exists.	Check the wiring according to the correct wiring diagram.	Use twisted shielded cables to perform wiring again, shorten the cable length, and increase the AI2 input filter time.
2. The input voltage is too high.	Measure whether the actual terminal voltage exceeds 11.5 V.	Adjust the input voltage to a value lower than 11.5 V.

E900.0: DI emergency braking

Cause:

The logic of the DI (including the hardware DI and virtual DI) assigned with DI function 34 (FunIN.34: Emergency stop) is active.

Troubleshooting:

Cause	Verification method	Solution
The DI function 34 (FunIN.34: Emergency stop) is triggered.	Check whether the logic of DI assigned with FunIN.34: Emergency stop is activated.	Check the operation mode and deactivate the DI braking signal without affecting the safety performance.

E902.0: Invalid DI/VDI settings

Cause:

DI/VDI function parameters are set to invalid values.

Troubleshooting:

Cause	Verification method	Solution
DI or VDI function parameters are set to invalid values.	Check whether DI function configuration parameters in groups H03 and H17 are set to invalid values.	Set DI/VID function parameters to valid values.

E902.1: Invalid DO/VDO settings

Cause:

DO/VDO function parameters are set to invalid values.

Troubleshooting:

Cause	Verification method	Solution
DO or VDO function parameters are set to invalid values.	Check whether DI function configuration parameters in groups H04 and H17 are set to invalid values.	Set DO/VDO function parameters to valid values.

E902.2: Torque arrival setting inactive

Cause:

The DO parameters set for torque arrival in the torque control mode are inactive.

Troubleshooting:

Cause	Verification method	Solution
The DO parameters set for torque reach in torque control mode are inactive.	Check whether the value of H07.22 is lower than or equal to the value of H07.23 (unit: 0.1%).	Set H07.22 to a value higher than that of H07.23.

E909.0: Motor overload alarm

Cause:

The cumulative motor heat exceeds the overload protective alarm threshold.

Troubleshooting:

Cause	Verification method	Solution
1. Wiring of the motor and encoder is incorrect or in poor contact.	Check the wiring among the servo drive, servo motor and the encoder according to the correct wiring diagram.	Connect cables according to the correct wiring diagram. Preferably use the cables provided by Inovance. When customized cables are used, prepare and connect the cables according to the hardware wiring instructions.
2. The load is excessive. The motor keeps outputting effective torque that higher than the rated torque for a long time.	Check the overload characteristics of the servo drive or servo motor. Check whether the average load rate (H0b.12) of the servo drive remains above 100.0%.	Use a drive of higher capacity and a matching motor. Alternatively, reduce the load and increase the acceleration/ deceleration time.
3. Acceleration/deceleration is frequent, or the load inertia is high.	Check the mechanical inertia ratio or perform inertia auto-tuning. View the value of H08.15 (Load moment of inertia ratio). Check the single-shot operation cycle when the motor runs cyclically.	Increase the acceleration/ deceleration time.
4. The gain is improper, or the stiffness is excessively high.	Check whether the motor vibrates and generates unusual noise during operation.	Adjust the gains.
5. The set servo drive model or motor model are incorrect.	View the model of the motor equipped with a fieldbus encoder in H00.05 and the servo drive model in H01.10.	Read the servo drive nameplate and set the correct servo drive model (H01.10) and motor model.

Cause	Verification method	Solution
6. The motor is stalled due to mechanical factors, resulting in excessive load during operation.	Check the reference and motor speed (H0b.00) through the software tool or keypad: Reference in the position control mode: H0b.13 (Input position reference counter) Reference in the speed control mode: H0b.01 (Speed reference) Reference in the torque control mode: H0b.02 (Internal torque reference) Check whether the reference is not 0 but the motor speed is 0 in the corresponding mode.	Rectify mechanical problems.
7. The servo drive is faulty.	Power cycle the servo drive.	If the fault persists after a power cycle, replace the drive.

E910.0: Control circuit overvoltage

Cause:

Overvoltage occurred on the control circuit of the drive.

Troubleshooting:

Cause	Verification method	Solution
Overvoltage occurred on the control circuit of the drive.	1. Check the input power specifications of the servo drive and measure whether the input voltage of the control cable complies with the following specifications: 200 V servo drive: Valid value: 200 V to 240 V Allowable deviation: -10% to +10% (180 V to 264 V) 400 V servo drive: Valid value: 380V to 480 V Allowable deviation: -10% to +10% (342 V to 528 V) 2. Check whether control circuit cables are connected properly and whether the voltage of control circuit cables (L1C and L2C) on the drive side is within the specified range.	Re-connect or replace the cables.

E920.0: braking resistor overload

Cause:

The accumulative heat of the braking resistor exceeds the threshold.

Troubleshooting:

Cause	Verification method	Solution
1. The cable of the external braking resistor is in poor connection, connected loosely, or disconnected.	Remove the external braking resistor and measure whether its resistance is "∞" (infinite). Measure whether the resistance between terminals P⊕ and C is "∞" (infinite).	Use a new external braking resistor. If the resistance measured is the same as the nominal value, connect the resistor between P and C. Connect the external braking resistor between P and C with a new cable.
2. The jumper between terminals P⊕ and D is shorted or disconnected when the built-in braking resistor is used.	Measure whether the resistance between terminals P⊕ and D is "∞" (infinite).	Connect terminals P⊕ and D directly with a proper cable.
3. H02.25 is set to an incorrect value when an external braking resistor is used. 4. The resistance of the external braking resistor used is excessively high. 5. The value of H02.27 is higher than the resistance of the external braking resistor used.	Check the value of H02.25. Measure whether the resistance of the external resistor connected between P⊕ and C is too high. Check whether the value of H02.27 is larger than the resistance of the external braking resistor connected between P⊕ and C.	1. Refer to "Wiring and Setting of the Regenerative Resistor" in SV670P-INT Series Servo Drive Hardware Guide to set H02.25: H02.25=1 (External braking resistor, naturally ventilated) H02.25=2 (External braking resistor, forced-air cooling) 2. Select a proper braking resistor according to section "Specifications of the Braking Resistor". 3. Set H02.27 according to the resistance of the external braking resistor used.
6. The input voltage of the main circuit exceeds the specifications.	Measure whether the main circuit input voltage on the drive side complies with the following specifications: 200 V servo drive: Valid value: 200 V to 240 V Allowable deviation: -10% to +10% (180 V to 264 V) 400 V servo drive: Valid value: 380V to 480V Allowable deviation: -10% to +10% (342 V to 528 V)	Replace or adjust the power supply according to the specified range.
7. The load moment of inertia ratio is excessively high. 8. The motor speed is excessively high and deceleration is not done within the set time. The motor is in the continuous deceleration status during cyclic operation. 9. The capacity of the drive or braking resistor is not sufficient.	1. Perform inertia auto-tuning according to section "Inertia Auto-Tuning" or calculate total mechanical inertia according to the mechanical parameters. Check whether the actual load inertia ratio exceeds 30. 2. View the motor speed curve during cyclic operation and check whether the motor is in the deceleration status for a long time. 3. View the motor speed curve in a single cycle and calculate whether the maximum braking energy can be absorbed completely.	Select an external braking resistor of large capacity and set H02.26 according to the actual value. Select a servo drive of large capacity. Reduce the load if allowed. Increase the acceleration/ deceleration time if allowed. Increase the motor running cycle if allowed.
10. The servo drive is faulty.	-	Replace the servo drive.

E921.0: Dynamic brake resistor overload alarm

Cause:

The dynamic braking resistor is close to overload.

Troubleshooting:

Cause	Verification method	Solution
The accumulative heat of the dynamic braking resistor is close to the maximum thermal capacity of the resistor.	Check whether the value of H0b.98 is higher than or equal to 70%.	To avoid excessively high discharge current, prevent the motor from being driven reversely.

E922.0: Resistance of the external braking resistor too small

Cause:

The value of H02.27 (resistance of external braking resistor) is lower than the value of H02.21 (allowed minimum resistance of external braking resistor).

Troubleshooting:

Cause	Verification method	Solution
When an external braking resistor is used (H02.25 = 1 or 2), the resistance of this resistor is lower than the minimum resistance allowed by the servo drive.	Measure whether the resistance of the external braking resistor between terminals P⊕ and C is lower than the value of H02.21.	If yes, replace with an external braking resistor that matches the servo drive, and connect this resistor between terminals P⊕ and C. If not, set H02.27 to a value consistent with the resistance of this resistor.

E924.0: Braking transistor overtemperature

Cause:

The estimated temperature of the braking transistor is higher than H0A.49 (IGBT overtemperature threshold).

Troubleshooting:

Cause	Verification method	Solution
1. The junction temperature of the braking transistor is too high. 2. The braking transistor will be turned off automatically after overload occurs.	The braking transistor temperature exceeds the threshold defined by H0A.49.	Control the braking transistor activation count (including increasing the acceleration/ deceleration time, reducing the gain, and replacing with a drive of higher power rating).

E940.0: The controlled motor changes. It is recommended to restore default settings before operating the motor.

Cause:

The controlled motor changes. It is recommended to restore default values before use.

Troubleshooting:

Cause	Verification method	Solution
The controlled motor type changes. To ensure proper operation of the drive, it is recommended to restore default values before use. The alarm will be reported only once.	Check whether the motor model (H00.00) changes.	It is recommended to restore default values before use when the controlled motor changes. Alternatively, you can also keep the original parameter values.

E941.0: Parameter modifications activated at next power-on

Cause:

The parameters modified are those whose "Effective time" is "Next power-on".

Troubleshooting:

Cause	Verification method	Solution
The parameters modified are those whose "Effective time" is "Next power-on".	Check whether parameters modified are designed to be activated at next power-on.	Power cycle the motor.

E942.0: Frequent parameter storage

Cause:

The number of parameters modified at a time exceeds 700.

Troubleshooting:

Cause	Verification method	Solution
Too many parameters are modified and saved to EEPROM at a brief interval.	Check whether parameters are modified through the host controller at a brief interval.	Check the operation mode. For parameters that need not be saved to EEPROM, set H0E.01 properly.

E950.0: Forward overtravel alarm

Cause:

The logic of the DI allocated with FunIN.14: P-OT (Positive limit switch) is valid.

Troubleshooting:

Cause	Verification method	Solution
1. The logic of the DI assigned with FunIN.14 (P-OT function 14, positive limit switch) is active.	Check whether a certain DI in group H03 is assigned with FunIN.14. Check whether the logic of DI corresponding to the bit of H0b.03 (Monitored DI status) is active.	Check the operation mode. Send a reverse run command or rotate the motor to deactivate the DI function 14 without affecting the safety performance.
2. The position feedback of the drive reaches the positive software position limit.	Check whether the position feedback (H0b.17) is higher than the value of H0A.41. Check whether the soft limit function is set in H0A.40.	Use proper servo drive references to ensure the load travel range is within the software position limit.

E952.0: Reverse overtravel alarm

Cause:

The logic of the DI allocated with FunIN.15: N-OT (negative limit switch) is valid.

Troubleshooting:

Cause	Verification method	Solution
1. The logic of the DI assigned with FunIN.15 is active.	Check whether a certain DI in group H03 is assigned with FunIN.15. Check whether the logic of DI corresponding to the bit of H0b.03 (Monitored DI status) is active.	Check the operation mode. On the prerequisite of safety, send a forward run command or rotate the motor to deactivate the logic of DI assigned with FunIN.15.
2. The position feedback of the drive reaches the negative software position limit.	Check whether the position feedback (H0b.17) is lower than the value of H0A.43. Check whether the soft limit function is set in H0A.40.	Use proper servo drive references to ensure the load travel range is within the software position limit.

E954.0: Position command overflow

Cause:

In process segment mode, the position reference exceeds the limit.

Troubleshooting:

Cause	Verification method	Solution
In process segment mode, the position reference exceeds the limit.	1. Check the position reference. 2. Check the set limit value.	Change the value of the position reference and the limit.

E956.0: Forward position reference overtravel in process segment position mode

Cause:

Forward position reference overtravel occurs in the process segment position mode.

Troubleshooting:

Cause	Verification method	Solution
The position reference exceeds the limit upon forward run in the process segment, leading to an alarm.	In position control mode of the process segment, E956.0 occurs when the motor runs in the forward direction and the position reference exceeds the value of H22.04.	Reduce the position reference to a value lower than the setpoint of H22.04.

E958.0: Reverse position reference overtravel in process segment position mode

Cause:

Reverse direction position reference overtravel occurs in process segment position mode.

Troubleshooting:

Cause	Verification method	Solution
The position reference exceeds the limit upon reverse run in the process segment, leading to an alarm.	In position control mode of the process segment, E958.0 occurs when the motor runs in the reverse direction and the position reference exceeds the value of H22.06.	Increase the position reference to a value greater than the setpoint of H22.06.

E971.0: Undervoltage alarm for voltage drop protection

Cause:

If the bus voltage is lower than the undervoltage threshold when the voltage drop protection is enabled, you can set bit1 of H0A.88 to 1 to hide this alarm.

Troubleshooting:

Cause	Verification method	Solution
The bus voltage is lower than the undervoltage threshold.	Check the bus voltage. This alarm can be masked by setting bit1 of H0A.88 to 1.	Check the grid power supply.

E980.0: Frequency-division output overflow alarm

Cause:

Frequency-division output frequency calculation overflow

Troubleshooting:

Cause	Verification method	Solution
The frequency-division output frequency is excessive, leading to calculation overflow.	Check whether E510.0 alarm occurred and set H05.17 to a value until E510.0 is not reported.	Set H05.17 properly or decrease the maximum operating speed.

E990.0: Pulse input overspeed alarm

Cause:

Pulse input overspeed alarm

Troubleshooting:

Cause	Verification method	Solution
The pulse position reference keeps exceeding the maximum speed for a period longer than the time threshold of excessive pulse position reference increment.	Check whether the input pulse frequency is too high.	Reduce the frequency to a value below 4 M.

E991.1: SIGN pulse connection error

Cause:

If 24V is connected to SIGN+ and 0V to SIGN- without a current limiting resistor, a high current may be generated between SIGN+ and SIGN-, leading to voltage on the sensing resistor, triggering an alarm.

Troubleshooting:

Cause	Verification method	Solution
Pulse SIGN input voltage too high	1. Check the wiring of SIGN+ and SIGN- to confirm whether the current-limiting resistor is connected. 2. Check the 24 V power supply voltage to confirm whether the specified input range has been exceeded. 3. Measure the voltage between SIGN+ and SIGN- to confirm whether the voltage measured exceeds 24 V or near 24 V.	1. Check the wiring of SIGN+ and SIGN-. The current-limiting resistor must be connected. 2. Check the power supply voltage for SIGN+ and SIGN-. If the voltage is too high, use a power supply within 24 V.

EA34.9: Hall not configured during Hall auto-tuning

Cause:

Missing Hall configurations during Hall auto-tuning

Troubleshooting:

Cause	Verification method	Solution
H00.26 is not configured when dynamic Hall auto-tuning is enabled.	1. When H0A.13 is set to 6, check whether bit3 of H00.26 is not set to 1. 2. Check whether H0A.13 is set to 6 by mistake for encoders without Hall (bit3 of H00.26 is 0).	1. For motors with Hall, Hall auto-tuning is required (H0A.13 = 6). Set bit3 of H00.26 to 1. 2. For motors without Hall, Hall auto-tuning cannot be used (H0A.13 cannot be set to 6).

EA41.0: Torque fluctuation compensation failure

Cause:

Torque fluctuation compensation failure

Troubleshooting:

Cause	Verification method	Solution
Auto-tuning torque fluctuation compensation failure	1. Check whether homing is not performed during cogging force fluctuation auto-tuning of the incremental encoder. 2. Check whether cogging force fluctuation auto-tuning is interrupted due to emergency stop or external fault. 3. Perform auto-tuning on the torque fluctuation compensation value again.	1. Check whether homing is performed during cogging force fluctuation auto-tuning of the incremental encoder. 2. Check whether cogging force fluctuation auto-tuning is interrupted due to emergency stop or external fault. 3. Perform auto-tuning on the torque fluctuation compensation value again.

10 Appendix

10.1 DI/DO Function Assignment

No.	Name	Function name	Description	Remarks
Description of DI signals				
FunIN.1	S-ON	Enable servo	Disabled: Servo motor disabled Enabled: Servo motor enabled	The corresponding terminal logic must be level-triggered. The change of the corresponding DI/VDI or terminal logic is activated at next power-on.
FunIN.2	ALM-RST	Alarm reset signal	Inactive: Disabled Active: Enabled	Edge-triggered will be applied even if level-triggered is selected. To reset No.1 and No.2 resettable faults, switch off the S-ON signal, and then use this function. The servo drive may, depending on the alarm type, continue operating after reset.
FunIN.3	GAIN-SEL	Gain switchover switch	• When H08.08 = 0: • Inactive: Speed control loop being PI control • Invalid: Speed control loop being P control • When H08.08=1 and H08.09=1: • Inactive: Fixed to the 1st group of gains • Valid: Fixed at 2nd gain	The corresponding terminal logic is recommended to be level-triggered.
FunIN.4	CMD-SEL	Main/Auxiliary reference switchover	Inactive: Current reference being A Active: Current running reference being B	The corresponding terminal logic is recommended to be level-triggered.
FunIN.5	DIR-SEL	Multi-reference direction	Inactive: Reference direction by default Active: Reverse reference direction	The corresponding terminal logic is recommended to be level-triggered.
FunIN.6	CMD1	Multi-reference switchover CMD1	Selects one from the 16 references.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.7	CMD2	Multi-reference switchover CMD2	Selects one from the 16 references.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.8	CMD3	Multi-reference switchover CMD3	Selects one from the 16 references.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.9	CMD4	Multi-reference switchover CMD4	Selects one from the 16 references.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.10	M1-SEL	Mode switchover M1-SEL	Perform switchover between speed control, position control, and torque control based on the selected control mode (values 3, 4, 5 of H02-00).	The corresponding terminal logic is recommended to be level-triggered.

No.	Name	Function name	Description	Remarks
FunIN.11	M2-SEL	Mode switchover M2-SEL	Perform switchover between speed control, position control, and torque control based on the selected control mode (value 6 of H02-00).	The corresponding terminal logic is recommended to be level-triggered.
FunIN.12	ZCLAMP	Zero clamp enabling signal	Active: Zero clamp enabled Inactive: Zero clamp disabled	The corresponding terminal logic is recommended to be level-triggered. • When H06.15 is set to a value larger than 100, zero clamp is executed when the speed falls below H06.15. Operation will be re-triggered only when the speed reference exceeds the sum of H06.15 + 20 rpm. • When H06.15 is set to a value smaller than 100, zero clamp is executed when the speed is lower than H06.15. Operation will be re-triggered only when the speed reference is greater than the sum of H06.15 + 10 rpm.
FunIN.13	INHIBIT	Position reference inhibited	Active: Pulse reference input inhibited Inactive: Pulse reference input allowed	The function is upgraded from pulse inhibited to position reference inhibited. Position references include internal and external position references. The corresponding terminal logic must be level-triggered.
FunIN.14	P-OT	Positive limit switch	Enabled: Forward drive inhibited Disabled: Forward drive allowed	When the mechanical movement is beyond the movable range, the overtravel prevention function will be activated. It is recommended to set the logic of the corresponding terminal to level valid.
FunIN.15	N-OT	Negative limit switch	Overtravel prevention applies when the load moves beyond the limit. Active: Reverse drive inhibited Inactive: Reverse drive allowed	The corresponding terminal logic is recommended to be level-triggered.
FunIN.16	P-CL	Positive external torque limit	The torque limit source is switched based on H07.07 (Torque limit source). H07.07 = 1: Valid: Positive external torque limit enabled Invalid: Positive internal torque limit enabled	The corresponding terminal logic is recommended to be level-triggered.

No.	Name	Function name	Description	Remarks
FunIN.17	N-CL	Negative external torque limit	The torque limit source is switched based on H07.07 (Torque limit source). H07.07 = 1: Valid: Negative external torque limit enabled Invalid: Negative internal torque limit enabled	The corresponding terminal logic is recommended to be level-triggered.
FunIN.18	JOGCMD+	Forward jog	Active: Input according to the command. Inactive: Reference input stopped.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.19	JOGCMD-	Reverse jog	Active: Input in reverse to the command. Inactive: Reference input stopped.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.20	POSSTEP	Step reference	Active: Execute the step reference. Inactive: Reference being zero, in positioning state.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.21	HX1	Handwheel multiplying factor signal 1	HX1 active, HX2 inactive: X10. HX1 inactive, HX2 active: X100 Other: X1.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.22	HX2	Handwheel multiplying factor signal 2		
FunIN.23	HX_EN	Handwheel enable signal	Inactive: Execute position control as defined by H05-00. Active: Receive pulse signal from the handwheel for position control in position control mode	The corresponding terminal logic is recommended to be level-triggered.
FunIN.24	GEAR_SEL	Electronic gear ratio switchover	Inactive: Electronic gear ratio 1 Active: Electronic gear ratio 2	The corresponding terminal logic is recommended to be level-triggered.
FunIN.25	TOQDirSel	Torque reference direction	Inactive: Forward direction. Active: Reverse direction.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.26	SPDDirSel	Speed reference direction	Inactive: Forward direction. Active: Reverse direction.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.27	POSDirSel	Position reference direction	Inactive: Actual position reference direction same as the set direction. Active: Actual position reference direction opposite to the set direction.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.28	PosInSen	Multi-position reference signal enable	Inactive: Internal multi-reference ignored. Active: Internal multi-position enabled.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.29	XintFree	Interruption fixed length cleared	Inactive: Disabled Active: Enabled	-

No.	Name	Function name	Description	Remarks
FunIN.31	HomeSwitch	Home switch	Inactive: Not triggered. Active: Triggered	The corresponding terminal logic must be level-triggered. Allocate this function to the high-speed DI terminal. If the logic is set to 2 (rising edge triggered), the servo drive forcibly changes it to 1 (high level triggered). If the logic is set to 3 (falling edge triggered), the servo drive forcibly changes it to 0 (low level triggered). If the logic is set to 4 (both rising edge and falling edge triggered), the servo drive forcibly changes it to 0 (low level triggered).
FunIN.32	HomingStart	Homing	Inactive: Disabled Active: Enabled	-
FunIN.33	XintInhibit	Interrupt positioning inhibited	Active: Interrupt positioning inhibited. Inactive: Interruption fixed length allowed	The corresponding terminal logic must be level-triggered. • If the logic is set to 2 (rising edge active), the servo drive forcibly changes it to 1 (active high). • If the logic is set to 3 (falling edge triggered), the servo drive forcibly changes it to 0 (low level triggered). • If the logic is set to 4 (both rising edge and falling edge triggered), the servo drive forcibly changes it to 0 (low level triggered).
FunIN.34	Emergence Stop	Emergency stop	Enabled: Position lock is applied after stop at zero speed. Disabled: Current running state unaffected.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.35	ClrPosErr	Position deviation cleared	Enabled: Position deviation cleared. Disabled: Not cleared.	It is recommended that this function be allocated to DI8 or DI9.
FunIN.36	V_LmtSel	Internal speed limit source	Inactive: H07.19 used as positive/ negative internal speed limit. Active: H07.20 used as positive/ negative internal speed limit.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.37	PulseInhibit	Pulse reference inhibited	The position reference source is pulse reference (H05.00 = 0) in the position control mode: Inactive: Respond to pulse references Active: Not respond to pulse references	The corresponding terminal logic is recommended to be level-triggered.

No.	Name	Function name	Description	Remarks
FunIN.38	TouchProbe1	Touch probe 1	Disabled: Touch probe is not triggered. Enabled: Touch probe is triggerable.	The touch probe logic is only related to the touch probe function (60B8h).
FunIN.39	TouchProbe2	Touch probe 2	Disabled: Touch probe is not triggered. Enabled: Touch probe is triggerable.	The touch probe logic is only related to the touch probe function (60B8h).
FunIN.40	Multi-speed	Multi-speed	Inactive: Internal multi-speed reference ignored. Active: Internal multi-speed reference enabled.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.41	HomeRecord	Present position as the home	Inactive: Not triggered. Active: Triggered.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.42	MultiBlockTrig	Axis control command executed immediately	Inactive: Axis control command not executed. Active: Axis control command immediately executed.	-
FunIN.43	MultiBlockWr	Axis control command not executed immediately	Inactive: Axis control command not executed. Active: Axis control command executed (not immediately).	-
FunIN.44	ClrCmdOkAndArrOk	Positioning and reference completed signal clear	Inactive: No action. Active: Cleared.	-
FunIN.45	XintEn	Interrupt positioning enable	Invalid: Interruption fixed length disabled. Active: Interrupt positioning enabled.	-
FunIN.46	PrEnable	Process segment enable	Inactive: Stop the process segment. Active: Start the process segment.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.47	PrCMD1	Process segment command switchover 1	Used to switch among 16 process segments.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.48	PrCMD2	Process segment command switchover 2	Used to switch among 16 process segments.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.49	PrCMD3	Process segment command switchover 3	Used to switch among 16 process segments.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.50	PrCMD4	Process segment command switchover 4	Used to switch among 16 process segments.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.51	PrEvent1	Event trigger process segment 1	The process segment A is triggered by the rising edge. The process segment B is triggered by the falling edge.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.52	PrEvent2	Event trigger process segment 2	The process segment A is triggered by the rising edge. The process segment B is triggered by the falling edge.	The corresponding terminal logic is recommended to be level-triggered.

No.	Name	Function name	Description	Remarks
FunIN.53	PrEvent3	Event trigger process segment 3	The process segment A is triggered by the rising edge. The process segment B is triggered by the falling edge.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.54	PrEvent4	Event trigger process segment 4	The process segment A is triggered by the rising edge. The process segment B is triggered by the falling edge.	The corresponding terminal logic is recommended to be level-triggered.
FunIN.55	PrSuspend	Process segment pause	Inactive: Continue the process segment (when the process segment is enabled). Active: Pause the process segment.	The corresponding terminal logic is recommended to be level-triggered.
Description of DO signals				
FunOUT.1	S-RDY	Ready to switch on	The servo drive is in ready state and can receive the S-ON signal. Inactive: The servo drive is not ready. Active: The servo drive is ready.	-
FunOUT.2	TGON	Motor rotation signal	Inactive: The absolute value of filtered motor speed is lower than the setpoint of H06.16. Active: The absolute value of filtered motor speed reaches the setpoint of H06.16.	-
FunOUT.3	ZERO	Zero speed signal	Inactive: The difference between motor speed feedback and reference value is larger than H06.19 (Threshold of zero speed output signal). Active: The difference between the motor speed feedback and the reference value is within the threshold defined by H06.19.	-
FunOUT.4	V-CMP	Speed consistency signal	In speed control mode, when the absolute value of the deviation between the motor rotational speed and the speed reference is smaller than the value of H06.17, this signal is valid.	-
FunOUT.5	COIN	Positioning completed	Inactive - Positioning not completed Active - Positioning completed	-
FunOUT.6	NEAR	Positioning almost completed	Inactive: The positioning deviation is excessive. Active: The positioning deviation is slight.	-

No.	Name	Function name	Description	Remarks
FunOUT.7	C-LT	Torque limited signal	Confirming torque limit: Valid: Motor torque limited Inactive: Motor torque not limited.	-
FunOUT.8	V-LT	Speed limited signal	Confirming rotational speed limit in torque control: Valid: Motor speed limited Invalid: Motor rotational speed not limited.	-
FunOUT.9	BK	With brake	Brake output: Valid: Brake released Invalid: Brake applied	-
FunOUT.10	WARN	Alarm	Inactive: No alarm occurred on the servo drive or the alarm has been reset. Active: Alarm occurred on the servo drive	-
FunOUT.11	ALM	Fault	Active: Fault occurred on the servo drive Inactive: No fault occurred on the servo drive or the fault has been reset.	-
FunOUT.15	Xintcoin	Interrupt positioning completed	Active: Interrupt positioning completed. Inactive: Interrupt positioning not completed.	-
FunOUT.16	HomeAttain	HomeAttain	Home return state: Active: Homing completed in the position control mode Inactive: Homing not completed.	-
FunOUT.17	ElecHome Attain	Electrical home return output	Electric home return state: Active: Electrical homing completed Inactive: Electrical homing not completed.	-
FunOUT.18	ToqReach	Torque reached output	Active: The absolute value of torque reference reaches the reference value. Inactive: The absolute value of torque reference is lower than the reference value.	-
FunOUT.19	V-Arr	Speed reached output	Valid: Speed feedback reaches the set value. Invalid: Speed feedback smaller than the set value.	-
FunOUT.21	SrvOn	Enable operation completion	Valid: Operation enabled. Invalid: Operation not enabled.	-

No.	Name	Function name	Description	Remarks
FunOUT.22	CmdOk	Internal command completed	Inactive: Internal command transmission not completed. Active: Internal command transmission completed.	-
FunOUT.23	WrNextBlockEn	Write next block enabled	Active: Writing the next segment allowed. Inactive: Writing the next segment inhibited.	-
FunOUT.24	MC_OK	Internal motion completed	Inactive: Internal command transmission or positioning not done. Active: Command transmission and positioning done.	-
FunOUT.25	CMP	Comparison output DO	Inactive: The drive does not pass the target position compare point. Active: Servo drive passing the target position comparison point.	-
FunOUT.26	LoopState	Closed loop state	0: Half closed loop. Position feedback signals come from the built-in encoder of the servo motor. 1: Fully closed loop. Position feedback signals come from the full closed-loop external encoder.	-
FunOUT.30	WARN OR ALM	Alarm or fault output	Active: An alarm or a fault occurred. Inactive: No alarm or fault.	-
FunOUT.31	Communication-forced DO		See *"Table 10-1 Communication-forced DO" on page 919*.	-
FunOUT.32	EDM	EDM output	Active: STO function triggered. Inactive: STO function not triggered.	The EDM outputs active signals only when the 24 V input voltages for STO1 and STO2 are disconnected simultaneously.

Table 10–1 Communication-forced DO

Type	Data	Description
bit0	0	DO1 status unchanged.
	1	No output from DO1.
bit1	0	DO2 status unchanged.
	1	No output from DO2.
bit2	0	DO3 status unchanged.
	1	No output in DO3.
bit3	0	DO4 status unchanged.
	1	No output from DO4.
bit4	0	DO5 status unchanged.
	1	No output from DO5.

10.2 Service and Support

Should you encounter a safety accident during the use or operation of the product, or face challenges in operating and maintaining the equipment, which remain unresolved after the relevant documentation is consulted, we provide multiple channels to ensure prompt resolution:

- Channel #1: Contact service@inovance.com.
- Channel #2: Visit https://www.inovance.com/global to access document downloads, after-sales support, spare parts ordering, repair applications, and authenticity verification services.
- Channel #3: Download My Inovance app (https://zshc-eu.inovance.com/download-pc/) where you can access products info and documentation, and query product parameters.

We are committed to providing you with quick and professional technical support, and we look forward to your satisfaction and trust.

Copyright © Shenzhen Inovance Technology Co., Ltd.

PS00021341B00

Shenzhen Inovance Technology Co., Ltd.

www.inovance.com

Add.: Inovance Headquarters Tower, High-tech Industrial Park,
Guanlan Street, Longhua New District,
Shenzhen 518000, P.R. China

Tel: (0755) 2979 9595 Fax: (0755) 2961 9897

Suzhou Inovance Technology Co., Ltd.

www.inovance.com

Add.: No. 52, Tian E Dang Road, Wuzhong District, 215104,
Suzhou City, Jiangsu Province, P.R. China

Tel: (0512) 6637 6666 Fax: (0512) 6285 6720